


WIRING PROBLEMS

Problems in the wiring harness may be checked out with a continuity checker. For this purpose, the wiring diagram and wiring list for the models with electric starters and manual starters are supplied in this section.

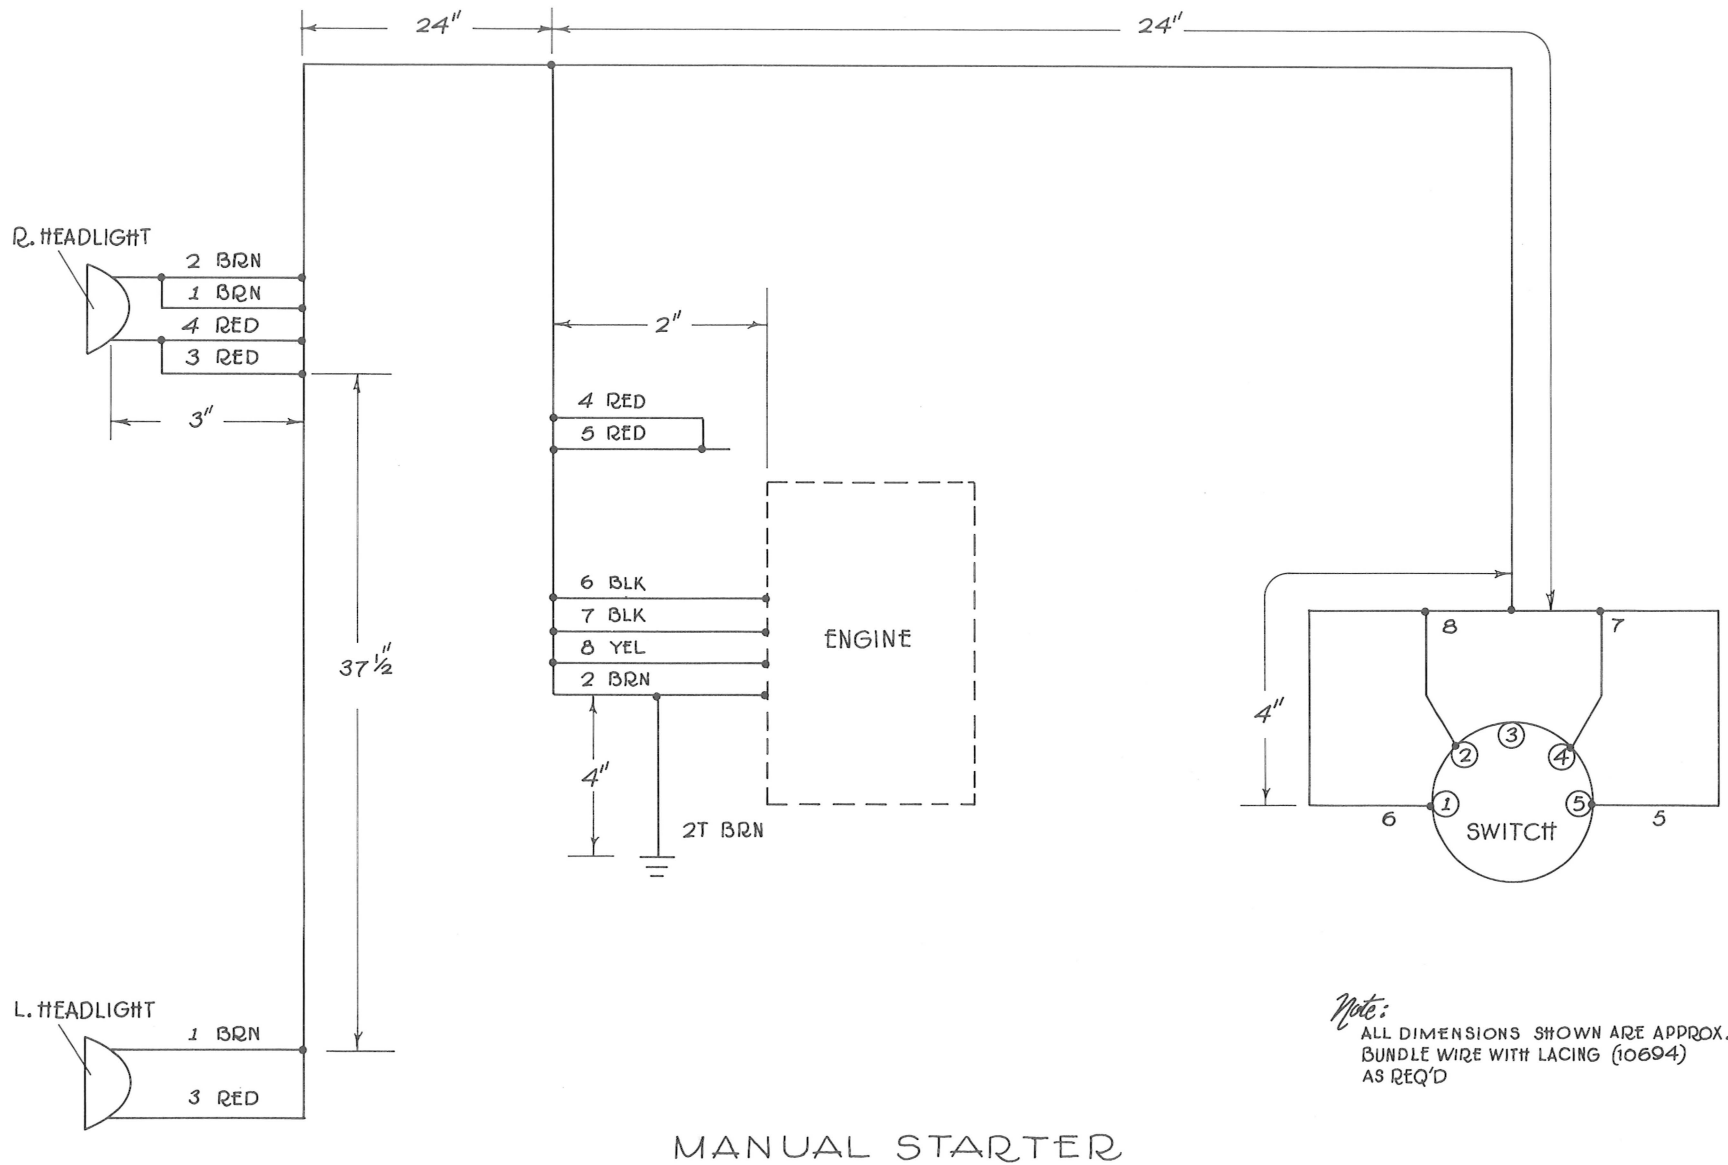

WIRING LIST FOR MODELS WITH MANUAL STARTERS


10692 WIRE NO.	COLOR	GAGE	FROM	10693 TERM.	TO	10693 TERM.
1	Brown	#16	Left Headlight	C134216	Right Headlight	C134216*
2	Brown		Right Headlight	C134216*	Engine	C134215 C134218
2T	Brown		Engine	C134215 C134218	Chas. Grd.	C134217
3	Red		Left Headlight	C134216	Right Headlight	C134216*
4	Red		Right Headlight	C134126*	Wire #5	C134215* C134218
5	Red		Wire #4	C134215* C134218	Switch	C134215
6	Black		Engine	C134215 C134218	Switch Plug #1	C134215
7	Black		Engine	C134215 C134218	Switch Plug #4	C134215
8	Yellow	#16	Engine	C134215 C134218	Switch	C134215

*More than one lead in terminal.

11-1-69

Figure 4-4 Wiring Diagram - Electric Starters

4-13

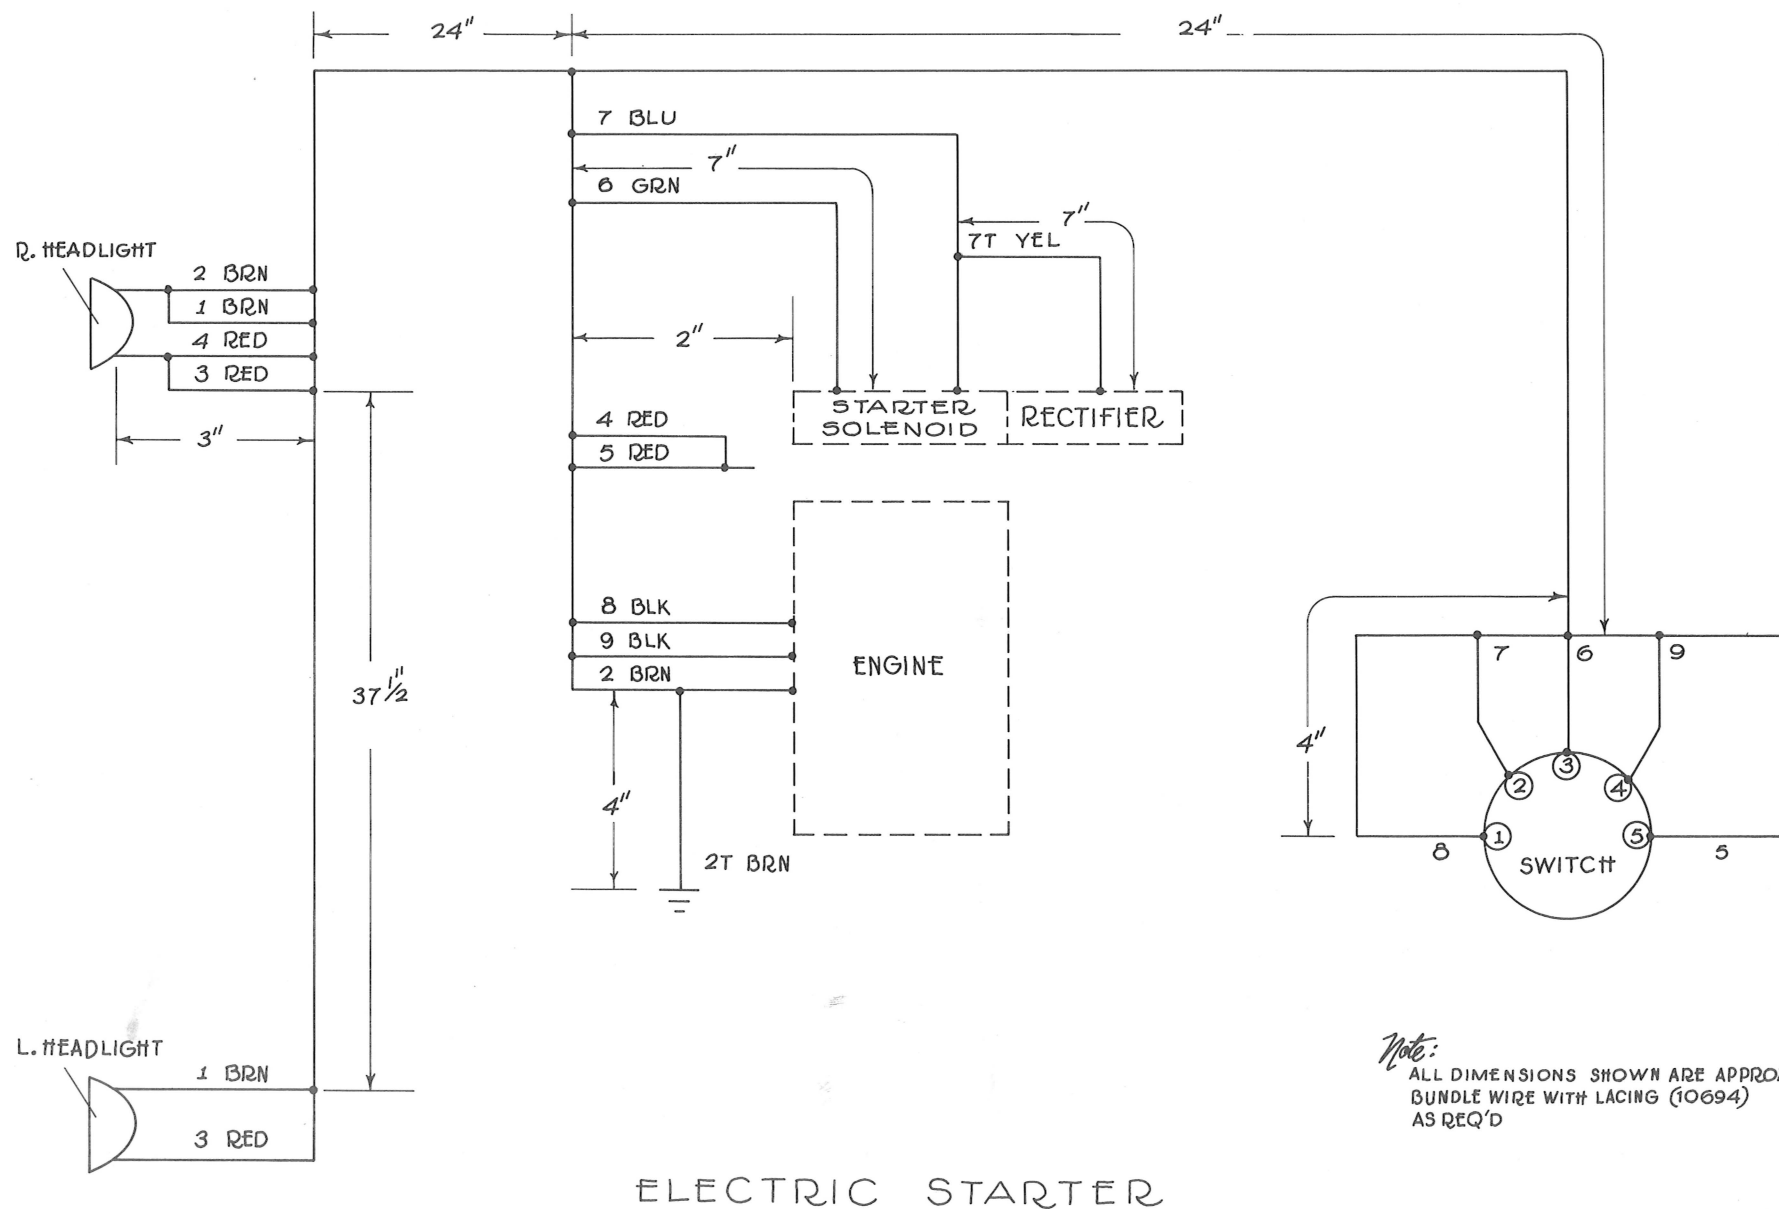

Note:
ALL DIMENSIONS SHOWN ARE APPROX.
BUNDLE WIRE WITH LACING (10694)
AS REQ'D

WIRING LIST FOR MODELS WITH ELECTRIC STARTERS

10692 WIRE NO.	COLOR	GAGE	FROM	10693 TERM.	TO	10693 TERM.
1	Brown	#16	Left Headlight	C134216	Right Headlight	C134216*
2	Brown		Right Headlight	C134216*	Engine	C134215 C134218
2T	Brown		Engine	C134215 C134218	Chas. Grd.	C134217
3	Red		Left Headlight	C134216	Right Headlight	C134216*
4	Red		Right Headlight	C134216*	Wire #5	C134215* C134218
5	Red		Wire #4	C134215* C134218	Switch Plug #5	C134215 C134219
6	Green		Starter Solenoid	C134216 C134217	Switch Plug #3	C134215 C134219
7	Blue		Starter Solenoid	C134216 C134217	Switch Plug #2	C134215 C134219
7T	Yellow		Starter Solenoid	C134216 C134217	Rectifier	C134215 C134218
8	Black		Engine	C134215 C134218	Switch Plug #1	C134215 C134219
9	Black	#16	Engine	C134215 C134218	Switch Plug #4	C134215 C134219

*More than one lead in terminal.