

SECTION 3



Ignition and Electrical Systems

TABLE of CONTENTS

	Page		Page
Ignition and Electrical Systems	3A-1	Lighting System - 440 MAX (438cc) with	
Part A - Flywheel Magneto and Thunderbolt Ignition		Chassis Serial No. 3447382 and Below	3D-9
Parts Replacement	3A-1	Lighting System - Mark I (644cc) and Mark	
Model 200	3A-1	II (644cc)	3D-11
Rocket (339cc) and Lightning (398cc)	3A-3	Lighting System - 340 S/R, 440 MAX, 440 M/X and 440 S/R	
Hurricane (644cc)	3A-5	with Chassis Serial No. 3709838 and Above	3D-12
440 MAX, 440 M/X and 440 S/R	3A-7	Lighting System - 340 S/T, 400 S/T, 440 S/T, 340 T/T	
Mark I and Mark II	3A-10	and 440 T/T	3D-13
340 S/T, 400 S/T, 440 S/T, 340 T/T and 440 T/T	3A-12		
340 S/R	3A-13	Part E - Charging and Electric Start Systems	3E-1
Part B - Test Procedures	3B-1	Battery	3E-1
Ignition Breaker Points	3B-1	Charging and Electric Start Systems	3E-4
Condenser	3B-1	Models 220 and 250	3E-4
Thunderbolt Ignition Maker Points	3B-1	Rocket (339cc) and Lightning (398cc)	3E-7
Spark Plug	3B-2	Hurricane (644cc)	3E-8
Thunderbolt Ignition System - 220 and 250	3B-5	440 MAX (438cc) with Chassis Serial No.	
Bosch Ignition System Test Procedures -		3447382 and Below	3E-9
200 Model	3B-9	Mark I (644cc) and Mark II (644cc)	3E-10
Ignition System Test Procedures - Rocket		440 MAX, 440 M/X and 440 S/R with Chassis Serial	
and Lightning	3B-11	No. 3709838 thru 4064696	3E-12
Thunderbolt Ignition System - Hurricane		440 M/X and 440 S/R with Chassis Serial No.	
(644cc)	3B-14	4064697 and Above	3E-14
Magneto Ignition System - 440 MAX, 440 M/X		Part F - Wiring Diagrams	3F-1
and 440 S/R	3B-17	Model 220 Wiring Diagram	3F-1
Thunderbolt Ignition System - Mark I and Mark II	3B-19	Model 220E Wiring Diagram	3F-2
Capacitor Discharge Ignition System - 400 S/T, 340 T/T and		Model 220ER Wiring Diagram	3F-3
440 T/T with D-67856 Type Switch Box	3B-23	Model 250M Wiring Diagram	3F-4
Magneto Ignition System - 340 S/R	3B-26	Model 250E Wiring Diagram	3F-5
Capacitor Discharge Ignition System - 340 S/T, 440 S/T,		Model 250ER Wiring Diagram	3F-6
340 T/T and 440 T/T with D-72598 Type Switch Box	3B-28	Model 200 Wiring Diagram	3F-7
		Models Rocket and Lightning (Serial No.	
Part C - Timing and Adjusting	3C-1	2985933 and Below) Wiring Diagram	3F-8
220 and 250 Models	3C-1	Models Rocket and Lightning (Serial No.	
200 Model	3C-3	3124269 and Up) Wiring Diagram	3F-9
Rocket (339cc) and Lightning (398cc)	3C-5	Model Hurricane Wiring Diagram	3F-10
Hurricane (644cc)	3C-7	Model 440 MAX (Chassis Serial No. 3447382	
440 MAX and 440 S/R (Chassis Serial No. 3795657		and Below) Wiring Diagram	3F-11
and Below)	3C-9	Models Mark I and Mark II (Chassis Serial	
Mark I (644cc) and Mark II (644cc)	3C-11	No. 3591478 and Below) Wiring Diagram	3F-12
340 S/T, 400 S/T and 440 S/T	3C-13	Models 440 MAX, 440 M/X and 440 S/R with Chassis	
340 S/R	3C-18	Serial No. 3709838 thru 4064696 Wiring Diagram	3F-13
440 M/X and 440 S/R (Chassis Serial No. 4064097		Model Mark II (Chassis Serial No. 3787640 and	
and Above)	3C-21	Above) Wiring Diagram	3F-14
340 T/T and 440 T/T	3C-24	Model 400 S/T Wiring Diagram	3F-15
Part D - Lighting Systems	3D-1	Model 340 S/R Wiring Diagram	3F-16
Lighting System - Models 220 and 250	3D-1	Models 440 M/X and 440 S/R with Chassis Serial	
Lighting System - Model 200	3D-5	No. 4064697 and Above Wiring Diagram	3F-17
Lighting System - Hurricane (644cc)	3D-8	Models 340 S/T, 440 S/T and 440 T/T (Chassis Serial	
		No. 4210249 and Below) Wiring Diagram	3F-18
		Models 340 T/T and 440 T/T (Chassis Serial No.	
		4347125 and Above) Wiring Diagram	3F-19