

YAMAHA SNOWMOBILE

SL-396



SPECIFICATION

ENGINE

	Air-Cooled 5 port - 2cycle - parallel twin cylinders
Bore & Stroke	2.56" x 2.34"
Displacement	24.1"
Max. Horsepower	27 B.H.P/6,000 r.p.m.

DRIVE SYSTEM

Initial Drive	Automatic Clutch/Transmission W/V Belt
Secondary Drive	Duplex Roller Chain Enclosed in oil bath
Final Drive	Molded, Steel Reinforced, Rubber Track
Drive Track	15 x 50 Ground Coverage (5.20sq. ft. 750sq. in.)
Suspension	Torsion Spring Bogie Wheels

DIMENSIONS

Weight	Approximately 350 lbs
Length (W/Skis & Bumper)	99 1/2"
Width	36 1/2"
Height (W/O Windshield)	40 3/4"
Starting	Automatic Rewind
Lighting	High/Low Beam Headlight, 12V 35/35W High Visibility Taillight, 12V 7W Stop light 12V 23W
Fuel & Lubrication	4gal. Gas Tank (straight gasoline) Yamaha's Exclusive Autolube Oil Injection.
Brake	Caliper Type Disc Brake

Instructions on Parts List

YAMAHA SL-396

1. DIMENSIONS: All dimensions are given in millimeters with the exception of steel balls which are given in inches.
2. KEY TO SYMBOLS:
 - R.H. Right hand side (Viewed from the rider's seat facing forward)
 - L.H. Left hand side (Viewed from the rider's seat facing forward)
 - S.R. Suggested retail price
 - UR Use size (thickness) and/or numbers as required
 - ☆ Government inspected parts
 - △ Not supplied as a single part
 - T Number of teeth in a gear
 - V Voltage for light bulbs
 - W Wattage for light bulbs
 - S "S" type oil seal
 - SD "SD" type oil seal
 - SO "SO" type oil seal
 - SW "SW" type oil seal
3. COMPONENT PARTS: Component parts of an assembly are preceded by a dot (.) as follows:

STARTER ASS'Y

- . CASE, starter)
- . DRUM, sheave) Component parts
- . SPRING, starter)

Component parts which are mounted on either side of the m/c. are listed in the sequence:

- 5a).- Parts to be mounted on "LEFT SIDE" are listed first.-
- 5b).- Parts to be mounted on "RIGHT SIDE" are listed second.-
- 5c).- Parts which can be mounted on "EITHER SIDE" are listed next to the parts.-

You are requested to be very careful, when ordering, not to make a mistake in stating the part numbers, since only a single wrong figure will entirely change the contents and will cause you to receive quite a different part.

We believe that this introduction will prove a great help to you, but if you have any ambiguous point, please do not hesitate to contact us.

CONTENTS

ENGINE

Fig. 1	Crank Case	1
Fig. 2	Fan Case & Air Shroud	3
Fig. 3	Crank & Piston	5
Fig. 4	Carburetor	7
Fig. 5	Piping	11
Fig. 6	Exhaust	13
Fig. 7	Starter	15
Fig. 8	Flywheel Magneto	17
Fig. 9	Oil Pump	19
Fig. 10	Engine Cowl	23

DRIVE

Fig. 11	Primary Sheave	27
Fig. 12	Secondary Sheave	29
Fig. 13	Track Drive	31
Fig. 14	Brake	35
Fig. 15	Front Axle	37
Fig. 16	Rear Axle	39
Fig. 17	Track & Suspension Wheel	41

BODY

Fig. 18	Frame	45
Fig. 19	Shroud	47
Fig. 20	Engine Bracket	49
Fig. 21	Steering Gate	51
Fig. 22	Steering	53
Fig. 23	Ski	55
Fig. 24	Grip & Wiring	57
Fig. 25	Fuel Tank	59


Fig. 26	Oil Tank	61
Fig. 27	Seat & Luggage Box	63
Fig. 28	Bumper	65
Fig. 29	Head Lamp	67
Fig. 30	Tail Lamp	69
Fig. 31	Electrical	71

NUMERICAL INDEX

ENGINE



Fig. 1 CRANK CASE

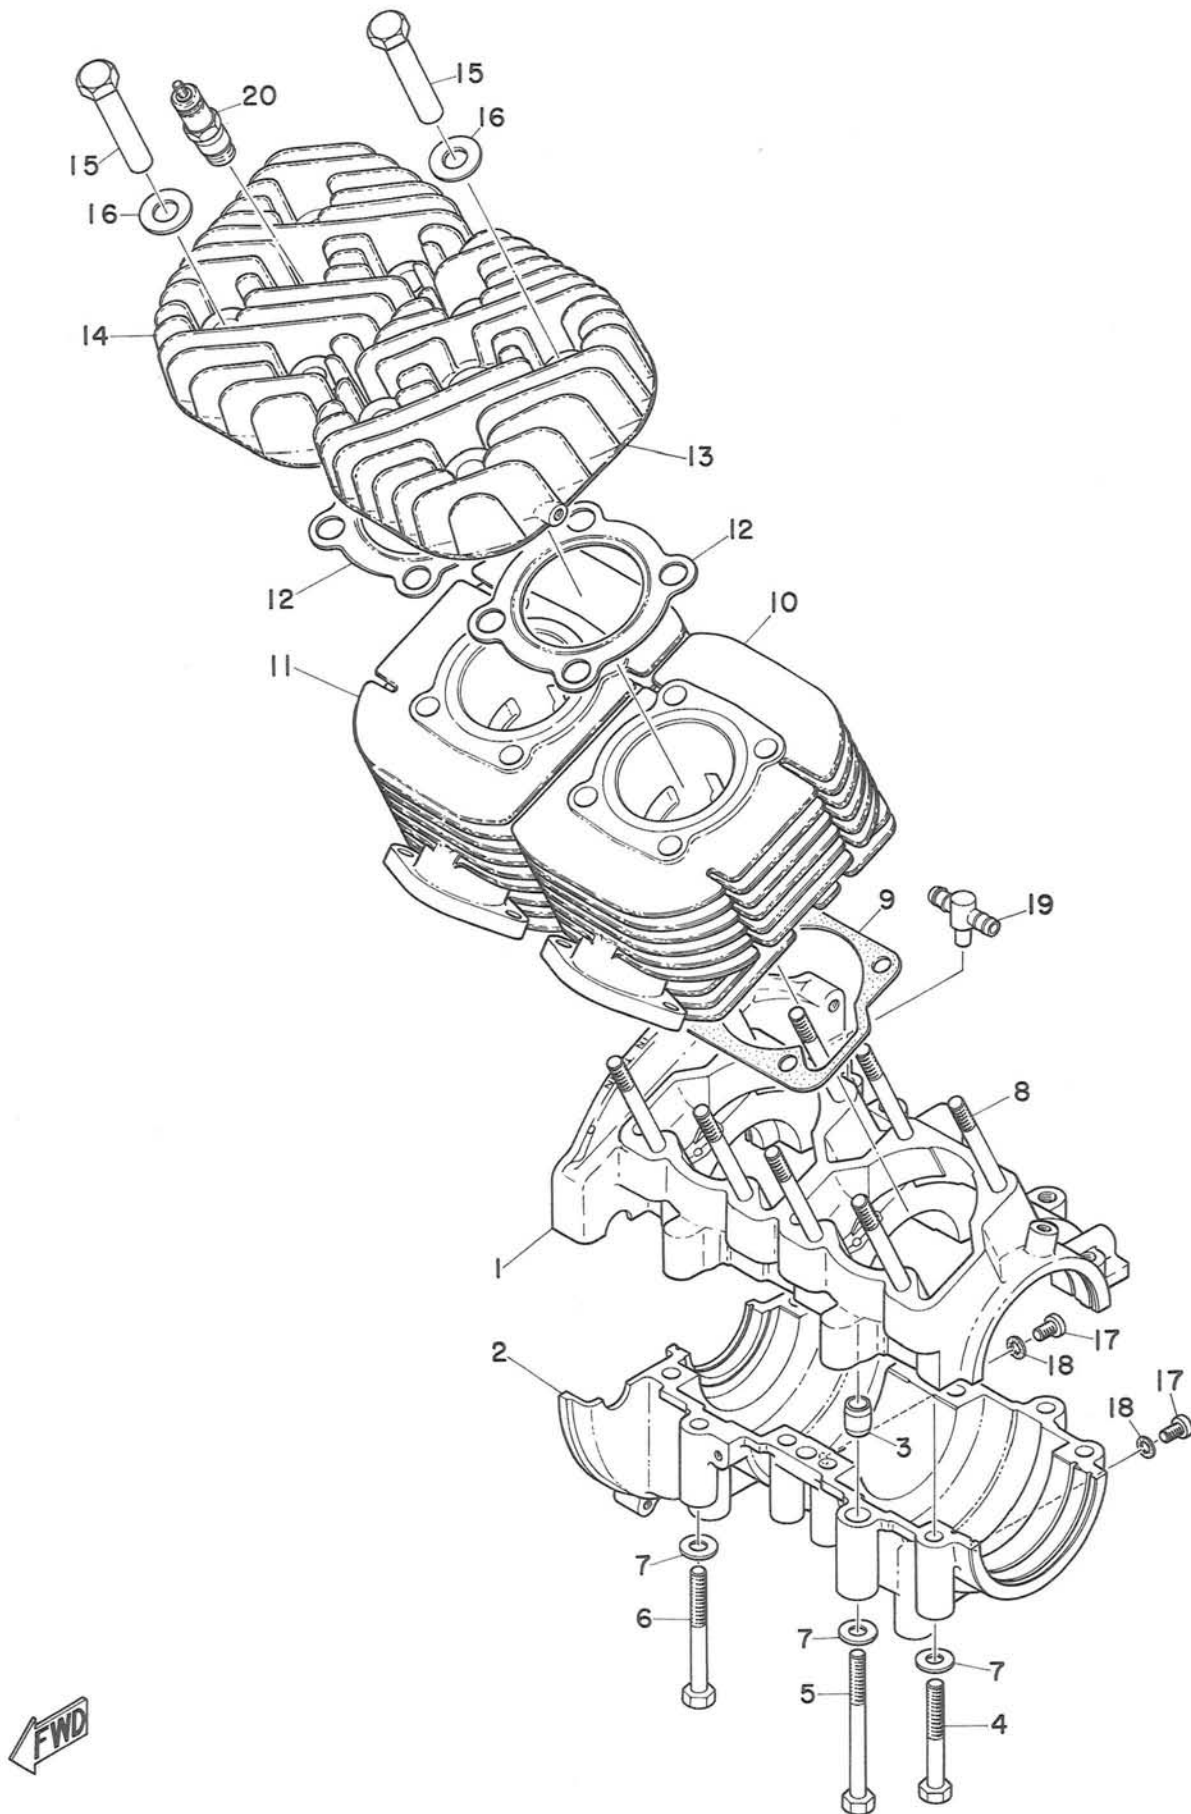


FWD

CRANKCASE

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
1- 0-1	807-15100-00	CRANK CASE ASS'Y		1		
1- 1	807-15111-00	. CASE, crank (1)		1		△
1- 2	807-15121-00	. CASE, crank (2)		1		△
1- 3	91810-08016	PIN, dowel A	9.8-12-16	2		
1- 4	97101-08060	BOLT	ISO	8		
1- 5	97101-08070	BOLT	ISO	2		
1- 6	97101-08085	BOLT	ISO	2		
1- 7	92901-08200	WASHER, plain		12		
1- 8	248-11361-00	BOLT, cylinder holding		8		
1- 9	807-11351-00	GASKET, cylinder		2		
1-10	807-11311-00	CYLINDER (L.H)		1		
1-11	807-11321-00	CYLINDER (R.H)		1		
1-12	807-11181-00	GASKET, cylinder head		2		
1-13	807-11111-01	HEAD, cylinder (L.H)		1		
1-14	807-11121-01	HEAD, cylinder (R.H)		1		
1-15	807-11171-00	NUT, cylinder holding		8		
1-16	92901-12200	WASHER, plain		8		
1-17	92501-06010	SCREW, pan head		2		
1-18	137-15384-00	GASKET, screw		2		
1-19	807-24461-00	PIPE, joint		1		
1-20	94700-00004	PLUG, spark	B-7HZ	2		


Fig. 2 FAN CASE & AIR SHROUD

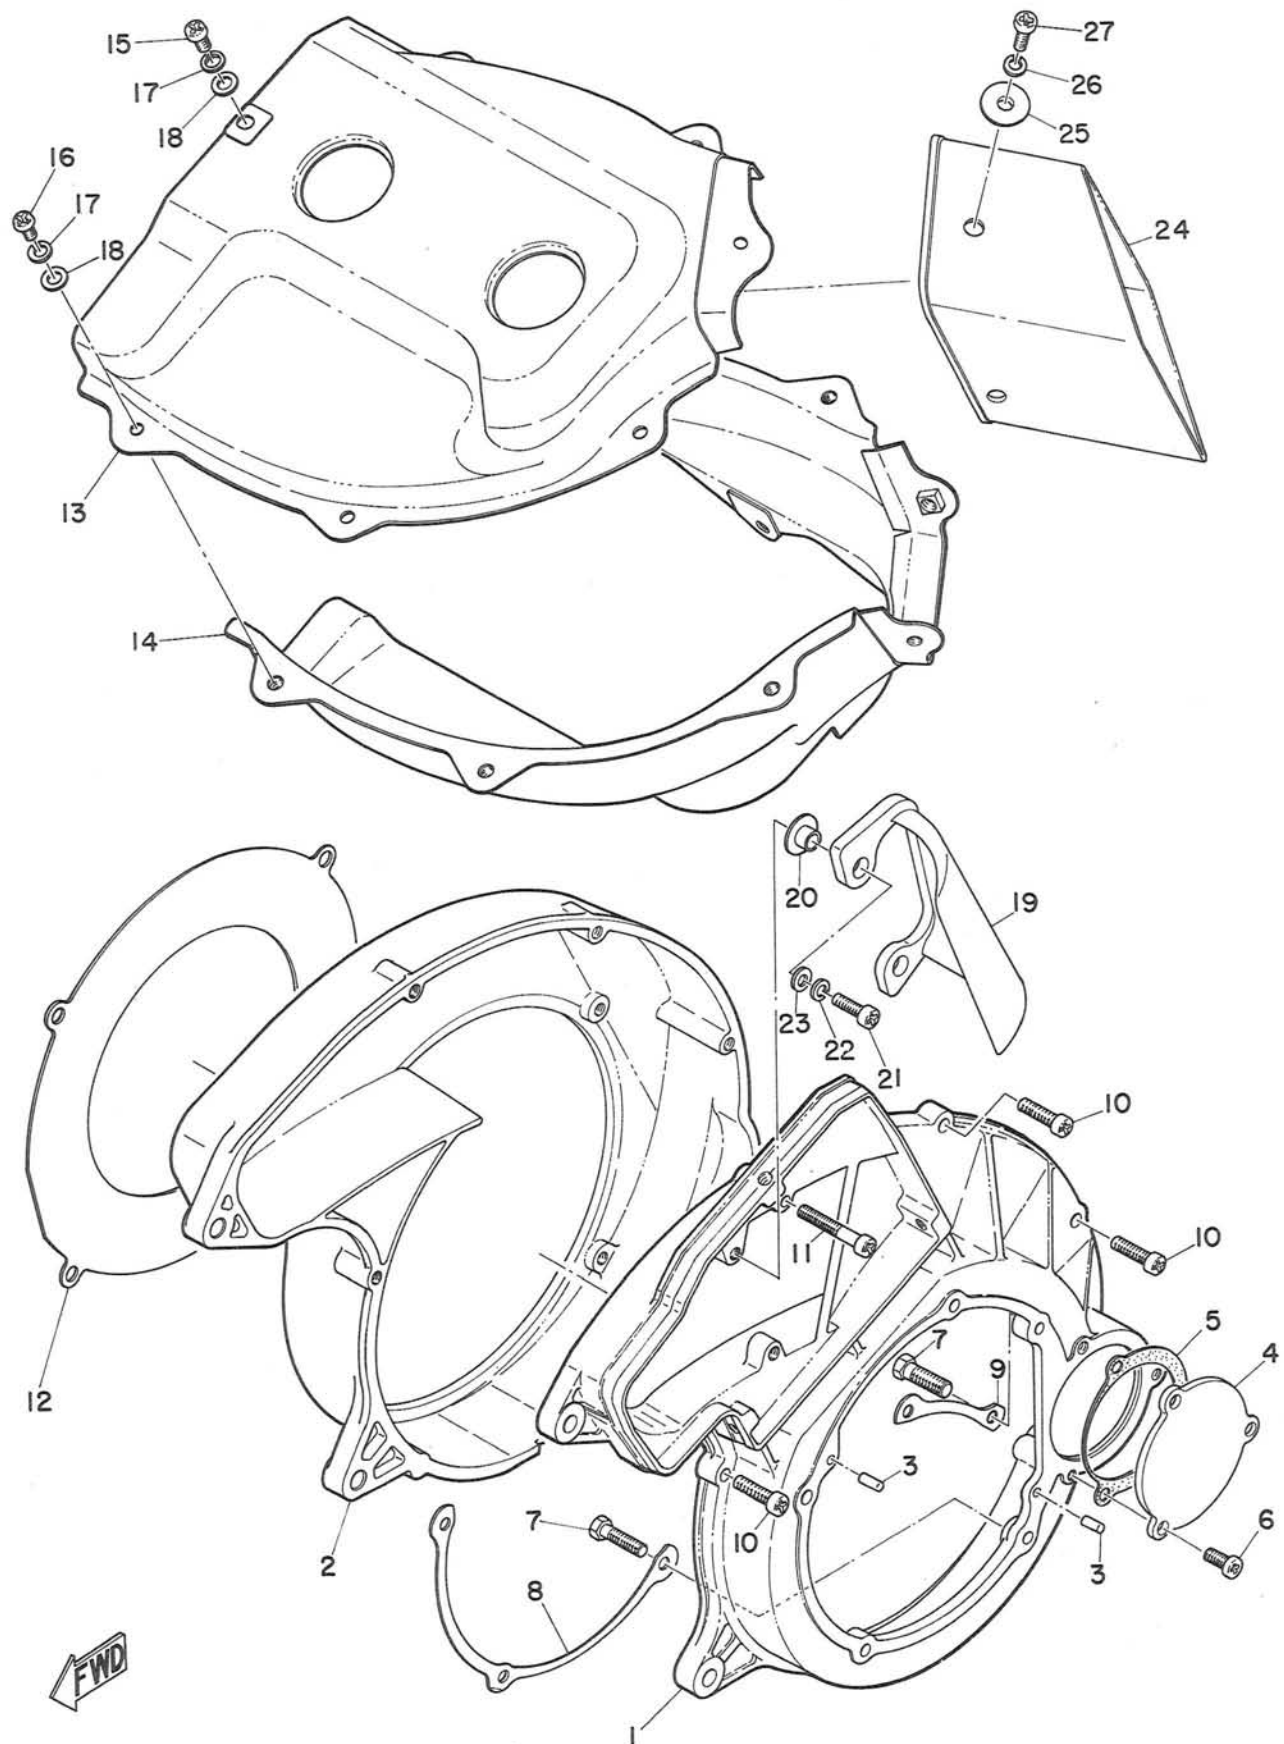

FAN CASE & AIR SHROUD

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
2- 1	807-12621-00	CASE, fan (1)	(ISO)	1		
2- 2	807-12622-00	CASE, fan (2)		1		
2- 3	93604-14012	PIN, dowel B	4-13.8	2		
2- 4	807-12633-00	PLATE		1		
2- 5	807-12663-00	GASKET		1		
2- 6	98901-05015	SCREW, bind	(ISO)	3		
2- 7	807-12623-00	BOLT		5		
2- 8	807-12624-00	WASHER, lock (1)		1		
2- 9	807-12625-00	WASHER, lock (2)		1		
2-10	92501-06025	SCREW, pan head		4		
2-11	92501-06040	SCREW, pan head		1		
2-12	807-12631-00	DEFLECTOR		1		
2-13	807-12651-00	AIR SHROUD, cylinder (1)		1		
2-14	807-12652-00	AIR SHROUD, cylinder (2)		1		
2-15	92501-06012	SCREW, pan head		5		
2-16	92501-06010	SCREW, pan head		7		
2-17	92901-06100	WASHER, spring		12		
2-18	92901-06200	WASHER, plain		12		
2-19	807-12632-00	DEFLECTOR (2)		1		
2-20	807-12665-00	COLLAR (2)		2		
2-21	92501-06020	SCREW, pan head		2		
2-22	92901-06100	WASHER, spring		2		
2-23	807-12664-00	WASHER	6.5-20-0.8	2		
2-24	807-12661-00	DUCT		1		
2-25	807-12662-00	COLLAR		3		
2-26	92901-06100	WASHER, spring		3		
2-27	98906-06015	SCREW, bind	(ISO)	3		

Fig. 3 CRANK & PISTON

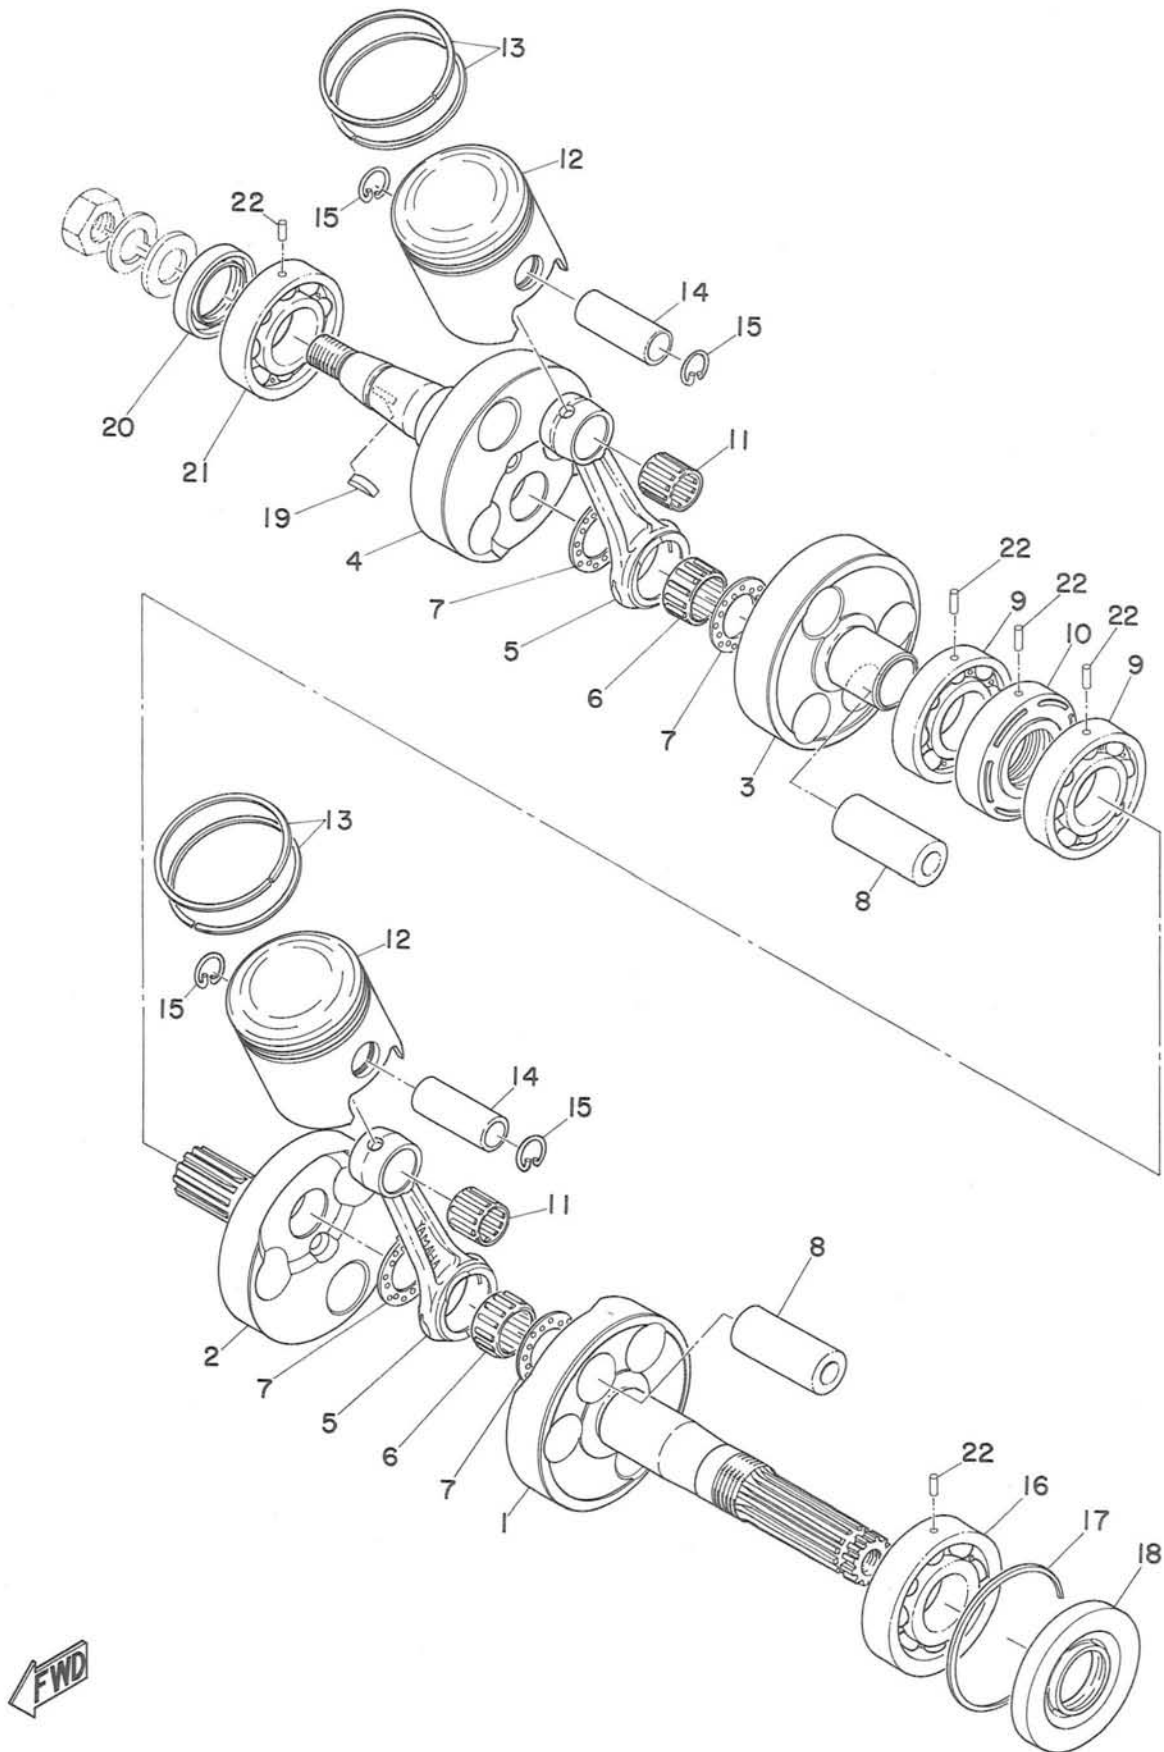


FWD

CRANK & PISTON

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
3- 0-1	807-11400-00	CRANK ASS'Y		1		
3- 1	807-11412-00	. CRANK (1) (L.H)		1		
3- 2	807-11422-00	. CRANK (1) (R.H)		1		
3- 3	807-11432-00	. CRANK (2) (L.H)		1		
3- 4	807-11442-00	. CRANK (2) (R.H)		1		
3- 5	235-11651-00	. ROD, connecting		2		
3- 6	93310-42434	. BEARING, con-rod big end	24-31-7	2		
3- 7	152-11685-00	. WASHER, crank pin	24.2-38-1	4		
3- 8	168-11681-00	. PIN, crank		2		
3- 9	93306-20602	. BEARING	6206C3	2		
3-10	168-11515-00	. SEAL, labyrinth		1		
3-11	93310-21824	BEARING, con-rod small end	18-22-22	2		
3-12	807-11631-00-96	PISTON (0.96)		U.R. 2		
	807-11631-00-97	PISTON (0.97)				
	807-11631-00-98	PISTON (0.98)				
	807-11631-00-99	PISTON (0.99)				
	807-11631-00-01	PISTON (.00)				
	807-11631-10	PISTON (1st O.S)		2		
	807-11631-20	PISTON (2nd O.S)		2		
3-13	807-11601-00	PISTON RING SET		2s		
	807-11601-10	PISTON RING SET (1st O.S)		2s		
	807-11601-20	PISTON RING SET (2nd O.S)		2s		
3-14	168-11633-00	PIN, piston		2		
3-15	604-11634-00	CLIP, piston pin		4		
3-16	93306-30603	BEARING	6306C3	1		
3-17	93440-78011	CIRCLIP		1		
3-18	93103-32054	OIL SEAL	SW-32-78-10	1		
3-19	214-11545-00	KEY, woodruff		1		
3-20	93103-32055	OIL SEAL	SW-32-48-10	1		
3-21	93306-20602	BEARING	6206C3	1		
3-22	93604-12037	PIN, dowel	4-12	5		


Fig. 4 CARBURETOR

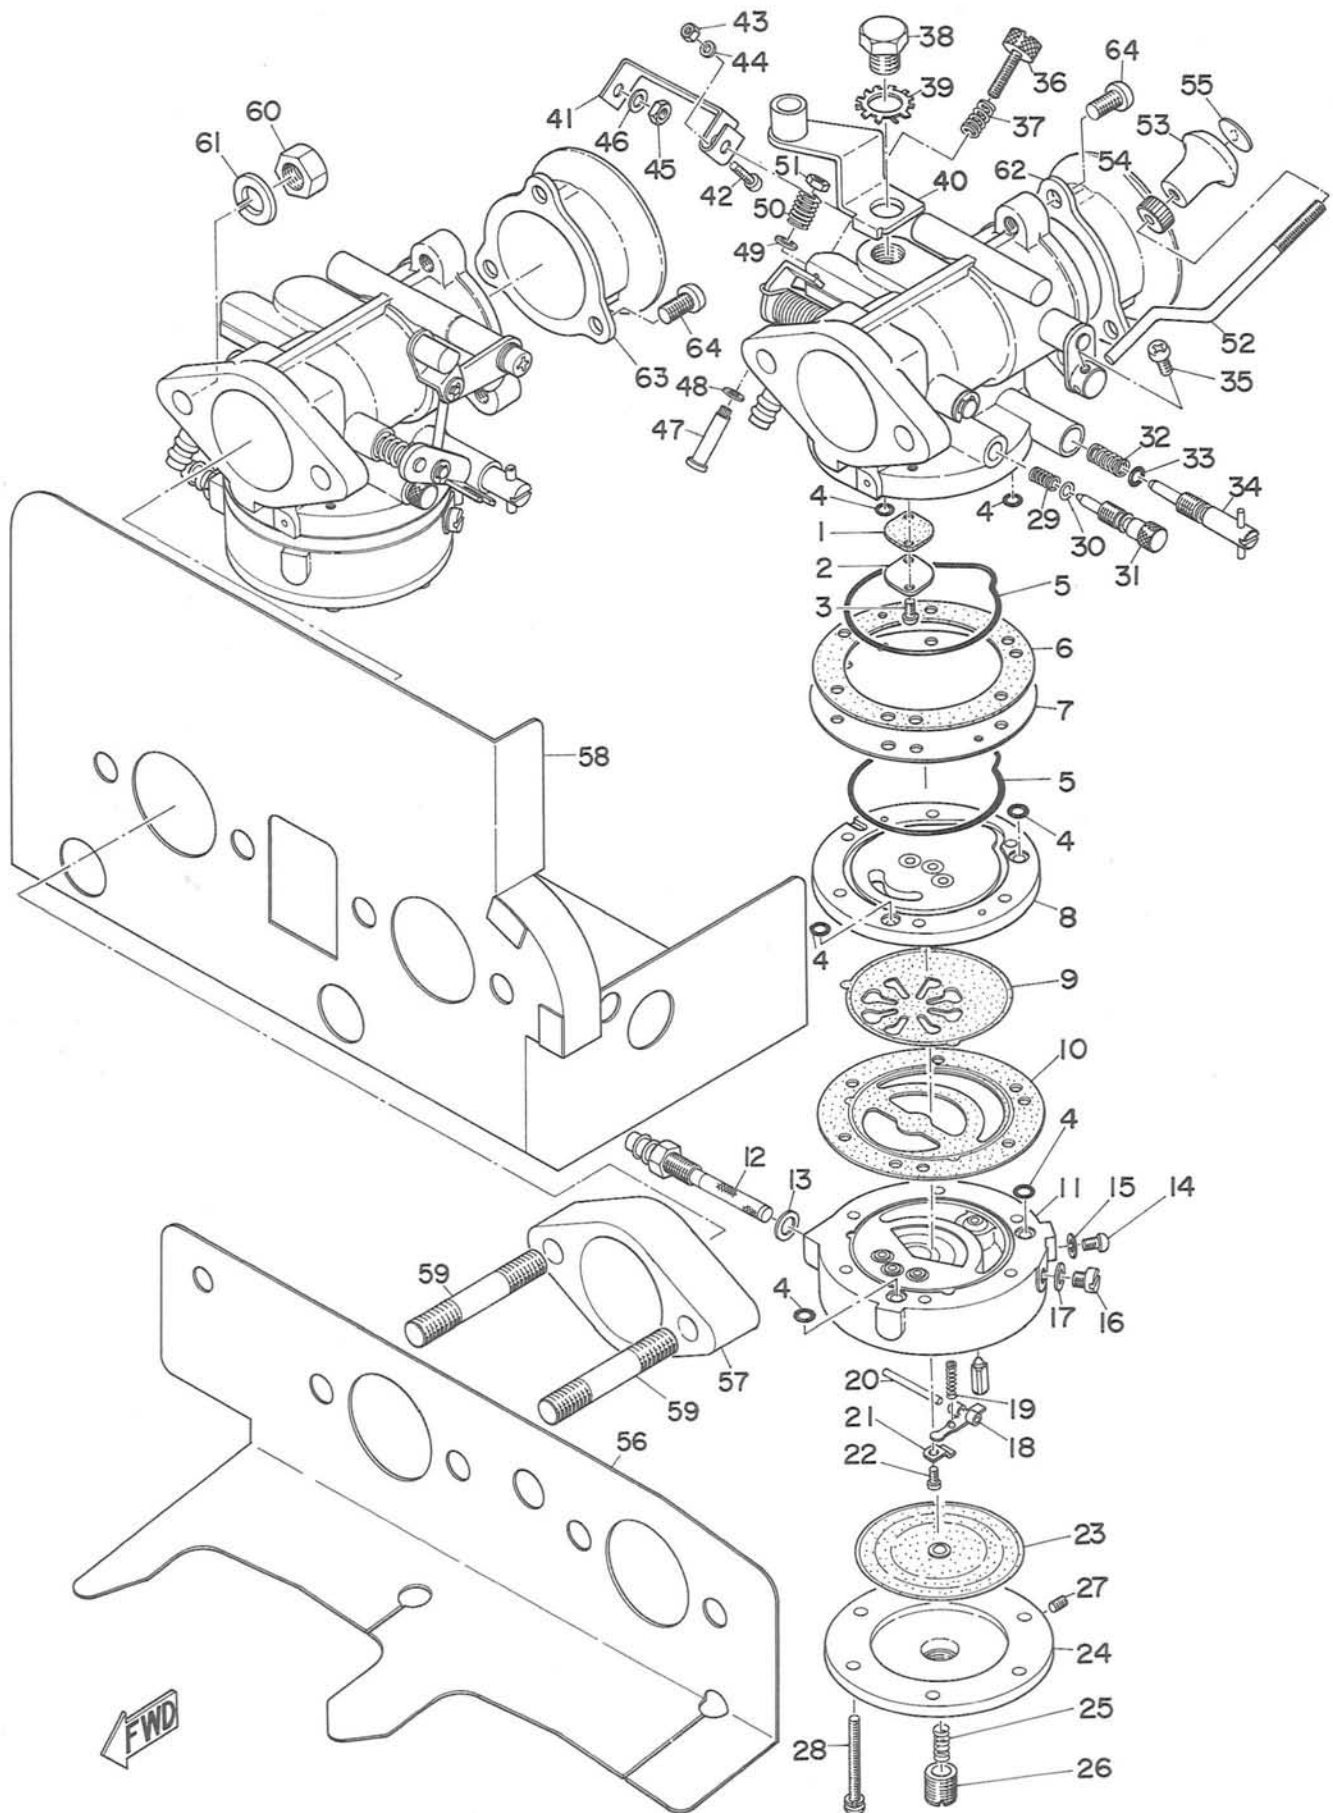

CARBURETOR

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
4- 0-1	807-14501-00	CARBURETOR ASS'Y (L.H)	(ISO)	1		
4- 0-2	807-14502-00	CARBURETOR ASS'Y (R.H)	(ISO)	1		
4- 1	806-14537-00	. GASKET		2		
4- 2	806-14527-00	. PLATE		2		
4- 3	98501-03008	. SCREW, pan head	(ISO)	4		
4- 4	806-14561-00	. O-RING		12		
4- 5	806-14562-00	. O-RING		4		
4- 6	806-14536-00	. GASKET		2		
4- 7	806-14541-00	. DIAPHRAGM, pump		2		
4- 8	806-14542-00	. BODY, pump 1		2		
4- 9	806-14552-00	. VALVE, check		2		
4-10	806-14553-00	. GASKET		2		
4-11	806-14543-00	. BODY, pump 2	(ISO)	2		
4-12	806-14568-00	. JOINT		2		
4-13	806-14558-00	. WASHER		2		
4-14	98501-04005	. SCREW, pan head	(ISO)	4		
4-15	806-14559-00	. WASHER		4		
4-16	806-14567-00	. SCREW		2		
4-17	806-14557-00	. WASHER		2		
4-18	806-14547-00	. ARM, float		2		
4-19	806-14556-00	. SPRING		2		
4-20	806-14548-00	. PIN, arm		2		
4-21	806-14549-00	. PLATE, pin set		2		
4-22	98501-03005	. SCREW, pan head	(ISO)	2		
4-23	806-14545-00	. DIAPHRAGM		2		
4-24	806-14544-00	. BODY, pump 3		2		
4-25	806-14555-00	. SPRING		2		
4-26	806-14565-00	. SCREW		2		
4-27	806-14566-00	. SCREW, stop		2		
4-28	806-14592-00	. SCREW, pan head	(ISO)	12		
4-29	806-14531-00	. SPRING, adjust screw		2		
4-30	806-14563-00	. O-RING		2		
4-31	806-14522-00	. SCREW, adjust		2		
4-32	806-14533-00	. SPRING, adjust screw		2		
4-33	806-14564-00	. O-RING		2		
4-34	806-14521-00	. SCREW, adjust		2		
4-35	98501-04008	. SCREW, pan head	(ISO)	2		


Fig. 4 CARBURETOR

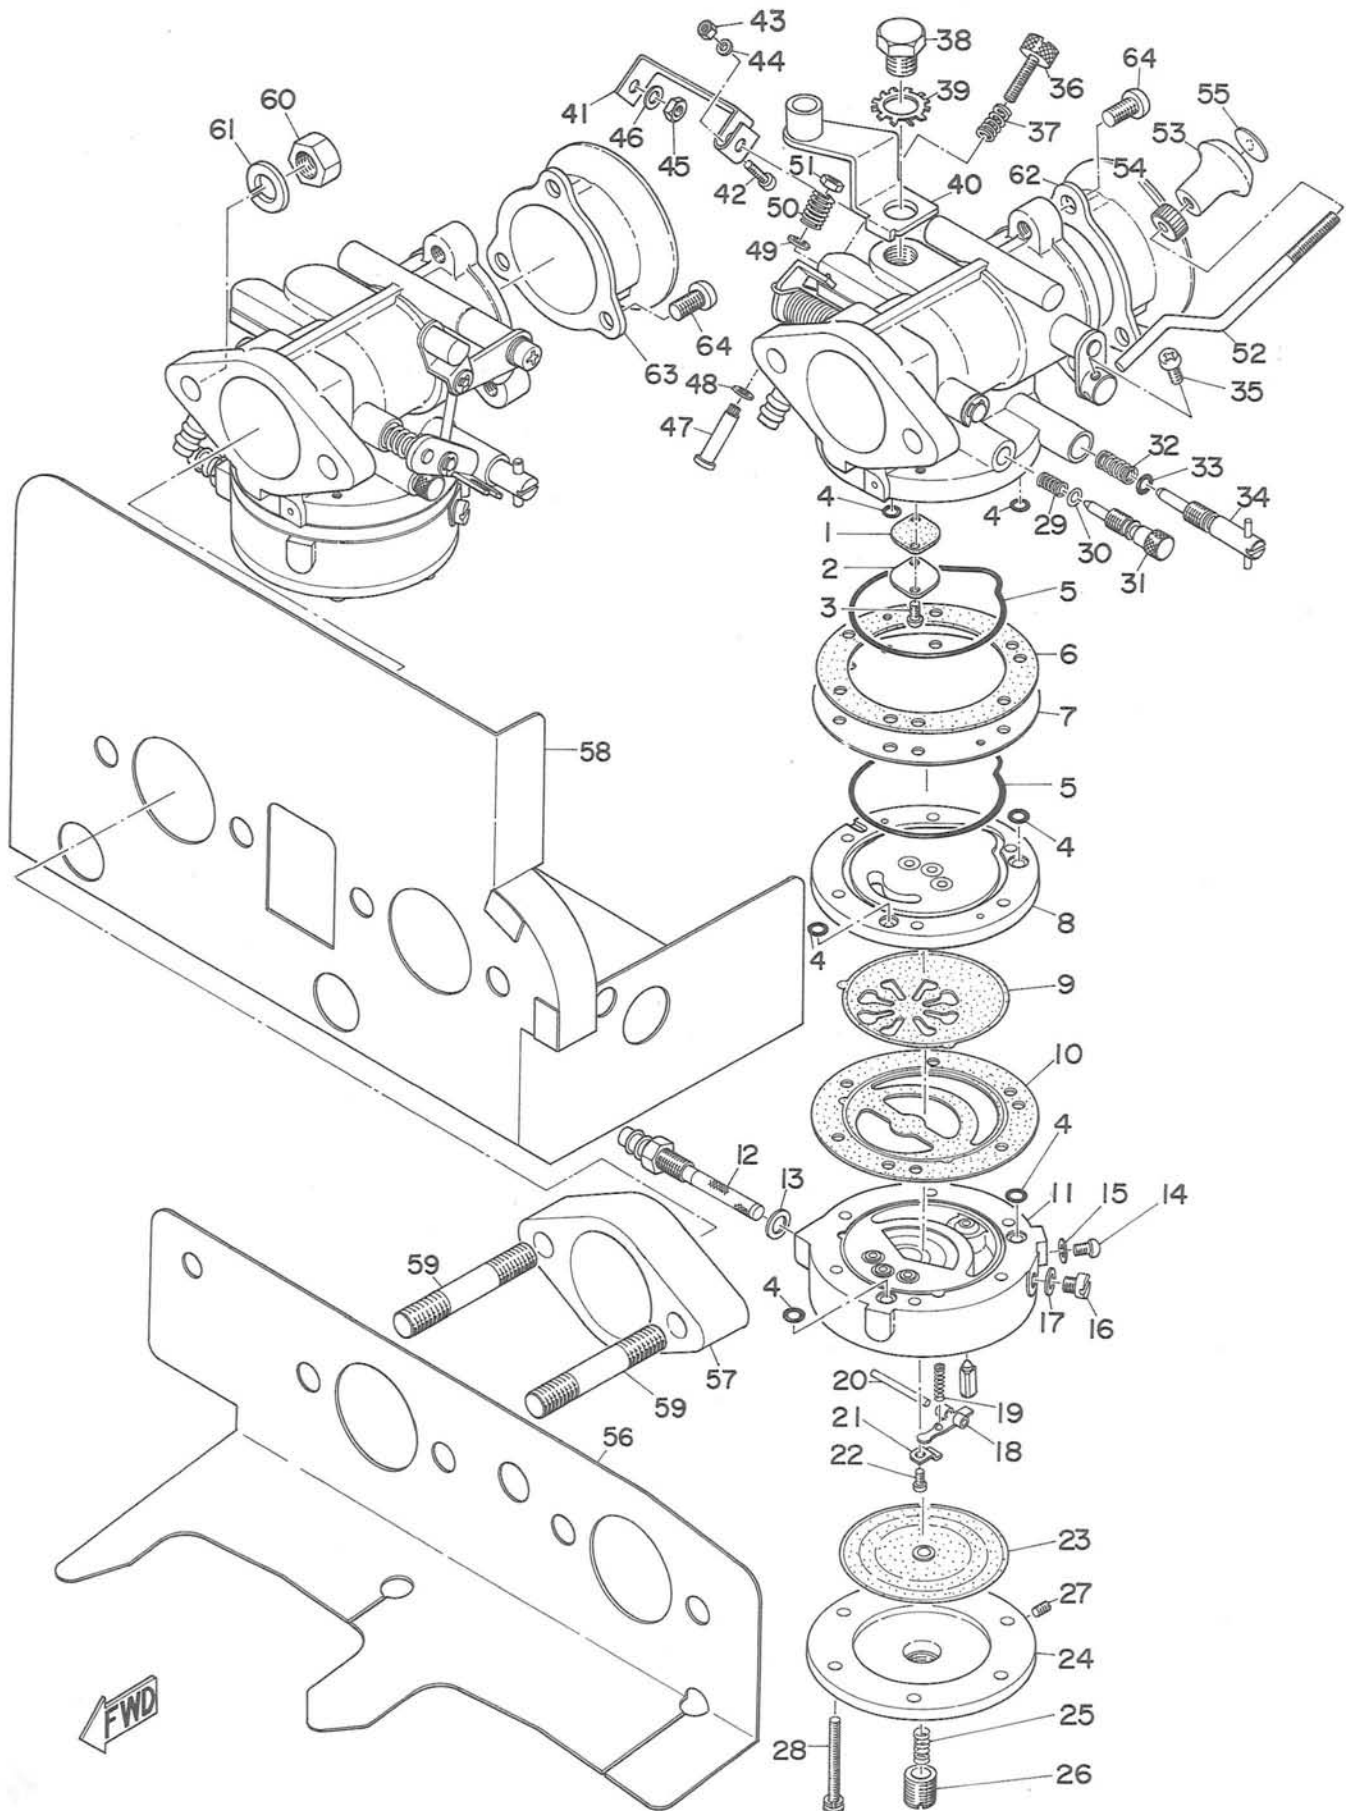

CARBURETOR

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
4-36	806-14523-00	. SCREW, stop		1		
4-37	806-14533-00	. SPRING, adjust screw		1		
4-38	97201-08010	. BOLT	(ISO)	1		
4-39	92901-08400	. WASHER, tooth		1		
4-40	806-14571-00	. BRACKET, throttle		1		
4-41	806-14588-00	. CONNECTOR		1		
4-42	98301-04015	. SCREW, cylinder head	(ISO)	1		
4-43	806-14595-00	. NUT	(ISO)	1		
4-44	92901-04200	. WASHER, plain		1		
4-45	98801-05200	. NUT	(ISO)	1		
4-46	806-14598-00	. WASHER, lock		1		
4-47	806-14591-00	. SCREW, stop		1		
4-48	806-14596-00	. WASHER		1		
4-49	806-14597-00	. WASHER		1		
4-50	806-14579-00	. SPRING		1		
4-51	806-14594-00	. NUT		1		
4-52	807-41256-00	ROD, choke		1		
4-53	624-41271-00	KNOB, choke (1)		1		
4-54	617-41272-00	KNOB, choke (2)		1		
4-55	617-24155-00	INDICATOR, choke		1		
4-56	807-13557-00	GASKET, carburetor		1		
4-57	807-13555-00	JOINT		2		
4-58	807-13567-00	GASKET, carburetor (2)		1		
4-59	807-13558-00	STUD		4		
4-60	98801-08300	NUT	(ISO)	4		
4-61	92901-08100	WASHER, spring		4		
4-62	807-14469-00	FUNNEL		1		
4-63	807-14479-00	FUNNEL		1		
4-64	92501-06010	SCREW, pan head		6		


Fig. 5 PIPING

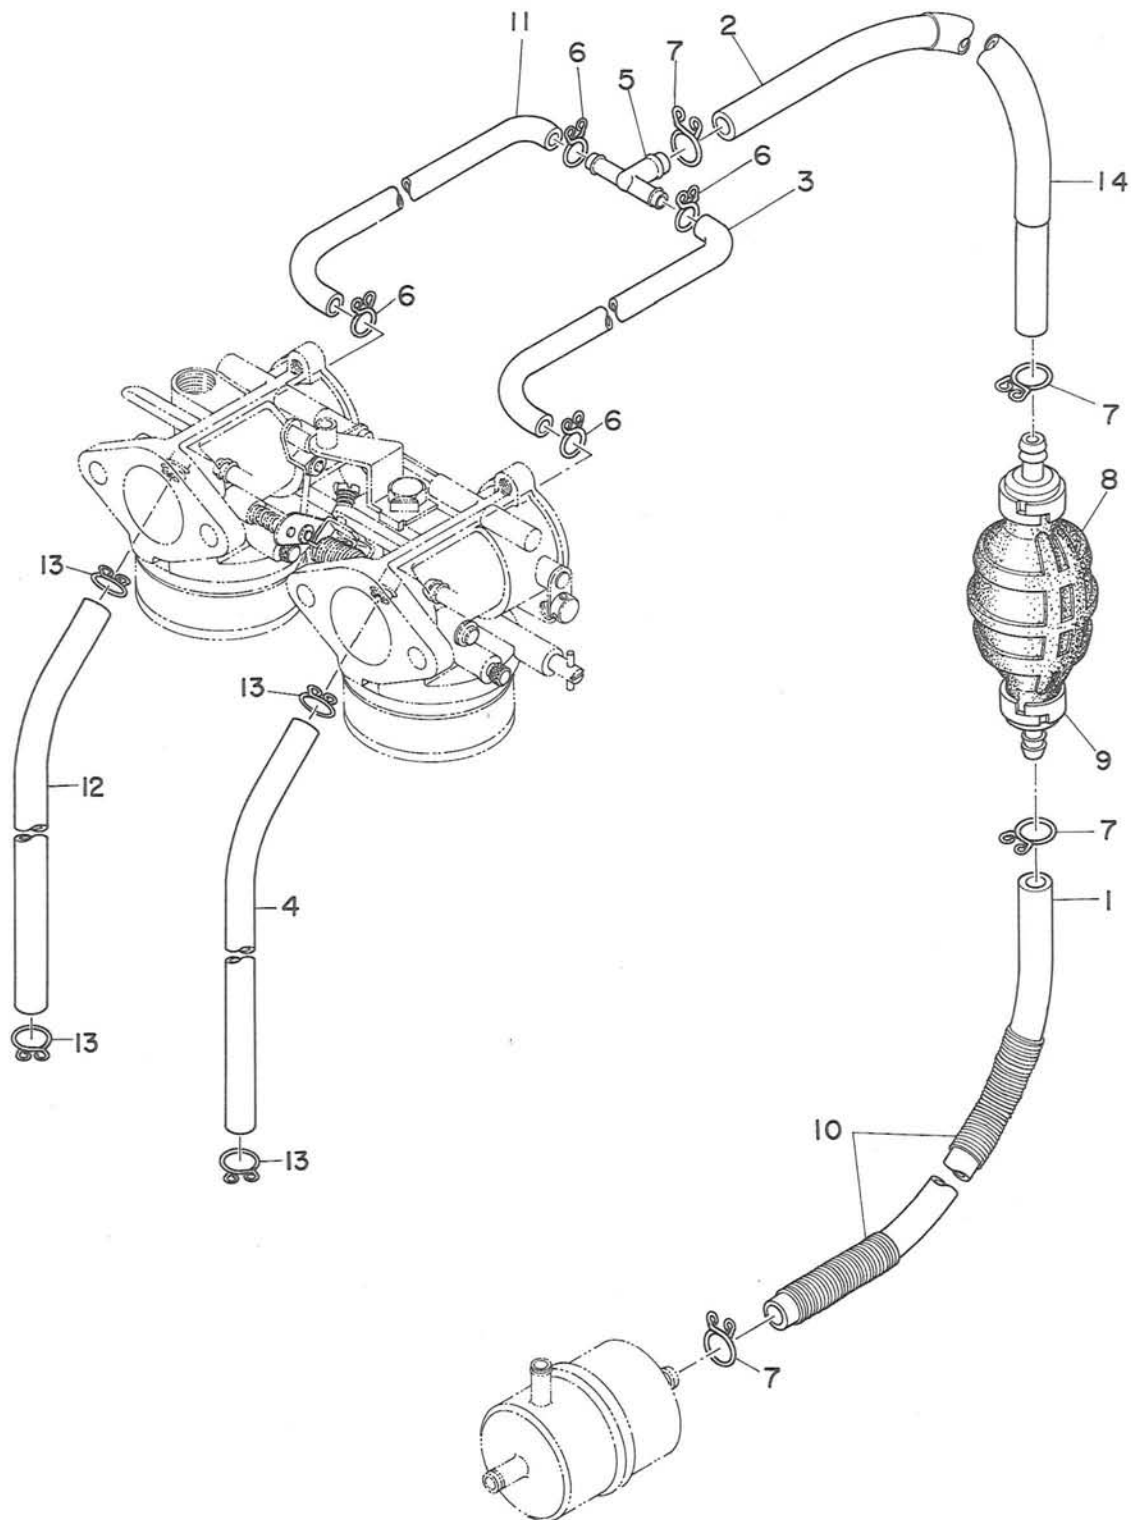

PIPING

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
5- 1	807-24314-00	PIPE (4)		1		
5- 2	807-24312-00	PIPE (2)		1		
5- 3	807-24313-00	PIPE (3)		2		
5- 4	807-24316-00	PIPE (6)		2		
5- 5	807-24376-00	JOINT, pipe		1		
5- 6	806-24359-00	CLIP, pipe (4)		4		
5- 7	143-24356-00	CLIP, pipe		4		
5- 8	803-24360-00	PRIMER PUMP ASS'Y		1		
5- 9	601-24353-00	BAND, fuel pipe (3)		2		
5-10	806-24328-00	PROTECTOR, pipe rear		2		
5-11	807-24317-00	PIPE (7)		1		
5-12	807-24315-00	PIPE (5)		1		
5-13	806-24356-00	CLIP, pipe (1)		4		
5-14	806-24322-10	PROTECTOR, pipe		1		


Fig. 6 EXHAUST

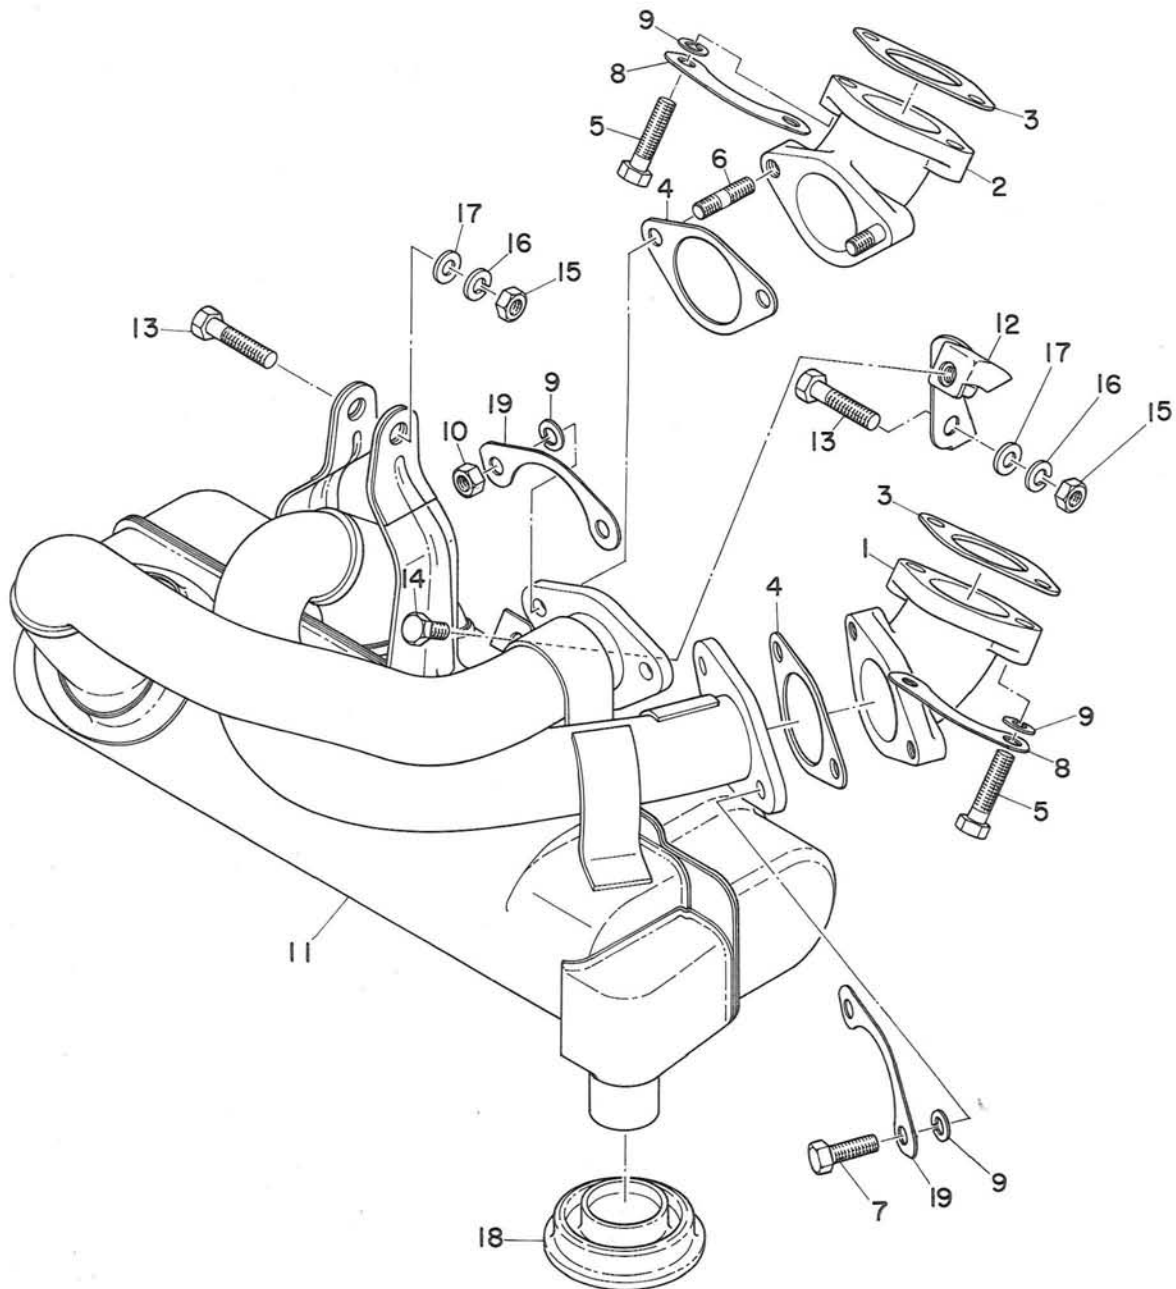

EXHAUST

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
6- 1	807-14615-01	JOINT, exhaust (1)		1		
6- 2	807-14625-01	JOINT, exhaust (2)		1		
6- 3	807-14613-00	GASKET, exhaust (1)		1		
6- 4	807-14623-00	GASKET, exhaust (2)		1		
6- 5	806-14655-00	BOLT	(ISO)	4		
6- 6	806-14661-00	STUD		2		
6- 7	806-14651-00	BOLT	(ISO)	2		
6- 8	807-14616-00	WASHER, lock		2		
6- 9	92990-08100	WASHER, spring		8		
6-10	183-22143-00	NUT	(ISO)	2		
6-11	806-14710-00	MUFFLER ASS'Y		1		
6-12	807-14771-00	STAY, muffler		1		
6-13	97201-08045	BOLT	(ISO)	2		
6-14	97201-08015	BOLT	(ISO)	1		
6-15	98801-08100	NUT	(ISO)	2		
6-16	92901-08100	WASHER, spring		2		
6-17	92901-08200	WASHER, plain		2		
6-18	807-14718-00	PROTECTOR, muffler		1		
6-19	807-14759-00	WASHER, lock		2		


Fig. 7 STARTER

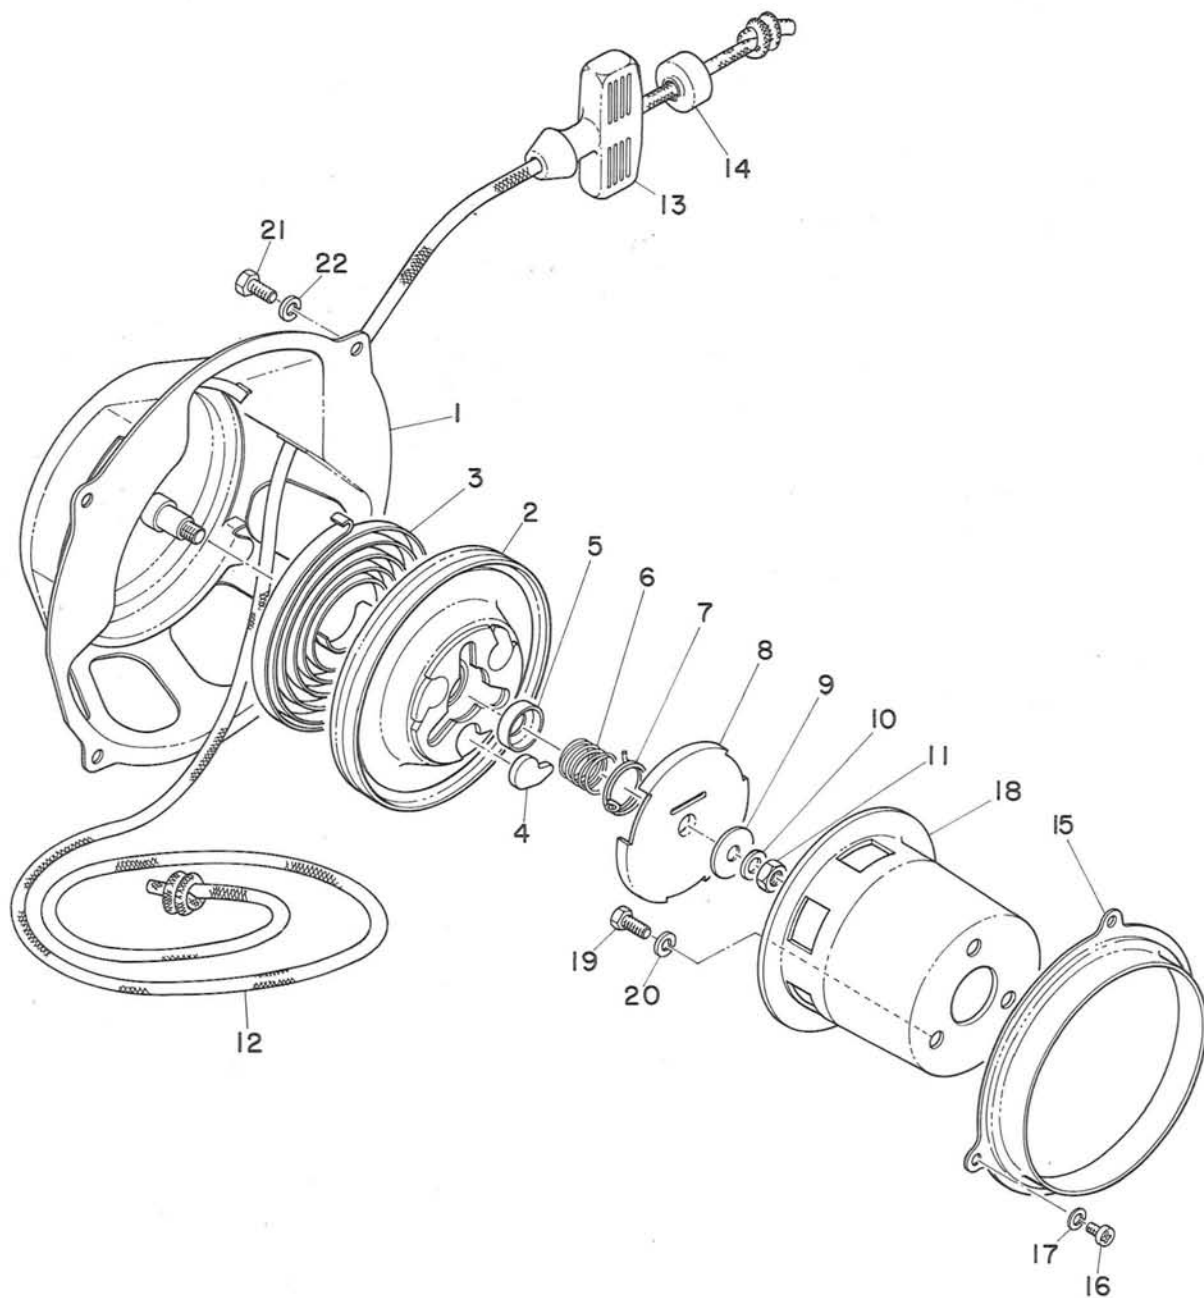

STARTER

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
7- 0-1	807-15710-00	STARTER ASS'Y	(ISO)	1		
7- 1	807-15711-00	. CASE, starter	(ISO)	1		△
7- 2	807-15714-00	. DRUM, sheave		1		
7- 3	802-15713-00	. SPRING, starter		1		
7- 4	802-15741-00	. PAWL, drive		3		
7- 5	807-15719-00	. WASHER, thrust		1		
7- 6	802-15715-00	. SPRING, drive plate		1		
7- 7	619-15734-00	. SPRING, return		1		
7- 8	802-15716-00	. PLATE, drive		1		
7- 9	807-15726-00	. WASHER, flat		1		
7-10	92901-08100	. WASHER, spring		1		
7-11	98801-08300	. NUT	(ISO)	1		
7-12	807-15751-00	. ROPE		1		
7-13	807-15755-00	. HANDLE, starter		1		
7-14	619-15756-00	. CONNECTOR		1		
7-15	807-15782-00	. COVER, sheave		1		
7-16	98501-05008	. SCREW, pan head	(ISO)	3		
7-17	92901-05100	. WASHER, spring		3		
7-18	807-15723-00	. PULLEY, starter		1		
7-19	97201-08015	BOLT	(ISO)	3		
7-20	92901-08100	WASHER, spring		3		
7-21	91201-06015	BOLT		4		
7-22	92901-06100	WASHER, spring		4		

Fig. 8 FLYWHEEL MAGNETO

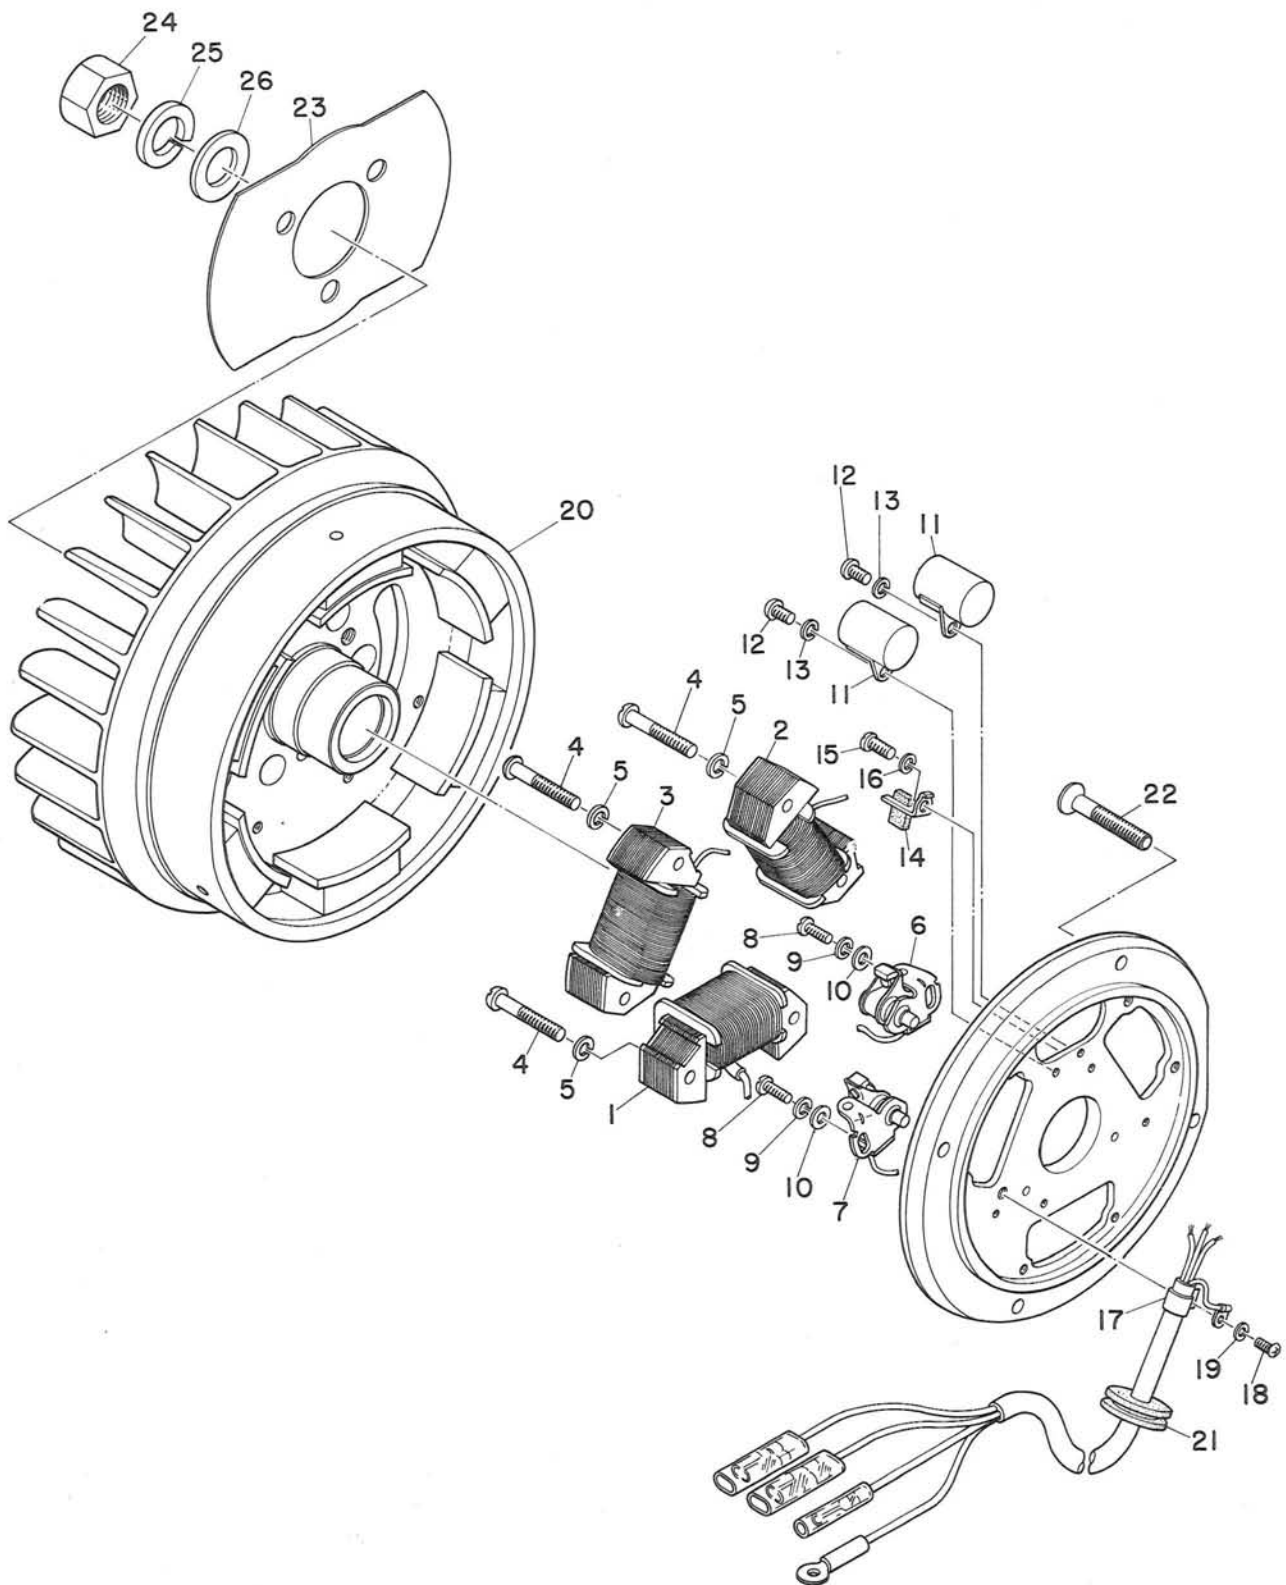


FWD

FLYWHEEL MAGNETO

Ref No.	Parts No.	Parts Name	Description	Q'ty	S · R	Remarks
8- 0-1	806-81300-20	FLYWHEEL MAGNETO ASS'Y	(ISO)	1		
8- 1	806-81311-20	. COIL, source (L,H)		1		
8- 2	806-81312-20	. COIL, source (R,H)		1		
8- 3	806-81313-20	. COIL, lighting		1		
8- 4	802-81345-20	. SCREW, pan head	5-25 (ISO)	6		
8- 5	92901-05100	. WASHER, spring		6		
8- 6	806-81321-20	. CONTACT BREAKER ASS'Y (L,H)		1		
8- 7	806-81322-20	. CONTACT BREAKER ASS'Y (R,H)		1		
8- 8	110-81347-20	. SCREW, pan head	4-12 (ISO)	2		
8- 9	92901-04100	. WASHER, spring		2		
8-10	92901-04200	. WASHER, plain		2		
8-11	802-81325-20	. CONDENSER		2		
8-12	110-81346-20	. SCREW, pan head	4-10 (ISO)	2		
8-13	92901-04100	. WASHER, spring		2		
8-14	120-81331-20	. LUBRICATOR		2		
8-15	110-81346-20	. SCREW, pan head	4-10 (ISO)	2		
8-16	92901-04100	. WASHER, spring		2		
8-17	104-81328-20	. CLAMP, lead		1		
8-18	165-81145-21	. SCREW, pan head	4-8 (ISO)	1		
8-19	92901-04100	. WASHER, spring		1		
8-20	806-81350-20	. ROTOR ASS'Y		1		
8-21	802-81329-00	. GROMMET, low-tension cord		1		
8-22	92502-06015	SCREW, pan head		4		
8-23	807-81362-00	COVER, hole		1		
8-24	168-11555-00	NUT, crank shaft		1		
8-25	92901-16100	WASHER, spring		1		
8-26	807-11557-00	WASHER		1		

Fig. 10 ENGINE COWL

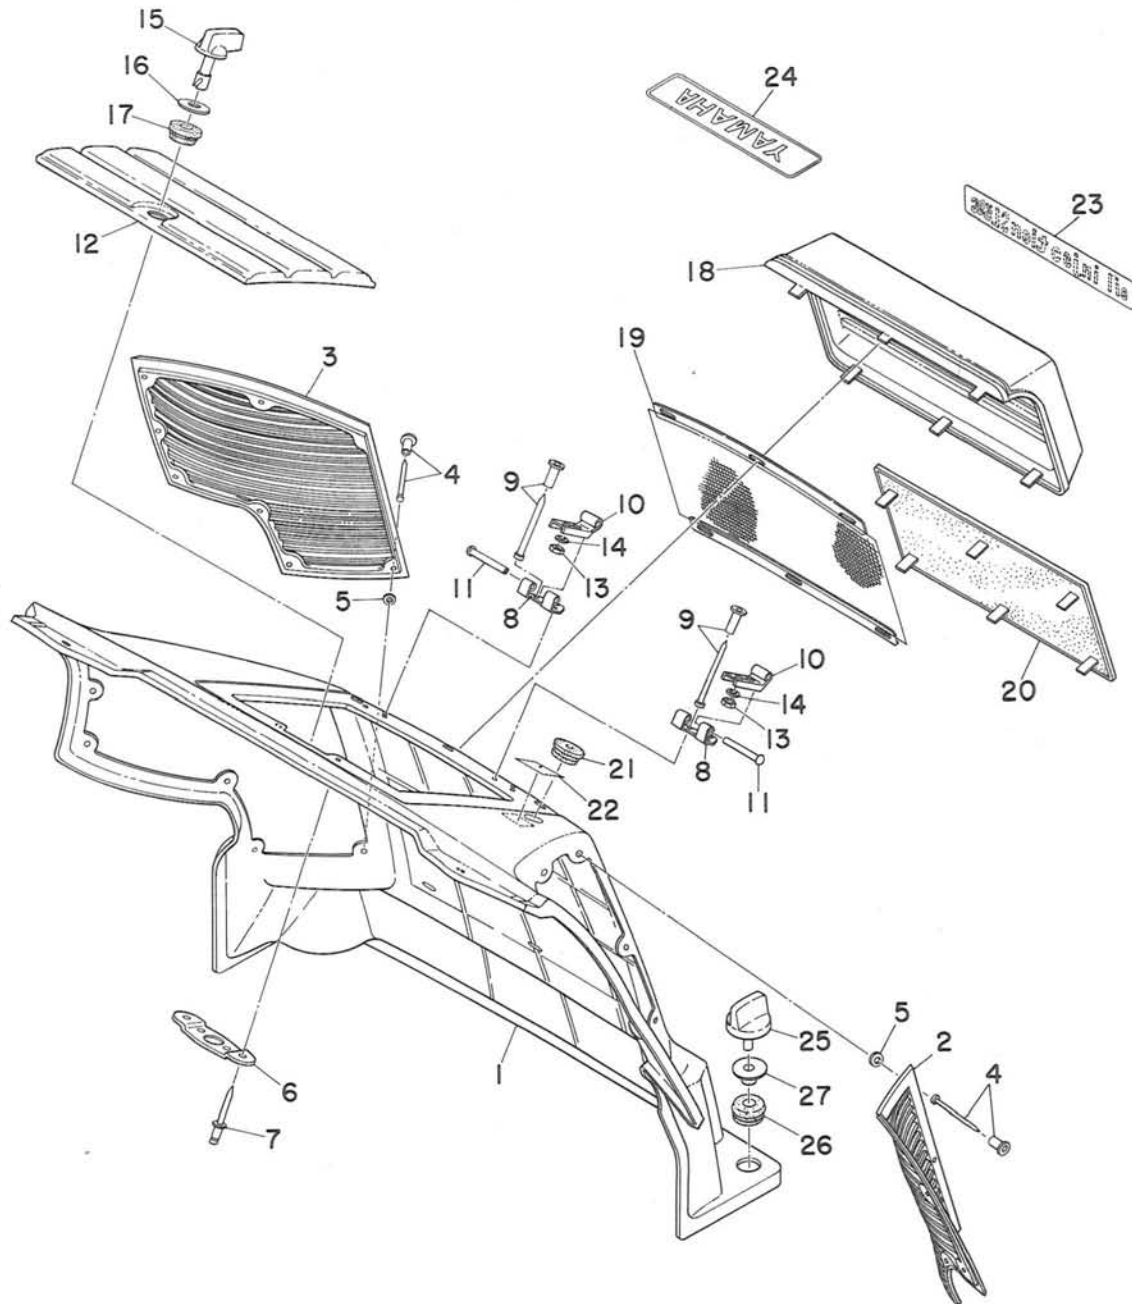


ENGINE COWL

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
10- 1	807-77401-00	ENGINE COWL ASS'Y		1		
10- 2	807-77441-00	. LOUVER, engine cowl (L.H)		1		
10- 3	807-77442-00	. LOUVER, engine cowl (R.H)		1		
10- 4	807-77469-00	. RIVET (3)		18		
10- 5	807-77437-00	. WASHER, special	3.2-8-1	18		
10- 6	807-77424-00	. BRACKET, spring		1		
10- 7	807-77459-00	. RIVET		2		
10- 8	807-77476-00	HINGE, lid lower		2		
10- 9	807-77449-00	RIVET (1)		6		
10-10	807-77475-00	HINGE, lid lower	(ISO)	2		
10-11	807-77477-00	PIN, hinge		2		
10-12	807-77425-00	LID, engine cowl		1		
10-13	98806-05100	NUT	(ISO)	4		
10-14	92901-05100	WASHER, spring		4		
10-15	806-42753-00	FASTENER		1		
10-16	615-42751-00	WASHER, plain	8.5-22-1	1		
10-17	615-42746-00	BUSHING		1		
10-18	807-77443-00	LOUVER, engine cowl		1		
10-19	807-77444-00	LOUVER, inner		1		
10-20	807-77415-00	PAD, engine cowl		1		
10-21	807-77432-00	GROMMET (2)		1		
10-22	807-77455-00	INDICATOR, chock		1		
10-23	807-77351-00	EMBLEM		1		
10-24	807-77451-00	EMBLEM		1		
10-25	807-77445-00	KNOB, engine cowl		2		
10-26	807-77431-00	GROMMET, engine cowl		2		
10-27	807-77435-00	COLLAR		2		

DRIVE




Fig. 11 PRIMARY SHEAVE

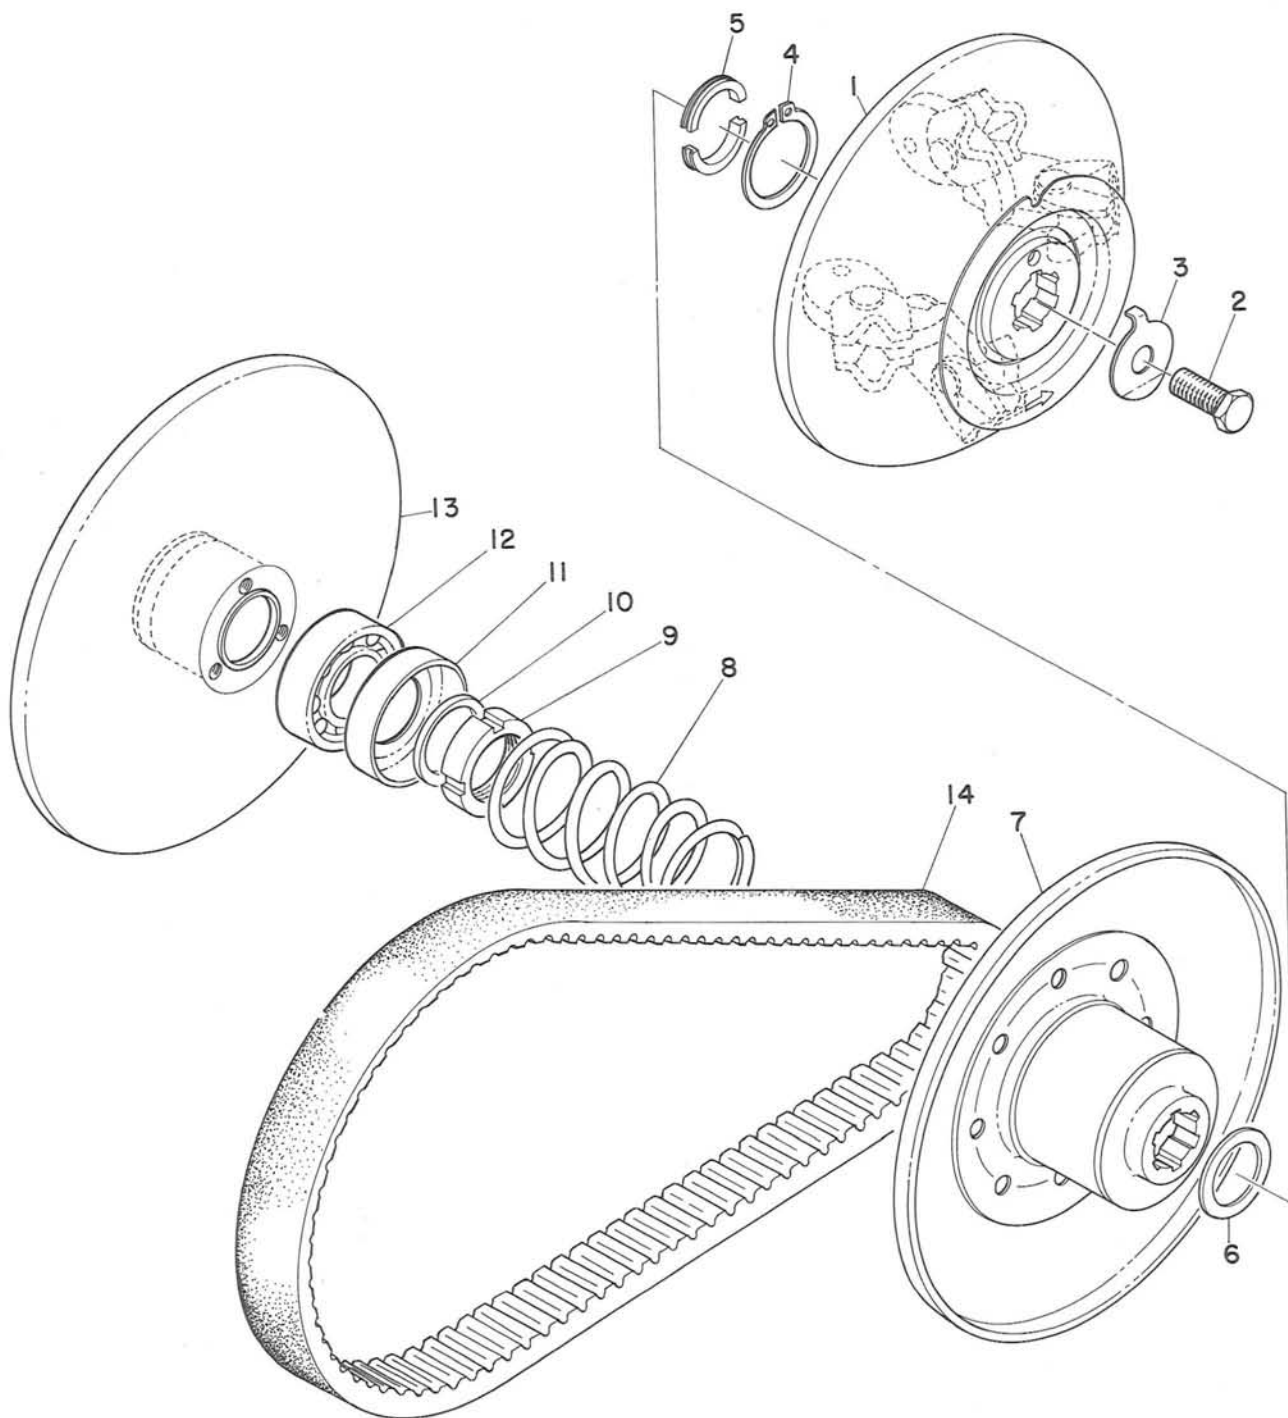

PRIMARY SHEAVE

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
11- 1	806-17630-00	PRIMARY SHEAVE CAP COMP.		1		
11- 2	806-17647-00	BOLT		1		
11- 3	806-17646-00	WASHER, lock		1		
11- 4	93410-30012	CLIP		1		
11- 5	806-17645-00	COLLAR		2		
11- 6	802-47375-00	WASHER		1		
11- 7	806-17620-00	PRIMARY SLIDING SHEAVE COMP.		1		
11- 8	806-17643-00	SPRING, primary		1		
11- 9	806-17642-00	NUT, bearing		1		
11-10	806-17648-00	WASHER	28-36-2	1		
11-11	806-17644-00	SEAT, spring		1		
11-12	93306-20512	BEARING	6205	1		
11-13	806-17610-00	PRIMARY FIXED SHEAVE COMP.		1		
11-14	806-17641-00	V-BELT		1		


Fig. 12 SECONDARY SHEAVE

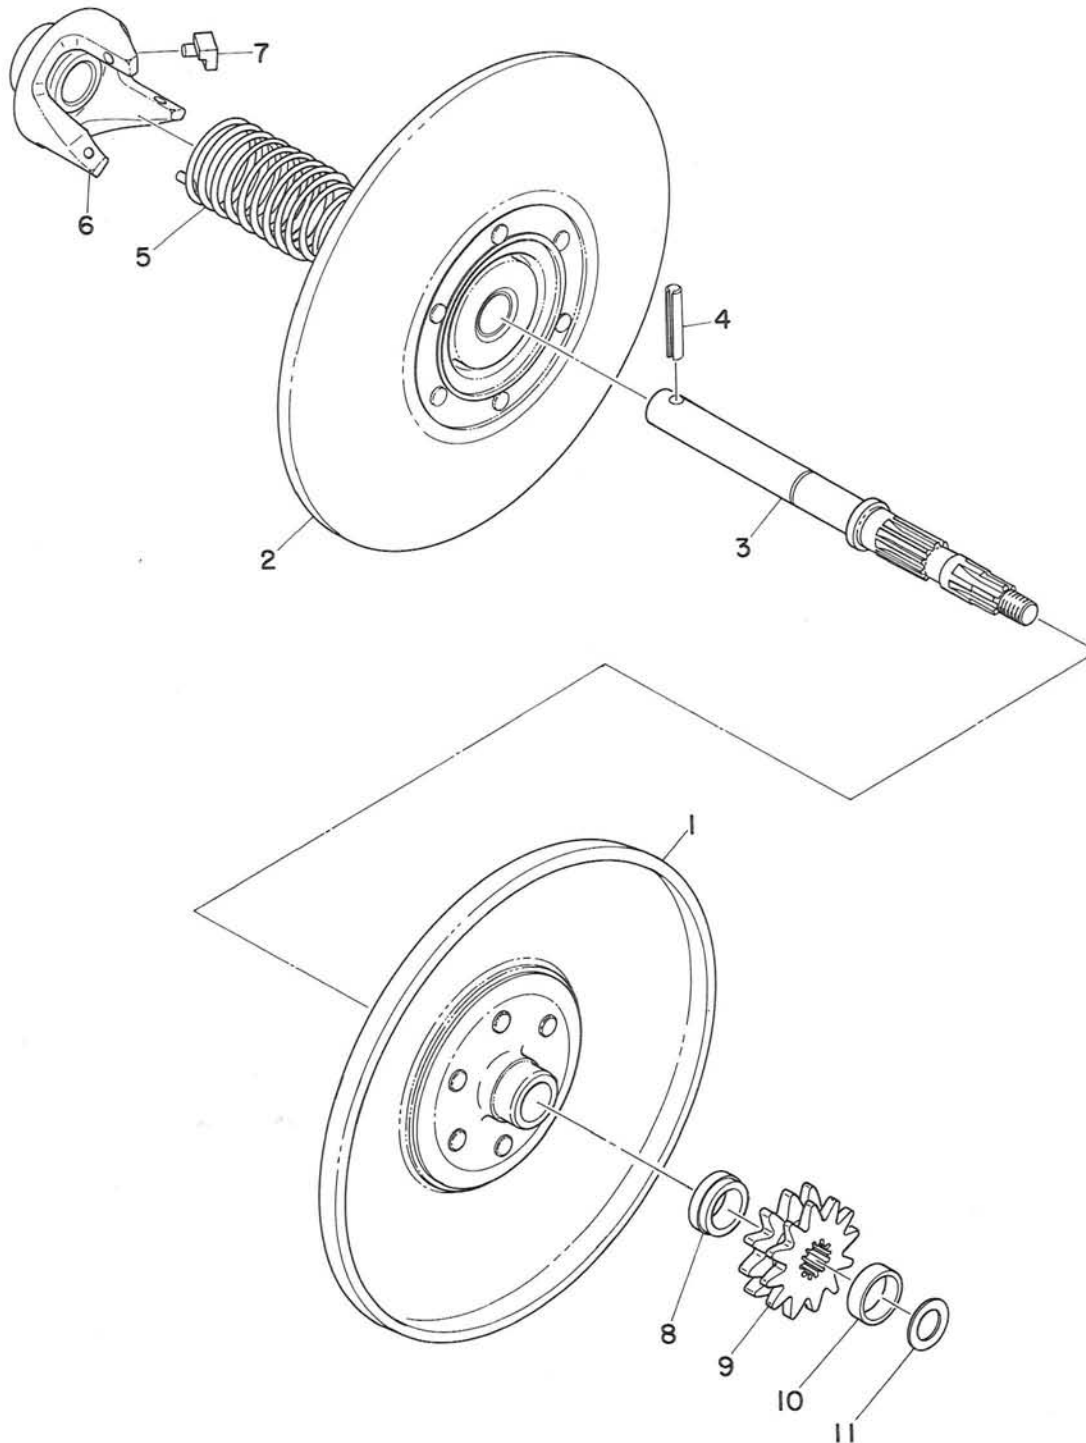

SECONDARY SHEAVE

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
12- 1	806-17660-00	SECONDARY FIXED SHEAVE COMP.		1		
12- 2	806-17670-00	SECONDARY SLIDING SHEAVE COMP.		1		
12- 3	806-17681-00	SHAFT, secondary	(ISO)	1		
12- 4	91609-80040	PIN, spring		1		
12- 5	806-17683-00	SPRING, secondary		1		
12- 6	806-17684-00	SEAT, spring		1		
12- 7	801-17688-10	SHOE, lamp		3		
12- 8	802-17685-00	COLLAR, distance (1)		1		
12- 9	806-17682-20	SPROCKET, chain drive	12T	1		
12-10	802-17695-00	COLLAR, distance (3)		1		
12-11	150-17417-00-02	SHIM	17.2-25-0.2	U.R 1		
	150-17417-00-03	SHIM	17.2-25-0.3			
	150-17417-00-04	SHIM	17.2-25-0.4			
	150-17417-00-05	SHIM	17.2-25-0.5			
	150-17417-00-06	SHIM	17.2-25-0.6			
	150-17417-00-07	SHIM	17.2-25-0.7			


Fig. 13 TRACK DRIVE

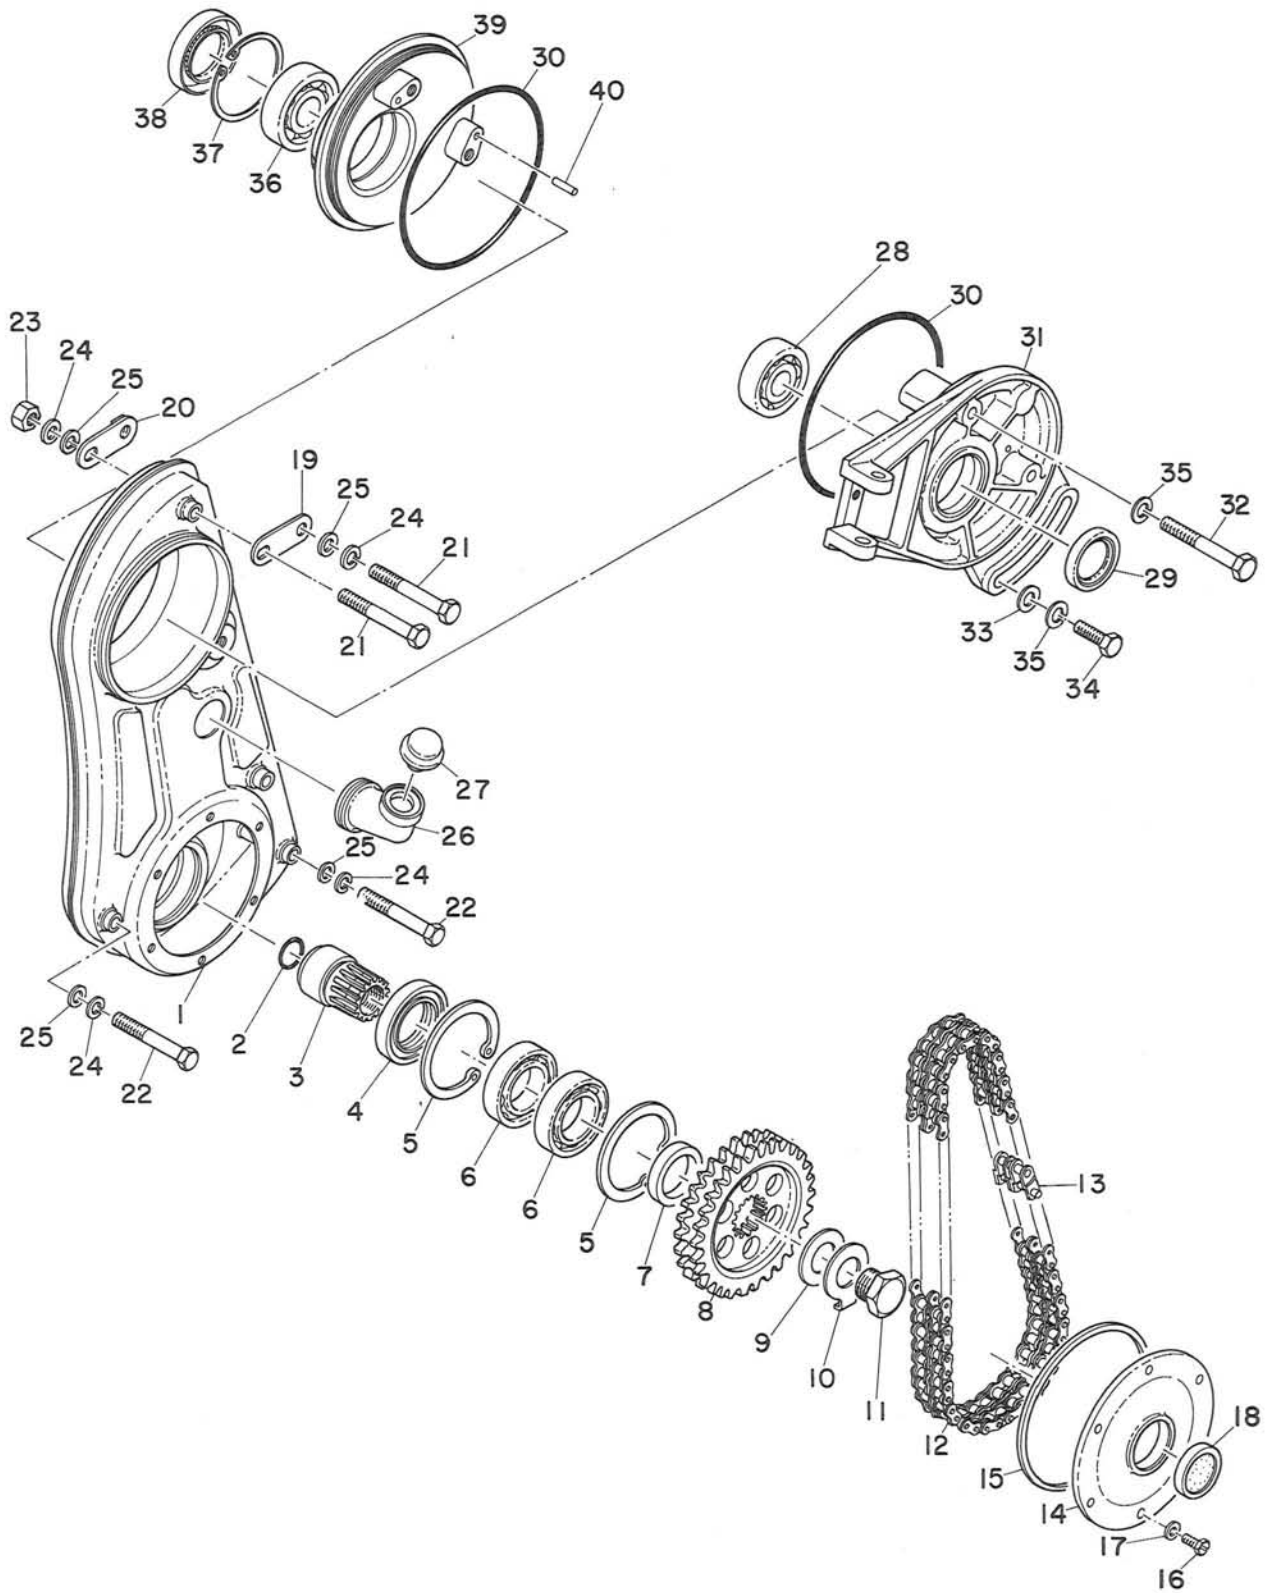

TRACK DRIVE

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
13-38	93102-30072	OIL SEAL		1		
13-39	806-47562-00	HOUSING, secondary shaft (R.H)		1		
13-40	93604-18058	PIN, dowel	4-17.8	2		


Fig. 14 BRAKE

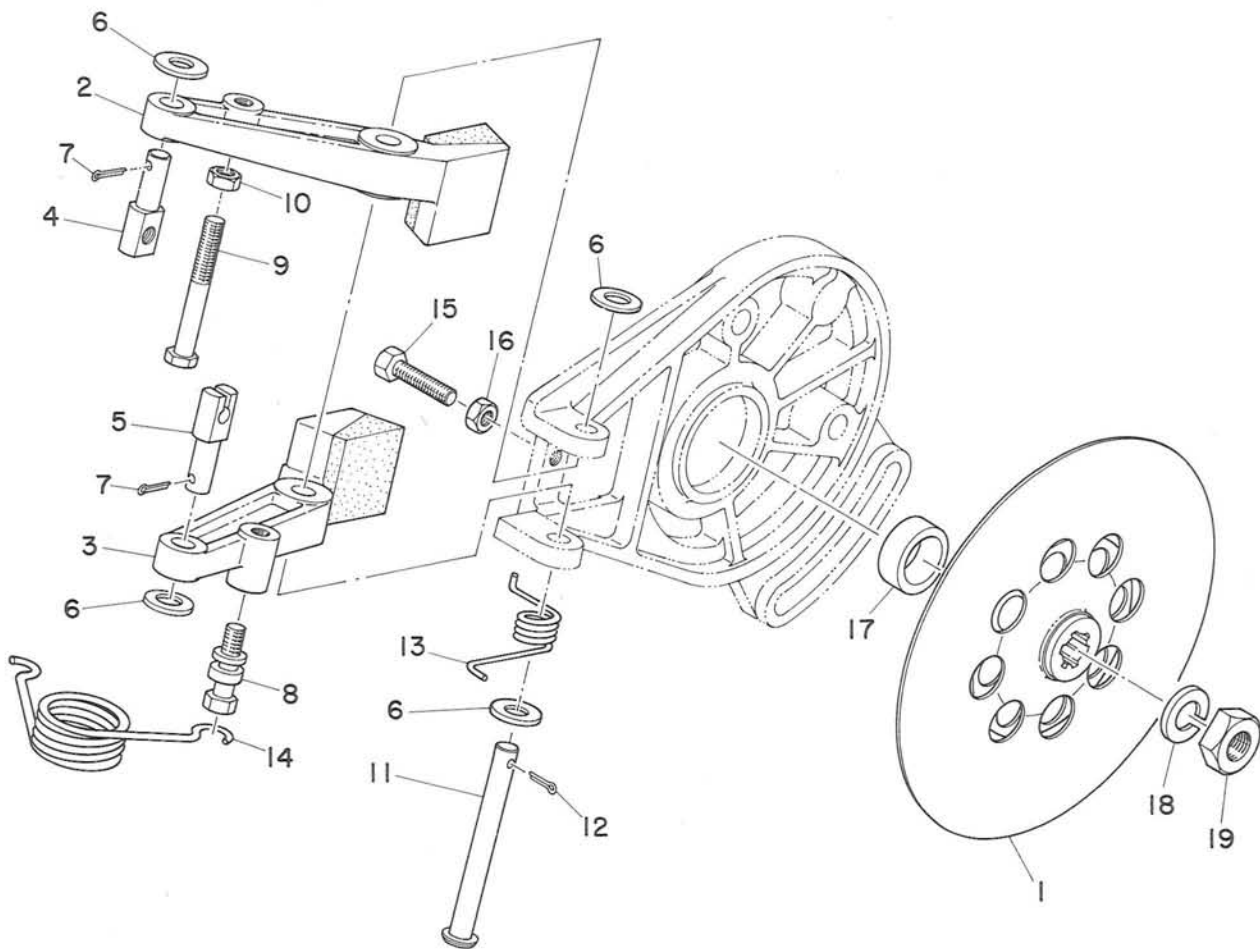

BRAKE

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
14- 1	806-25711-00	DISC, brake		1		
14- 2	806-25730-00	CALIPER BODY COMP. (1)		1		
14- 3	806-25740-00	CALIPER BODY COMP. (2)		1		
14- 4	801-25734-00	PIN (1)		1		
14- 5	801-25744-00	PIN (2)		1		
14- 6	92901-08200	WASHER, plain		4		
14- 7	91401-30015	PIN, cotter		2		
14- 8	801-25736-00	HOOK, spring (1)		1		
14- 9	91201-06055	BOLT		1		
14-10	92801-06300	NUT		1		
14-11	91501-08070	PIN, clevis		1		
14-12	91401-20012	PIN, cotter		1		
14-13	801-25745-00	SPRING, return (2)		1		
14-14	801-25735-00	SPRING, return (1)		1		
14-15	91201-06020	BOLT		1		
14-16	92801-06300	NUT		1		
14-17	802-17686-00	COLLAR, distance		1		
14-18	92901-12100	WASHER, spring		1		
14-19	98801-12300	NUT	(ISO)	1		


Fig. 15 FRONT AXLE

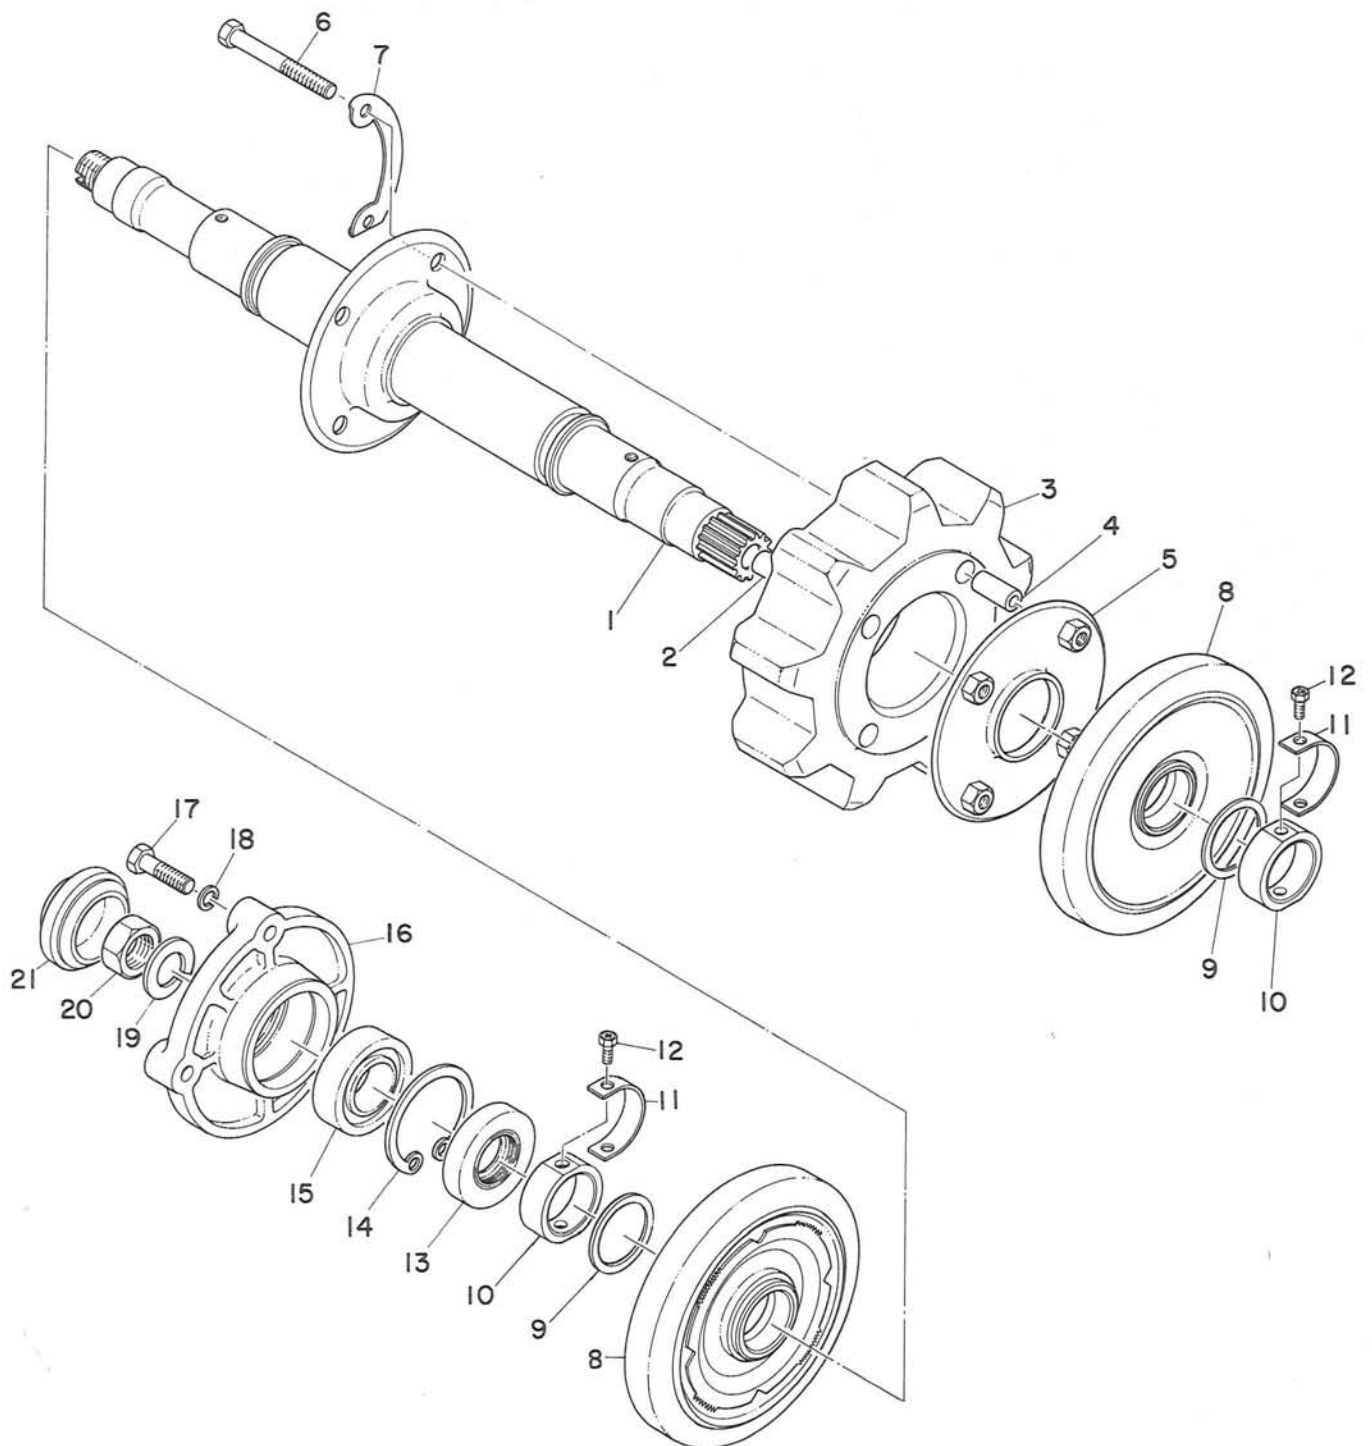

FRONT AXLE

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
15- 1	807-47510-00	FRONT AXLE COMP.		1		
15- 2	802-47575-00	PLUG (2)		1		
15- 3	806-47531-00	WHEEL, sprocket		1		
15- 4	802-47526-00	COLLAR		4		
15- 5	806-47522-00	RIM, sprocket wheel (2)		1		
15- 6	97201-08070	BOLT		4		
15- 7	802-47517-00	WASHER, lock		2		
15- 8	806-47530-00	GUIDE WHEEL COMP.		2		
15- 9	806-47527-00	WASHER	33.5-41-1	2		
15-10	806-47536-00	COLLAR		2		
15-11	806-47539-00	WASHER, lock		2		
15-12	806-47528-00	SCREW		4		
15-13	93105-30014	OIL SEAL		1		
15-14	93420-52014	CIRCLIP		1		
15-15	93306-20501	BEARING		1		
15-16	802-47551-00	HOUSING, front axle		1		
15-17	91201-06030	BOLT		3		
15-18	92901-06100	WASHER, spring		3		
15-19	92901-18100	WASHER, spring		1		
15-20	156-16174-00	NUT, lock		1		
15-21	802-47552-01	CAP, front axle housing		1		


Fig. 16 REAR AXLE

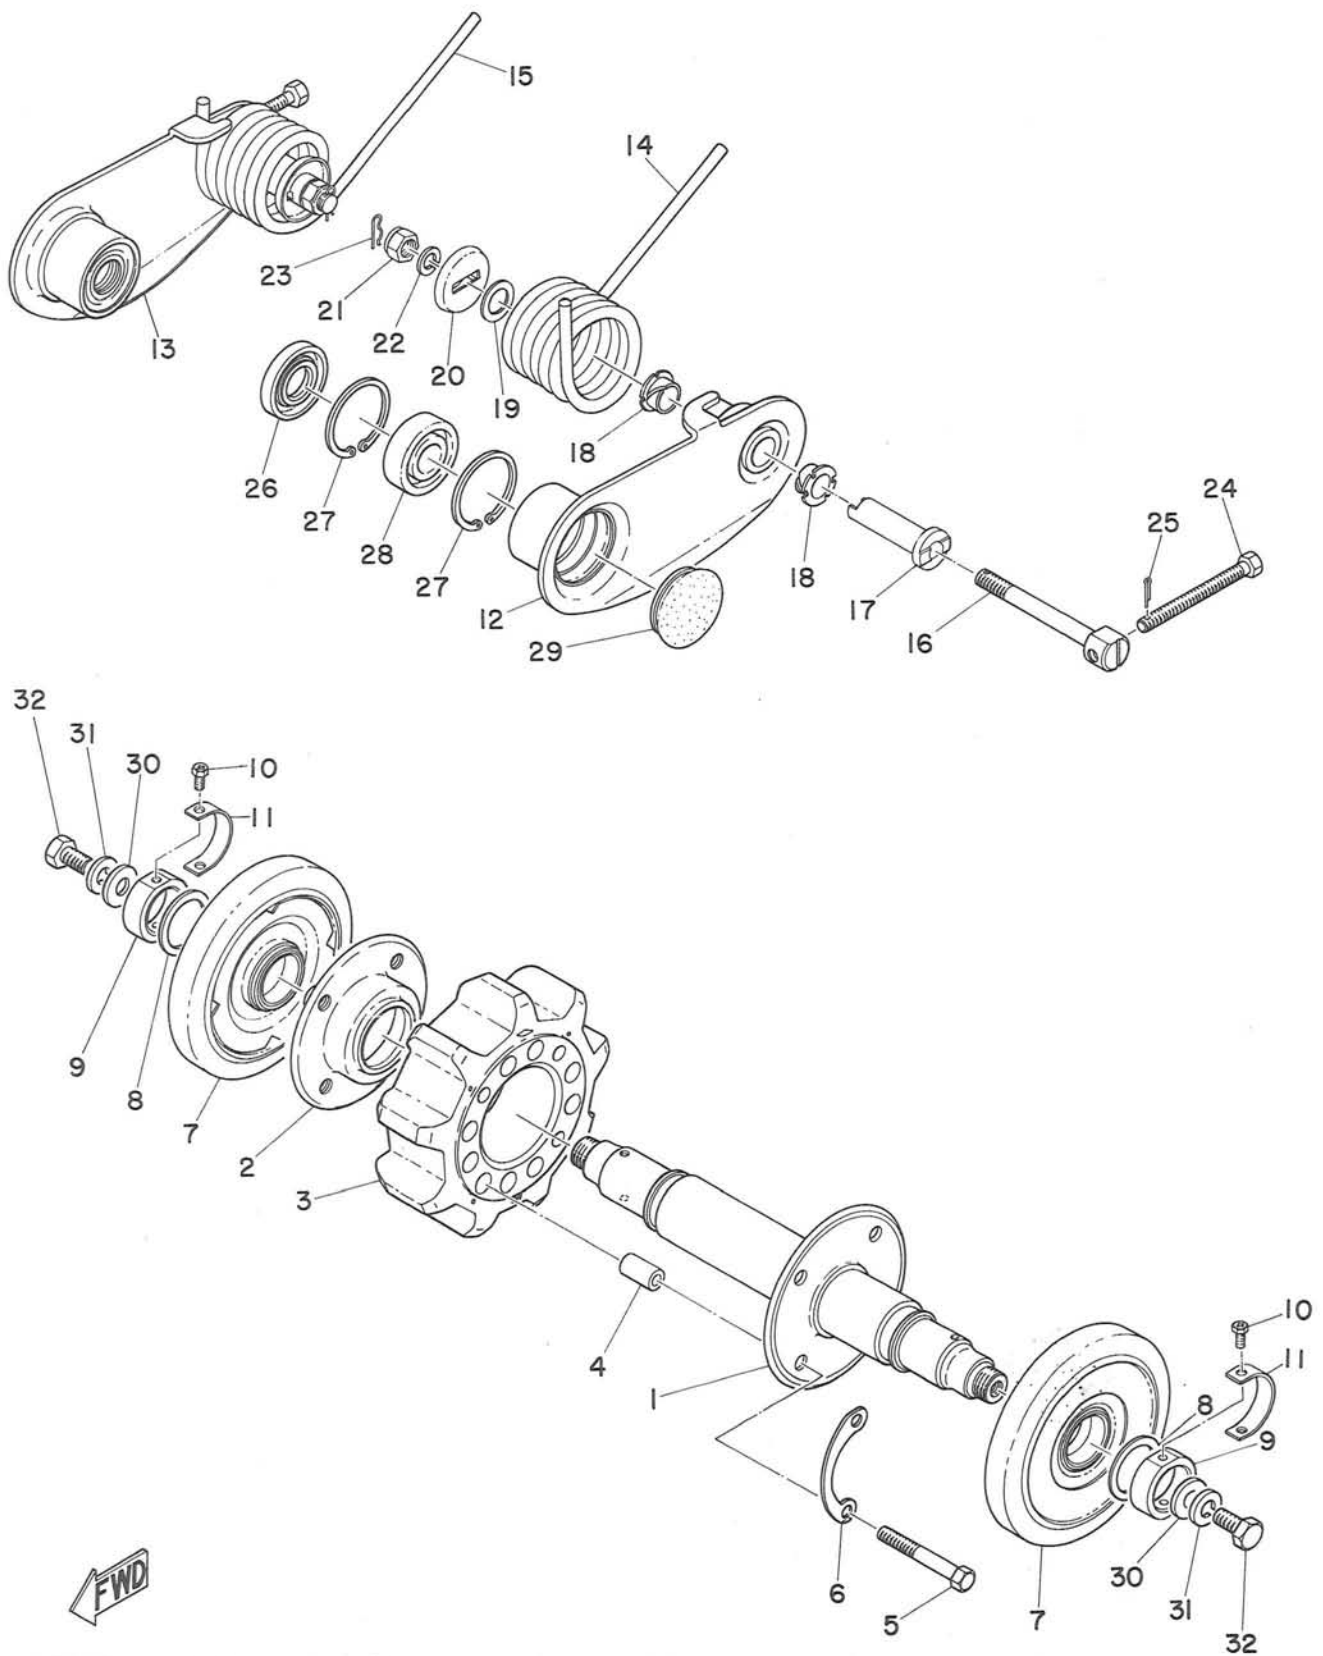

REAR AXLE

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
16- 1	807-47520-00	REAR AXLE COMP.	(ISO)	1		
16- 2	806-47522-00	RIM, sprocket wheel (2)		1		
16- 3	806-47531-00	WHEEL, sprocket		1		
16- 4	802-47526-00	COLLAR		4		
16- 5	97201-08070	BOLT	(ISO)	4		
16- 6	802-47517-00	WASHER, lock		2		
16- 7	806-47530-00	GUIDE WHEEL COMP.		2		
16- 8	806-47527-00	WASHER	33.5-41-1	2		
16- 9	806-47536-00	COLLAR		2		
16-10	806-47528-00	SCREW		4		
16-11	806-47539-00	WASHER, lock		2		
16-12	806-47361-00	ARM, pivot rear (L.H)		1		
16-13	806-47362-00	ARM, pivot rear (R.H)		1		
16-14	806-47363-00	SPRING (L.H)		1		
16-15	806-47364-00	SPRING (R.H)		1		
16-16	806-47367-00	SCREW, pivot rear		2		
16-17	806-47369-00	COLLAR		2		
16-18	806-47371-00	BUSHING, pivot		4		
16-19	806-47384-00	WASHER	17.2-25.4-1.5	2		
16-20	806-47374-00	WASHER, inside		2		
16-21	802-23778-00	NUT		2		
16-22	92901-10100	WASHER, spring		2		
16-23	102-25375-00	CLIP, tension bar		2		
16-24	806-47373-00	SCREW, track adjust		2		
16-25	91402-30025	PIN, cotter		2		
16-26	93102-25044	OIL SEAL		2		
16-27	93420-47010	CIRCLIP		4		
16-28	93306-20406	BEARING	6204RS	2		
16-29	802-47377-00	CAP		2		
16-30	806-47581-00	WASHER	12.5-30-2.6	2		
16-31	92901-12100	WASHER, spring		2		
16-32	97201-12020	BOLT	(ISO)	2		


Fig. 17 TRACK & SUSPENSION WHEEL

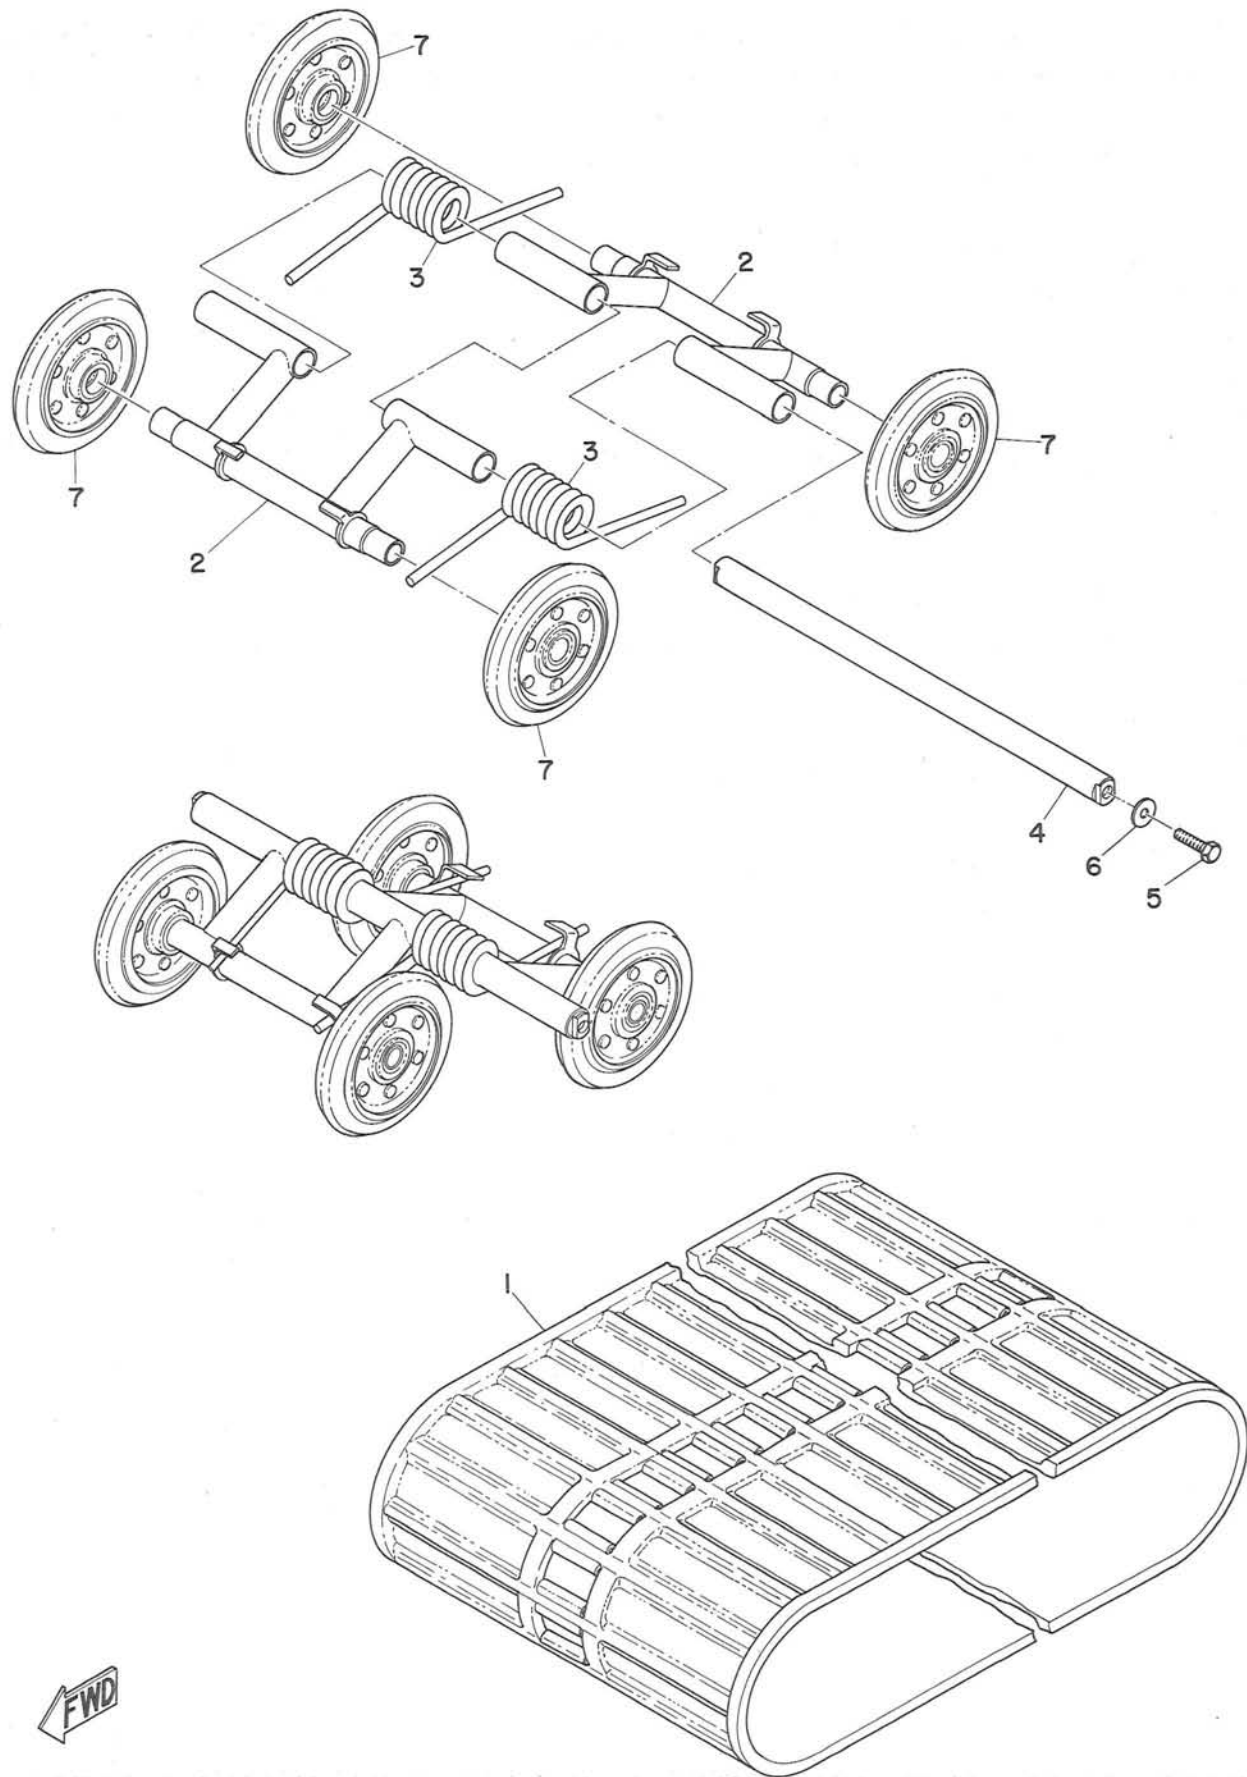

TRACK & SUSPENSION WHEEL

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
17- 1	807-47110-00	TRACK ASS'Y		1		
17- 2	807-47331-00	ARM, pivot		6		
17- 3	806-47335-00	SPRING		12		
17- 4	807-47337-00	SHAFT, pivot		3		
17- 5	97101-08030	BOLT	(ISO)	6		
17- 6	806-47347-00	WASHER, lock		6		
17- 7	802-47310-03	SUSPENSION WHEEL ASS'Y		12		


Fig. 18 FRAME

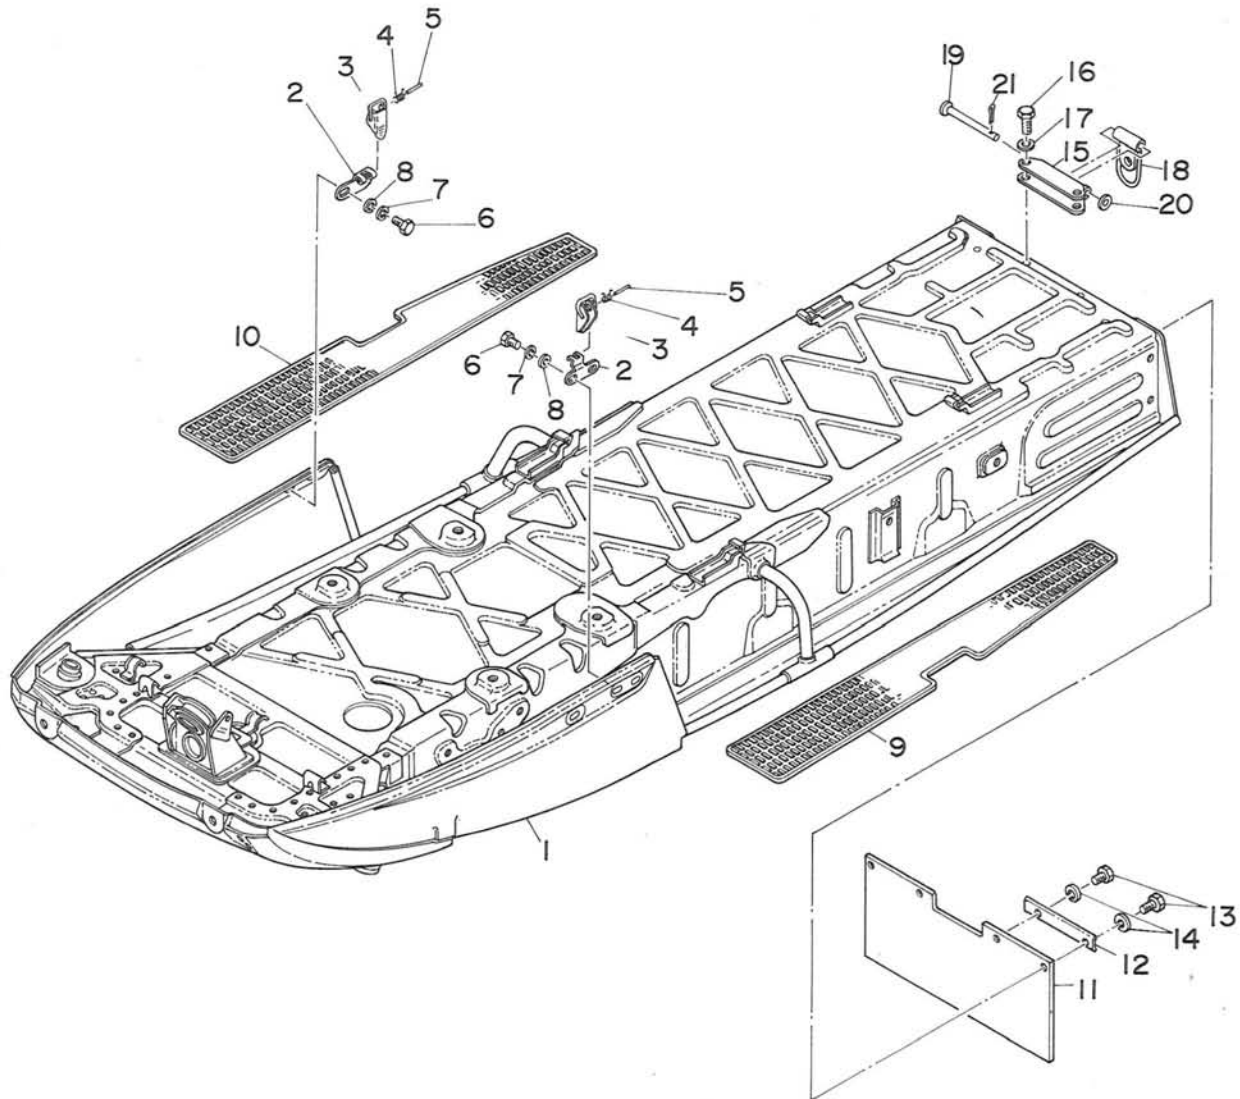

FRAME

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
18- 1	807-21910-00	FRAME COMP.	(ISO)	1		
18- 0-1	807-77170-00	LATCH ASS'Y		2		
18- 2	807-77172-00	. BODY, latch lower		2		△
18- 3	806-77173-00	. LEVER, latch		2		
18- 4	214-24758-00	. SPRING, seat		2		
18- 5	214-24727-00	. PIN, seat fitting		2		
18- 6	97206-05015	BOLT	(ISO)	4		
18- 7	92906-05100	WASHER, spring		4		
18- 8	806-77178-00	WASHER (1)	5.5-14-1.2	4		
18- 9	806-27413-00	COVER, footrest (L.H)		1		
18-10	806-27423-00	COVER, footrest (R.H)		1		
18-11	807-77595-00	FLAP		1		
18-12	807-77593-00	PLATE, flap		2		
18-13	91201-06015	BOLT		4		
18-14	92901-06100	WASHER, spring		4		
18-15	802-77592-00	BRACKET, high (2)		1		
18-16	91201-06040	BOLT		2		
18-17	92901-06100	WASHER, spring		2		
18-18	802-77591-00	BRACKET, high (1)		1		
18-19	91701-08102	PIN, clevis		1		
18-20	92901-08200	WASHER, plain		1		
18-21	91401-25012	PIN, cotter		1		


Fig. 19 SHROUD

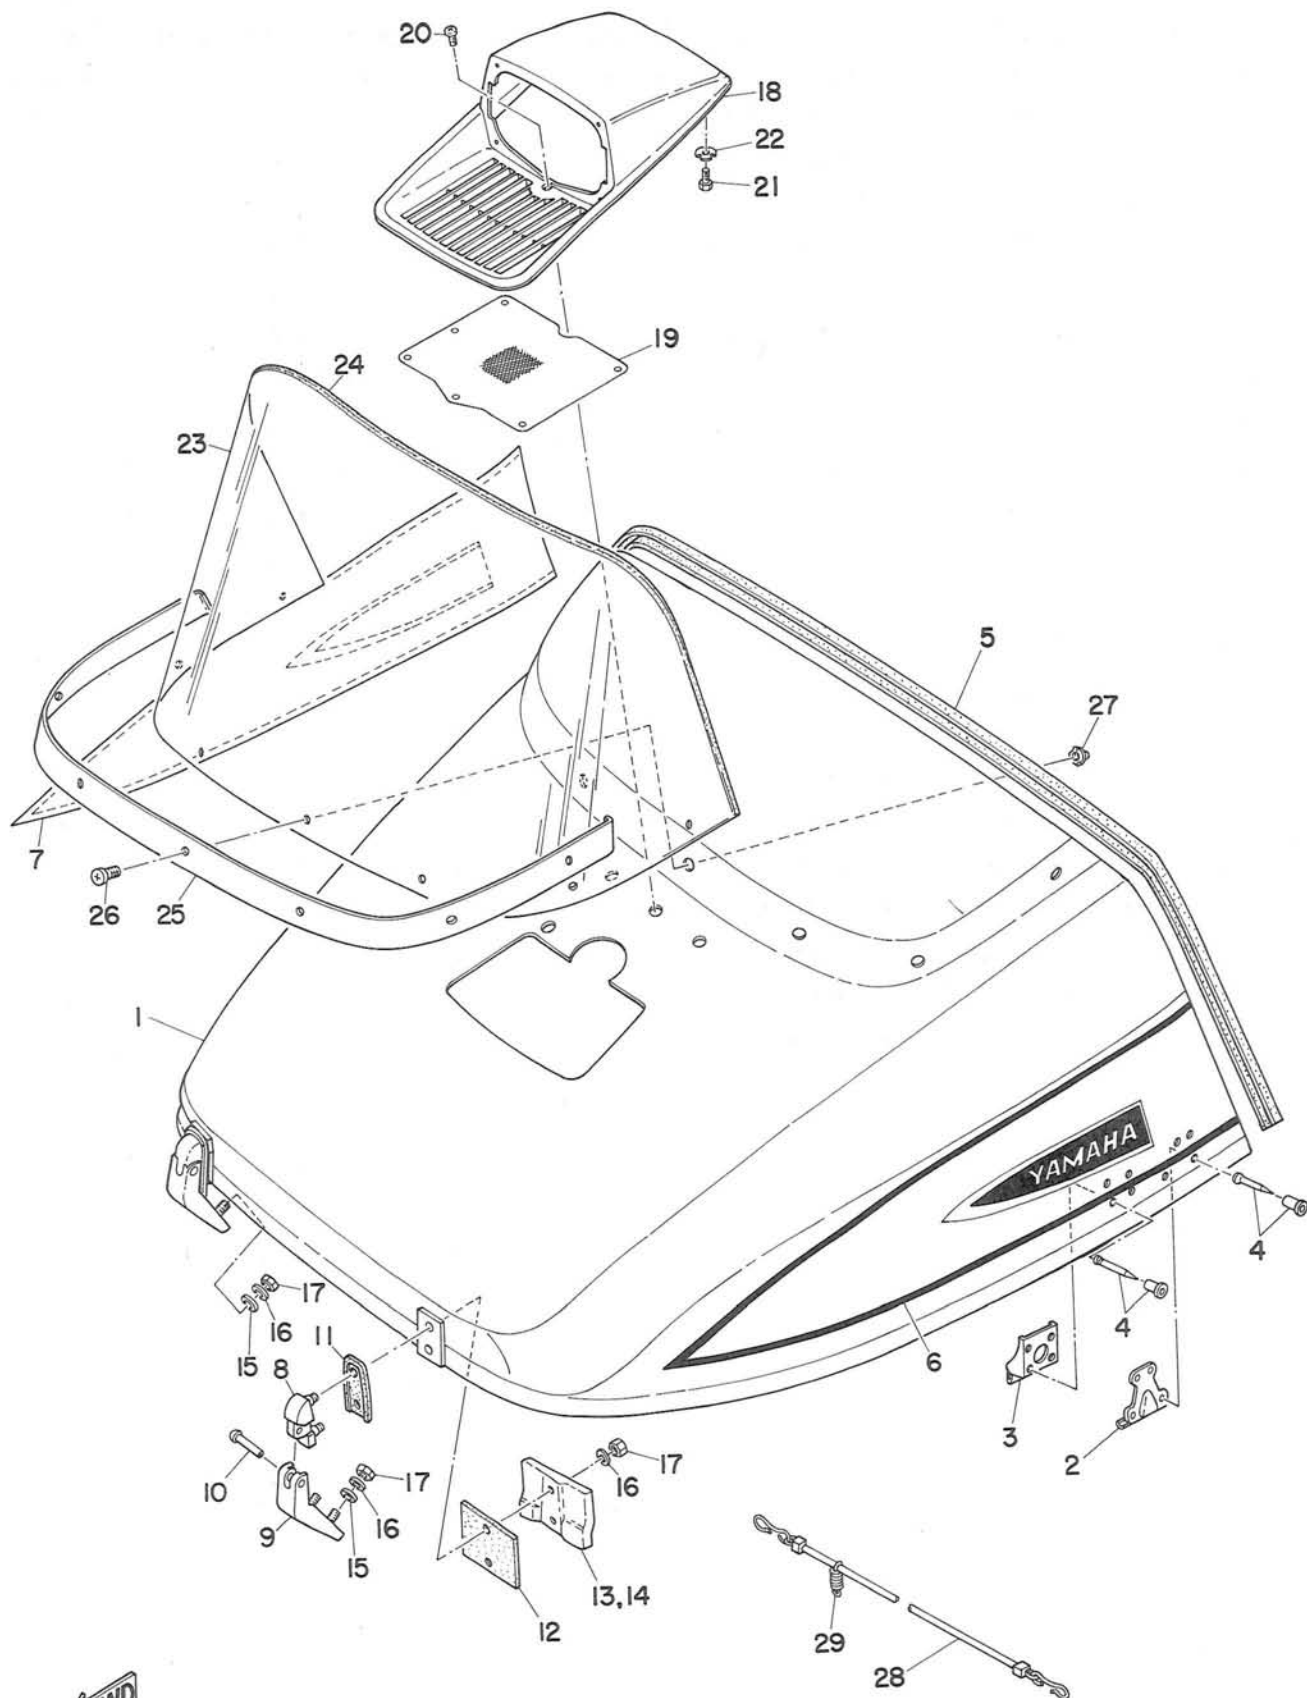

SHROUD

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
19- 1	807-77110-00	SHROUD ASS'Y		1		
19- 2	806-77171-00	. BODY, latch upper		2		
19- 3	807-77138-00	. CLAMP, upper		2		
19- 4	806-77155-00	. RIVET		16		
19- 5	807-77166-00	. TRIM, shroud rear		1		
19- 6	807-77163-00	. ORNAMENT, shroud (L.H)		1		
19- 7	807-77164-00	. ORNAMENT, shroud (R.H)		1		
19- 8	806-77145-00	HINGE, upper		2		
19- 9	806-77147-00	HINGE, lower		2		
19-10	806-77157-00	PIN, hinge		2		
19-11	806-77198-00	DAMPER, front		2		
19-12	806-77199-00	DAMPER, rear		2		
19-13	807-77153-00	PLATE, back up (L.H)		1		
19-14	807-77154-00	PLATE, back up (R.H)		1		
19-15	92906-06200	WASHER, plain		4		
19-16	92906-06100	WASHER, spring		8		
19-17	92806-06100	NUT		8		
19-18	807-84311-00	BODY, head lamp	(ISO)	1		
19-19	807-77132-00	LOUVER, inner		1		
19-20	98906-05012	SCREW, bind	(ISO)	1		
19-21	97206-05015	BOLT	(ISO)	5		
19-22	807-84344-00	WASHER, plain	(ISO)	5		
19-23	807-77210-00	WIND SHIELD COMP.		1		
19-24	807-77213-00	. TRIM, upper		1		
19-25	807-77214-00	TRIM, lower		1		
19-26	98903-05015	SCREW, bind	(ISO)	7		
19-27	802-77217-00	NUT	(ISO)	7		
19-28	807-77118-00	STOPPER, shroud		1		
19-29	806-77159-00	. CLAMP, rod		1		

Fig. 20 ENGINE BRACKET

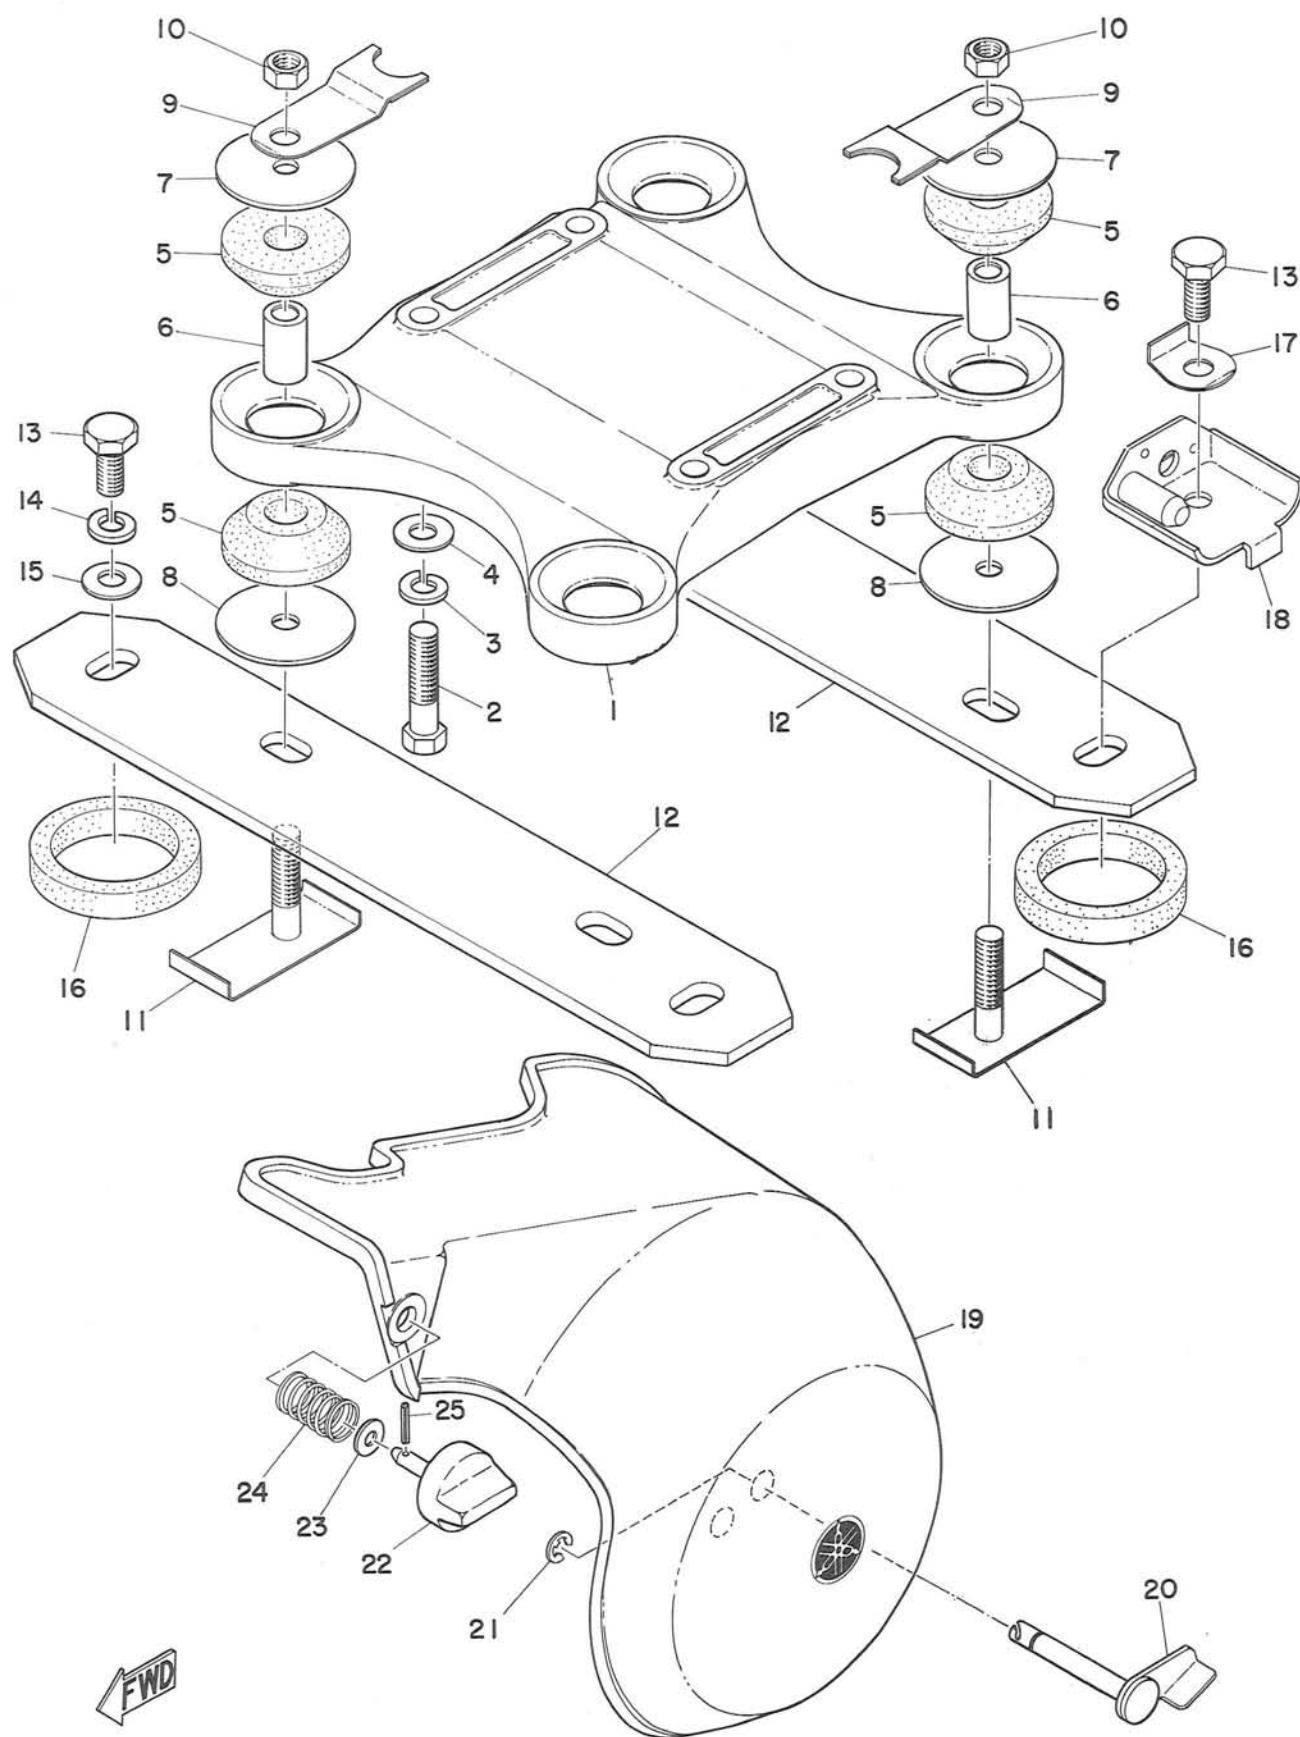


FWD

ENGINE BRACKET

Ref No.	Parts No.	Parts Name	Description	Q'ty	S · R	Remarks
20- 1	807-21411-00	BRACKET, engine upper		1		
20- 2	91201-10050	BOLT		4		
20- 3	92901-10100	WASHER, spring		4		
20- 4	92901-10200	WASHER, plain		4		
20- 5	807-15316-00	DAMPER, engine mount		8		
20- 6	807-15317-00	SPACER, damper		4		
20- 7	807-21491-00	WASHER (1)	10.5-52-3.2	4		
20- 8	807-21492-00	WASHER (2)	10.5-52-1.6	4		
20- 9	807-15176-00	WASHER, lock		4		
20-10	92801-10300	NUT		4		
20-11	807-21482-00	BOLT		4		
20-12	807-21419-00	BRACKET, engine lower		2		
20-13	806-21481-00	BOLT, engine mounting		4		
20-14	92901-10100	WASHER, spring		3		
20-15	92901-10200	WASHER, plain		3		
20-16	806-21485-00	DAMPER		4		
20-17	806-21491-00	WASHER, lock		1		
20-18	806-77315-00	BRACKET, drive guard		1		
20-19	806-77311-00	GUARD, drive		1		
20-20	806-77314-00	ARM, fitting		1		
20-21	93430-06005	CIRCLIP		1		
20-22	806-77324-00	KNOB		1		
20-23	802-77179-00	WASHER (2)		2		
20-24	806-77325-00	SPRING		1		
20-25	91609-25016	PIN, spring		1		

Fig. 21 STEERING GATE

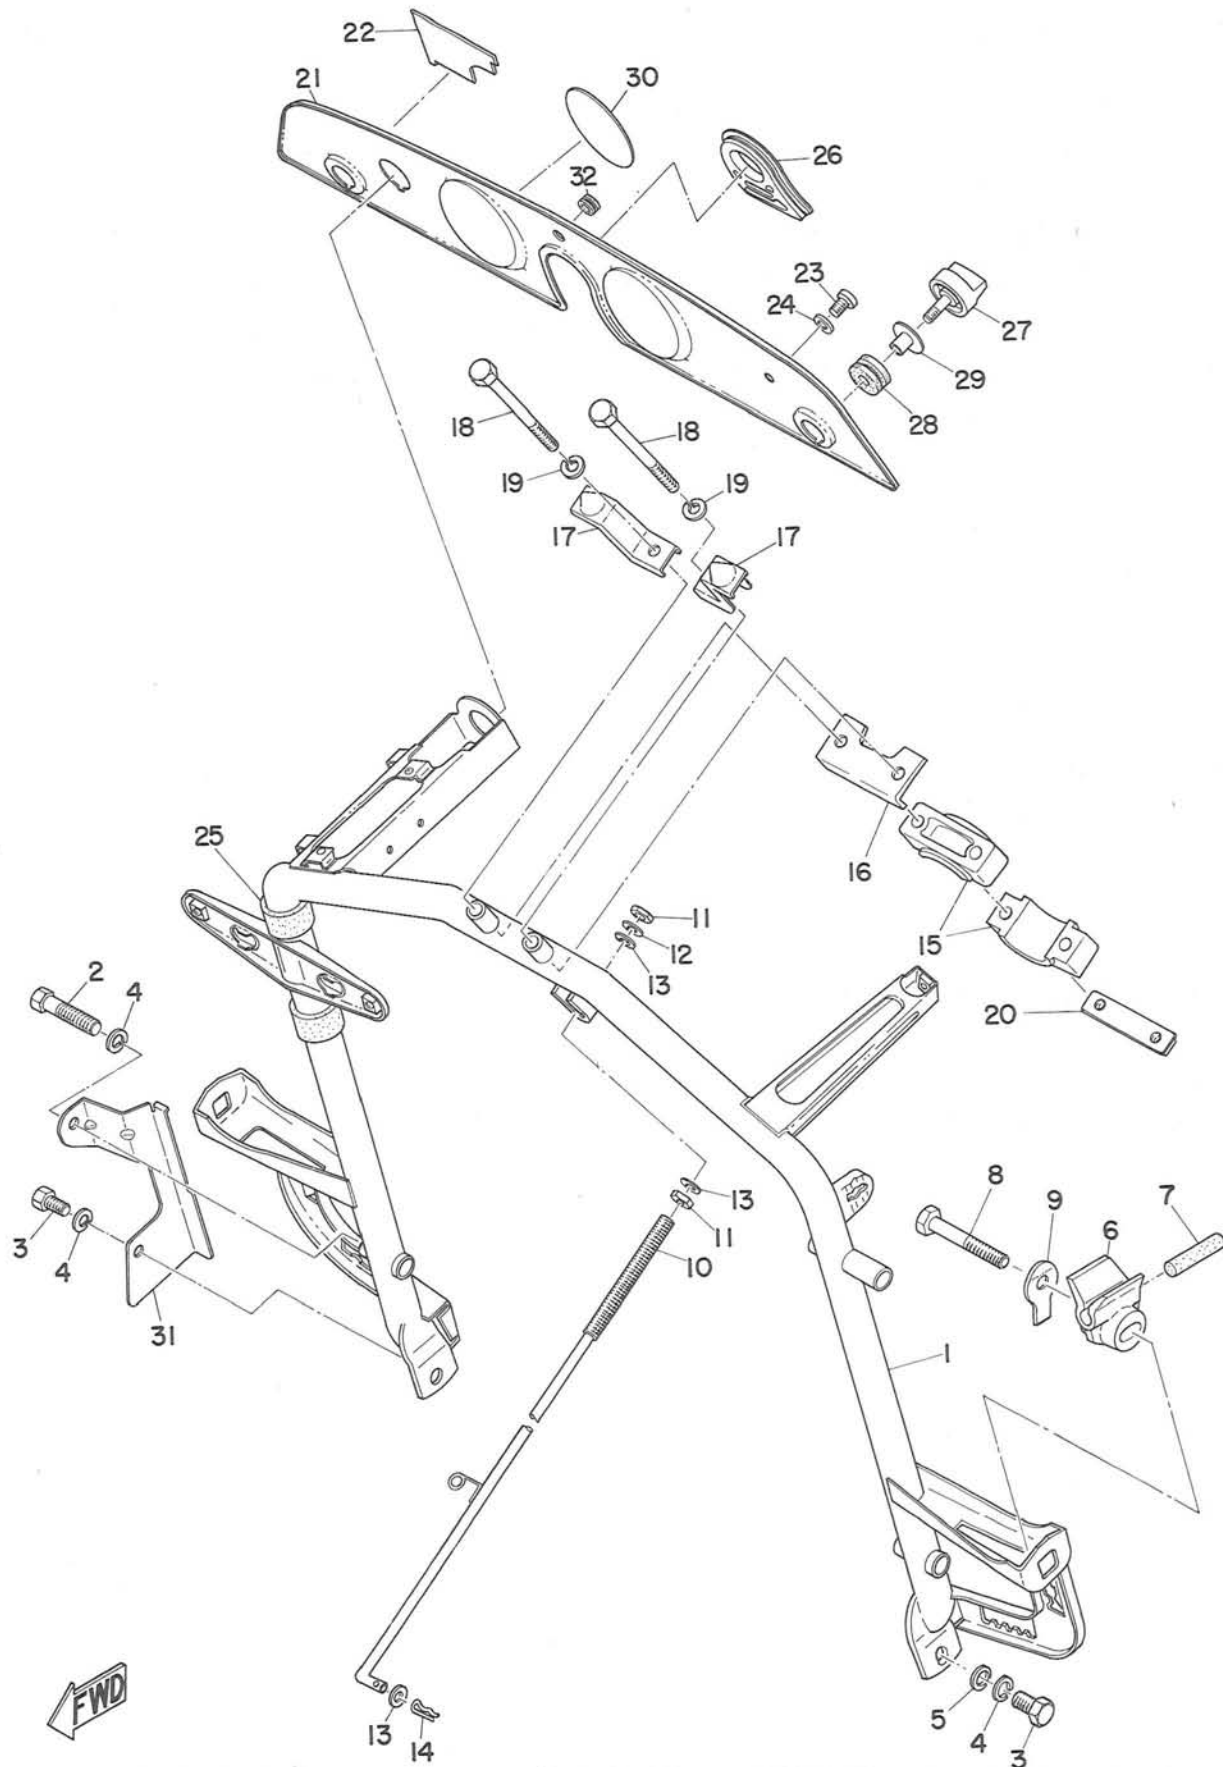

STEERING GATE


Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
21- 1	807-23871-00	GATE, steering	(ISO)	1		
21- 2	97201-08045	BOLT	(ISO)	2		
21- 3	97201-08015	BOLT	(ISO)	2		
21- 4	92906-08100	WASHER, spring		4		
21- 5	92906-08200	WASHER, plain		2		
21- 6	806-77137-00	CLAMP, lower		2		
21- 7	802-77188-00	STOPPER		2		
21- 8	97206-08060	BOLT	(ISO)	2		
21- 9	806-77526-00	WASHER, lock		2		
21-10	806-23860-00	TENSION BAR COMP		1		
21-11	92801-06300	NUT		2		
21-12	92901-06100	WASHER, spring		1		
21-13	92901-06200	WASHER, plain		3		
21-14	156-83525-00	CLIP		1		
21-15	806-23873-00	BEARING, steering upper		2		
21-16	802-23872-00	HOLDER, bearing		1		
21-17	807-77196-00	DAMPER, shroud		2		
21-18	97206-08085	BOLT	(ISO)	2		
21-19	92906-08100	WASHER, spring		2		
21-20	807-23877-00	NUT		1		
21-21	807-77711-00	PANEL, instrument		1		
21-22	806-77741-00	INDICATOR, main switch		1		
21-23	91906-06012	SCREW, bind		2		
21-24	92906-06200	WASHER, plain		4		
21-25	802-21746-00	DAMPER		2		
21-26	807-77746-00	GROMMET, steering column		1		
21-27	807-77445-00	KNOB, engine cowl		2		
21-28	807-77431-00	GROMMET, engine cowl		2		
21-29	807-77435-00	COLLAR		2		
21-30	807-77725-00	EMBLEM		2		
21-31	807-24327-00	PROTECTOR, pipe front		1		
21-32	102-82598-00	GROMMET, wire harness		1		



STEERING

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
22- 1	807-23811-00	COLUMN, steering		1		
22- 2	806-23875-00	BEARING, steering lower		1		
22- 3	807-23821-00	ROD, steering relay		2		
22- 4	802-23833-00	NUT (1)		2		
22- 5	802-23834-00	NUT (2)		2		
22- 6	806-23841-00	JOINT, universal (1)		2		
22- 7	806-23845-00	JOINT, universal (2)		2		
22- 8	92806-10500	NUT		4		
22- 9	91401-25025	PIN, cotter		4		
22-10	806-23851-00	ARM, outside (L.H)		1		
22-11	806-23852-00	ARM, outside (R.H)		1		
22-12	806-23853-00	COLUMN, ski (L.H)		1		
22-13	806-23854-00	COLUMN, ski (R.H)		1		
22-14	801-23855-00	SPRING, damper		2		
22-15	98806-12100	NUT	(ISO)	2		
22-16	92906-12100	WASHER, spring		2		
22-17	93700-06001	NIPPLE, grease		2		


Fig. 23 SKI

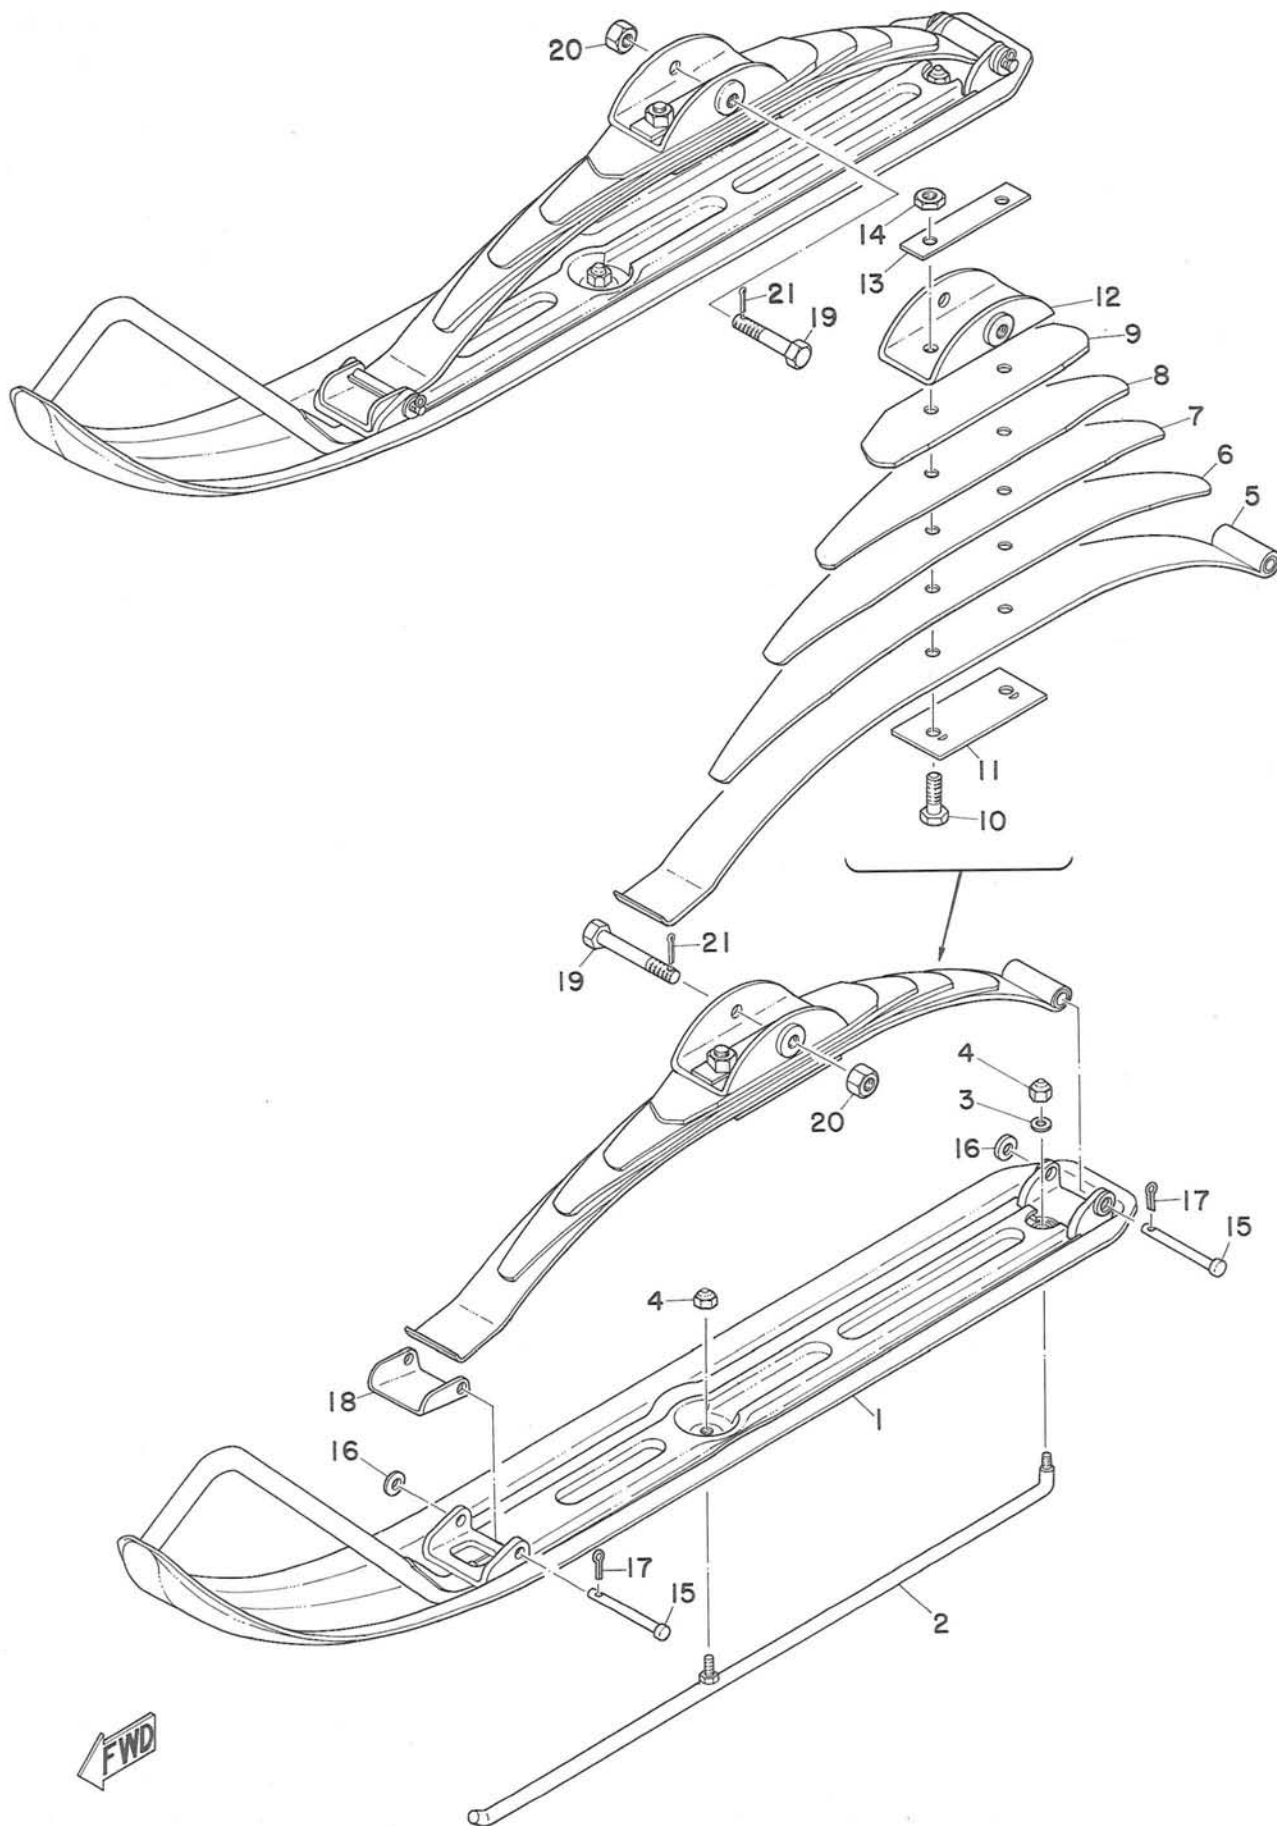

SKI

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
23- 1	806-23710-00	SKI COMP.		2		
23- 2	806-23731-00	RUNNER		2		
23- 3	806-23738-00	WASHER, runner stud	6.3-14-2	2		
23- 4	603-24149-00	NUT		4		
23- 0-1	806-23760-00	SPRING ASS'Y (L.H)		1		
23- 0-2	806-23770-00	SPRING ASS'Y (R.H)		1		
23- 5	806-23761-00	. LEAF (1)		2		
23- 6	806-23762-00	. LEAF/ (2)		2		
23- 7	806-23763-00	. LEAF (3)		2		
23- 8	806-23764-00	. LEAF (4)		2		
23- 9	806-23771-00	. LEAF (5)		2		
23-10	805-23769-00	. BOLT		4		
23-11	802-23768-00	. SEAT, spring lower		2		
23-12	806-23766-00	. SADDLE		2		
23-13	806-23779-00	. WASHER		2		
23-14	92806-10100	. NUT		4		
23-15	801-23733-00	PIN, retaining		4		
23-16	92906-08200	WASHER, plain		4		
23-17	91401-30020	PIN, cotter		4		
23-18	802-23735-00	PLATE, wear		2		
23-19	802-23767-00	BOLT		2		
23-20	92806-10500	NUT		2		
23-21	91401-20025	PIN, cotter		2		


Fig. 24 GRIP & WIRING

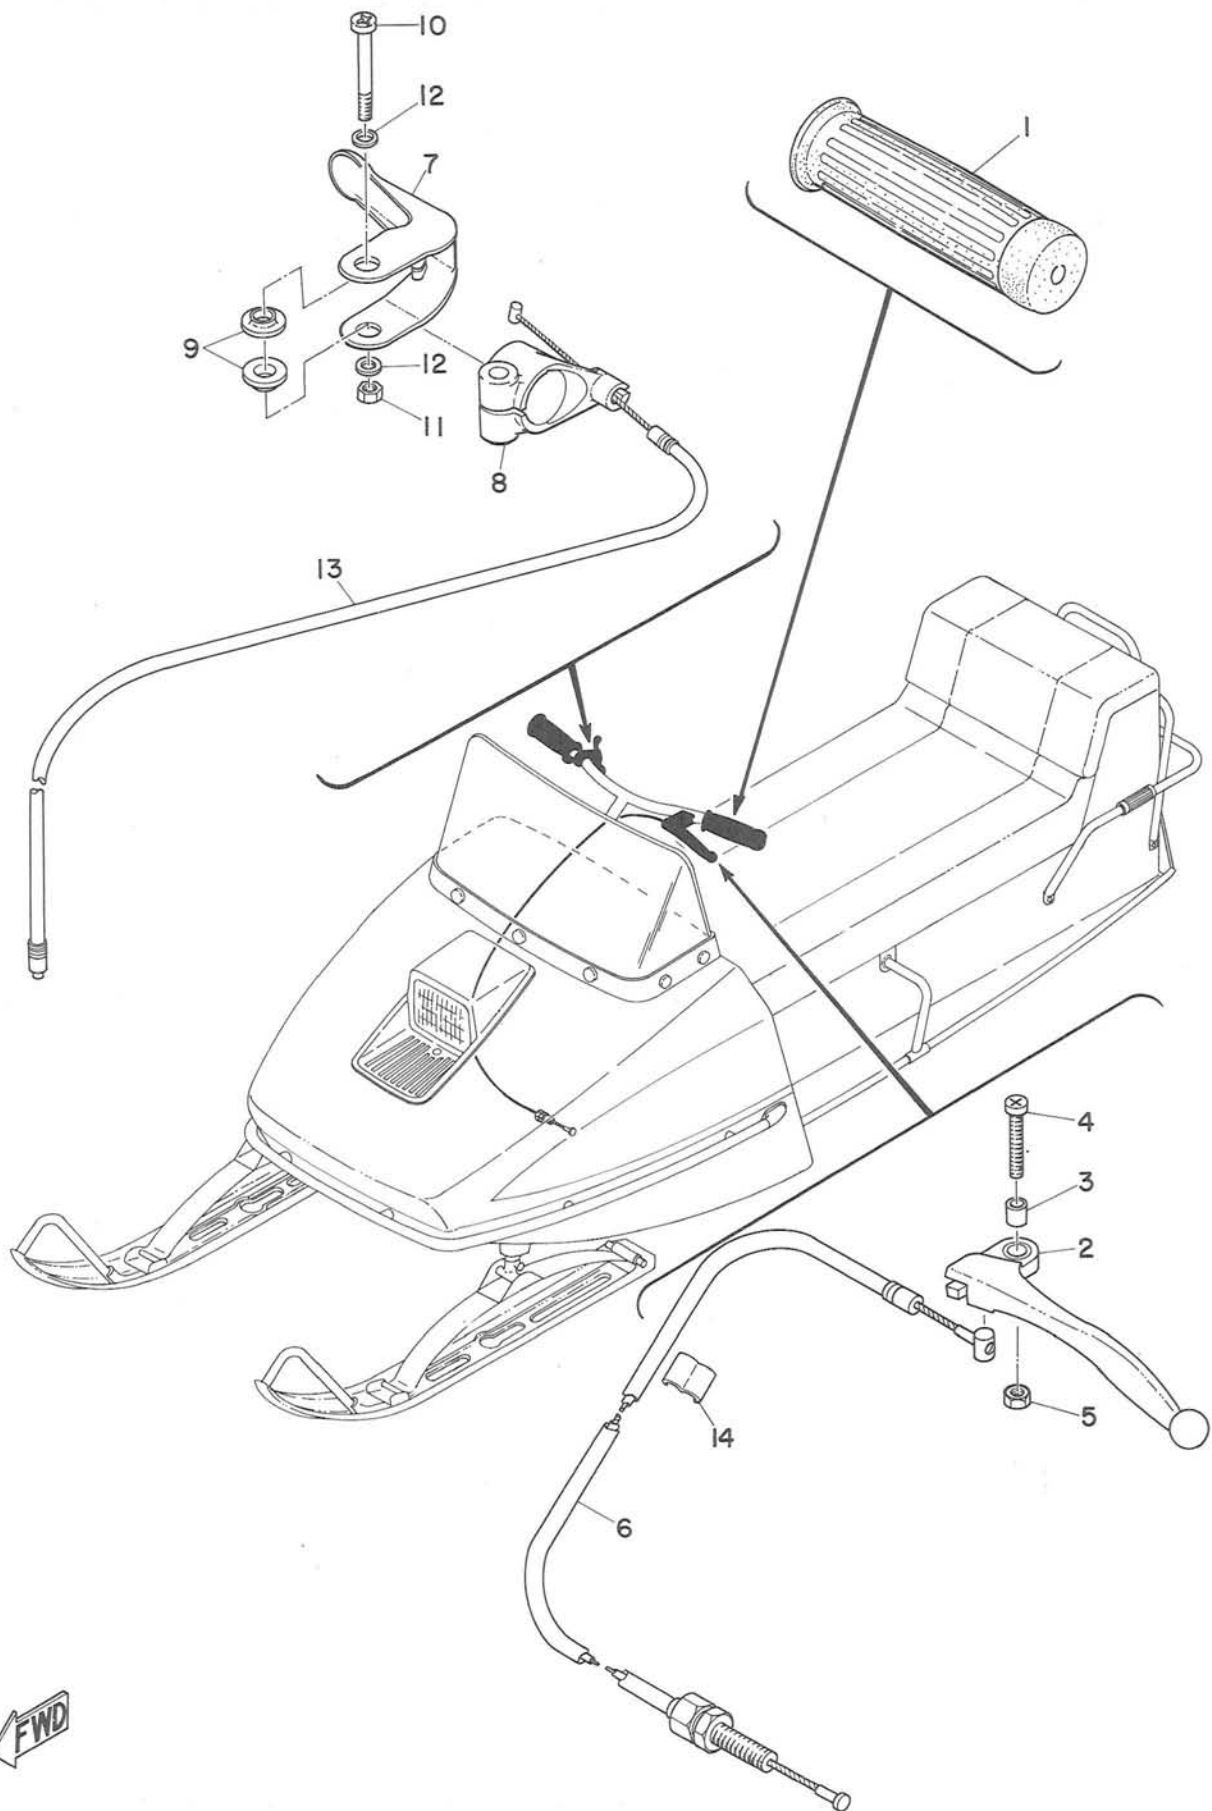

GRIP & WIRING

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
24- 1	801-26241-00	GRIP		2		
24- 2	803-83912-00	LEVER (L.H)		1		
24- 3	802-83913-00	COLLAR, lever	(ISO)	1		
24- 4	803-83915-00	SCREW, pan head	(ISO)	1		
24- 5	98801-05300	NUT	(ISO)	1		
24- 6	807-26340-00	BRAKE WIRE ASS'Y		1		
24- 7	806-42138-00	LEVER, throttle		1		
24- 8	806-82821-00	HOLDER, lever throttle		1		
24- 9	802-83923-00	COLLAR, lever		2		
24-10	92501-06040	SCREW, pan head		1		
24-11	92801-06300	NUT		1		
24-12	92901-06200	WASHER, plain		2		
24-13	807-26311-00	WIRE, throttle		1		
24-14	207-26391-00	CLIP, wire		1		


Fig. 25 FUEL TANK

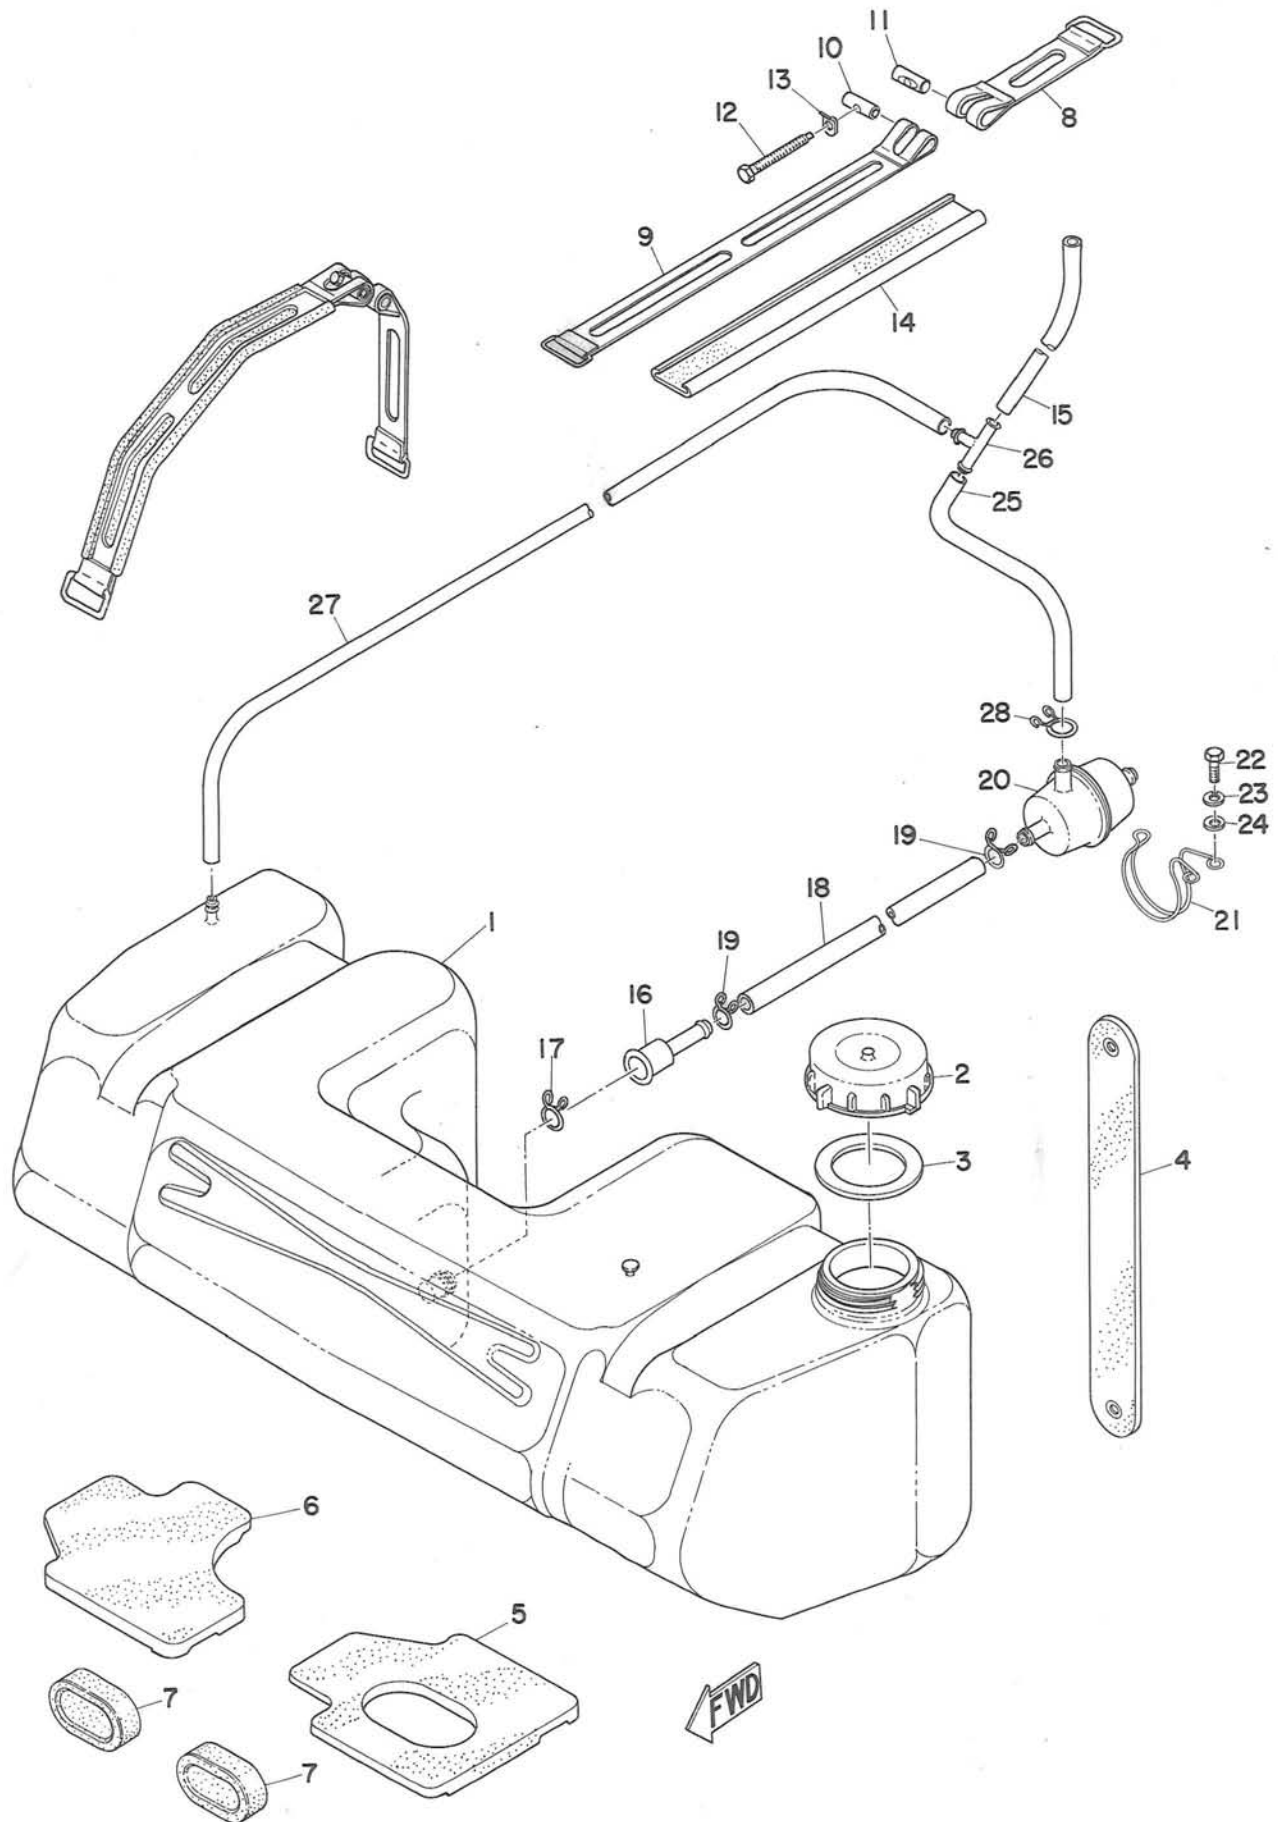

FUEL TANK

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
25- 1	807-24111-00	TANK, fuel		1		
25- 2	806-24611-00	BODY, cap		1		
25- 3	806-24612-00	PACKING, cap		1		
25- 4	807-24141-00	PROTECTOR, fuel tank		1		
25- 5	807-24181-00	DAMPER, tank locating (L.H)		1		
25- 6	807-24182-00	DAMPER, tank locating (R.H)		1		
25- 7	807-24184-00	DAMPER, tank locating front		2		
25- 8	806-24173-00	BAND, tank fitting (1)		2		
25- 9	807-24199-00	BAND, tank fitting (2)		2		
25-10	806-24135-00	CLAMP		2		
25-11	806-24146-00	NUT, fuel tank		2		
25-12	806-24176-00	BOLT, tank fitting		2		
25-13	806-24169-00	WASHER, lock		2		
25-14	807-24183-00	DAMPER, tank locating upper		2		
25-15	807-24321-00	PIPE (10)		1		
25-16	807-24335-00	PIPE, suction		1		
25-17	806-24358-00	CLIP, pipe (3)		1		
25-18	807-24312-00	PIPE, fuel (2)		1		
25-19	143-24356-00	CLIP, pipe		2		
25-20	806-24560-00	FILTER ASS'Y		1		
25-21	807-24558-00	HOLDER, filter		1		
25-22	97206-05015	BOLT	(ISO)	2		
25-23	92906-05100	WASHER, spring		2		
25-24	92906-05200	WASHER, plain		2		
25-25	807-24559-00	BREATHER, filter		1		
25-26	801-24376-00	JOINT, pipe		1		
25-27	807-24318-00	PIPE, breather		1		
25-28	806-24356-00	CLIP, pipe (1)		1		


Fig. 26 OIL TANK

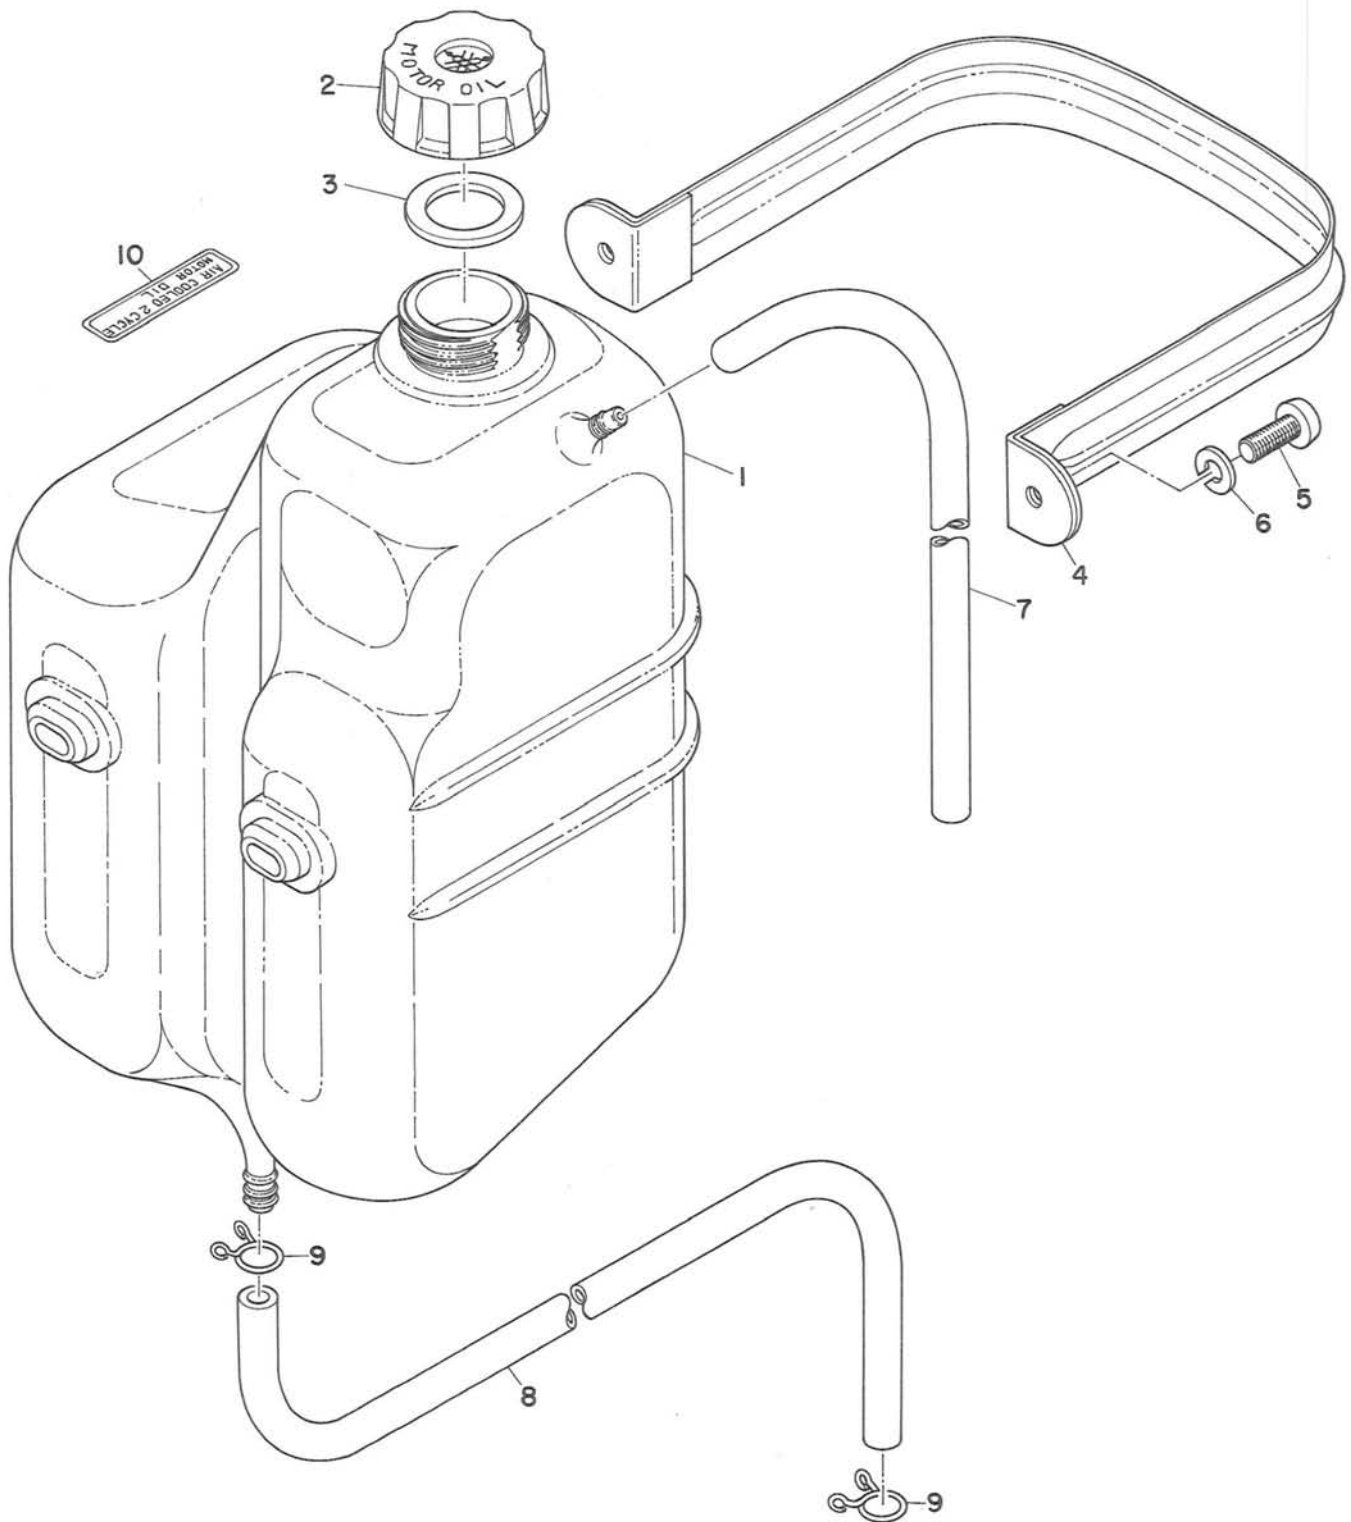

OIL TANK

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
26- 1	807-21751-00	TANK, oil		1		
26- 2	806-21771-00	BODY, cap		1		
26- 3	806-21772-00	GASKET, tank		1		
26- 4	807-21776-00	BAND, tank fitting		1		
26- 5	92501-06015	SCREW, pan head		2		
26- 6	92901-06100	WASHER, spring		2		
26- 7	807-21745-00	PIPE, oil tank breather		1		
26- 8	806-24319-00	PIPE, oil		1		
26- 9	806-24359-00	CLIP, pipe (4)		2		
26-10	802-21793-00	ORNAMENT, oil tank		1		


Fig. 27 SEAT & LUGGAGE BOX

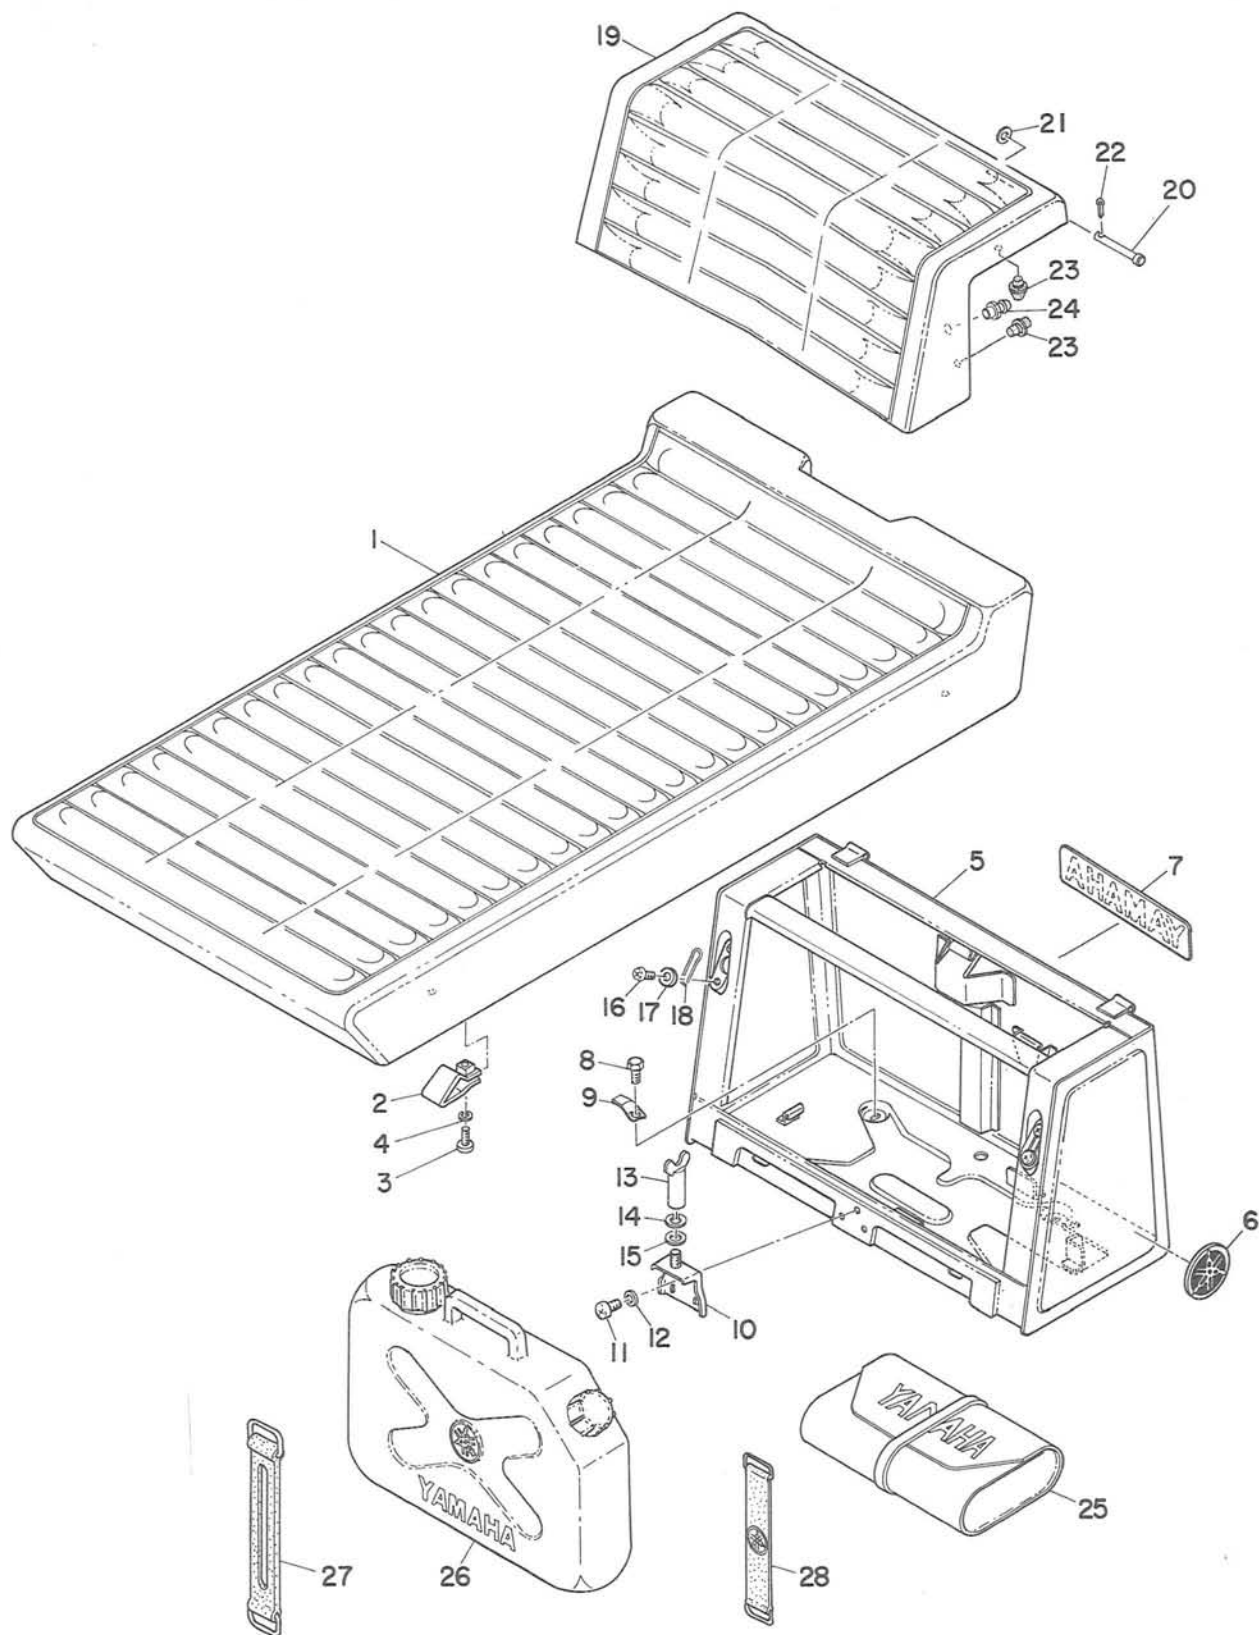

SEAT & LUGGAGE BOX

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
27- 1	807-24730-00	DOUBLE SEAT ASS'Y		1		
27- 1-1	807-24731-00	. COVER, double seat		1		
27- 2	807-24744-00	PLATE, seat fitting		2		
27- 3	92501-06015	SCREW, pan head		2		
27- 4	92901-06100	WASHER, spring		2		
27- 5	807-77391-00	LUGGAGE BOX	(ISO)	1		
27- 6	806-77352-00	EMBLEM (2)		2		
27- 7	806-77353-00	EMBLEM (3)		1		
27- 8	91201-06012	BOLT		4		
27- 9	806-77396-00	WASHER, lock		4		
27-10	807-24738-00	BRACKET, hook lower		1		
27-11	92501-06012	SCREW, pan head		3		
27-12	92901-06100	WASHER, spring		3		
27-13	807-24756-00	NUT, wing	(ISO)	1		
27-14	92901-08100	WASHER, spring		1		
27-15	92901-08200	WASHER, plain		1		
27-16	98501-04008	SCREW, pan head	(ISO)	4		
27-17	806-24795-00	COLLAR, seat back stud		4		
27-18	806-24794-00	SPRING, seat back stud		2		
27-19	807-24790-00	SEAT BACK ASS'Y		1		
27-20	91701-05055	PIN, clevis		2		
27-21	92901-05200	WASHER, plain		2		
27-22	91401-16010	PIN, cotter		2		
27-23	806-24714-00	STOPPER, cushion		4		
27-24	806-24793-00	PIN, seat back stud		2		
27-25	806-28100-00	TOOL ASS'Y		1		☆
27-26	802-24200-00	FUEL TANK ASS'Y		1		
27-27	806-24282-00	BAND, fuel tank		1		
27-28	116-82131-00	BAND		1		


Fig. 28 BUMPER

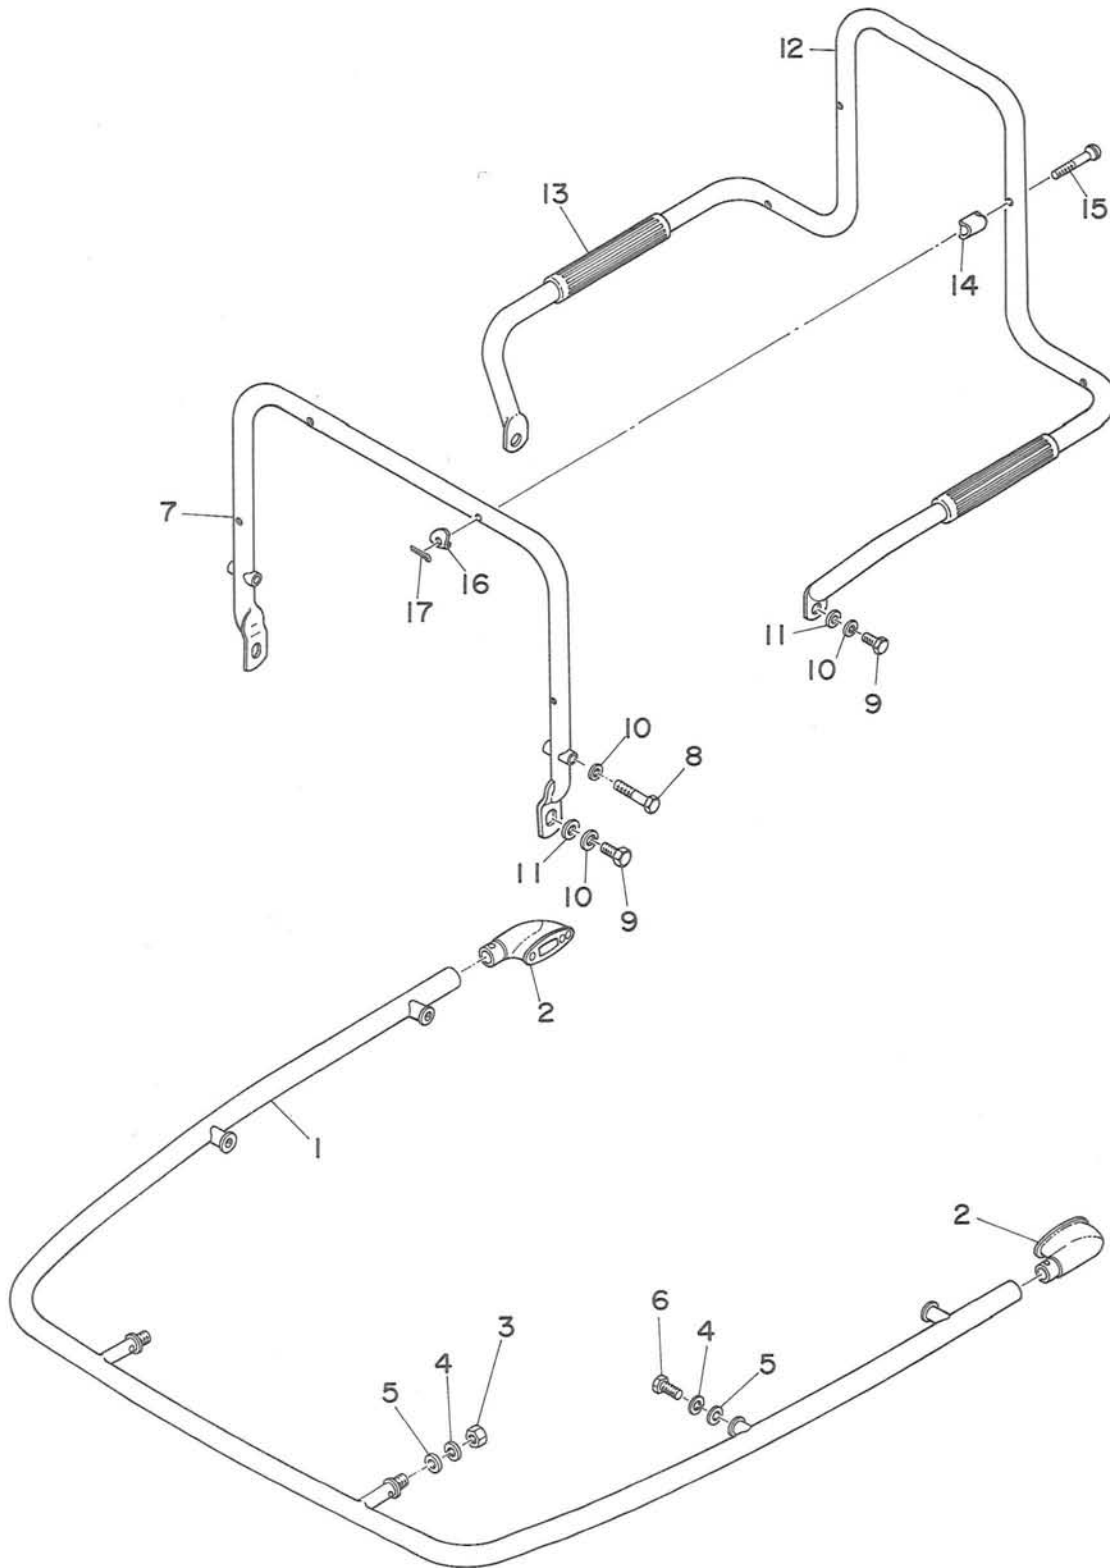

BUMPER

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
28- 1	807-77510-00	FRONT BUMPER COMP.		1		
28- 2	806-77523-00	END, bumper	ISO	2		
28- 3	98801-08100	NUT	ISO	2		
28- 4	92901-08100	WASHER, spring		4		
28- 5	92901-08200	WASHER, plain		4		
28- 6	97201-08015	BOLT	ISO	2		
28- 7	807-77541-00	BUMPER, rear		1		
28- 8	97203-08045	BOLT	ISO	2		
28- 9	97203-08018	BOLT	ISO	4		
28-10	92901-08100	WASHER, spring		6		
28-11	92901-08200	WASHER, plain		4		
28-12	807-77571-00	GRIP, passenger		1		
28-13	807-77575-00	COVER, passenger grip		2		
28-14	806-77515-00	BUSHING, rubber		4		
28-15	806-77574-00	BOLT		4		
28-16	806-77573-00	NUT, special		4		
28-17	91401-16015	PIN, cotter		4		


Fig. 29 HEAD LAMP

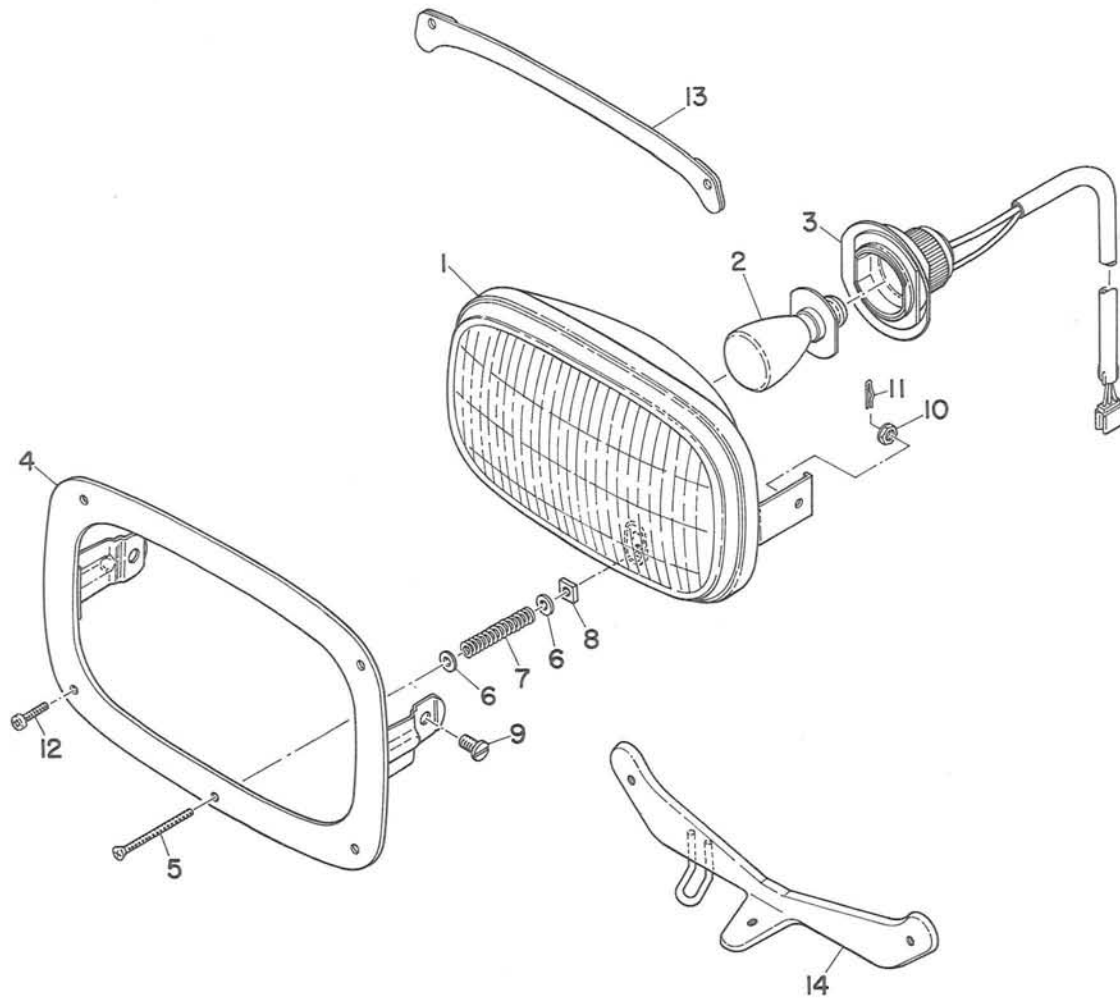

HEAD LAMP

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
29- 0-1	807-84310-00	HEAD LAMP UNIT ASS'Y	(ISO)	1		
29- 1	807-84320-00	. LENS ASS'Y		1		
29- 2	807-84314-00	. BULB, head lamp	12V 35/35W	1		☆
29- 3	807-84312-00	. SOCKET		1		
29- 4	807-84315-00	. RIM, head lamp		1		
29- 5	807-84331-00	. SCREW, rim adjuster	(ISO)	1		
29- 6	92901-04200	. WASHER, plain		2		
29- 7	807-84332-00	. SPRING, adjust screw		1		
29- 8	807-84334-00	. NUT, adjust	(ISO)	1		
29- 9	807-84338-00	. SCREW, pan head	(ISO)	2		
29-10	807-84326-00	. NUT	(ISO)	2		
29-11	807-84351-00	. PIN, cotter		2		
29-12	98603-04015	SCREW, oval head	(ISO)	4		
29-13	807-84316-00	NUT, special		1		
29-14	807-77139-00	HOLDER, rod upper		1		


Fig. 30 TAIL LAMP

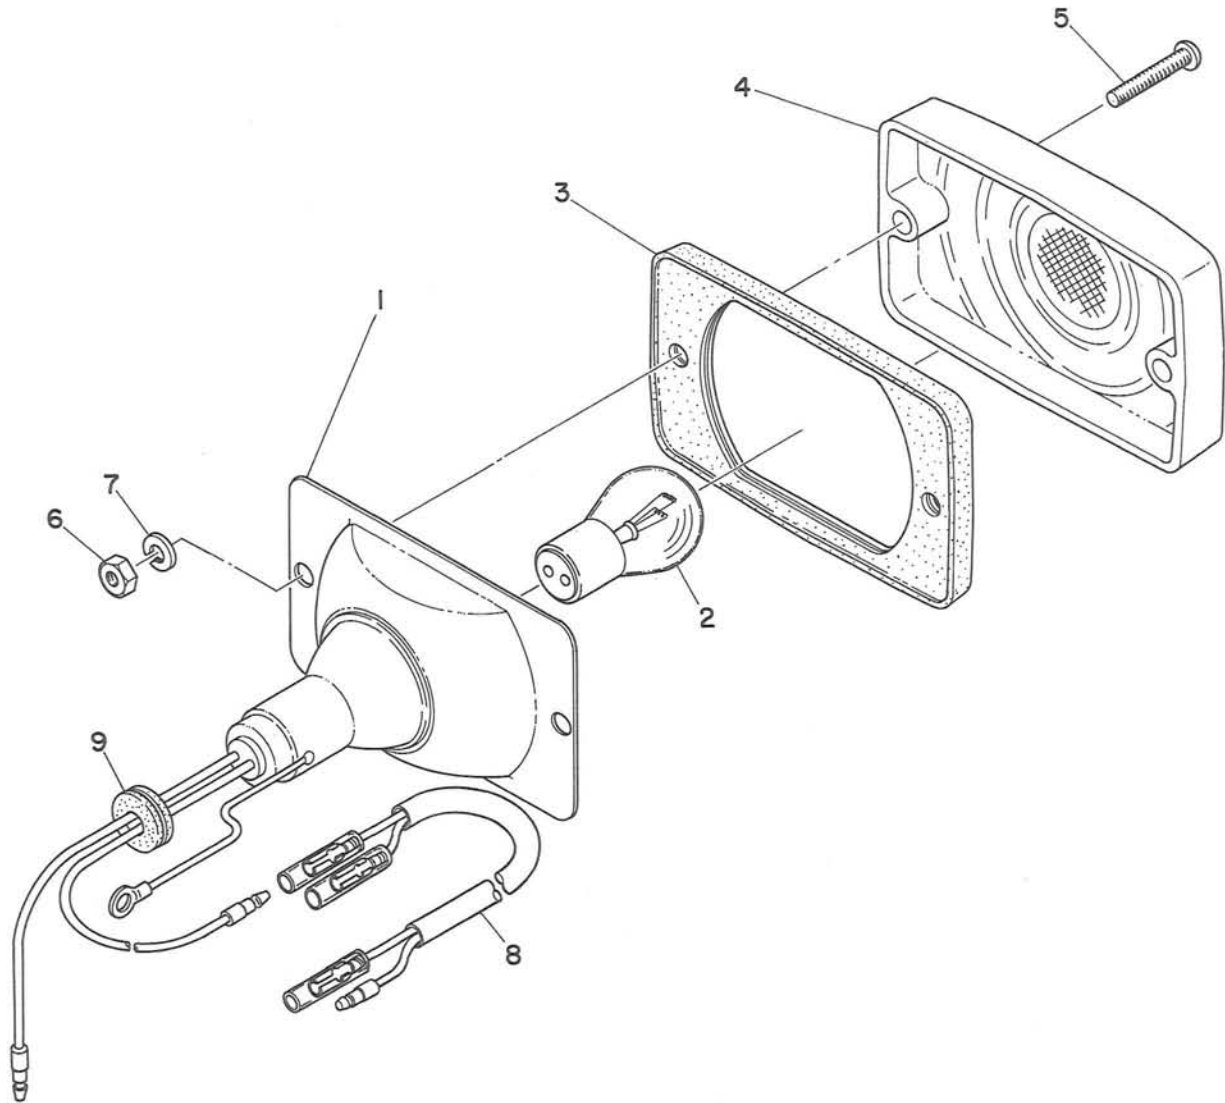

TAIL LAMP

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
30- 0-1	806-84710-00	TAIL LAMP UNIT ASS'Y	(ISO)	1		
30- 1	806-84711-00	. BASE, tail lamp		1		
30- 2	168-84714-00	. BULB, tail lamp	12V 23/7W	1		☆
30- 3	806-84712-00	. SEAT, base		1		
30- 4	806-84721-00	. LENS, tail lamp		1		
30- 5	806-84724-00	. SCREW, lens fitting	(ISO)	2		
30- 6	98802-04100	NUT	(ISO)	2		
30- 7	92902-04100	WASHER, spring		2		
30- 8	806-84717-00	CORD, tail lamp		1		
30- 9	152-84518-00	GROMMET, tail lamp		1		

Fig. 31 ELECTRICAL

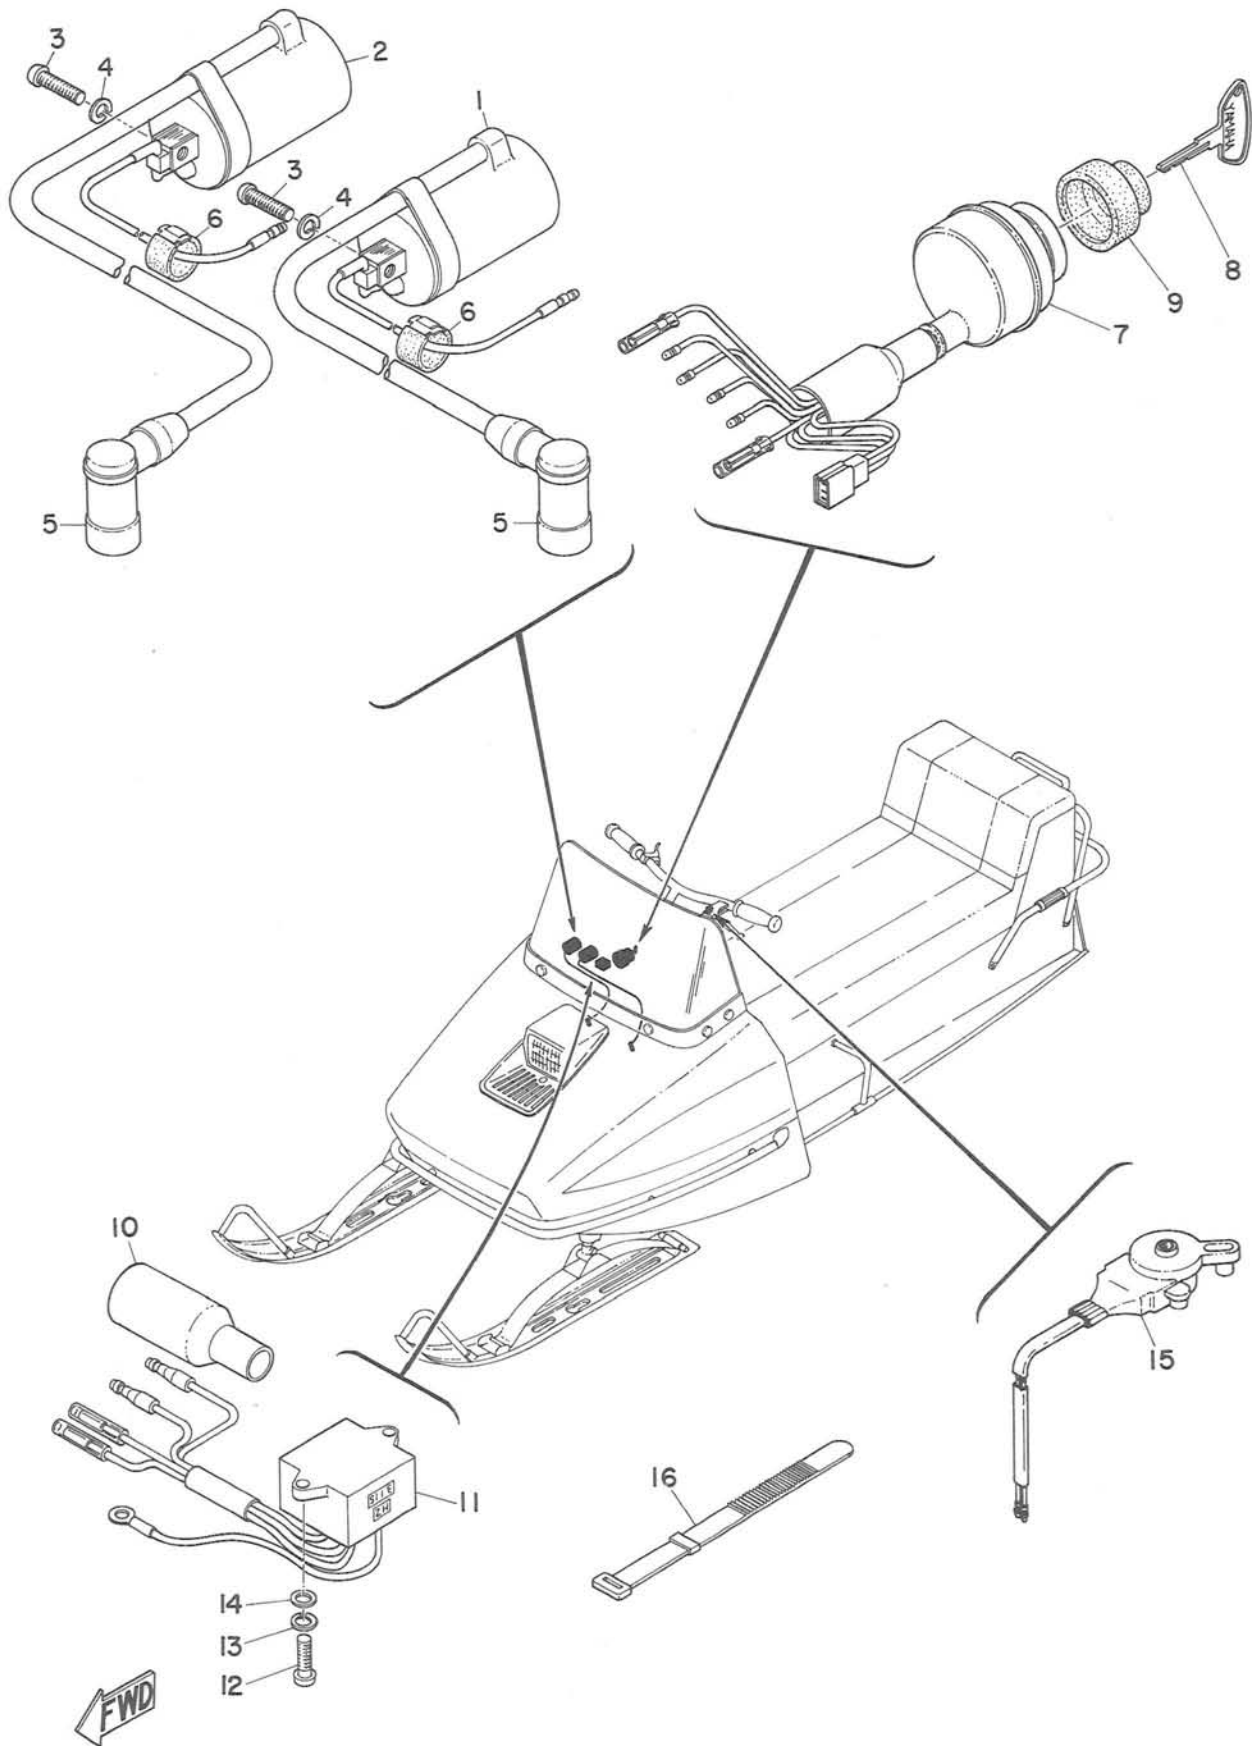

ELECTRICAL

Ref No.	Parts No.	Parts Name	Description	Q'ty	S-R	Remarks
31- 1	807-82310-40	IGNITION COIL ASS'Y (1)		1		
31- 2	806-82320-40	IGNITION COIL ASS'Y (2)		1		
31- 3	98506-05020	SCREW, pan head		4		
31- 4	92906-05100	WASHER, spring		4		
31- 5	117-82370-20	PLUG CAP ASS'Y		2		
31- 6	168-83936-00	BAND, switch cord		2		
31- 7	806-82510-20	MAIN SWITCH ASS'Y		1		
31- 8	806-82511-00	. KEY, main switch		2		
31- 9	806-82516-00	CAP, main switch		1		
31-10	806-82599-00	COVER, connector		1		
31-11	806-82390-20	SILICON STACK ASS'Y		1		
31-12	98506-04015	SCREW, pan head	(ISO)	2		
31-13	92906-04100	WASHER, spring		2		
31-14	92906-04200	WASHER, plain		1		
31-15	806-82530-00	STOP SWITCH ASS'Y		1		
31-16	803-82591-00	BAND		3		

NUMERICAL INDEX



NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
16-23	102-25375-00	3- 8	168-11681-00	14-17	802-17686-00
21-32	102-82598-00	31- 6	168-83936-00	12-10	802-17695-00
8-17	104-81328-20	30- 2	168-84714-00	7- 4	802-15741-00
8-12	110-81346-20	13-27	170-15363-00	21-25	802-21746-00
8-15	110-81346-20	6-10	183-22143-00	26-10	802-21793-00
8- 8	110-81347-20	24-14	207-26391-00	23-18	802-23735-00
27-28	116-82131-00	3-19	214-11545-00	23-19	802-23767-00
31- 5	117-82370-20	18- 5	214-24727-00	23-11	802-23768-00
8-14	120-81331-20	18- 4	214-24758-00	16-21	802-23778-00
9- 1	126-13116-00	3- 5	235-11651-00	22- 4	802-23833-00
9-38	132-13166-00	1- 8	248-11361-00	22- 5	802-23834-00
9-21	137-13128-00	5- 9	601-24353-00	21-16	802-23872-00
9- 9	137-13129-00	23- 4	603-24149-00	27-26	802-24200-00
9-16	137-13137-00	3-15	604-11634-00	17- 7	802-47310-03
9-17	137-13138-01	10-17	615-42746-00	11- 6	802-47375-00
9-10	137-13148-00	10-16	615-42751-00	16-29	802-47377-00
9-34	137-13165-00	4-55	617-24155-00	15- 7	802-47517-00
9-33	137-13167-00	4-54	617-41272-00	16- 6	802-47517-00
9-37	137-13167-00	7- 7	619-15734-00	15- 4	802-47526-00
9-32	137-13169-00	7-14	619-15756-00	16- 4	802-47526-00
9- 4	137-13176-00	4-53	624-41271-00	13-17	802-47545-00
9-36	137-13187-00	12- 7	801-17688-10	13-18	802-47546-00
1-18	137-15384-00	23-15	801-23733-00	13- 8	802-47548-40
5- 7	143-24356-00	22-14	801-23855-00	13- 7	802-47549-00
12-11	150-17417-00-02	25-26	801-24376-00	15-16	802-47551-00
12-11	150-17417-00-03	14- 4	801-25734-00	15-21	802-47552-01
12-11	150-17417-00-04	14-14	801-25735-00	13-11	802-47553-00
12-11	150-17417-00-05	14- 8	801-25736-00	13-10	802-47554-10
12-11	150-17417-00-06	14- 5	801-25744-00	13- 9	802-47555-00
12-11	150-17417-00-07	14-13	801-25745-00	13-19	802-47565-00
3- 7	152-11685-00	24- 1	801-26241-00	13-20	802-47566-00
30- 9	152-84518-00	13-26	801-47547-00	15- 2	802-47575-00
15-20	156-16174-00	9- 2	802-13175-00	20-23	802-77179-00
21-14	156-83525-00	9- 8	802-13189-00	21- 7	802-77188-00
8-18	165-81145-21	7- 3	802-15713-00	19-27	802-77217-00
3-10	168-11515-00	7- 6	802-15715-00	18-18	802-77591-00
8-24	168-11555-00	7- 8	802-15716-00	18-15	802-77592-00
3-14	168-11633-00	12- 8	802-17685-00	8-11	802-81325-20

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
8-21	802-81329-00	4-27	806-14566-00	26- 3	806-21772-00
8- 4	802-81345-20	4-16	806-14567-00	23- 1	806-23710-00
24- 3	802-83913-00	4-12	806-14568-00	23- 2	806-23731-00
24- 9	802-83923-00	4-40	806-14571-00	23- 3	806-23738-00
5- 8	803-24360-00	4-50	806-14579-00	23- 0-1	806-23760-00
31-16	803-82591-00	4-41	806-14588-00	23- 5	806-23761-00
24- 2	803-83912-00	4-47	806-14591-00	23- 6	806-23762-00
24- 4	803-83915-00	4-28	806-14592-00	23- 7	806-23763-00
23-10	805-23769-00	4-51	806-14594-00	23- 8	806-23764-00
4-34	806-14521-00	4-43	806-14595-00	23-12	806-23766-00
4-31	806-14522-00	4-48	806-14596-00	23- 0-2	806-23770-00
4-36	806-14523-00	4-49	806-14597-00	23- 9	806-23771-00
4- 2	806-14527-00	4-46	806-14598-00	23-13	806-23779-00
4-29	806-14531-00	6- 7	806-14651-00	22- 6	806-23841-00
4-32	806-14533-00	6- 5	806-14655-00	22- 7	806-23845-00
4-37	806-14533-00	6- 6	806-14661-00	22-10	806-23851-00
4- 6	806-14536-00	6-11	806-14710-00	22-11	806-23852-00
4- 1	806-14537-00	11-13	806-17610-00	22-12	806-23853-00
4- 7	806-14541-00	11- 7	806-17620-00	22-13	806-23854-00
4- 8	806-14542-00	11- 1	806-17630-00	22-15	806-23856-00
4-11	806-14543-00	11-14	806-17641-00	21-10	806-23860-00
4-24	806-14544-00	11- 9	806-17642-00	21-15	806-23873-00
4-23	806-14545-00	11- 8	806-17643-00	22- 2	806-23875-00
4-18	806-14547-00	11-11	806-17644-00	25-10	806-24135-00
4-20	806-14548-00	11- 5	806-17645-00	25-11	806-24146-00
4-21	806-14549-00	11- 3	806-17646-00	25-13	806-24169-00
4- 9	806-14552-00	11- 2	806-17647-00	25- 8	806-24173-00
4-10	806-14553-00	11-10	806-17648-00	25-12	806-24176-00
4-25	806-14555-00	12- 1	806-17660-00	27-27	806-24282-00
4-19	806-14556-00	12- 2	806-17670-00	25-18	806-24311-00
4-17	806-14557-00	12- 3	806-17681-00	25-27	806-24318-00
4-13	806-14558-00	12- 9	806-17682-20	26- 8	806-24319-00
4-15	806-14559-00	12- 5	806-17683-00	5-10	806-24328-00
4- 4	806-14561-00	12- 6	806-17684-00	5-13	806-24356-00
4- 5	806-14562-00	20-13	806-21481-00	25-28	806-24356-00
4-30	806-14563-00	20-16	806-21485-00	25-19	806-24357-00
4-33	806-14564-00	20-17	806-21491-00	25-17	806-24358-00
4-26	806-14565-00	26- 2	806-21771-00	5- 6	806-24359-00

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
26- 9	806-24359-00	15- 3	806-47531-00	28-15	806-77574-00
25-21	806-24558-00	16- 3	806-47531-00	21-22	806-77741-00
25-25	806-24559-00	15-10	806-47536-00	8- 0-1	806-81300-20
25-20	806-24560-00	16- 9	806-47536-00	8- 1	806-81311-20
25- 2	806-24611-00	15-11	806-47539-00	8- 2	806-81312-20
25- 3	806-24612-00	16-11	806-47539-00	8- 3	806-81313-20
27-23	806-24714-00	13- 1	806-47541-00	8- 6	806-81321-20
27-24	806-24793-00	13-16	806-47542-00	8- 7	806-81322-20
27-18	806-24794-00	13-14	806-47543-00	8-20	806-81350-20
27-17	806-24795-00	13-15	806-47558-00	31- 2	806-82320-40
14- 1	806-25711-00	13-31	806-47561-00	31-11	806-82390-20
14- 2	806-25730-00	13-39	806-47562-00	31- 7	806-82510-20
14- 3	806-25740-00	13- 3	806-47571-00	31- 8	806-82511-00
18- 9	806-27413-00	16-30	806-47581-00	31- 9	806-82516-00
18-10	806-27423-00	21- 6	806-77137-00	31-15	806-82530-00
27-25	806-28100-00	19- 8	806-77145-00	31-10	806-82599-00
24- 7	806-42138-00	19- 9	806-77147-00	24- 8	806-82821-00
10-15	806-42753-00	19- 4	806-77155-00	30- 0-1	806-84710-00
17- 3	806-47335-00	19-10	806-77157-00	30- 1	806-84711-00
17- 6	806-47347-00	19-29	806-77159-00	30- 3	806-84712-00
16-12	806-47361-00	19- 2	806-77171-00	30- 8	806-84717-00
16-13	806-47362-00	18- 3	806-77173-00	30- 4	806-84721-00
16-14	806-47363-00	18- 8	806-77178-00	30- 5	806-84724-00
16-15	806-47364-00	19-11	806-77198-00	1-13	807-11111-01
16-16	806-47367-00	19-12	806-77199-00	1-14	807-11121-01
16-17	806-47369-00	20-19	806-77311-00	1-15	807-11171-00
16-18	806-47371-00	20-20	806-77314-00	1-12	807-11181-00
16-24	806-47373-00	20-18	806-77315-00	1-10	807-11311-00
16-20	806-47374-00	9-15	806-77323-00	1-11	807-11321-00
16-19	806-47384-00	20-22	806-77324-00	1- 9	807-11351-00
15- 5	806-47522-00	20-24	806-77325-00	3- 0-1	807-11400-00
16- 2	806-47522-00	27- 6	806-77352-00	3- 1	807-11412-00
15- 9	806-47527-00	27- 7	806-77353-00	3- 2	807-11422-00
16- 8	806-47527-00	27- 9	806-77396-00	3- 3	807-11432-00
15-12	806-47528-00	28-14	806-77515-00	3- 4	807-11442-00
16-10	806-47528-00	28- 2	806-77523-00	8-26	807-11557-00
15- 8	806-47530-00	21- 9	806-77526-00	3-13	807-11601-00
16- 7	806-47530-00	28-16	806-77573-00	3-13	807-11601-10

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
3-13	807-11601-20	4-63	807-14479-00	21-20	807-23877-00
3-12	807-11631-00-01	4- 0-1	807-14501-00	25- 1	807-24111-00
3-12	807-11631-00-96	4- 0-2	807-14502-00	25- 4	807-24141-00
3-12	807-11631-00-97	6- 8	807-14610-00	25- 5	807-24181-00
3-12	807-11631-00-98	6- 3	807-14613-00	25- 6	807-24182-00
3-12	807-11631-00-99	6- 1	807-14615-01	25-14	807-24183-00
3-12	807-11631-10	6- 4	807-14623-00	25- 7	807-24184-00
3-12	807-11631-20	6- 2	807-14625-01	25- 9	807-24199-00
2- 1	807-12621-00	6-18	807-14718-00	5- 2	807-24312-00
2- 2	807-12622-00	6-19	807-14759-00	5- 3	807-24313-00
2- 7	807-12623-00	6-12	807-14771-00	5- 1	807-24314-00
2- 8	807-12624-00	1- 0-1	807-15100-00	5-12	807-24315-00
2- 9	807-12625-00	1- 1	807-15111-00	5- 4	807-24316-00
2-12	807-12631-00	1- 2	807-15121-00	5-11	807-24317-00
2-19	807-12632-00	20- 9	807-15176-00	25-15	807-24321-00
2- 4	807-12633-00	20- 5	807-15316-00	21-31	807-24327-00
2-13	807-12651-00	20- 6	807-15317-00	25-16	807-24335-00
2-14	807-12652-00	7- 0-1	807-15710-00	5- 5	807-24376-00
2-24	807-12661-00	7- 1	807-15711-00	1-19	807-24461-00
2-25	807-12662-00	7- 2	807-15714-00	27- 1	807-24730-00
2- 5	807-12663-00	7- 5	807-15719-00	27- 1-1	807-24731-00
2-23	807-12664-00	7-18	807-15723-00	27-10	807-24738-00
2-20	807-12665-00	7- 9	807-15726-00	27- 2	807-24744-00
9- 0-1	807-13101-00	7-12	807-15751-00	27-13	807-24756-00
9-25	807-13143-00	7-13	807-15755-00	27-19	807-24790-00
9-23	807-13146-00	7-15	807-15782-00	24-13	807-26311-00
9-26	807-13154-00	20- 1	807-21411-00	24- 6	807-26340-00
9-27	807-13156-00	20-12	807-21419-00	4-52	807-41256-00
9-41	807-13157-00	20-11	807-21482-00	17- i	807-47110-00
9-39	807-13161-00	20- 7	807-21491-00	17- 2	807-47331-00
9-40	807-13171-00	20- 8	807-21492-00	17- 4	807-47337-00
9- 7	807-13178-00	26- 7	807-21745-00	15- 1	807-47510-00
9- 5	807-13199-00	26- 1	807-21751-00	16- 1	807-47520-00
4-57	807-13555-00	26- 4	807-21776-00	19- 1	807-77110-00
4-56	807-13557-00	18- 1	807-21910-00	19-28	807-77118-00
4-59	807-13558-00	22- 1	807-23811-00	19-19	807-77132-00
4-58	807-13567-00	22- 3	807-23821-00	19- 3	807-77138-00
4-62	807-14469-00	21- 1	807-23871-00	29-14	807-77139-00

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
19-13	807-77153-00	28- 7	807-77541-00	18-21	91401-25012
19-14	807-77154-00	28-12	807-77571-00	22- 9	91401-25025
19- 6	807-77163-00	28-13	807-77575-00	14- 7	91401-30015
19- 7	807-77164-00	18-12	807-77593-00	23-17	91401-30020
19- 5	807-77166-00	18-11	807-77595-00	16-25	91402-30025
18- 0-1	807-77170-00	21-21	807-77711-00	14-11	91501-08070
18- 2	807-77172-00	21-30	807-77725-00	20-25	91609-25016
21-17	807-77196-00	21-26	807-77746-00	12- 4	91609-80040
19-23	807-77210-00	8-23	807-81362-00	27-20	91701-05055
19-24	807-77213-00	31- 1	807-82310-40	18-19	91701-08102
19-25	807-77214-00	29- 0-1	807-84310-00	1- 3	91810-08016
10-23	807-77351-00	19-18	807-84311-00	21-23	91906-06012
27- 5	807-77391-00	29- 3	807-84312-00	1-17	92501-06010
10- 1	807-77401-00	29- 2	807-84314-00	2-16	92501-06010
10-20	807-77415-00	29- 4	807-84315-00	4-64	92501-06010
10- 6	807-77424-00	29-13	807-84316-00	2-15	92501-06012
10-12	807-77425-00	29- 1	807-84320-00	27-11	92501-06012
10-26	807-77431-00	29-10	807-84326-00	9-30	92501-06015
21-28	807-77431-00	29- 5	807-84331-00	26- 5	92501-06015
10-21	807-77432-00	29- 7	807-84332-00	27- 3	92501-06015
10-27	807-77435-00	29- 8	807-84334-00	2-21	92501-06020
21-29	807-77435-00	29- 9	807-84338-00	9-13	92501-06020
10- 5	807-77437-00	19-22	807-84344-00	2-10	92501-06025
10- 2	807-77441-00	29-11	807-84351-00	2-11	92501-06040
10- 3	807-77442-00	27- 8	91201-06012	24-10	92501-06040
10-18	807-77443-00	7-21	91201-06015	8-22	92502-06015
10-19	807-77444-00	18-13	91201-06015	14-10	92801-06300
10-25	807-77445-00	14-15	91201-06020	14-16	92801-06300
21-27	807-77445-00	15-17	91201-06030	21-11	92801-06300
10- 9	807-77449-00	18-16	91201-06040	24-11	92801-06300
10-24	807-77451-00	14- 9	91201-06055	19-17	92806-06100
10-22	807-77455-00	20- 2	91201-10050	23-14	92806-10100
10- 7	807-77459-00	9-42	91401-12008	22- 8	92806-10500
10- 4	807-77469-00	9-22	91401-12018	23-20	92806-10500
10-10	807-77475-00	27-22	91401-16010	8- 9	92901-04100
10- 8	807-77476-00	28-17	91401-16015	8-13	92901-04100
10-11	807-77477-00	14-12	91401-20012	8-16	92901-04100
28- 1	807-77510-00	23-21	91401-20025	8-19	92901-04100

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
4-44	92901-04200	27-15	92901-08200	3-18	93103-32054
8-10	92901-04200	28- 5	92901-08200	3-20	93103-32055
29- 6	92901-04200	28-11	92901-08200	15-13	93105-30014
7-17	92901-05100	4-39	92901-08400	13- 4	93110-40001
8- 5	92901-05100	16-22	92901-10100	13- 2	93210-25070
9-18	92901-05100	20- 3	92901-10100	13-30	93211-13109
10-14	92902-05100	20-14	92901-10100	13-28	93306-30301
27-21	92901-05200	20- 4	92901-10200	13-36	93306-30401
2-17	92901-06100	20-15	92901-10200	16-28	93306-20406
2-22	92901-06100	20-10	92801-10300	15-15	93306-20501
2-26	92901-06100	14-18	92901-12100	11-12	93306-20512
7-22	92901-06100	16-31	92901-12100	3- 9	93306-20602
9-14	92901-06100	1-16	92901-12200	3-21	93306-20602
9-29	92901-06100	8-25	92901-16100	3-16	93306-30603
15-18	92901-06100	30- 7	92902-04100	3-11	93310-21824
18-14	92901-06100	15-19	92901-18100	3- 6	93310-42434
18-17	92901-06100	13-24	92901-08100	13- 6	93316-00701
21-12	92901-06100	13-25	92902-08200	9-31	93505-32002
26- 6	92901-06100	31-13	92906-04100	9- 3	93603-22028
27- 4	92901-06100	31-14	92906-04200	3-22	93604-12037
27-12	92901-06100	18- 7	92906-05100	2- 3	93604-14012
2-18	92901-06200	25-23	92906-05100	13-40	93604-18058
9-28	92901-06200	31- 4	92906-05100	22-17	93700-06001
21-13	92901-06200	25-24	92906-05200	9-11	93410-10001
24-12	92901-06200	19-16	92906-06100	11- 4	93410-30012
4-61	92901-08100	19-15	92906-06200	16-27	93420-47010
6-16	92901-08100	21-24	92906-06200	13-37	93420-52014
7-10	92901-08100	21- 4	92906-08100	13- 5	93420-62017
7-20	92901-08100	21-19	92906-08100	20-21	93430-06005
13-35	92901-08100	21- 5	92906-08200	3-17	93440-78011
27-14	92901-08100	23-16	92906-08200	1-20	94700-00004
28- 4	92901-08100	22-16	92906-12100	13-12	94804-25062
28-10	92901-08100	6- 9	92990-08100	13-13	94904-25001
1-17	92901-08200	9-20	93101-10001	17- 5	97101-08030
6-17	92901-08200	9- 6	93101-10002	1- 4	97101-08060
13-33	92901-08200	16-26	93102-25044	1- 5	97101-08070
14- 6	92901-08200	16-29	93102-25045	1- 6	97101-08085
18-20	92901-08200	13-39	93102-30072	6-13	97201-04045

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
4-38	97201-08010	28- 3	98801-08100		
6-14	97201-08015	4-60	98801-08300		
7-19	97201-08015	7-11	98801-08300		
21- 3	97201-08015	14-19	98801-12300		
28- 6	97201-08015	30- 6	98802-04100		
13-34	97201-08025	10-13	98806-05100		
21- 2	97201-08045	13-23	98806-08100		
13-32	97201-08065	22-15	98806-12100		
13-22	97201-08070	2- 6	98901-05015		
15- 6	97201-08070	19-26	98903-05015		
16- 5	97201-08070	19-20	98906-05012		
16-32	97201-12020	2-27	98906-06015		
28- 9	97203-08018				
28- 8	97203-08045				
18- 6	97206-05015				
19-21	97206-05015				
25-22	97206-05015				
21- 8	97206-08060				
13-21	97206-08070				
21-18	97206-08085				
4-42	98301-04015				
4-22	98501-03005				
4- 3	98501-03008				
4-14	98501-04005				
9-35	98501-04005				
4-35	98501-04008				
27-16	98501-04009				
9-24	98501-04035				
7-16	98501-05008				
9-12	98501-05015				
31-12	98506-04015				
31- 3	98506-05020				
29-12	98603-04015				
9-43	98801-03200				
9-19	98801-05200				
4-45	98801-05200				
24- 5	98801-05300				
6-15	98801-08100				

First edition, July, '69

**YAMAHA SNOWMOBILE
SL-396 PARTS LIST**

YAMAHA MOTOR CO., LTD.

HAMAKITA JAPAN

○

○

○

○

○

○

○