

YAMAHA

PARTS LIST

MODEL GS300

1976 MODEL

AHANAY

TRAIL STRA9

 
00120 13004

FOREWORD

This Parts List relates to the parts in use for the YAMAHA SNOW-MOBILE GS300. When you ordering replacement parts for the GS300 refer to this Parts List and quote both part numbers and part names correctly.

1. Structure of Part No.

Yamaha parts are divided largely into two categories; general parts and standard parts, and each part No. has the following structure:

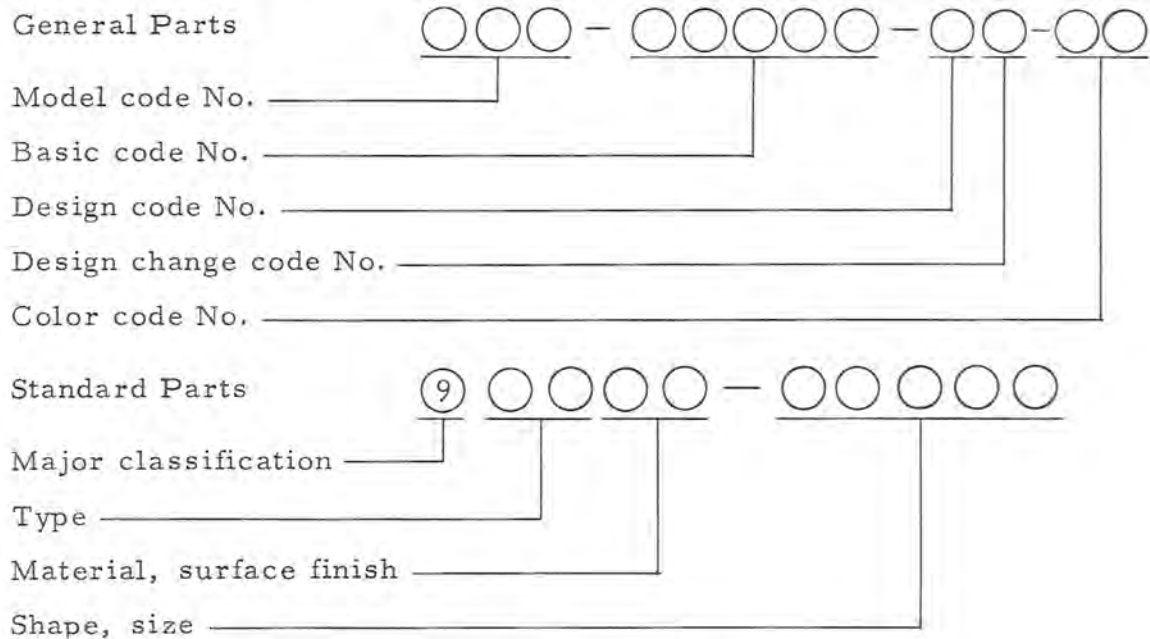

Note: Every standard No. begins with 9.

2. How to Use this Parts List

- (1) Except for steel balls (whose size is indicated in inches), the size of all parts is indicated in millimeters in the following manner.

Pipe (rubber or vinyl) Inside diameter - length

O-ring Section area - inside diameter

Washer, shim, collar Inside diameter - outside diameter - thickness (length)

- (2) Parts, which are to be supplied in the form of assemblies, are listed with an indentation of one letter's space, and a dot (.) is put

against the name of each part. If any two different assemblies (e.g., right and left side components) consist of almost the same type components, these two assemblies are listed in two lines, and then the names of component parts are listed in the subsequent lines with an indention as mentioned earlier. The quantity of parts is given in the following manner; that is, in the case of parts being the same in type between the right and left, a total quantity of parts is given. On the other hand, if the right and left side parts are different in type, the quantity of part(s) on each side is given.

Example

Description	Q'ty
CARBURETOR ASS'Y, left	1
CARBURETOR ASS'Y, right	1
. JET, pilot	2
. NOZZLE, main	2
. . . .	
. LEVER, starter, left	1
. LEVER, starter, right	1

(3) Key to Symbols

U.R.	Use size (thickness) and/or number as required
U.N.	Use as many as you need
T	Number of teeth in a gear
V	Voltage for light bulbs
S	"S" type oil seal or "S" type circlip
SD	"SD" type oil seal
SO	"SO" type oil seal
SW	"SW" type oil seal
E	"E" type circlip
R	"R" type circlip
F/No.	Frame No. (Applicable machine No.)

- (4) The right and left in relation to parts are determined on the basis of the rider facing toward the front.
- (5) This Parts List is based on the model in the production line on Feb., 10, 1975. Accordingly, if any modifications which have been made to parts will be announced in the Yamaha Parts News. It is advisable that according to the Yamaha Parts News, You will make necessary corrections to the Parts List on hand to keep it up-to dated.



CONTENTS

ENGINE

Fig. 1	Crankcase · Cylinder	1
Fig. 2	Fan Case · Air Shroud	3
Fig. 3	Crank · Piston	5
Fig. 4	Decompression Valve	7
Fig. 5	Intake	9
Fig. 6	Carburetor	11
Fig. 7	Exhaust	15
Fig. 8	Starter	17
Fig. 9	Flywheel Magneto	19
Fig. 10	Oil Pump	21
Fig. 11	Pump Drive Gear	25

DRIVE

Fig. 12	Primary Sheave	29
Fig. 13	Secondary Sheave	31
Fig. 14	Track Drive	33
Fig. 15	Brake	37
Fig. 16	Front Axle	39
Fig. 17	Rear Axle	41
Fig. 18	Track · Suspension Wheel	43

BODY

Fig. 19	Frame	47
Fig. 20	Shroud	49
Fig. 21	Engine Bracket	51
Fig. 22	Steering Gate	53
Fig. 23	Steering	55
Fig. 24	Ski	57

Fig. 25	Grip • Wiring	59
Fig. 26	Fuel Tank	61
Fig. 27	Oil Tank	63
Fig. 28	Seat	65
Fig. 29	Bumper	67
Fig. 30	Head Lamp	69
Fig. 31	Tail Lamp	71
Fig. 32	Electrical	73

ALTERNATE PARTS


Fig. 33	Speedometer Unit	77
Fig. 34	Tachometer Unit	79

NUMERICAL INDEX

ENGINE



 
Fig. 1 CRANKCASE · CYLINDER

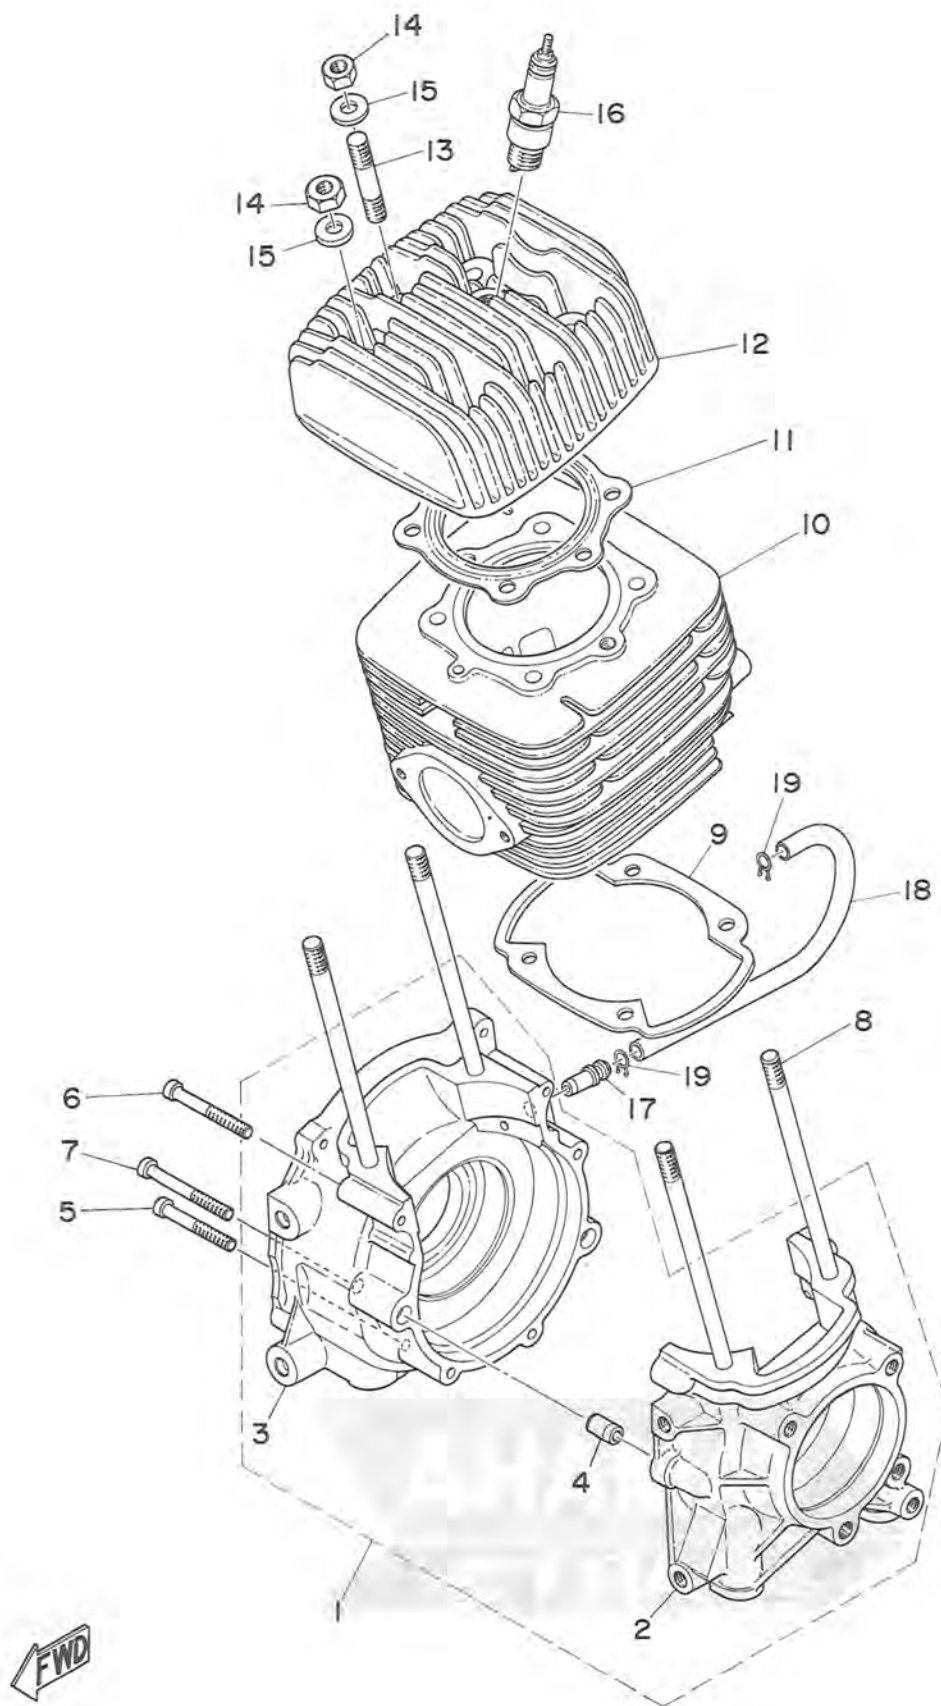

FWD


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
1- 1	839-15100-00	CRANK CASE ASS'Y	1		
2	839-15111-00	. CASE, crank left	1		Not for sale
3	839-15121-00	. CASE, crank right	1		Not for sale
4	91810-02015	. PIN, dowel	2		
5	92501-06045	SCREW, panhead	3		
6	92501-06050	SCREW, panhead	2		
7	92501-06055	SCREW, panhead	2		
8	90116-08083	BOLT (812-11361-00)	4		
9	812-11351-00	GASKET, cylinder	1		
10	822-11311-00	CYLINDER	1		
11	812-11181-00	GASKET, cylinder head	1		
12	853-11111-00	HEAD, cylinder	1		
13	90116-08057	BOLT (812-11179-00)	2		
14	95701-08100	NUT, holding	6		
15	90201-08100	WASHER (812-11175-00)	6		
16	94701-00111	PLUG, spark (BR-6ES)	1		
17	812-24461-00	PIPE, joint	1		
18	90445-10138	PIPE (823-24315-00 6-190)	1		
19	90467-09006	CLIP (806-24356-00)	2		

 Fig. 2 FAN CASE · AIR SHROUD

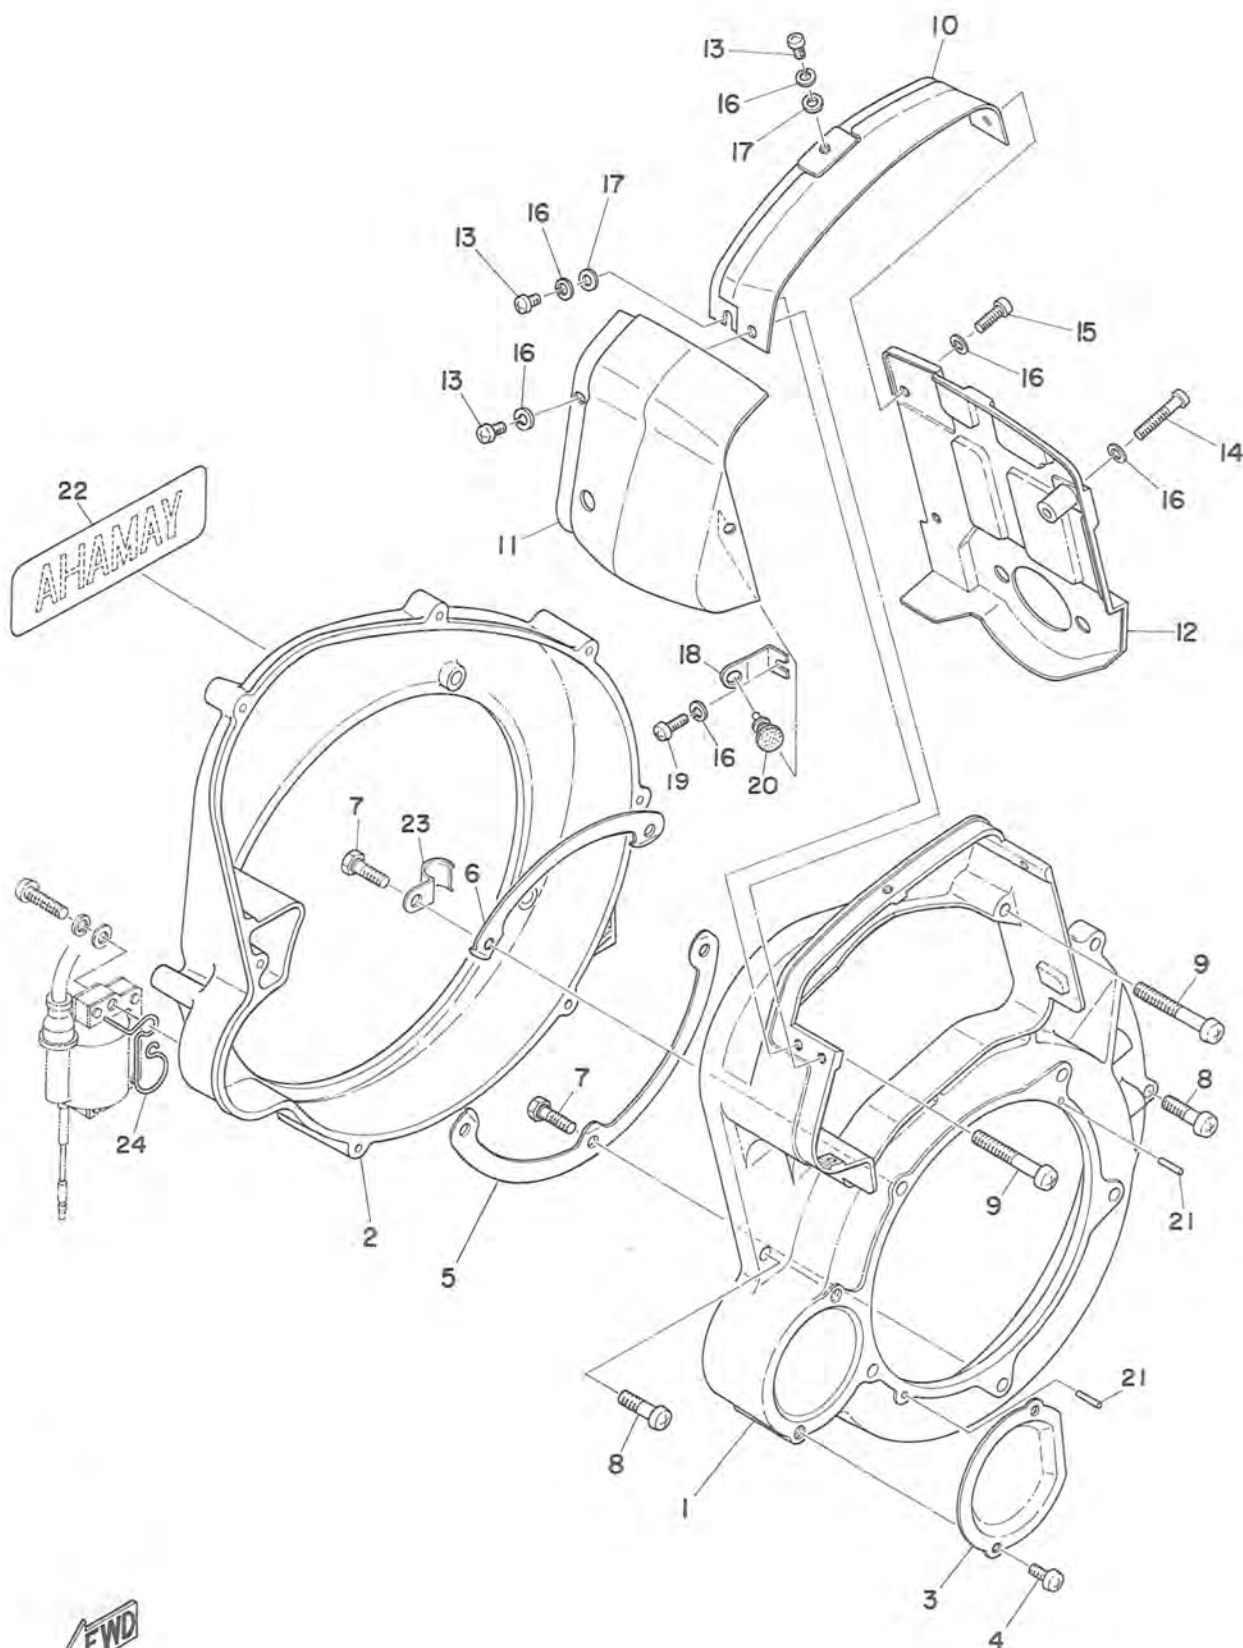


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
2- 1	839-12621-00	CASE, fan 1	1		
2	867-12622-00	CASE, fan 2	1		
3	812-12633-00	PLATE	1		
4	98501-05010	SCREW, panhead	2		
5	812-12624-00	WASHER, lock 1	1		
6	812-12625-00	WASHER, lock 2	1		
7	90109-06270	BOLT (812-12623-00)	5		
8	92506-06025	SCREW, panhead	5		
9	92506-06050	SCREW, panhead	2		
10	839-12651-00	AIR SHROUD, cylinder 1	1		
11	822-12652-00	AIR SHROUD, cylinder 2	1		
12	839-12653-00	AIR SHROUD, cylinder 3	1		
13	98906-05012	SCREW, bind	4		
14	98906-05030	SCREW, bind	1		
15	98906-05012	SCREW, bind	2		
16	92906-05100	WASHER, spring	8		
17	92906-05600	WASHER, plate	5		
18	822-12655-00	STAY, clamp	1		
19	98906-05012	SCREW, bind	1		
20	812-12658-00	DAMPER, air shroud cylinder	1		
21	93604-14012	PIN, dowel (4-13.8)	2		
22	838-12629-00	EMBLEM	1		
23	822-82361-00	CLAMP, cord	1		
24	822-24369-01	CLAMP, pipe	1		

 Fig. 3 CRANK · PISTON

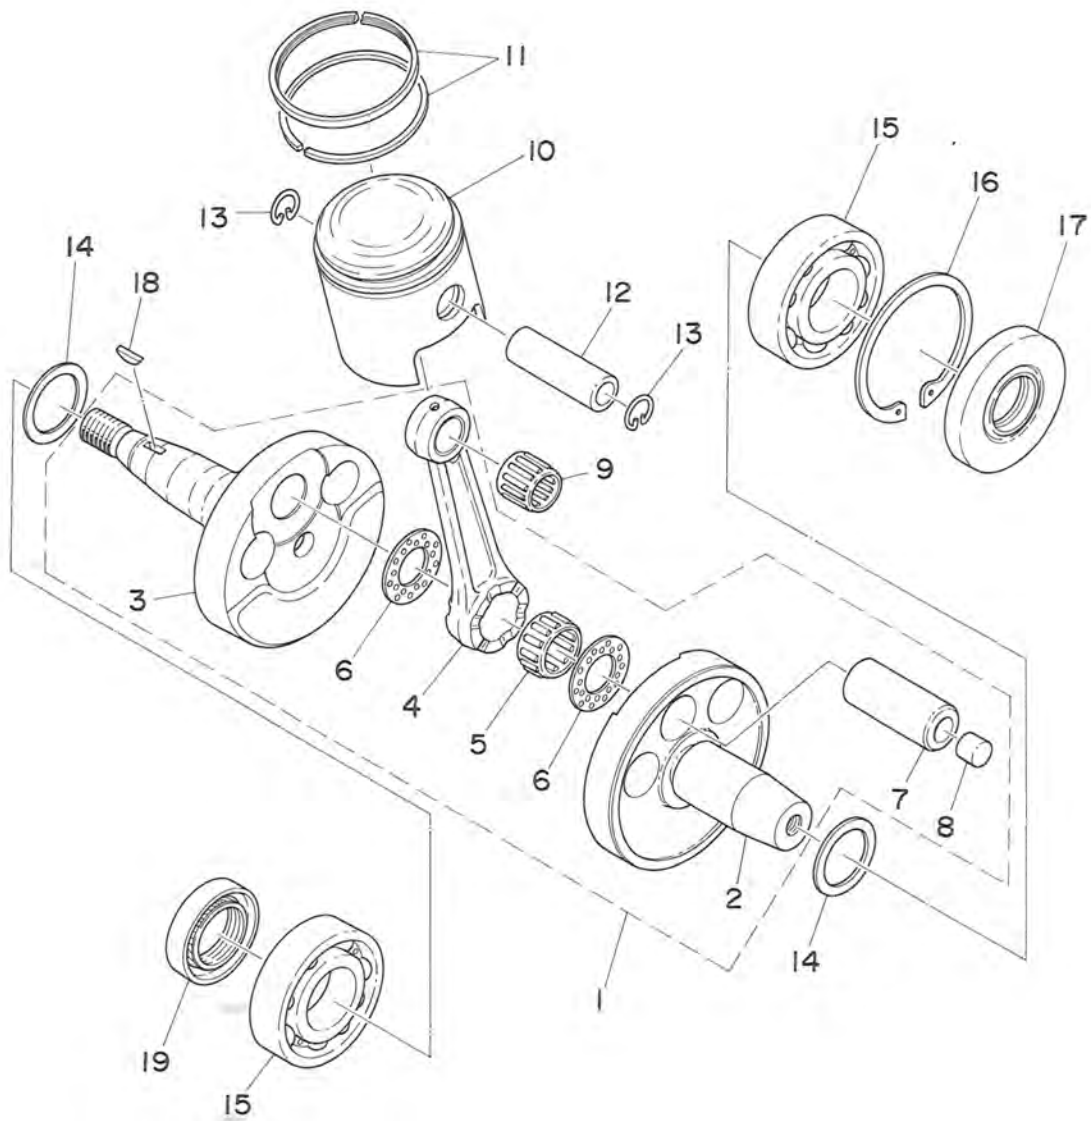


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
3- 1	853-11400-00	CRANK ASS'Y	1		
2	853-11412-00	. CRANK, left	1		
3	853-11422-00	. CRANK, right	1		
4	839-11651-00	. ROD, connecting	1		
5	93310-42497	. BEARING, con-rod big end	1		
6	90209-24073	. WASHER (152-11685-00)	2		
7	822-11681-00	. PIN, crank	1		
8	822-11682-00	. BUSHING, crank pin	2		
9	93310-21874	BEARING, con-rod small end	1		
10	839-11631-00-96	PISTON (72.96mm STD)	} U.R 1		
	839-11631-00-98	PISTON (72.98mm STD)			
	839-11635-00	PISTON (73.25mm 1st O.S)	1		Alternate Parts
	839-11636-00	PISTON (73.50mm 2nd O.S)	1		Alternate Parts
	839-11637-00	PISTON (73.75mm 3rd O.S)	1		Alternate Parts
	839-11638-00	PISTON (74.00mm 4th O.S)	1		Alternate Parts
11	839-11610-00	PISTON RING SET (STD)	1s		
	839-11610-10	PISTON RING SET (1st O.S)	1s		Alternate Parts
	839-11610-20	PISTON RING SET (2nd O.S)	1s		Alternate Parts
	839-11610-30	PISTON RING SET (3rd O.S)	1s		Alternate Parts
	839-11610-40	PISTON RING SET (4th O.S)	1s		Alternate Parts
12	214-11633-00	PIN, piston	1		
13	93450-20026	CLIP (604-11634-00)	2		
14	812-11561-00-03	SHIM (32.2-44-0.2)	1		
15	93306-30602	BEARING (B6306 special)	2		
16	93420-72023	CIRCLIP (R-72)	1		
17	93102-30111	OIL SEAL (SD-30-72-10)	1		
18	90280-05013	KEY, woodruff	1		
19	93102-30112	OIL SEAL (SD-30-48-10)	1		

 Fig. 4 DECOMPRESSION VALVE

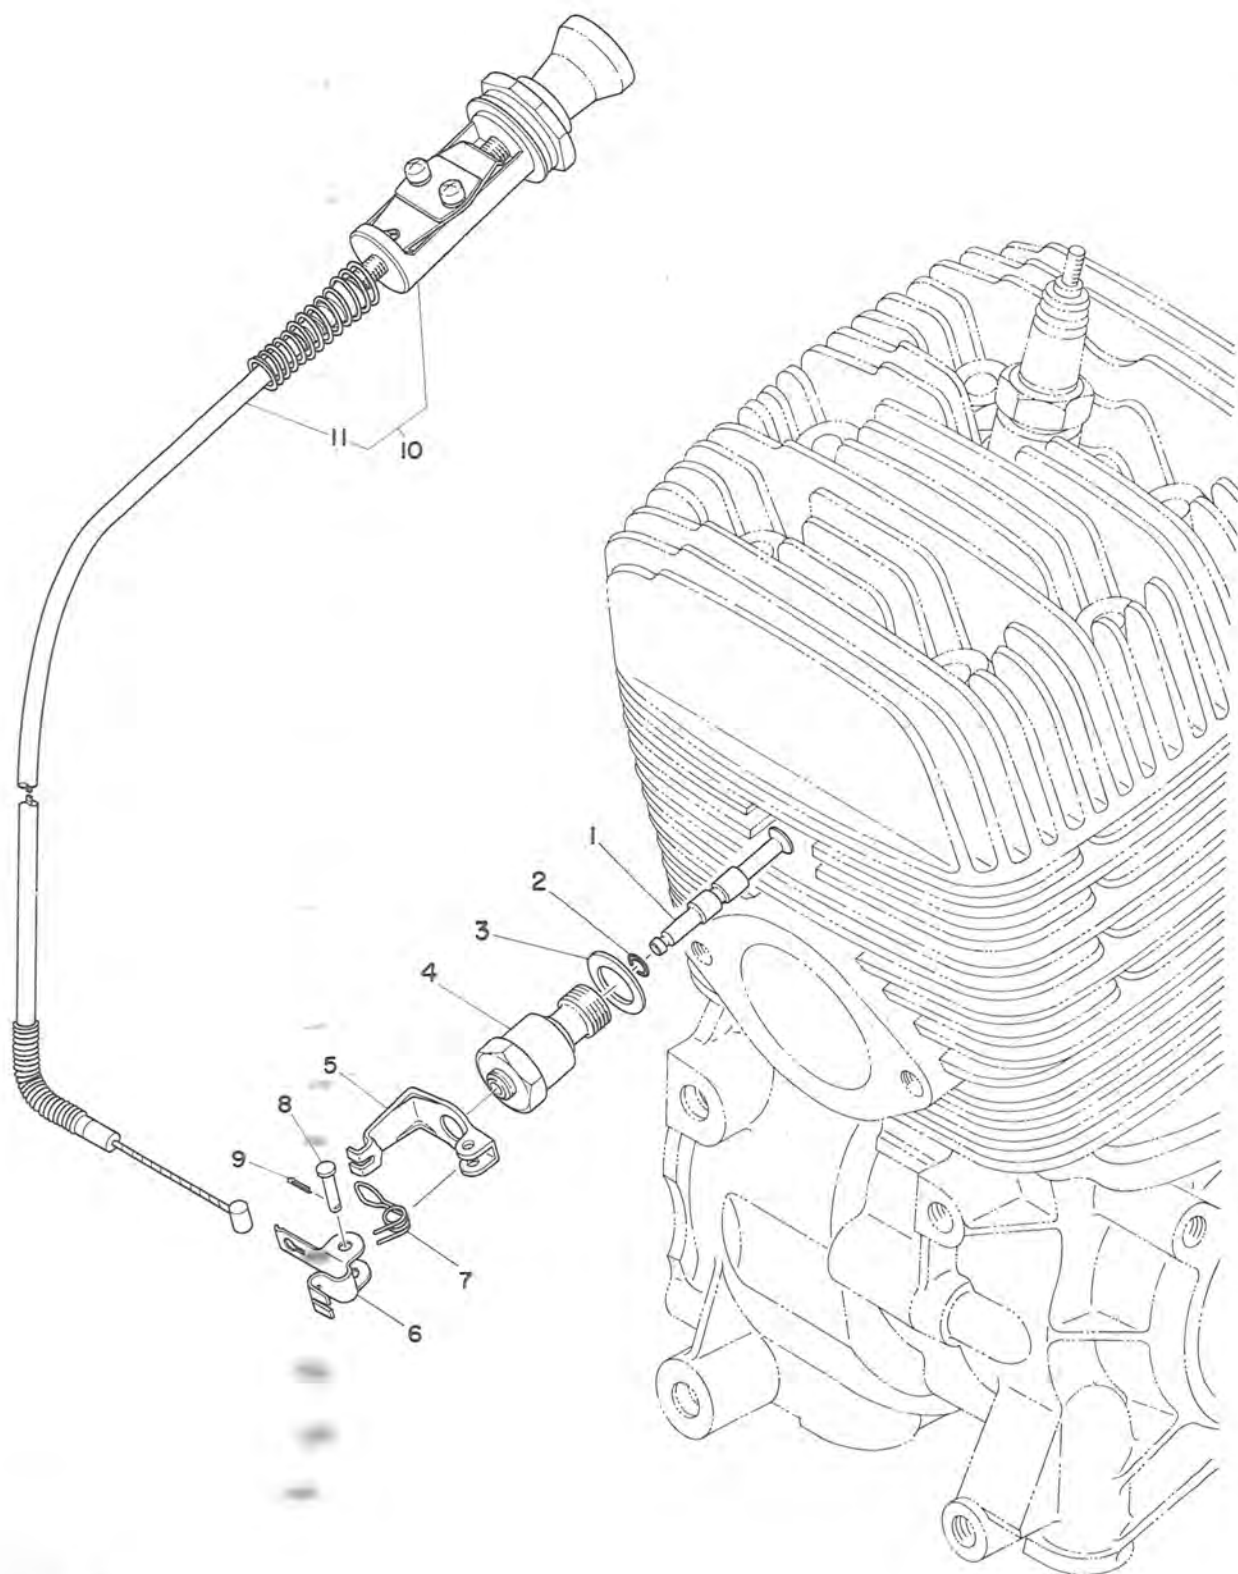


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
4- 1	822-12281-00	VALVE, decompression	1		
2	93210-04092	O-RING (10-3.7)	1		
3	812-11198-00	GASKET	1		
4	822-12283-00	BRACKET, decompression	1		
5	812-12273-00	HOLDER, wire	1		
6	275-12282-00	LEVER, decompression	1		
7	90508-10183	SPRING (812-12287-00)	1		
8	90240-03002	PIN (812-12284-00)	1		
9	91401-16010	PIN, cotter	1		
10	839-12270-00	DECOMPRESSION SWITCH ASS'Y	1		
11	839-12292-00	. WIRE, decompression	1		

 Fig. 5 INTAKE

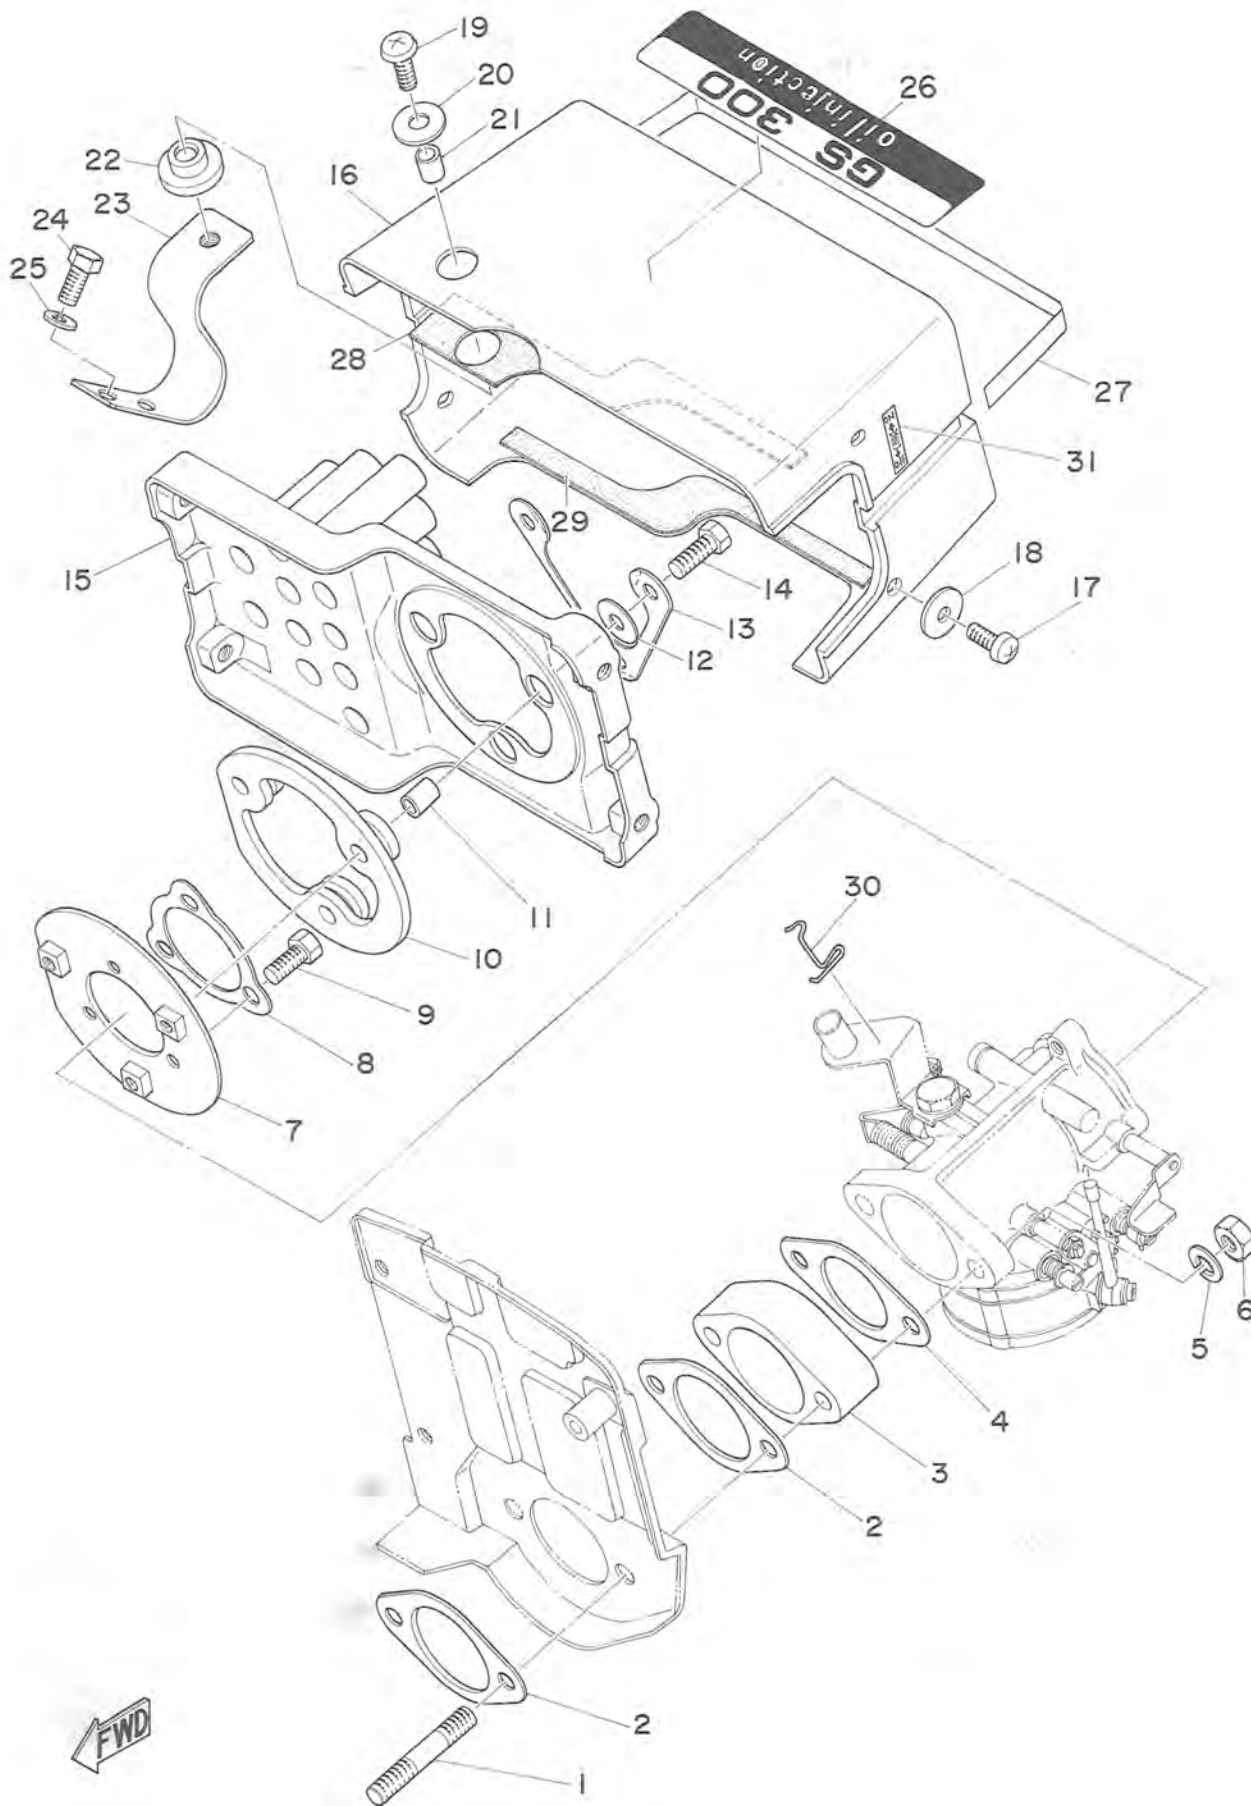

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
5- 1	90116-08057	STUD (812-11179-00)	2		
2	839-13556-00	GASKET	2		
3	853-13555-00	JOINT	1		
4	807-13556-00	GASKET	1		
5	92901-08100	WASHER, spring	2		
6	95301-08700	NUT	2		
7	867-14477-00	PLATE	1		
8	853-14475-00	WASHER	1		
9	97301-06015	BOLT	3		
10	864-14435-00	GROMMET	1		
11	90387-06244	COLLAR	3		
12	90201-06071	WASHER (602-77179-00)	3		
13	864-14599-00	WASHER, lock	1		
14	97301-06018	BOLT	3		
15	867-14431-00	SILENCER 1	1		
16	867-14441-00	SILENCER 2	1		
17	91906-06015	SCREW, bind	4		
18	90201-06059	WASHER	4		
19	91906-06018	SCREW, bind	1		
20	90201-06380	WASHER (839-77471-00)	1		
21	90387-06244	COLLAR	1		
22	90480-15060	GROMMET	1		
23	867-14493-00	STAY, silencer	1		
24	97306-06015	BOLT	2		
25	92906-06100	WASHER, spring	2		
26	898-77451-00	EMBLEM	1		
27	853-77452-00	EMBLEM 2	1		
28	864-14457-00	SEAL, silencer 1	1		
29	864-14467-00	SEAL, silencer 2	1		
30	822-41222-00	CLAMP, throttle	1		
31	847-77455-00	INDICATOR, choke	1		

 
Fig. 6 CARBURETOR

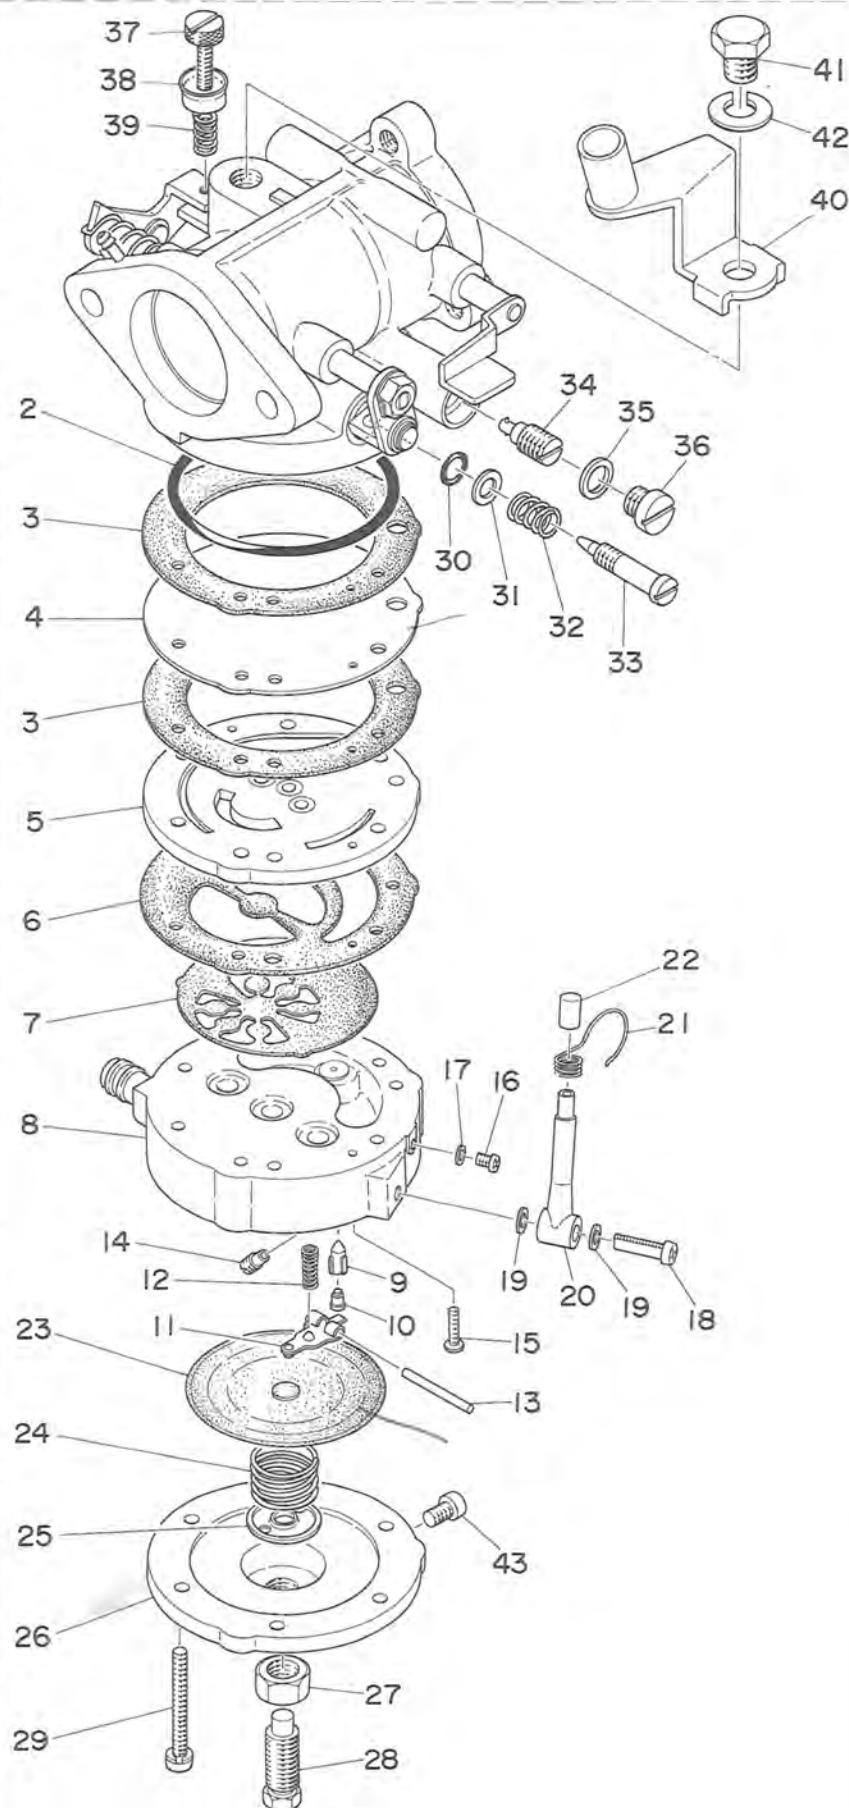

FWD

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
6- 1	867-14501-00	CARBURETOR ASS'Y	1		
2	806-14562-00	. O-RING	1		
3	838-14536-00	. GASKET	2		
4	834-14541-00	. DIAPHRAGM, pump <i>305</i>	1		
5	838-14542-00	. BODY, pump 1	1		
6	834-14553-00	. GASKET	1		
7	806-14552-01	. VALVE, check	1		
8	853-14543-00	. BODY, pump 2	1		
9	838-14546-00	. VALVE, needle	1		
10	810-14186-00	. PIN, valve	1		
11	810-14547-00	. ARM, float	1		
12	810-14556-00	. SPRING, arm	1		
13	806-14548-00	. PIN, arm	1		
14	853-14515-65	. JET	1		
15	98601-03008	. SCREW, ovalhead	1		
16	806-14567-01	. SCREW, plug	1		
17	810-14597-00	. WASHER, plain	1		
18	810-14592-00	. SCREW	1		
19	806-14559-00	. WASHER, plain	2		
20	853-14197-00	. PIPE, fuel level	1		
21	824-14159-00	. CLIP	1		
22	853-24462-00	. CAP, blind	1		
23	810-14545-00	. DIAPHRAGM <i>6.16</i>	1		
24	810-14555-00	. SPRING, main diaphragm	1		
25	810-14136-00	. SEAT, spring	1		
26	810-14544-00	. BODY, pump 3	1		
27	810-14594-00	. NUT, lock	1		
28	824-14565-00	. SCREW, stop	1		
29	824-14567-00	. SCREW, panhead	6		
30	824-14563-00	. O-RING	1		
31	838-14596-00	. WASHER, plain	1		
32	824-14531-00	. SPRING, adjuster	1		

 
Fig. 6 CARBURETOR

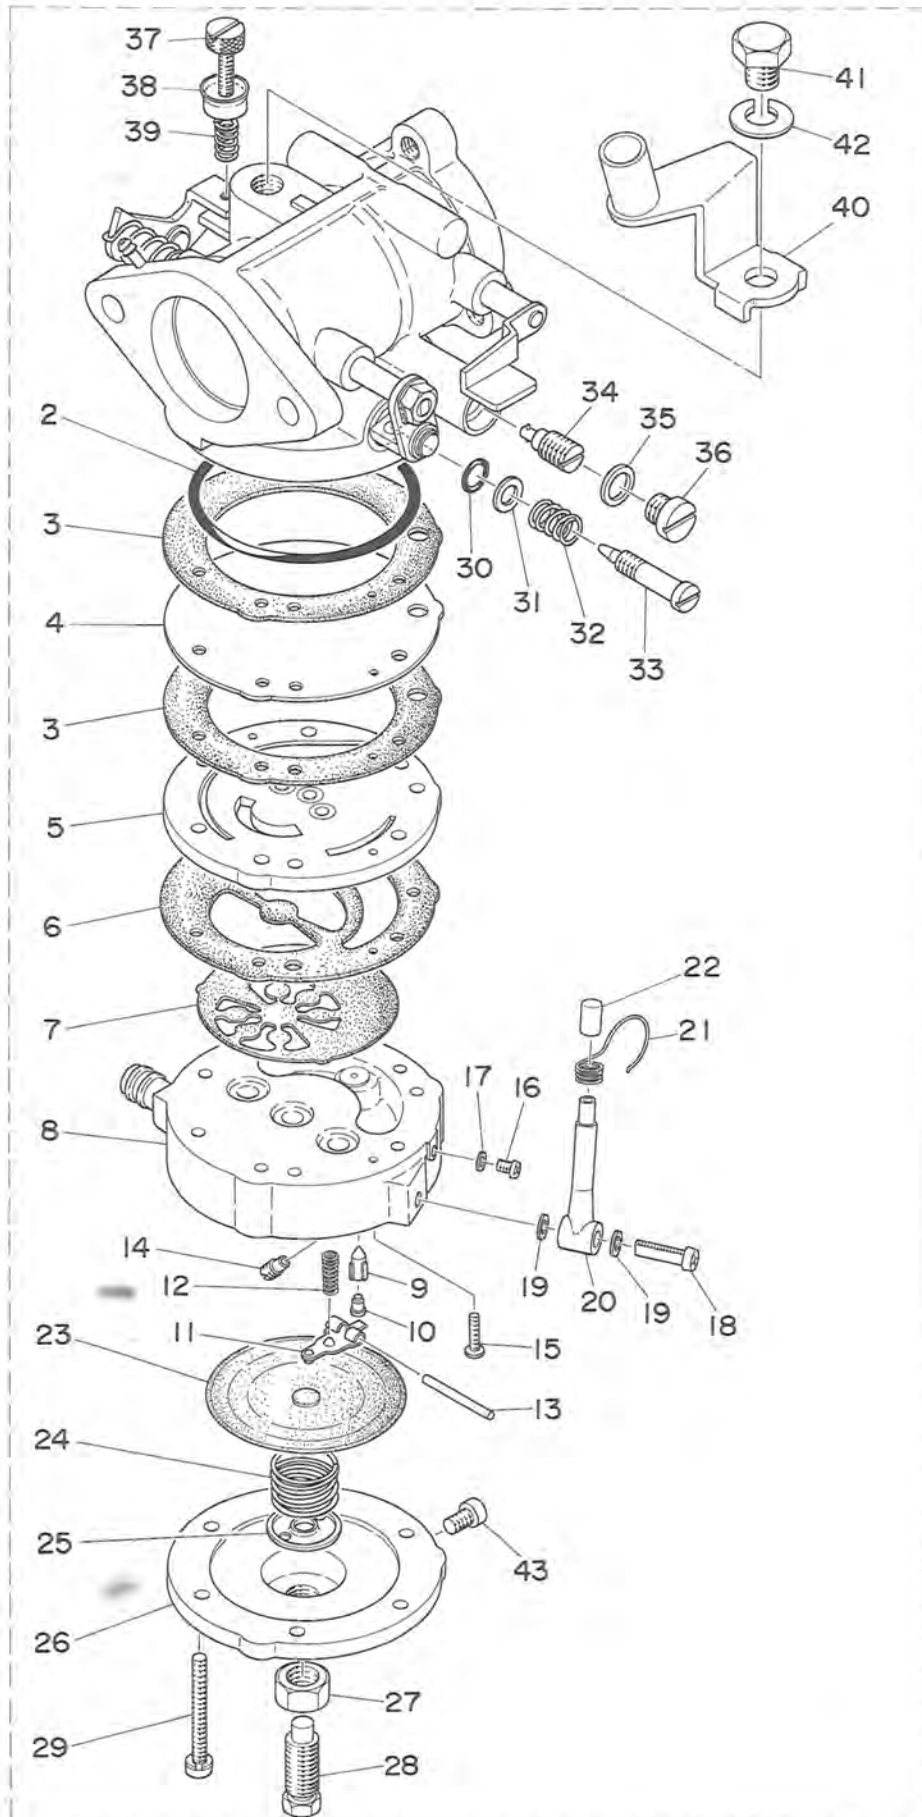

FWD


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
6-33	853-14522-00	. SCREW, adjuster	1		
	845-14516-15	. JET, main (#115)	} U.R 1		
	845-14516-20	. JET, main (#120)			
34	845-14516-25	. JET, main (#125)			STD
	845-14516-30	. JET, main (#130)			
35	810-14558-00	. WASHER, plain	1		
36	845-14567-00	. PLUG	1		
37	867-14523-00	. SCREW, stop	1		
38	867-14578-00	. COLLAR	1		
39	806-14533-00	. SPRING, stop screw	1		
40	867-14571-00	. BRACKET, throttle	1		
41	97321-08012	. BOLT	1		
42	92901-08100	. WASHER, spring	1		
43	98501-04006	. SCREW, panhead	1		

 Fig. 7 EXHAUST

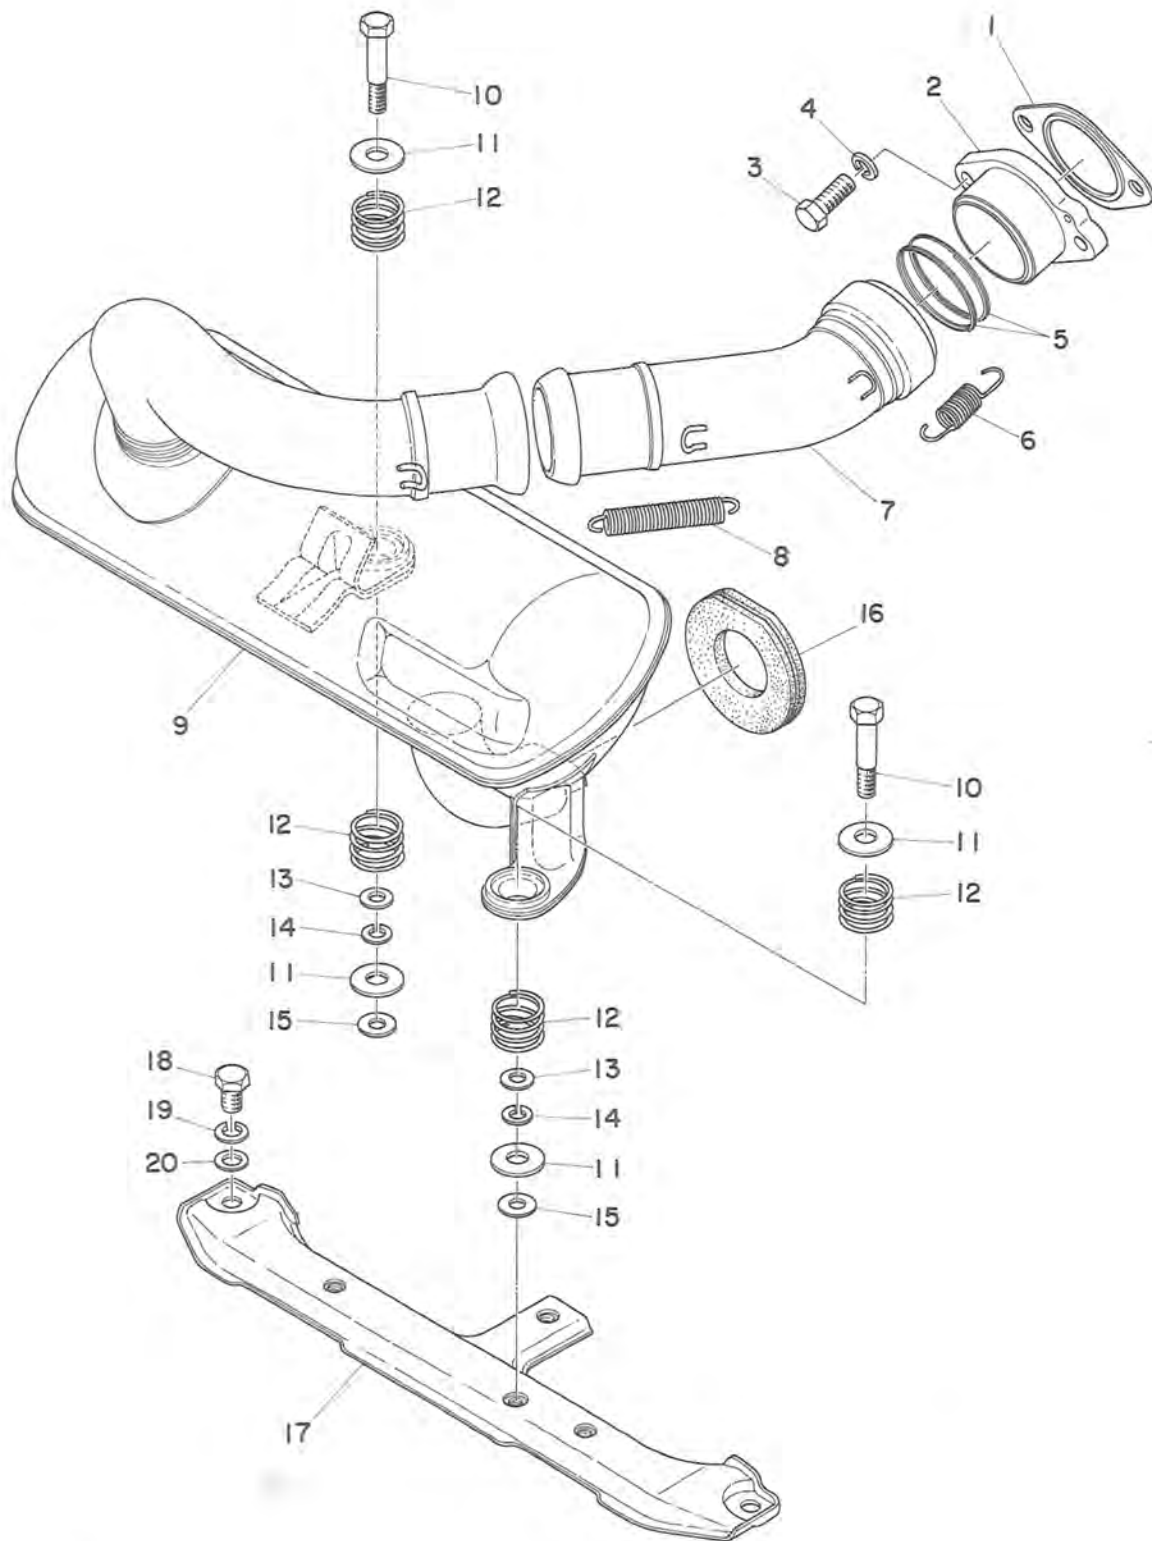


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
7- 1	834-14613-00	GASKET, exhaust pipe	1	—	
2	853-14612-00	NUT, ring	1		
3	97321-08025	BOLT	2		
4	92990-08100	WASHER, spring	2		
5	812-14623-00	GASKET	2	—	
6	90506-20074	SPRING, hook	2	—	
7	853-14610-00	EXHAUST PIPE ASS'Y	1		
8	90506-20038	SPRING (821-14773-00)	2	—	
9	853-14710-02	MUFFLER ASS'Y	1		
10	90109-08293	BOLT, muffler fitting	2		
11	90201-10140	WASHER (102-22243-00)	4		
12	853-14773-02	SPRING, muffler	4		
13	90560-08065	SPACER (812-14763-00)	2		
14	92990-08100	WASHER, spring	2		
15	90201-07080	WASHER (812-14759-01)	2		
16	853-14718-00	PROTECTOR, muffler	1		
17	841-14771-02	STAY, muffler	1		
18	97301-08015	BOLT	2		
19	92901-08100	WASHER, spring	2		
20	92901-08600	WASHER, plate	2		

 Fig. 8 STARTER

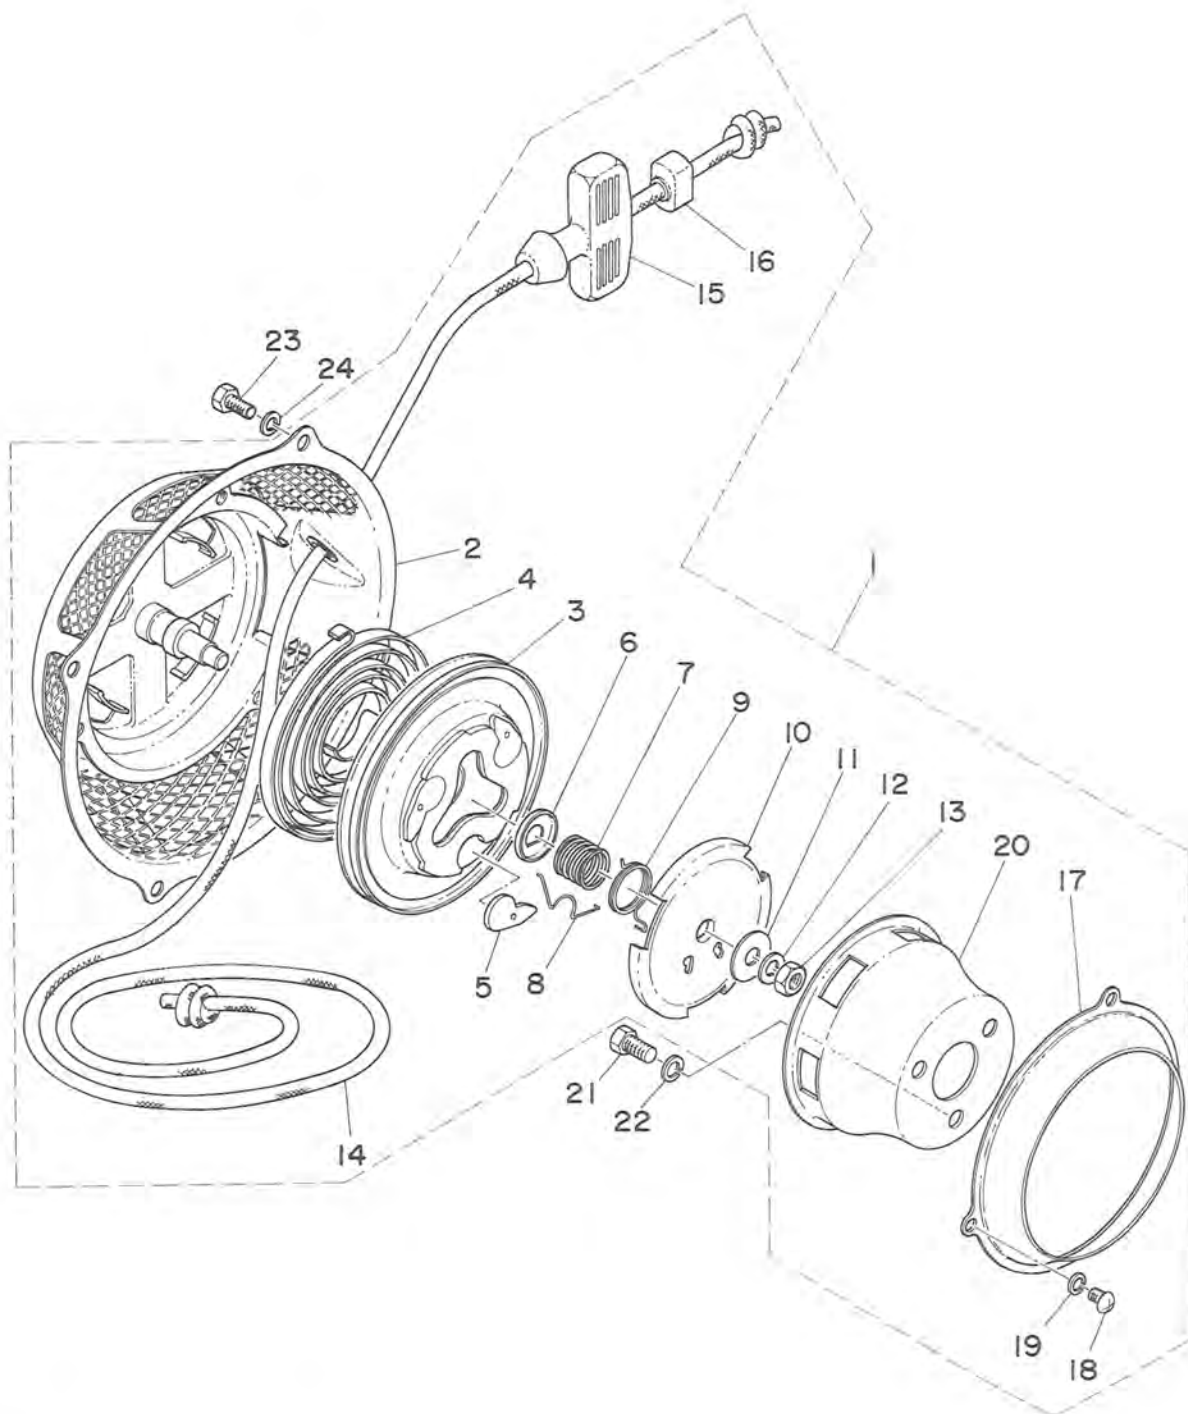


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
8- 1	860-15710-00	STARTER ASS'Y	1		
2	860-15711-00	. CASE, starter	1		
3	812-15714-00	. DRUM, sheave	1		
4	802-15713-00	. SPRING, starter	1		
5	812-15741-00	. PAWL, drive	3		
6	802-15719-00	. WASHER, thrust	1		
7	802-15715-00	. SPRING, drive plate	1		
8	812-15784-00	. SPRING, return	1		
9	811-15734-00	. SPRING, return	1		
10	812-15716-00	. PLATE, drive	1		
11	807-15726-01	. WASHER, flat	1		
12	92901-08100	. WASHER, spring	1		
13	95302-08700	. NUT	1		
14	812-15751-00	. ROPE	1		
15	807-15755-00	. HANDLE, stater	1		
16	619-15756-00	. CONNECTOR	1		
17	812-15782-00	. COVER, sheave	1		
18	98402-05006	. SCREW, roundhead	3		
19	92901-05100	. WASHER, spring	3		
20	812-15723-00	PULLEY, starter	1		
21	97321-08015	BOLT	3		
22	92901-08100	WASHER, spring	3		
23	97306-06015	BOLT	4		
24	92906-06100	WASHER, spring	4		

 Fig. 10 OIL PUMP

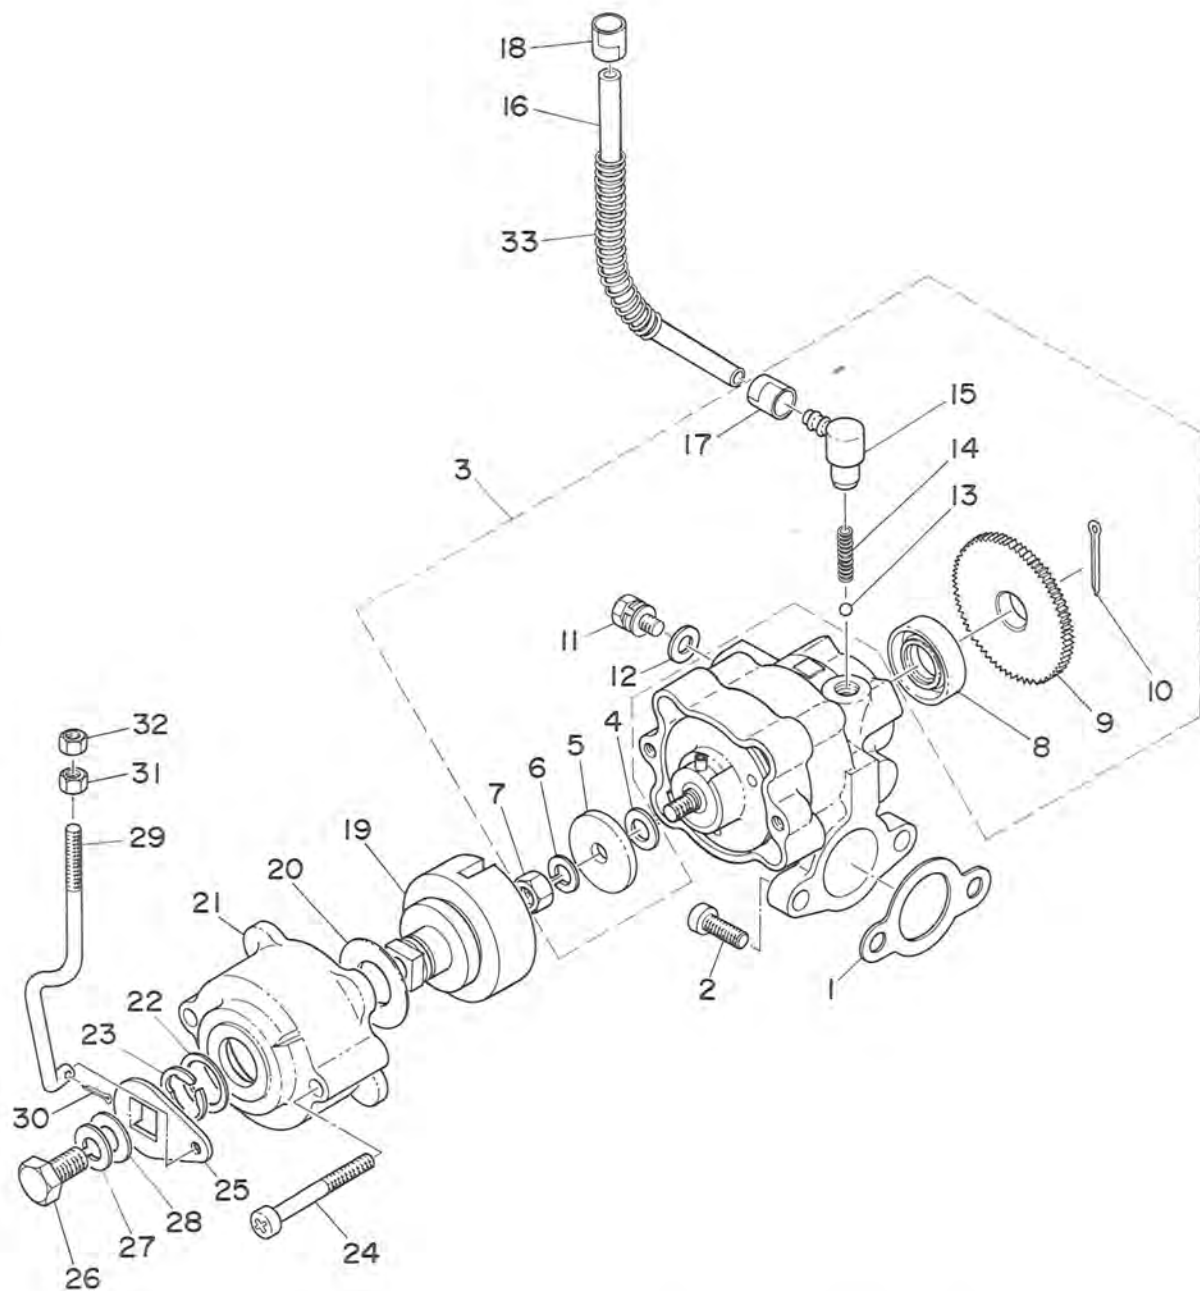


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
10- 1	126-13116-00	GASKET, pump case	1		
2	98501-05015	SCREW, panhead	2		
3	898-13101-00	OIL PUMP ASS'Y	1		
4	137-13137-00-10 . SHIM (5.8-10-0.1)	} U.R. 1	1		
	137-13137-00-30 . SHIM (5.8-10-0.3)				
5	137-13138-01 . PLATE, adjusting		1		
6	92901-05100 . WASHER, spring		1		
7	95301-05600 . NUT		1		
8	93101-10001 . OIL SEAL (S-10-21-5)		1		
9	137-13128-00 . PLATE, starter		1		
10	91401-12018 . PIN, cotter		1		
11	90119-04009 . BOLT		1		
12	90430-04004 . GASKET (137-13187-00)		1		
13	93505-32002 . BALL (5/32 inch)		1		
14	90501-02018 . SPRING (278-13169-00)		1		
15	353-13552-01 . NOZZLE		1		
16	90445-05031 . PIPE (214-13161-01 3-240)		1		
17	90468-02033 . CLIP (214-13164-00)		1		
18	90468-02033 CLIP (214-13164-00)		1		
19	860-13153-00 SHAFT, pump control		1		
20	860-13119-00 SEAL, grease		1		
21	812-13146-00 COVER, adjust pulley		1		
22	812-13147-00 SHIM		1		
23	93430-09019 CIRCLIP (E-9)		1		
24	98501-04030 SCREW, panhead		2		
25	812-13156-00 LEVER, pump control		1		
26	97301-06012 BOLT		1		
27	92901-06100 WASHER, spring		1		
28	92901-06600 WASHER, plain		1		
29	839-13157-01 ROD, pump control		1		
30	91401-12008 PIN, cotter		1		

 Fig. 10 OIL PUMP

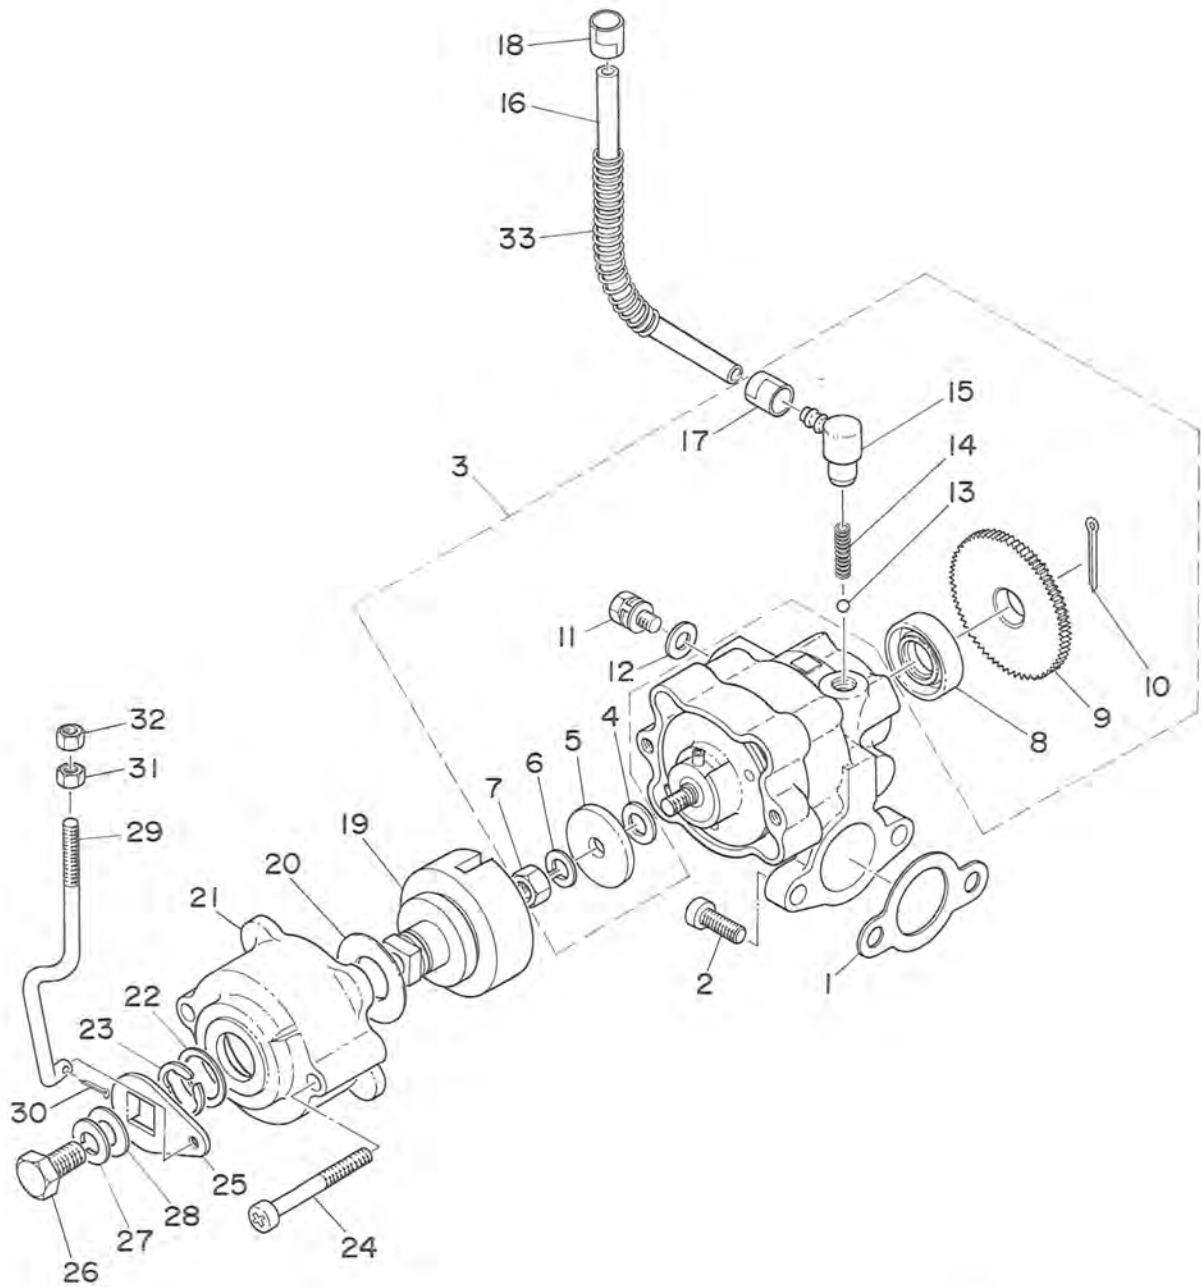

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
10-31	90170-03010	NUT	1		
32	90185-03007	NUT (838-13139-00)	1		
33	90501-04019	SPRING (839-13172-00)	1		

 Fig. 11 PUMP DRIVE GEAR

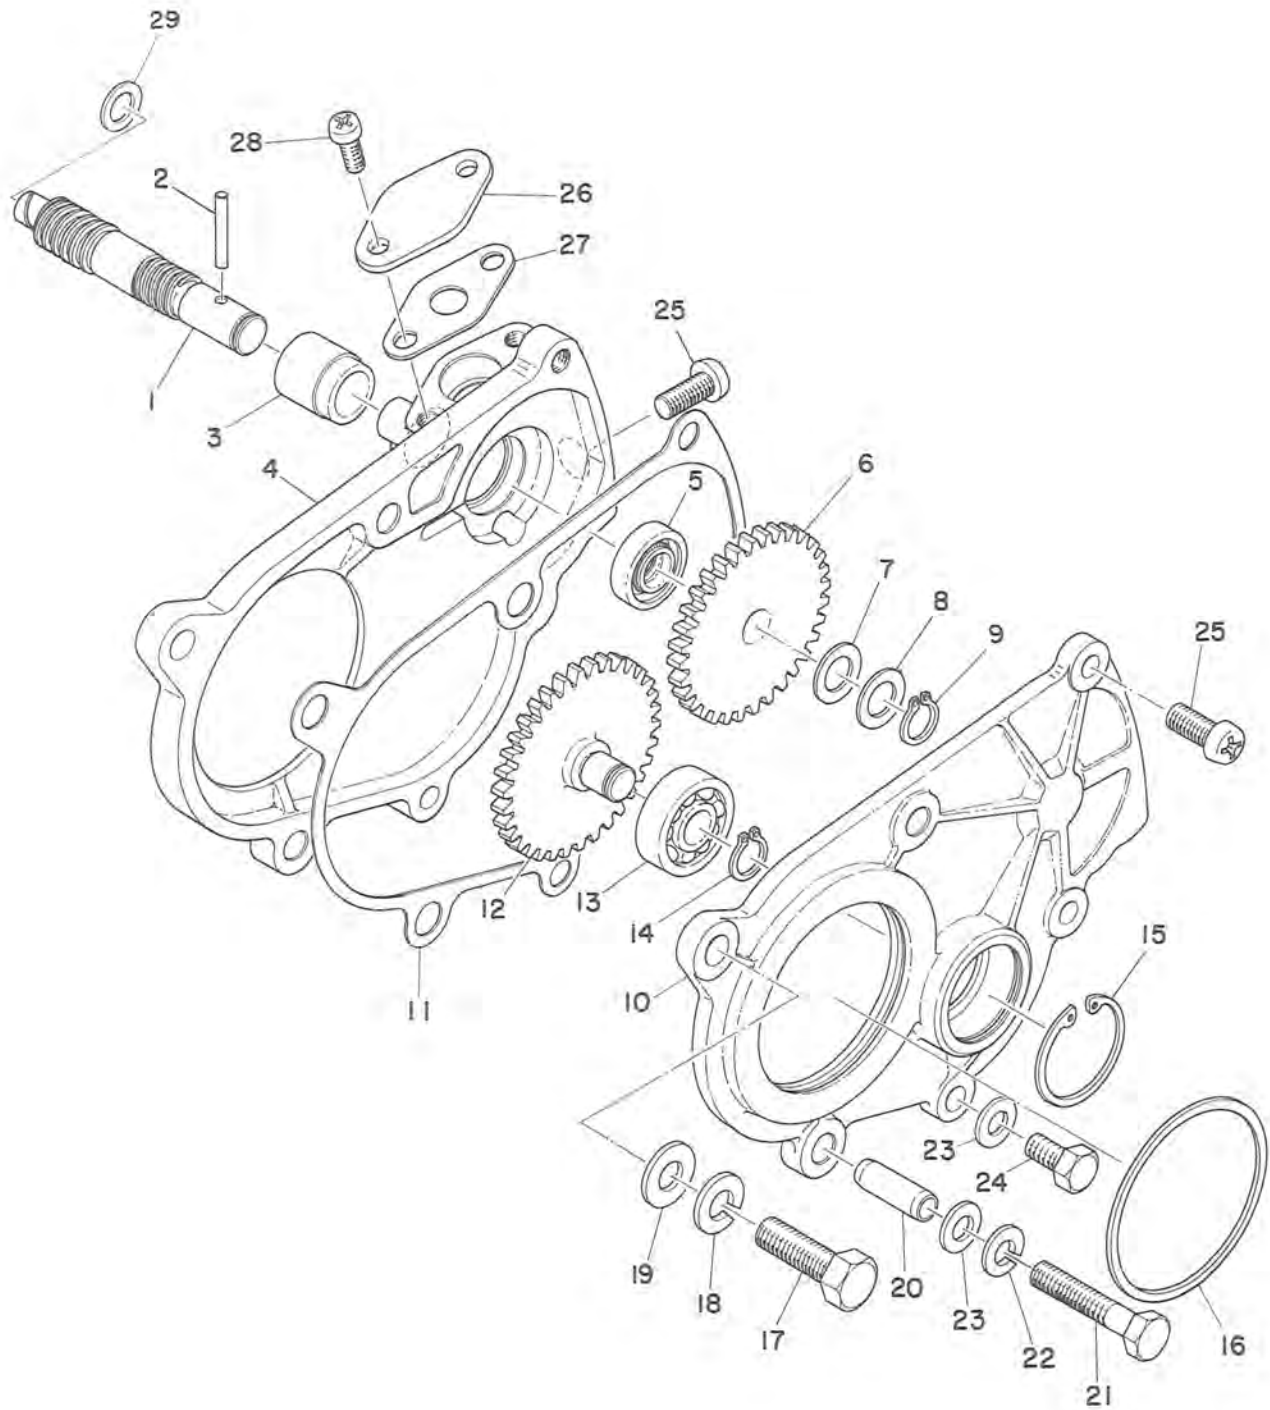

FWD


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
11- 1	821-13175-00	SHAFT, worm	1		
2	93603-22028	PIN, dowel (3-21.8)	1		
3	821-13176-00	METAL, worm shaft outer	1		
4	839-15416-00	COVER, pump drive 1	1		
5	93101-10001	OIL SEAL (S-10-21-5)	1		
6	821-13188-00	GEAR, drive 2	1		
7	90206-11016	WASHER (137-13129-00)	1		
8	137-13148-00	PLATE (10.2-16-0.3)	1		
9	93410-10025	CIRCLIP (S-10)	1		
10	839-15426-00	COVER, pump drive 2	1		
11	860-15466-00	GASKET, cover pump	1		
12	821-13179-00	GEAR, idle	1		
13	93306-00002	BEARING (B6000 2RS)	1		
14	93410-10025	CIRCLIP (S-10)	1		
15	93420-26024	CIRCLIP (R-26)	1		
16	838-13119-00	SEAL, grease	1		
17	97321-08030	BOLT	1		
18	92901-08100	WASHER, spring	1		
19	92901-08600	WASHER, plain	1		
20	821-15436-00	PIN, dowel	2		
21	97321-06035	BOLT	2		
22	92901-06100	WASHER, spring	2		
23	92901-06600	WASHER, plain	3		
24	97321-06025	BOLT	1		
25	92501-06015	SCREW, panhead	3		
26	824-17819-00	CAP, blind	1		
27	821-17818-00	GASKET	1		
28	98501-05010	SCREW, panhead	2		
29	256-17837-00	SHIM	1		



DRIVE



 
Fig. 12 PRIMARY SHEAVE

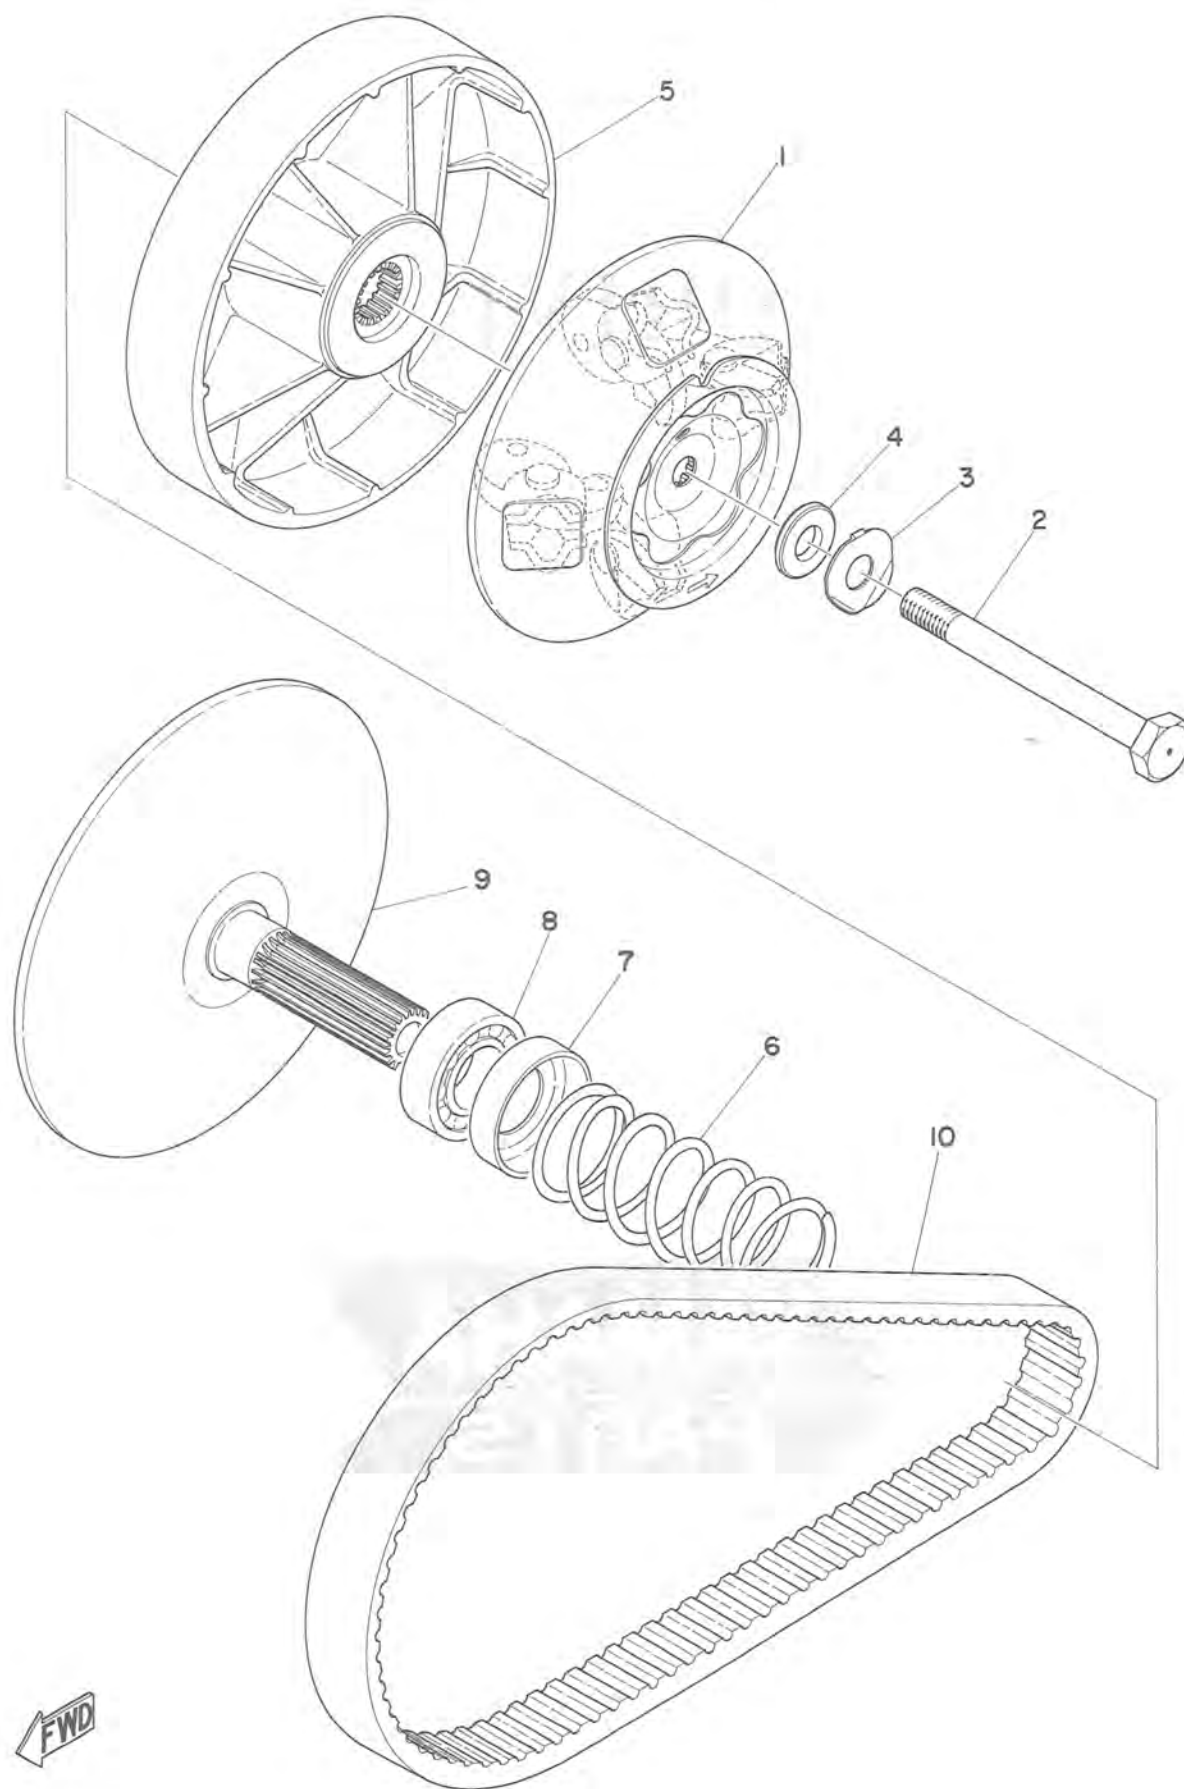

 FWD


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
12- 1	867-17630-00	PRIMARY SHEAVE CAP COMP.	1		
2	90101-13149	BOLT (853-17647-00)	1		
3	90215-13085	WASHER (853-17646-00)	1		
4	90201-12192	WASHER (853-17658-00)	1		
5	853-17620-00	PRIMARY SLIDING SHEAVE COMP.	1		
6	90501-45204	SPRING, compression	1		
7	867-17644-00	SEAT, spring	1		
8	93306-20509	BEARING (DD-25-52-15)	1		
9	853-17610-00	PRIMARY FIXED SHAVE COMP.	1		
10	820-17641-00	V-BELT	1		

 Fig. 13 SECONDARY SHEAVE

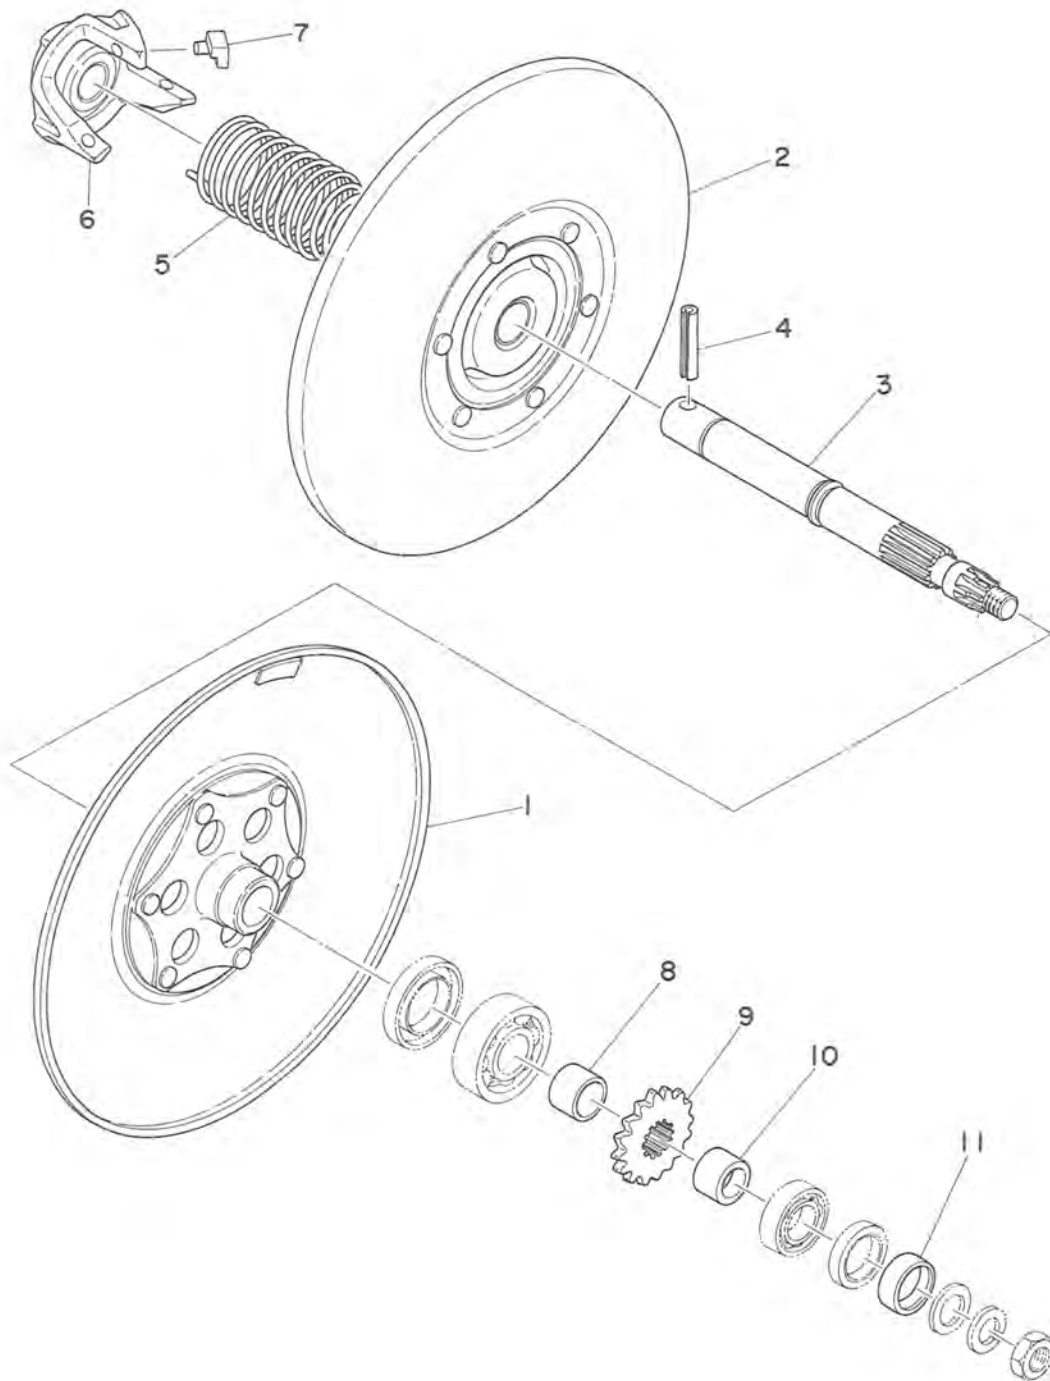

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
13-	1	853-17660-00	SECONDARY FIXED SHEAVE COMP. ..	1	
	2	853-17670-00	SECONDARY SLIDING SHEAVE COMP.	1	
	3	810-17681-00	SHAFT, secondary	1	
	4	91609-80040	PIN, spring	1	
	5	90508-40168	SPRING, torsion	1	
	6	810-17684-00	SEAT, secondary spring	1	
	7	801-17688-10	SHOE, lamp	3	
	8	90387-19339	COLLAR (812-17685-00)	1	
		812-17682-00	SPROCKET, chain drive (10T)	U.R 1	STD
9		812-17682-10	SPROCKET, chain drive (11T)		
		812-17682-20	SPROCKET, chain drive (12T)		
		812-17682-30	SPROCKET, chain drive (13T)		
		812-17682-40	SPROCKET, chain drive (14T)		
		812-17682-50	SPROCKET, chain drive (15T)		
10		90387-17371	COLLAR (812-17695-00)	1	
11		90387-17130	COLLAR (818-17686-00)	1	

 
Fig. 14 TRACK DRIVE

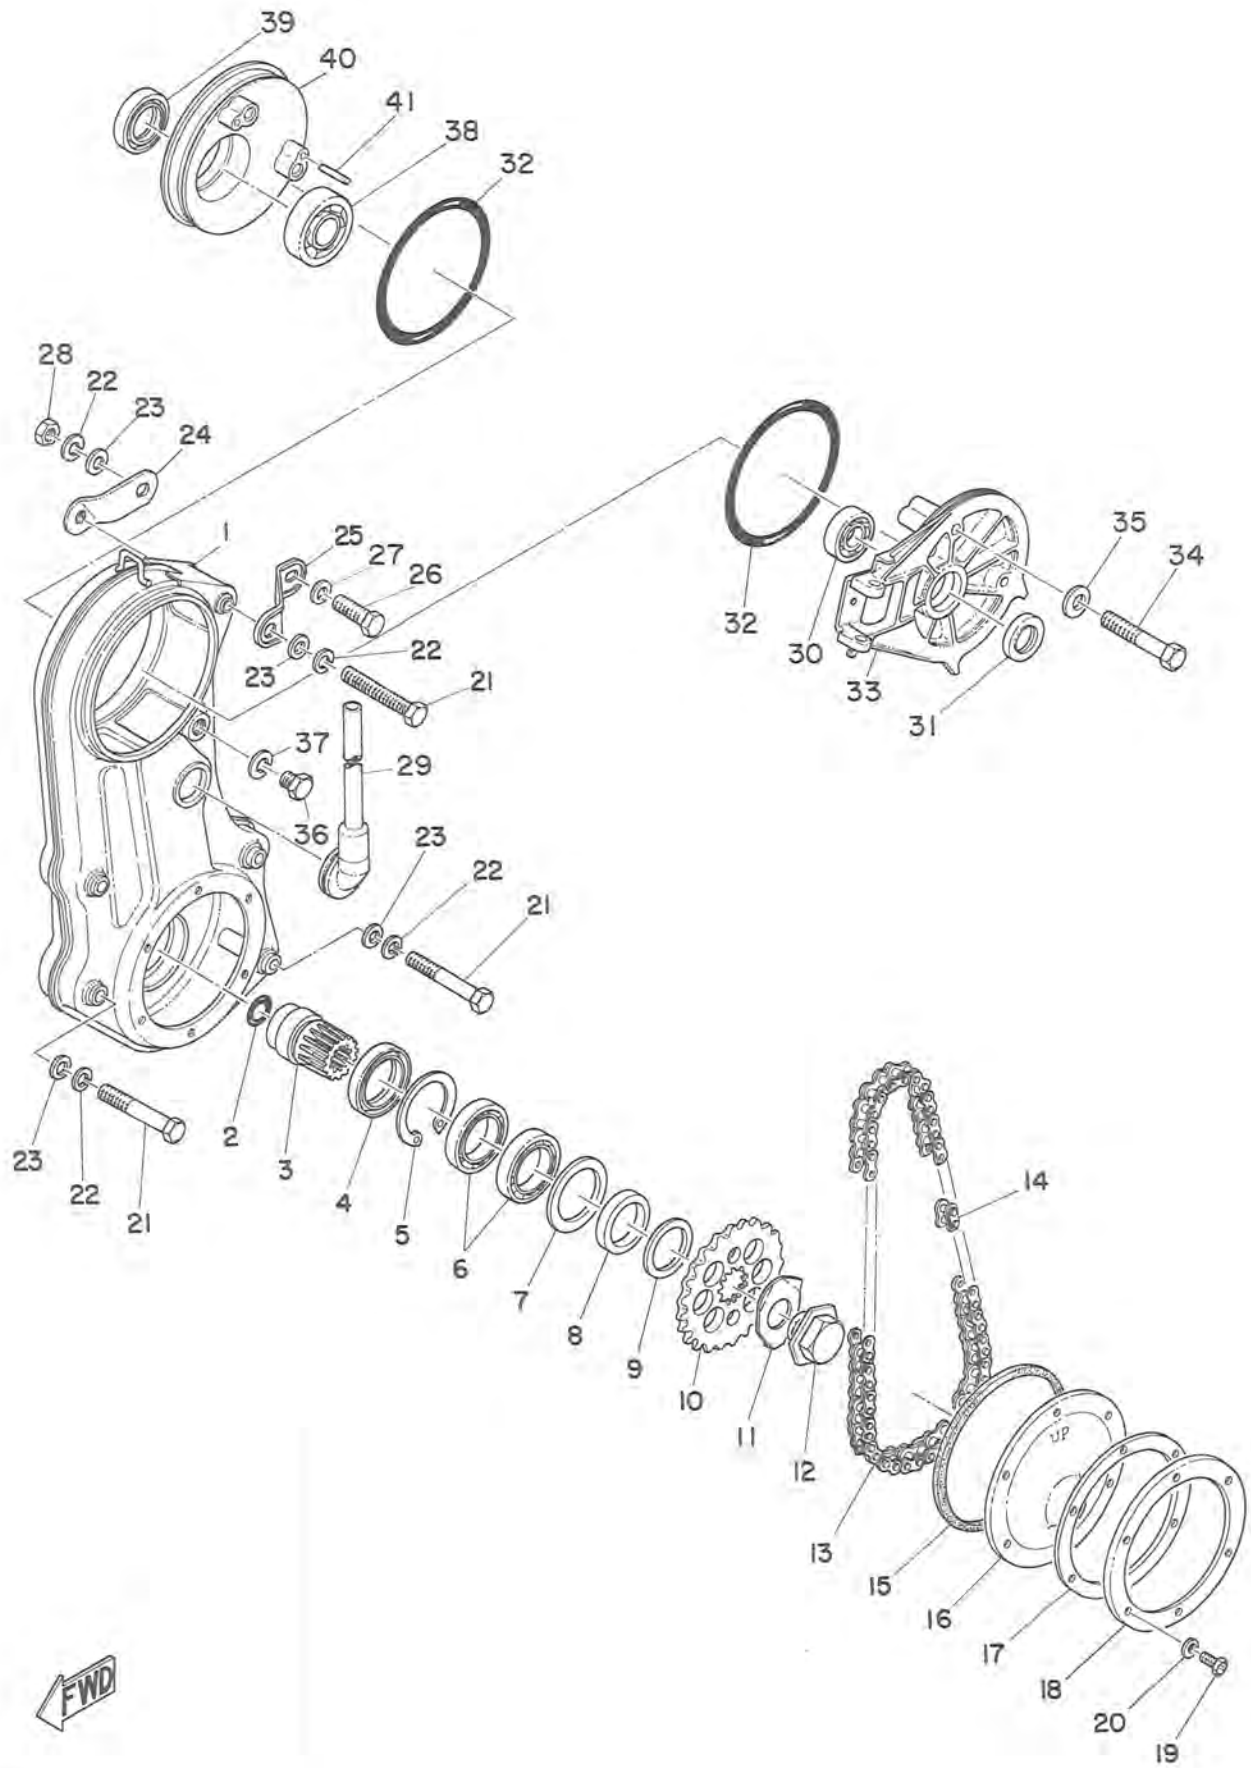

FWD


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
14- 1	844-47541-00	HOUSING, chain	1		
2	93210-25070	O-RING (3.2-24.5)	1		
3	841-47571-00	JOURNAL 1	1		
4	93102-40080	OIL SEAL (SD-40-55-8)	1		
5	93420-55028	CIRCLIP (R-55)	1		
6	93306-90701	BEARING (B-6907)	2		
7	90560-35050	SPACER (835-47573-00)	1		
8	90387-35206	COLLAR (841-47549-00)	1		
9	90201-35300	WASHER, plate	1		
10	812-47548-40	SPROCKET, chain driven (25T)	} U.R. 1		STD
	812-47548-50	SPROCKET, chain driven (24T)			
	812-47548-60	SPROCKET, chain driven (23T)			
11	90215-24029	WASHER (841-47554-00)	1		
12	90109-24407	BOLT	1		
13	94510-40066	CHAIN (RS40V 66L)	} U.R. 1		STD
	94510-40068	CHAIN (RS40V 68L)			
14	94610-40001	. JOINT, chain (RS40V 1L)	1		
15	806-47558-00	RING, rubber housing	1		
16	821-47543-00	CAP, housing	1		
17	821-47544-00	GASKET	1		
18	821-47591-00	PLATE	1		
19	90143-05004	BOLT (806-47542-00)	6		
20	90210-05005	WASHER (802-47545-00)	6		
21	97321-08070	BOLT	5		
22	92901-08100	WASHER, spring	7		
23	92901-08600	WASHER, plain	5		
24	841-47565-00	STAY 1	1		
25	841-47566-00	STAY 2	1		
26	97321-08035	BOLT	1		
27	92901-08600	WASHER, plain	1		
28	95301-08600	NUT	1		
29	861-47559-00	CAP 2	1		

 Fig. 14 TRACK DRIVE

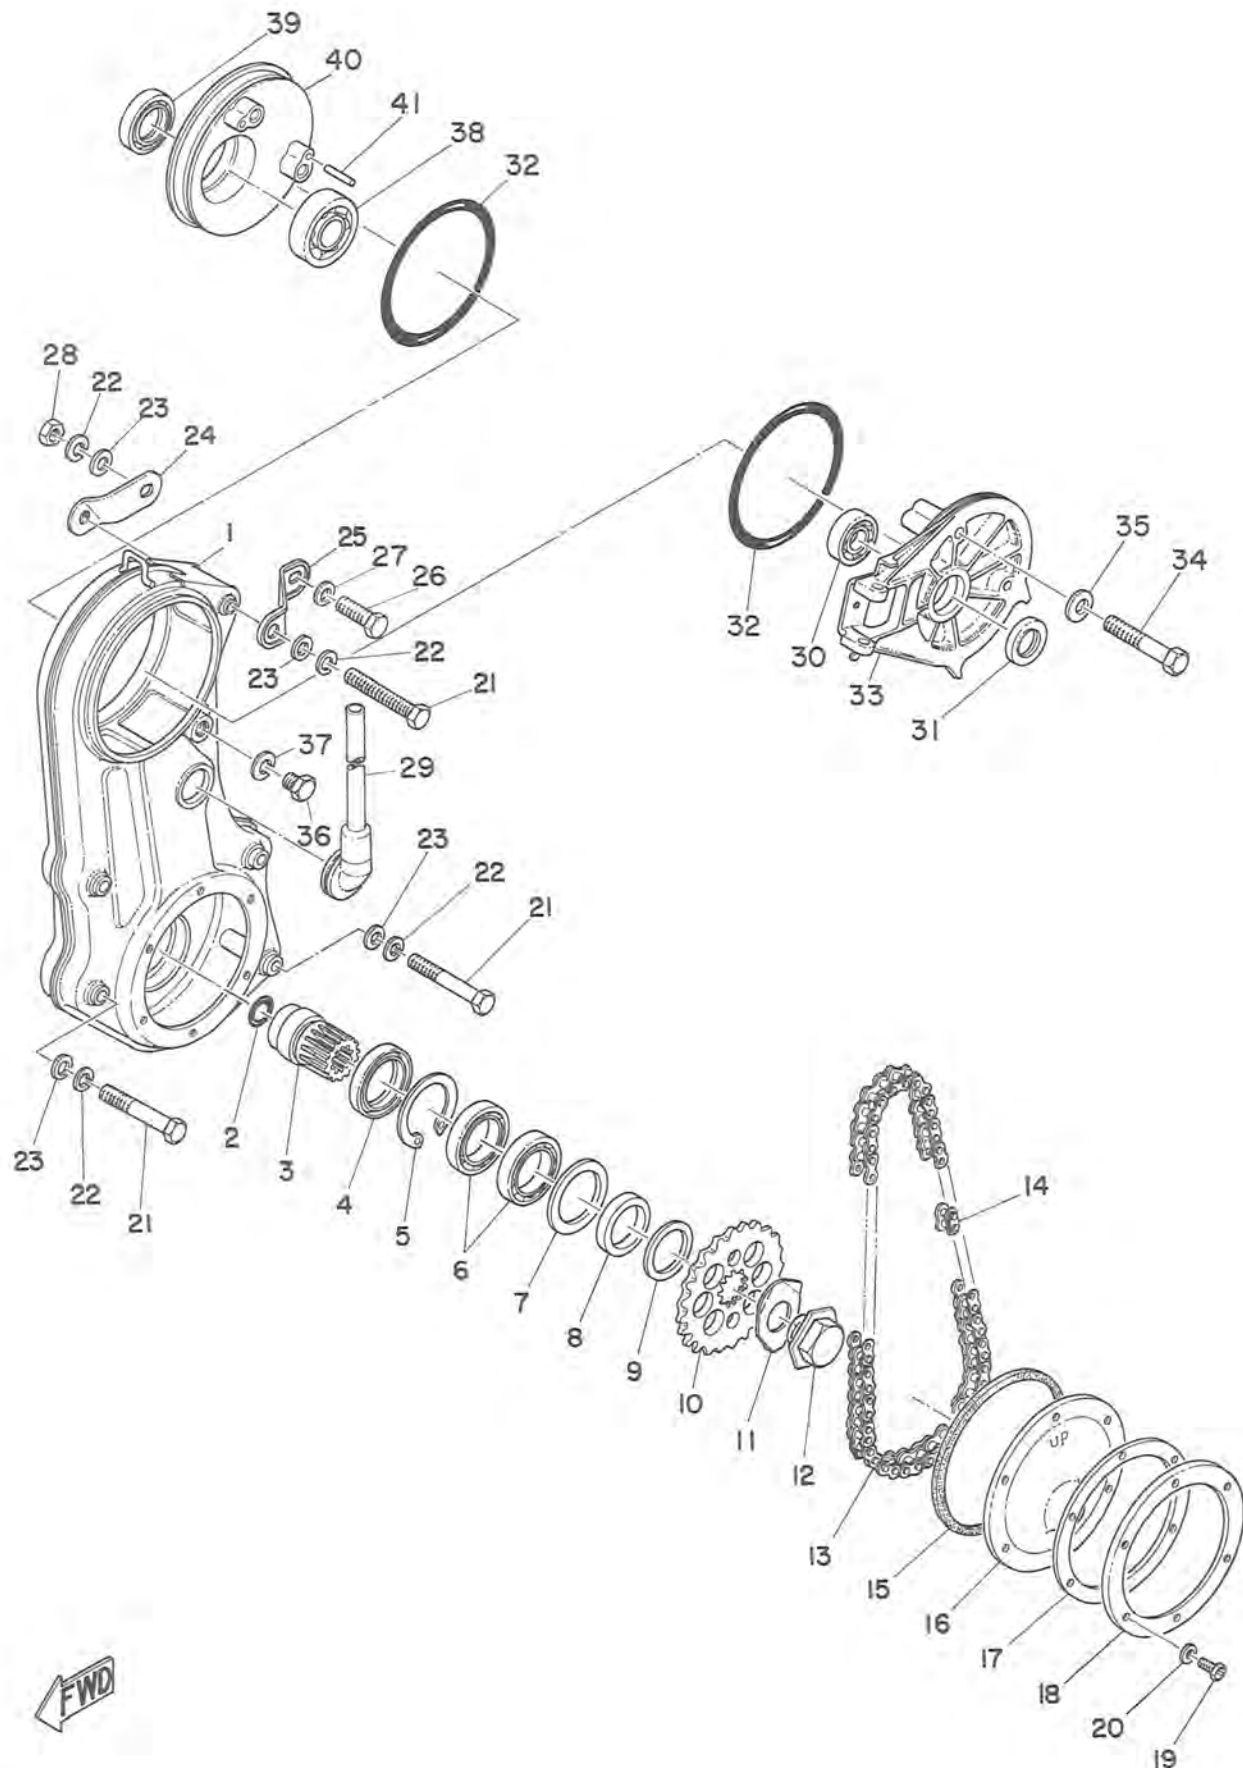


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
14-30	93306-20302	BEARING (B6203 C3)	1		
31	93102-22087	OIL SEAL (SD-22-32-5)	1		
32	93211-13109	O-RING (3.1-113)	2		
33	818-47561-00	HOUSING, secondary shaft left	1		
34	97301-08060	BOLT	2		
35	90210-08002	WASHER (821-47569-00)	2		
36	97301-08010	BOLT	1		
37	92901-08100	WASHER, spring	1		
38	93306-30407	BEARING (B304 C3)	1		
39	93102-30083	OIL SEAL (SD-30-47.7)	1		
40	810-47562-00	HOUSING, secondary shaft right	1		
41	93604-18058	PIN, dowel (4-17.8)	2		

 Fig. 15 BRAKE

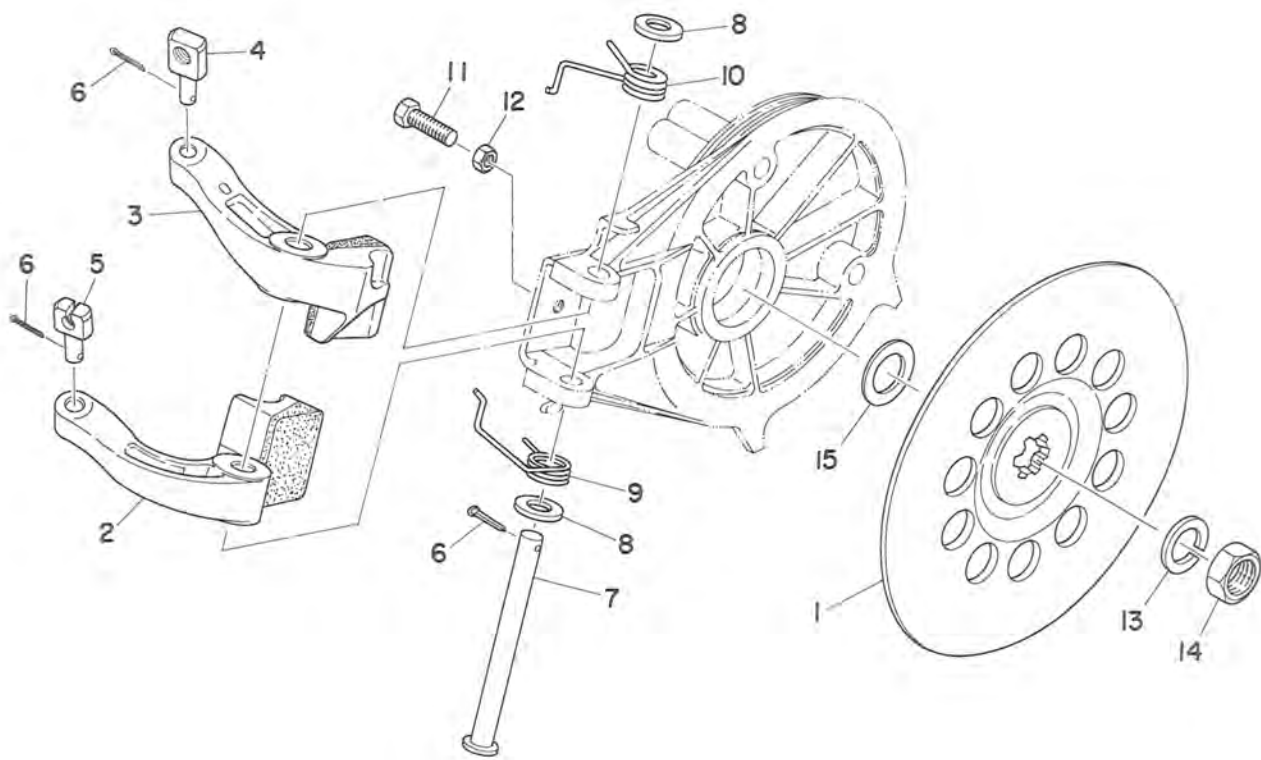


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
15- 1	810-25711-00	DISK, brake	1		
2	821-25730-00	CALIPER BODY COMP. 1	1		
3	821-25740-00	CALIPER BODY COMP. 2	1		
4	90249-06012	PIN (810-25734-00)	1		
5	90249-06009	PIN (810-25744-00)	1		
6	91401-20012	PIN, cotter	3		
7	90240-08023	PIN (838-25754-00)	1		
8	92901-08600	WASHER, plain	2		
9	90508-26270	SPRING, return 1	1		
10	90508-26271	SPRING, return 2	1		
11	97301-05020	BOLT	1		
12	95301-05700	NUT	1		
13	92901-12100	WASHER, spring	1		
14	95301-12700	NUT	1		
15	150-17417-00-02	SHIM (17.2 25-0.2)	}	U.R.	
	150-17417-00-03	SHIM (17.2 25-0.3)			
	150-17417-00-05	SHIM (17.2 25-0.5)			

 Fig. 16 FRONT AXLE

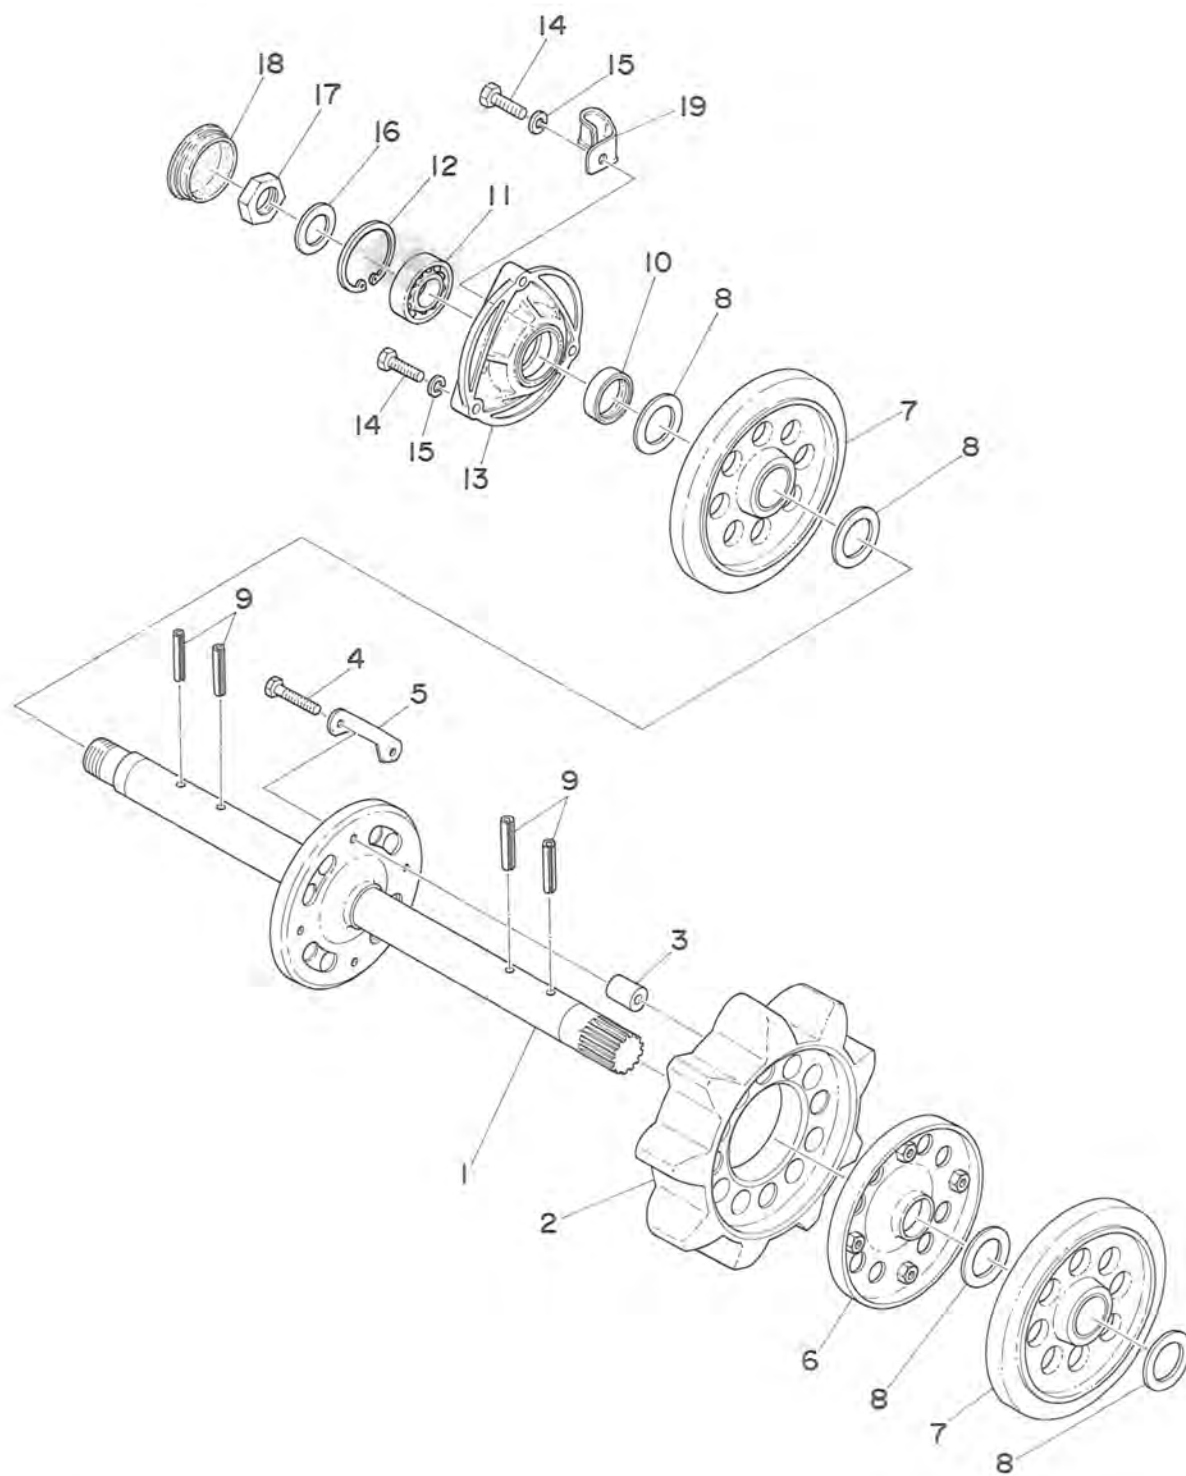


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
16- 1	821-47510-00	FRONT AXLE COMP.	1		
2	810-47531-00	WHEEL, sprocket 1	1		
3	90387-06021	COLLAR (810-47526-00)	4		
4	97321-06035	BOLT	4		
5	90215-06100	WASHER (810-47517-00)	2		
6	810-47522-00	RIM, sprocket wheel 2	1		
7	810-47530-00	GUIDE WHEEL COMP.	2		
8	90201-25499	WASHER (821-47519-00)	4		
9	91609-60036	PIN, spring	4		
10	93102-25084	OIL SEAL (SD-25-34-7)	1		
11	93306-00412	BEARING (B6004 special)	1		
12	93420-44029	CIRCLIP (R-44)	1		
13	841-47551-00	HOUSING, frong axle	1		
14	97321-08025	BOLT	3		
15	92901-08100	WASHER, spring	3		
16	90208-22001	WASHER (810-47581-00)	1		
17	90170-22094	NUT (821-47579-00)	1		
18	810-47552-00	CAP	1		
19	90465-06011	CLAMP (167-26278-00)	1		

 Fig. 17 REAR AXLE

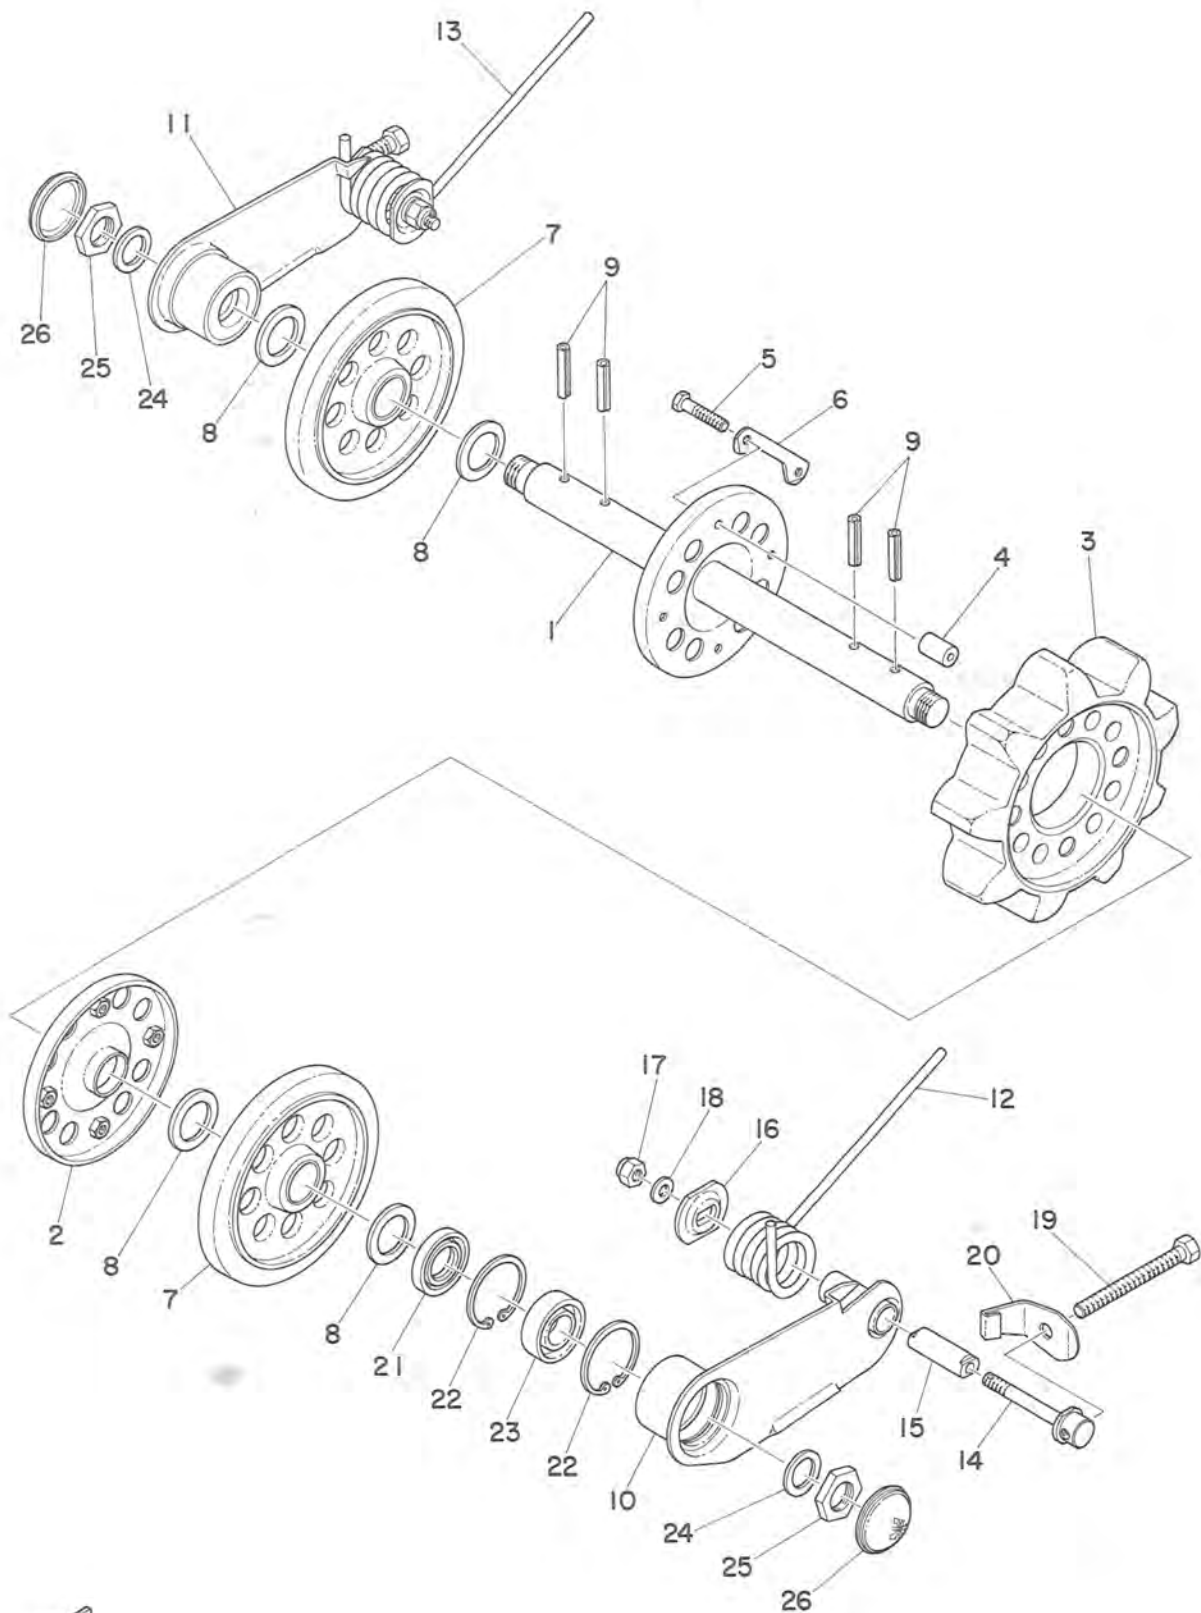

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
17- 1	853-47520-01	REAR AXLE COMP.	1		
2	853-47522-00	RIM, sprocket wheel 2	1		
3	810-47532-00	WHEEL, sprocket 2	1		
4	90387-06021	COLLAR (810-47526-00)	4		
5	97321-06035	BOLT	4		
6	90215-06100	WASHER (810-47517-00)	2		
7	810-47530-00	GUIDE WHEEL COMP.	2		
8	90201-25499	WASHER (821-47519-00)	4		
9	91609-60036	PIN, spring	4		
10	853-47361-00	ARM, pivot rear left	1		
11	853-47362-00	ARM, pivot rear right	1		
12	90508-72114	SPRING (812-47363-00)	1		Painted White
13	90508-72084	SPRING (812-47364-00)	1		Painted White
14	90149-08021	SCREW (853-47367-01)	2		
15	853-47369-00	COLLAR	2		
16	90209-22027	WASHER (853-47374-00)	2		
17	95601-08100	NUT	2		
18	90201-08326	WASHER	2		
19	90106-08050	SCREW, track adjust	2		
20	90215-08069	WASHER (810-47378-00)	2		
21	93102-25110	OIL SEAL (SD-25-42-6)	2		
22	93450-42020	CIRCLIP (42 ϕ special)	4		
23	93306-00401	BEARING	2		
24	90208-20008	WASHER (853-47581-00)	2		
25	90170-20102	NUT	2		
26	818-47317-01	CAP, wheel	2		

 Fig. 18 TRACK · SUSPENSION WHEEL

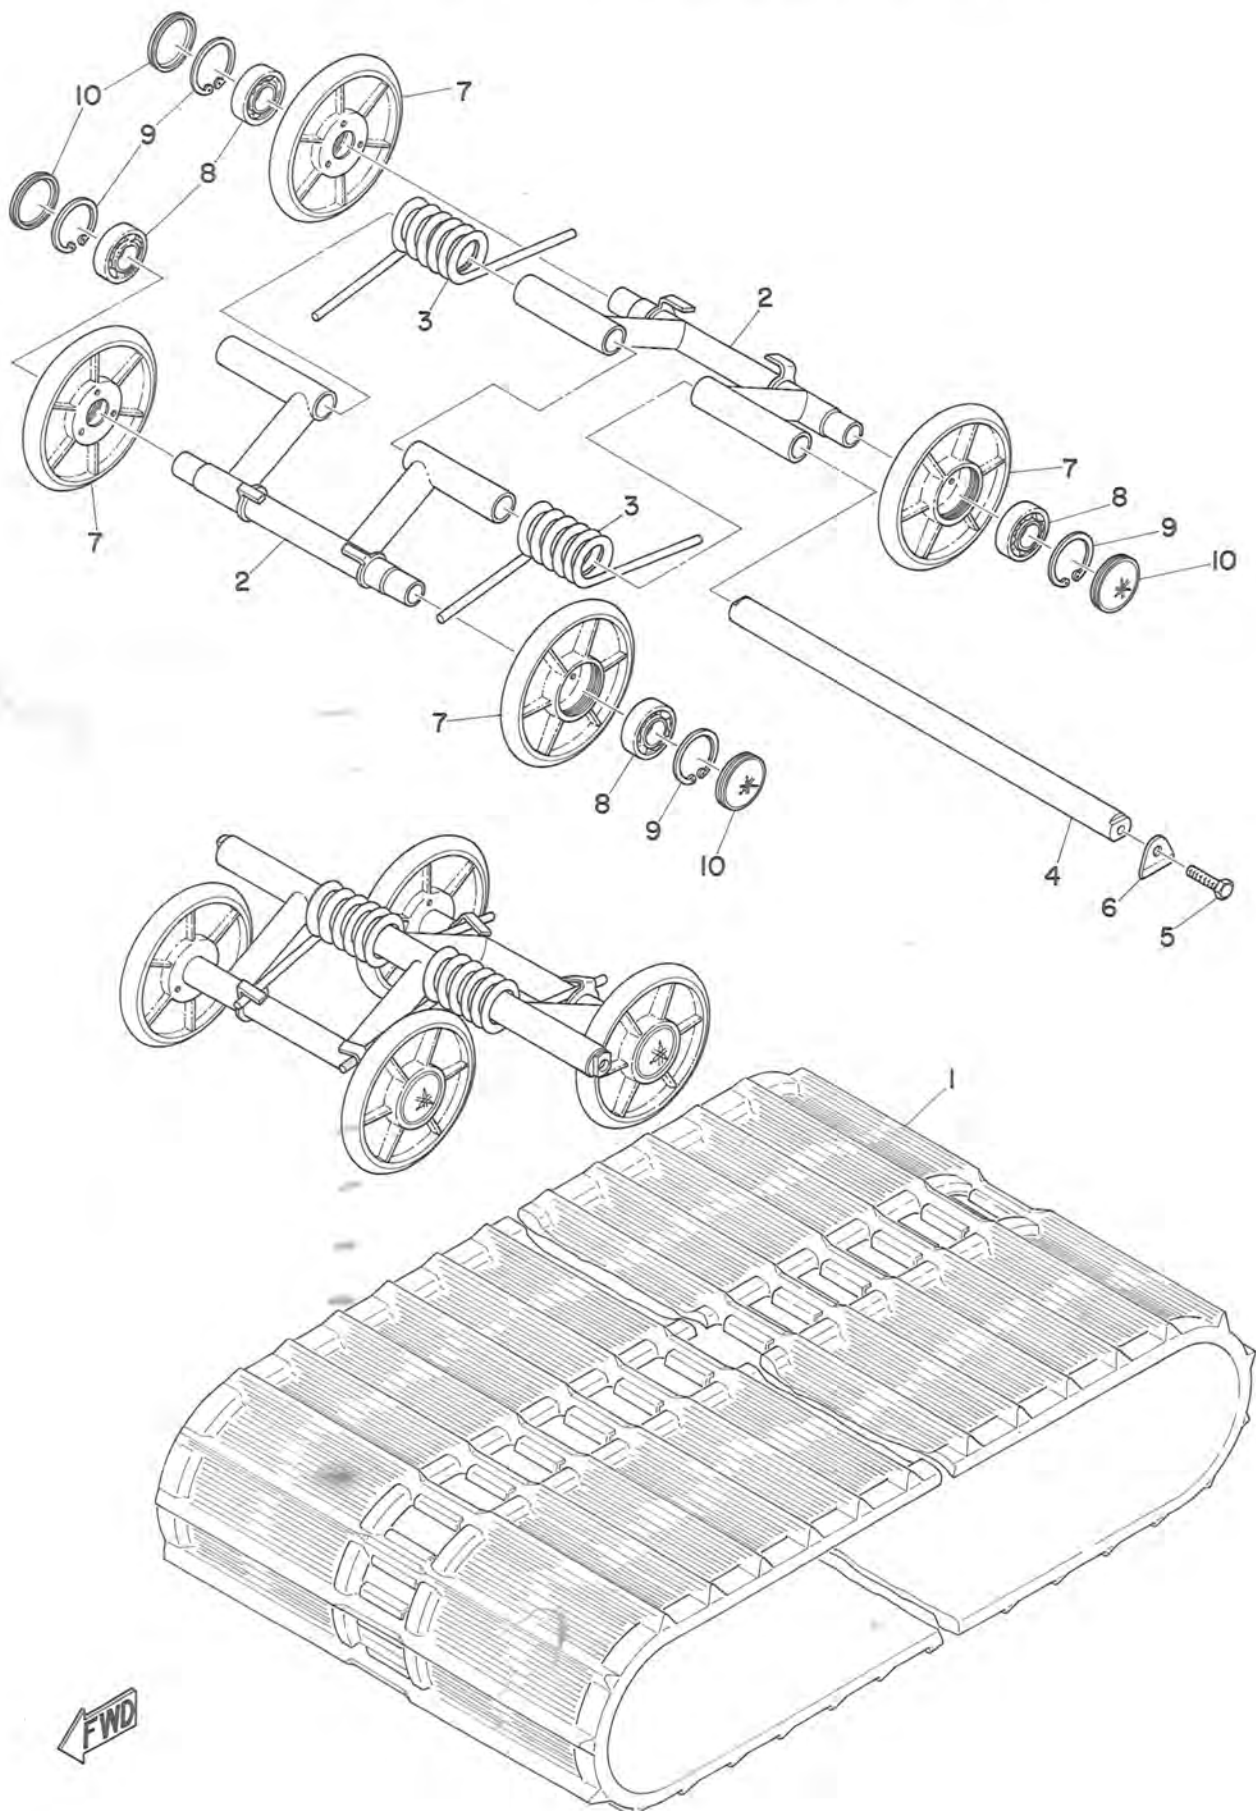

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
18- 1	846-47110-01	TRACK ASS'Y	1		
2	806-47331-00	ARM, pivot	6		
3	90508-65089	SPRING (810-47335-00)	2		Rear
	90508-70100	SPRING (818-47335-00)	4		Front & Center Painted Blue
4	802-47337-00	SHAFT, pivot ⁹⁵	3		
5	97321-08025	BOLT	6		
6	90215-09033	WASHER (806-47347-00)	6		
7	885-47320-00	WHEEL, suspension ^{4 1120}	12 —		
8	93306-00416	BEARING (B6004-2RS) ^{5.60}	12 —		
9	93420-42007	CIRCLIP (R-42)	12 —		
10	818-47317-01	CAP, wheel	12 —		


○

○

BODY



 Fig. 19 FRAME

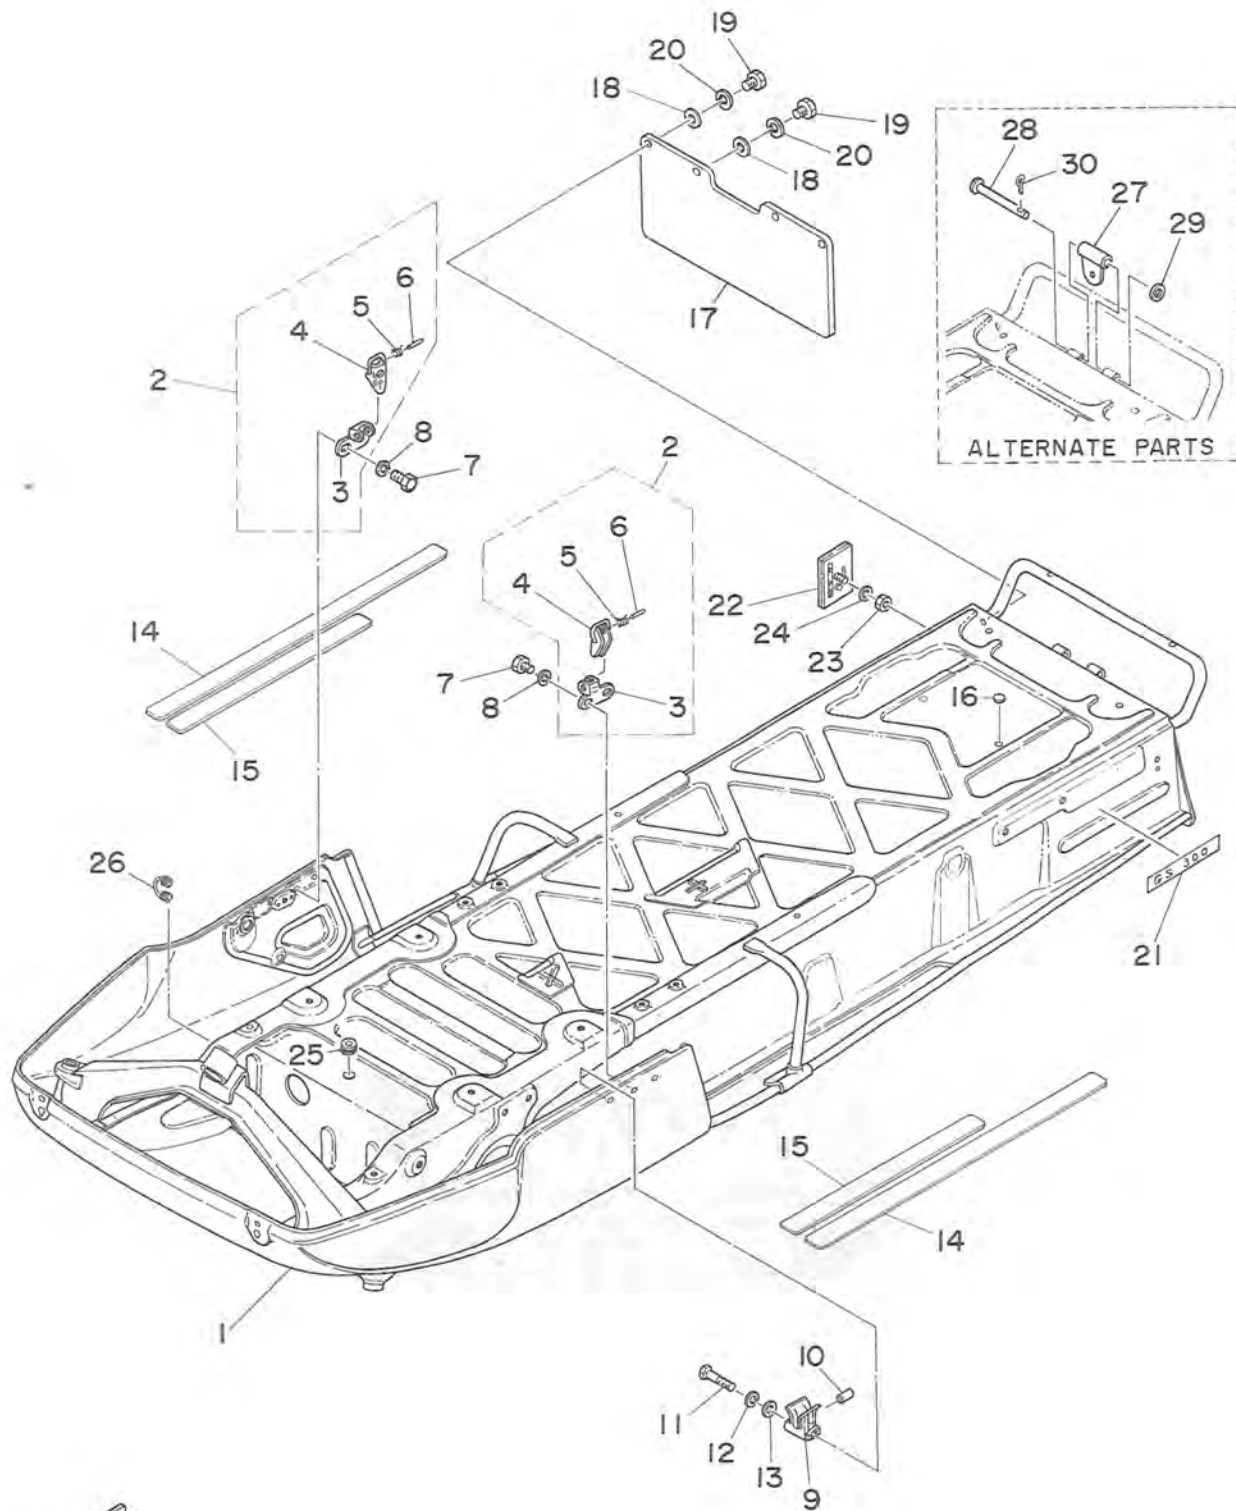


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
19-	1	898-21910-00	FRAME COMP.	1	
	2	806-77170-00	LATCH ASS'Y	2	
	3	806-77172-00	. BODY, latch lower	2	
	4	806-77173-00	. LEVER, latch	2	
	5	90508-10012	. SPRING (214-24758-00)	2	
	6	90249-04068	. PIN (214-24727-00)	2	
	7	97301-05015	BOLT	4	
	8	92901-05100	WASHER, spring	4	
	9	90464-09006	CLAMP (841-77137-00)	2	
	10	821-77188-01	STOPPER	2	
	11	97306-06045	BOLT	2	
	12	92906-06100	WASHER, spring	2	
	13	92906-06600	WASHER, plate	2	
	14	878-27413-00	COVER, footrest 1	2	
	15	878-27423-00	COVER, footrest 2	2	
	16	867-21969-00	COVER	2	
	17	865-77595-00	FLAP	1	
	18	90201-06070	WASHER (136-28323-00)	4	
	19	97301-06015	BOLT	4	
	20	92901-06100	WASHER, spring	4	
	21	898-77354-00	EMBLEM 4	2	
	22	821-85131-00	REFLECTOR 1	2	
	23	90185-06040	NUT U	2	
	24	92901-06200	WASHER, plain	2	
	25	810-77716-00	ORNAMENT, instrument panel 2	1	
	26	841-82591-00	BAND	1	

ALTERNATE PARTS


27	802-77591-00	BRACKET, hitch 1	1	
28	91701-08102	PIN, clevis	1	
29	92901-08600	WASHER, plate	1	
30	91401-25012	PIN, cotter	1	

 Fig. 20 SHROUD

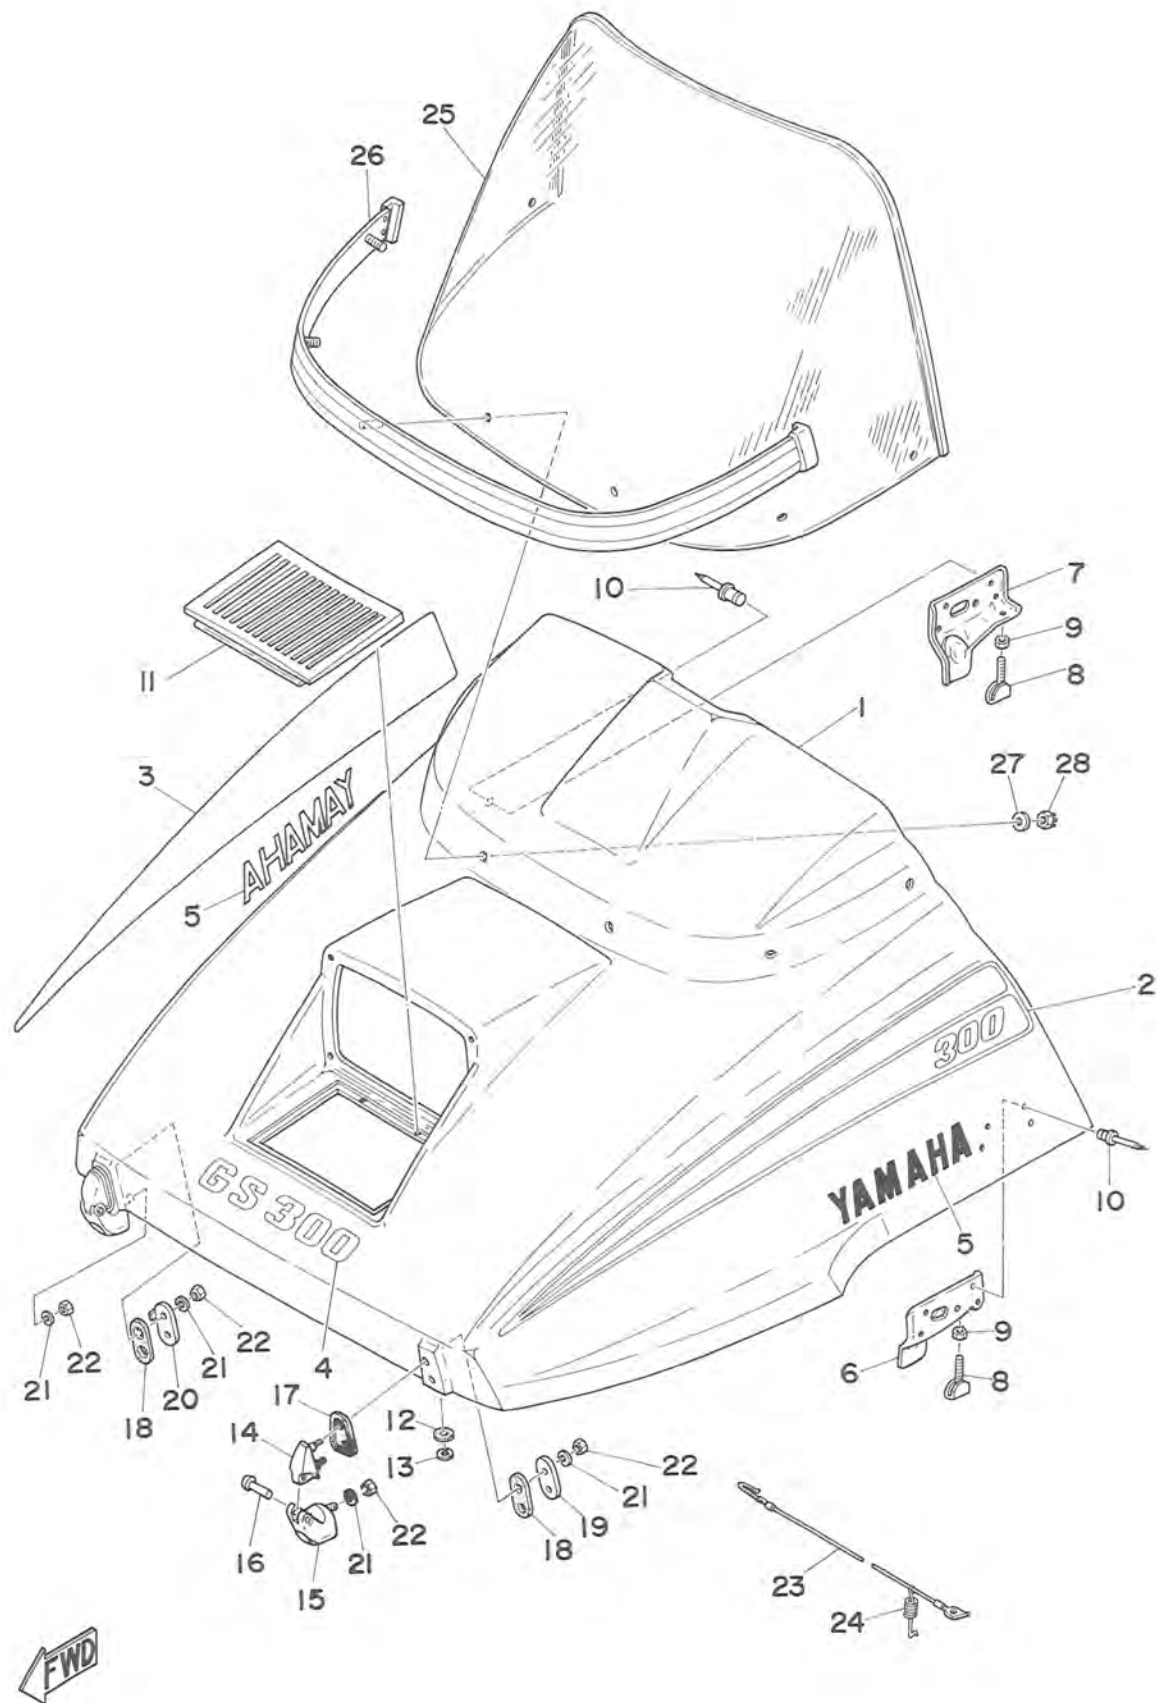


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
20- 1	853-77111-00	SHROUD	1		
2	898-77163-00	ORNAMENT, shroud 1	1		
3	898-77164-00	ORNAMENT, shroud 2	1		
4	898-77356-00	EMBLEM 6	1		
5	838-77357-00	EMBLEM 7	2		
6	841-77136-00	CLAMP 1	1		
7	841-77138-00	CLAMP 2	1		
8	878-77171-00	BODY, latch 1	2		
9	95301-06600	NUT, spring	2		
10	90267-40004	RIVET (802-77155-00)	8		
11	853-77131-00	LOUVER 1	1		
12	838-77143-00	DAMPER, emblem	2		
13	90183-05004	NUT (838-77144-00)	2		
14	841-77145-00	HINGE 1	2		
15	841-77147-00	HINGE 2	2		
16	90243-05003	PIN (841-77157-00)	2		
17	841-77199-00	DAMPER 2	2		
18	841-77198-00	DAMPER 1	2		
19	841-77153-00	PLATE, back up 1	1		
20	841-77154-00	PLATE, back up 2	1		
21	92901-06100	WASHER, spring	6		
22	95301-06600	NUT	6		
23	861-77118-00	STOPPER, shroud	1		
24	838-77159-00	CLAMP, rod	1		
25	898-77210-00	WIND SHIELD COMP.	1		
26	898-77220-00	LOWER TRIM ASS'Y	1		
27	90201-05036	WASHER (838-77218-00)	5		
28	95601-05100	NUT U	6		

 Fig. 21 ENGINE BRACKET

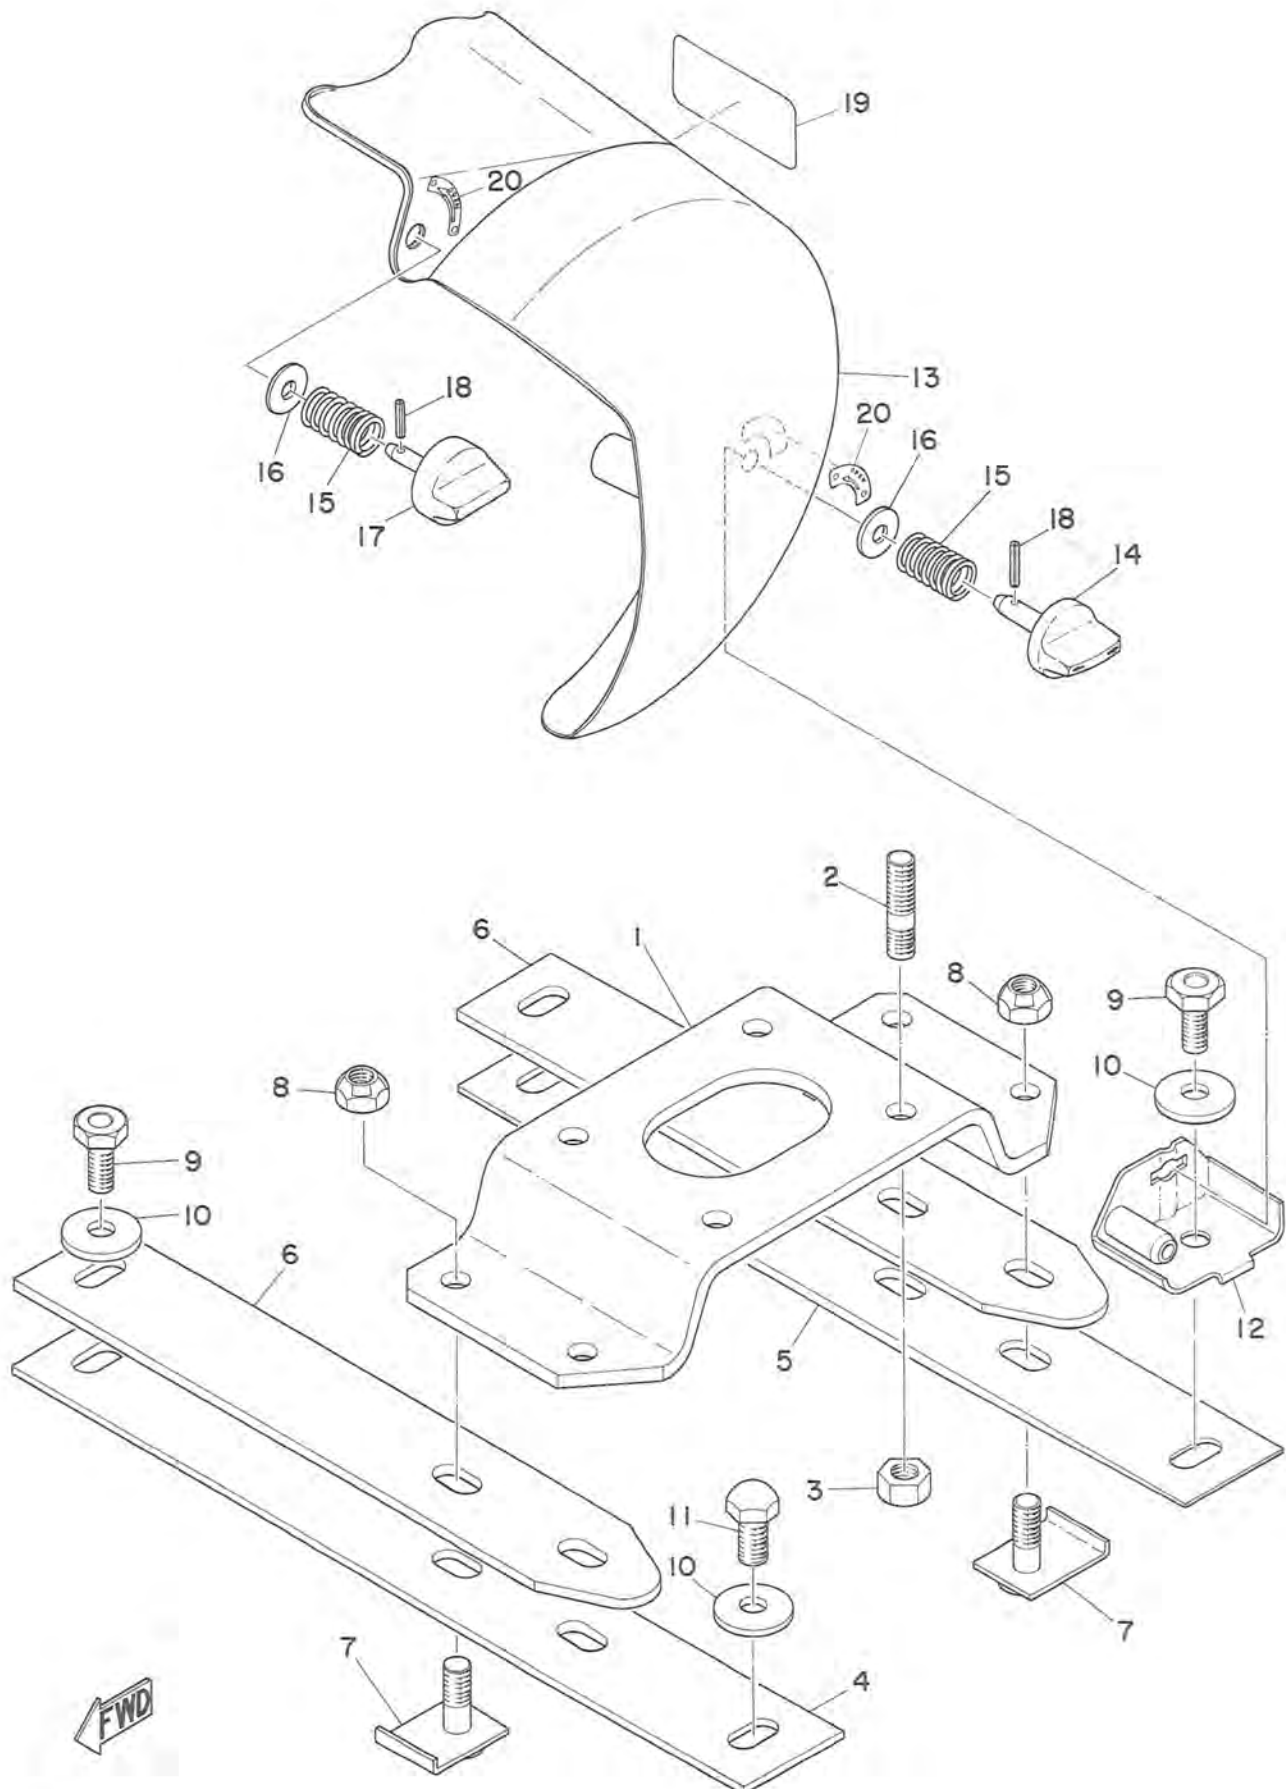

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
21-	1	839-21411-01	BRACKET, engine upper	1	
	2	90116-10084	BOLT, stud (812-15192-00)	4	
	3	90185-10030	NUT (838-21494-00)	4	
	4	839-21419-01	BRACKET, engine lower front	1	
	5	839-21429-01	BRACKET, engine lower rear	1	
	6	839-21489-00	BRACKET, engine lower right	2	
	7	839-21482-00	BOLT	4	
	8	90185-10030	NUT (838-21494-00)	4	
	9	90101-10056	BOLT (823-21481-00)	3	
	10	90208-10013	WASHER (823-21492-00)	4	
	11	90106-10015	BOLT (826-21482-00)	1	
	12	844-77315-00	BRACKET, guard drive	1	
	13	844-77311-00	GUARD, drive	1	
	14	829-77324-00	KNOB	1	
	15	90501-16103	SPRING (806-77325-00)	2	
	16	90201-08104	WASHER (156-21757-00)	2	
	17	844-77324-00	KNOB	1	
	18	91609-40018	PIN, spring	2	
	19	829-77365-00	EMBLEM 10	1	
	20	829-77367-00	EMBLEM 12	2	

 
Fig. 22 STEERING GATE

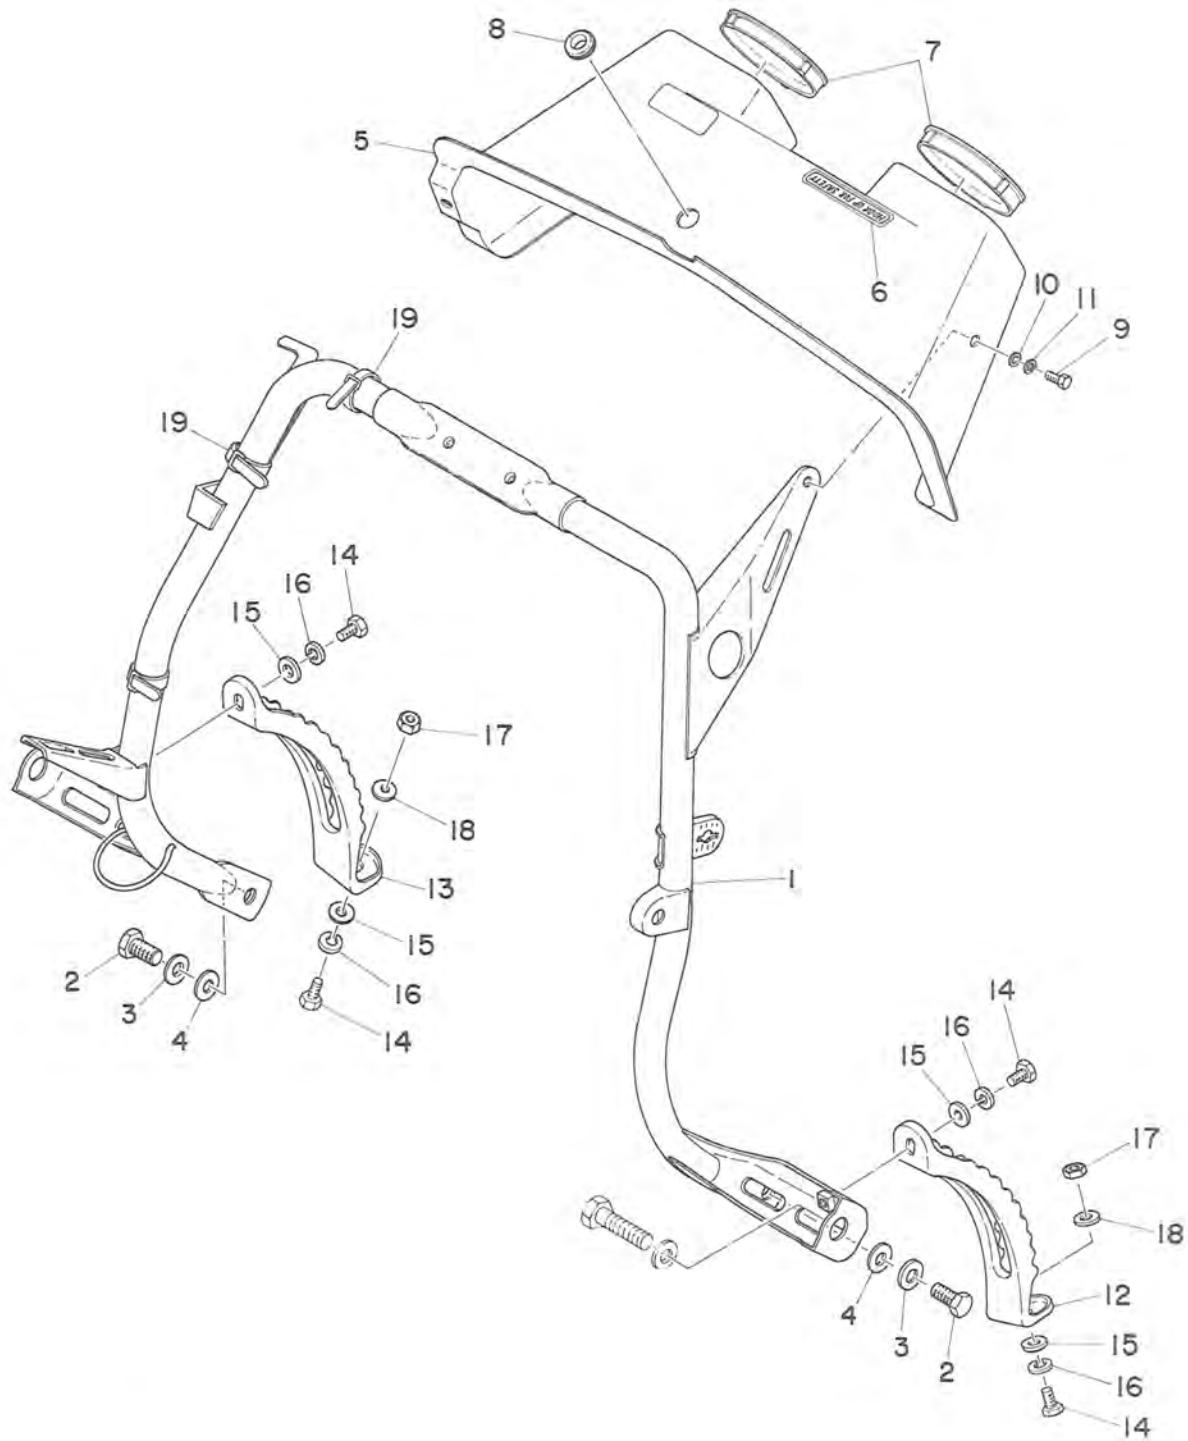

FWD


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
22- 1	867-23870-01	STEERING GATE COMP.	1		
2	97306-08018	BOLT	2		
3	90201-08363	WASHER (802-23737-00)	2		
4	90215-08068	WASHER (861-23895-00)	2		
5	898-77711-00	PANEL, instrument	1		
6	888-77744-00	INDICATOR, switch	1		
7	861-77715-00	ORNAMENT, instrument panel	2		
8	90480-13018	GROMMET (853-77746-00)	1		
9	97306-05012	BOLT	2		
10	92906-05600	WASHER, plate	2		
11	92906-05100	WASHER, spring	2		
12	841-27411-00	FOOTREST 1	1		
13	841-27421-00	FOOTREST 2	1		
14	97301-06015	BOLT	4		
15	92901-06600	WASHER, plate	6		
16	92901-06100	WASHER, spring	4		
17	95301-06600	NUT	2		
18	92901-06600	WASHER, plate	2		
19	90465-05037	CLAMP (810-82591-00)	3		

 Fig. 23 STEERING

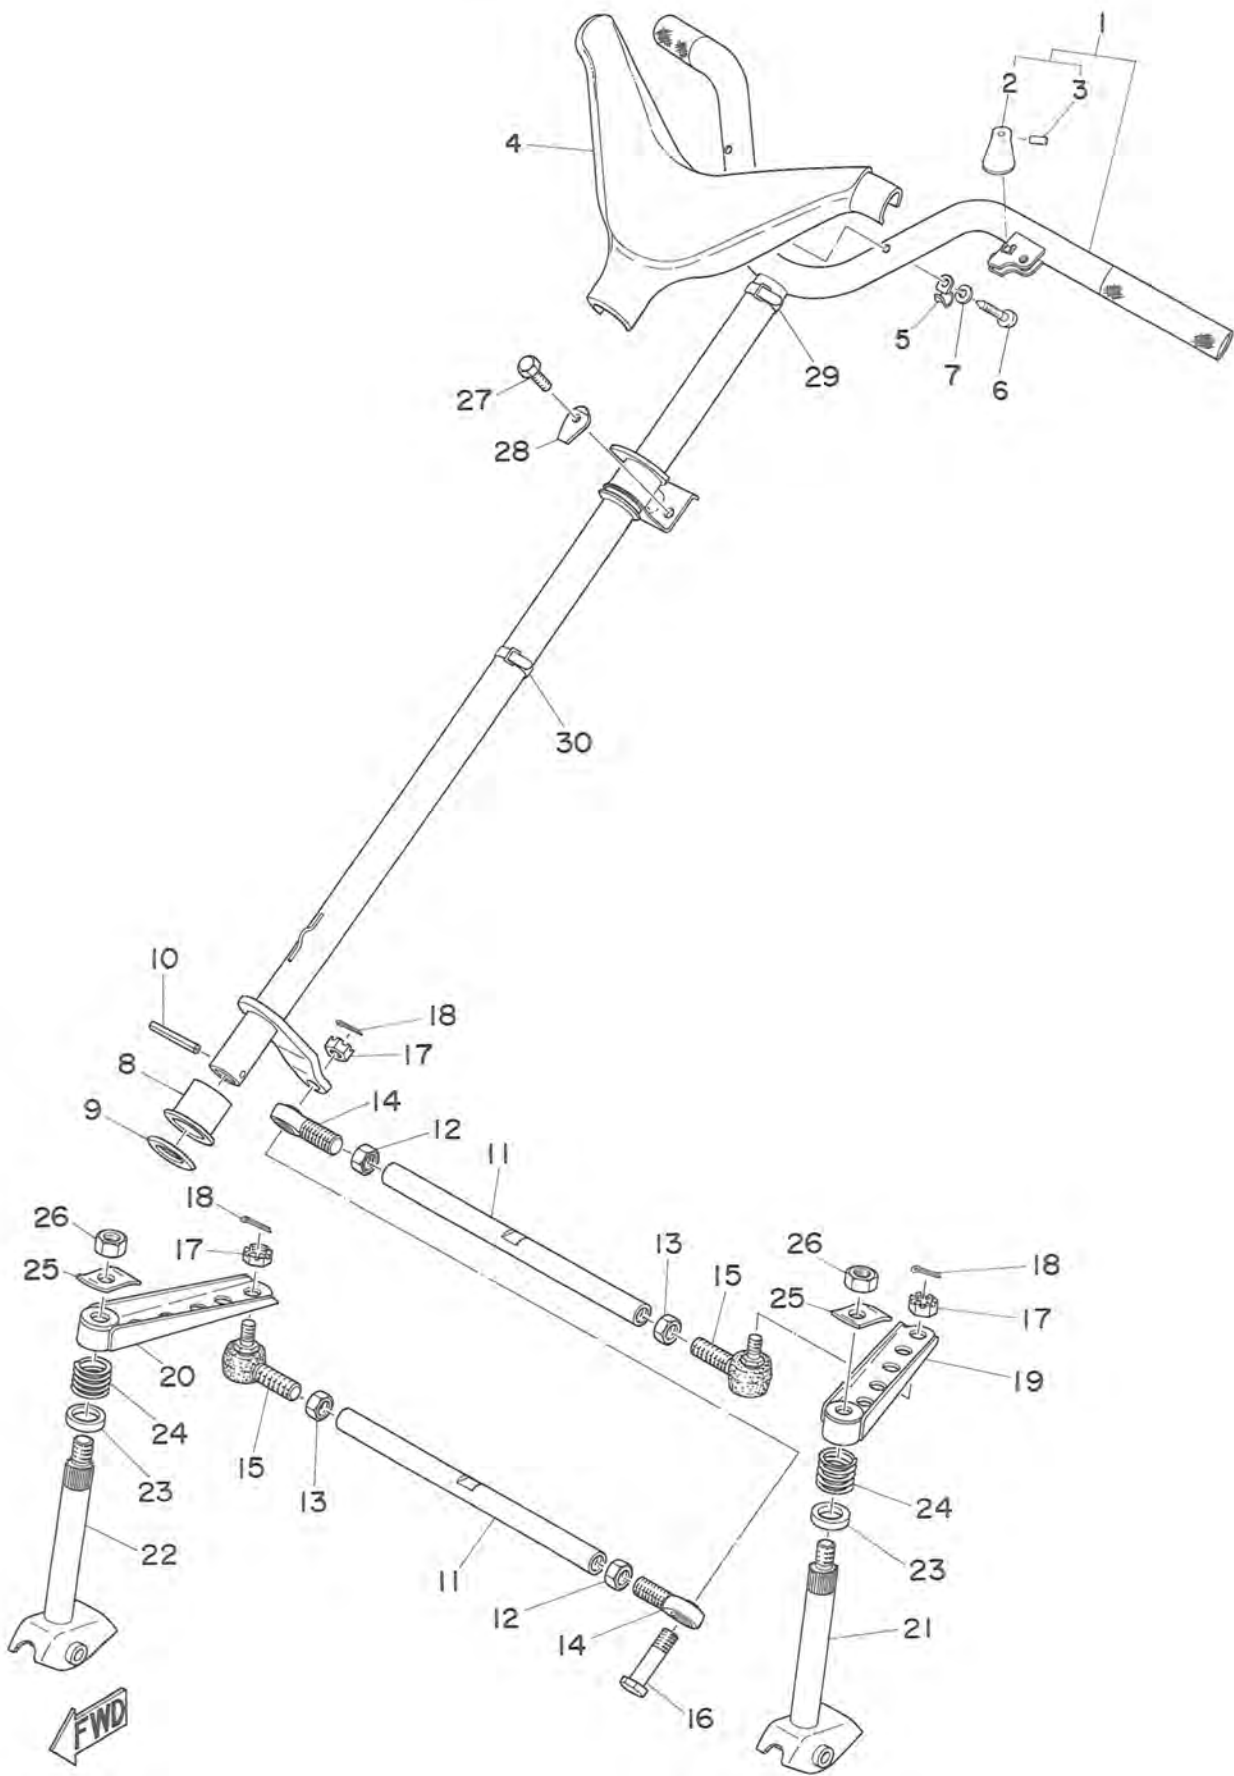

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
23- 1	867-23810-00	STEERING COLUMN ASS'Y	1		
2	803-83965-00	. LEVER, lock	1		
3	90249-04022	. PIN (803-83968-00)	1		
4	863-23815-01	PAD, steering column	1		
5	90462-08003	CLAMP	2		
6	98501-05035	SCREW, panhead	2		
7	92901-05100	WASHER, spring	2		
8	853-23875-00	BEARING, steering lower	1		
9	841-23812-01	BEARING, steering	1		
10	91609-60045	PIN, spring	1		
11	826-23821-00	ROD, steering relay	2		
12	90170-12055	NUT (821-23833-00)	2		
13	90170-12054	NUT (821-23834-00)	2		
14	861-23841-90	JOINT, universal 1	2		
15	821-23845-90	JOINT, universal 2	2		
16	90109-10408	BOLT	1		
17	95301-10900	NUT	3		
18	91401-25018	PIN, cotter	3		
19	841-23851-01	ARM, outside 1	1		
20	841-23852-01	ARM, outside 2	1		
21	853-23853-01	COLUMN, ski 1	1		
22	853-23854-01	COLUMN, ski 2	1		
23	90560-20037	SPACER (838-23858-00)	2		
24	90501-35154	SPRING (801-23855-00)	2		
25	90215-12037	WASHER (841-23857-00)	2		
26	95302-12600	NUT	2		
27	97321-06020	BOLT	2		
28	90215-06038	WASHER (841-23894-01)	2		
29	90465-05037	CLAMP (810-82591-00)	1		
30	447-82591-00	BAND	1		

 
Fig. 24 SKI

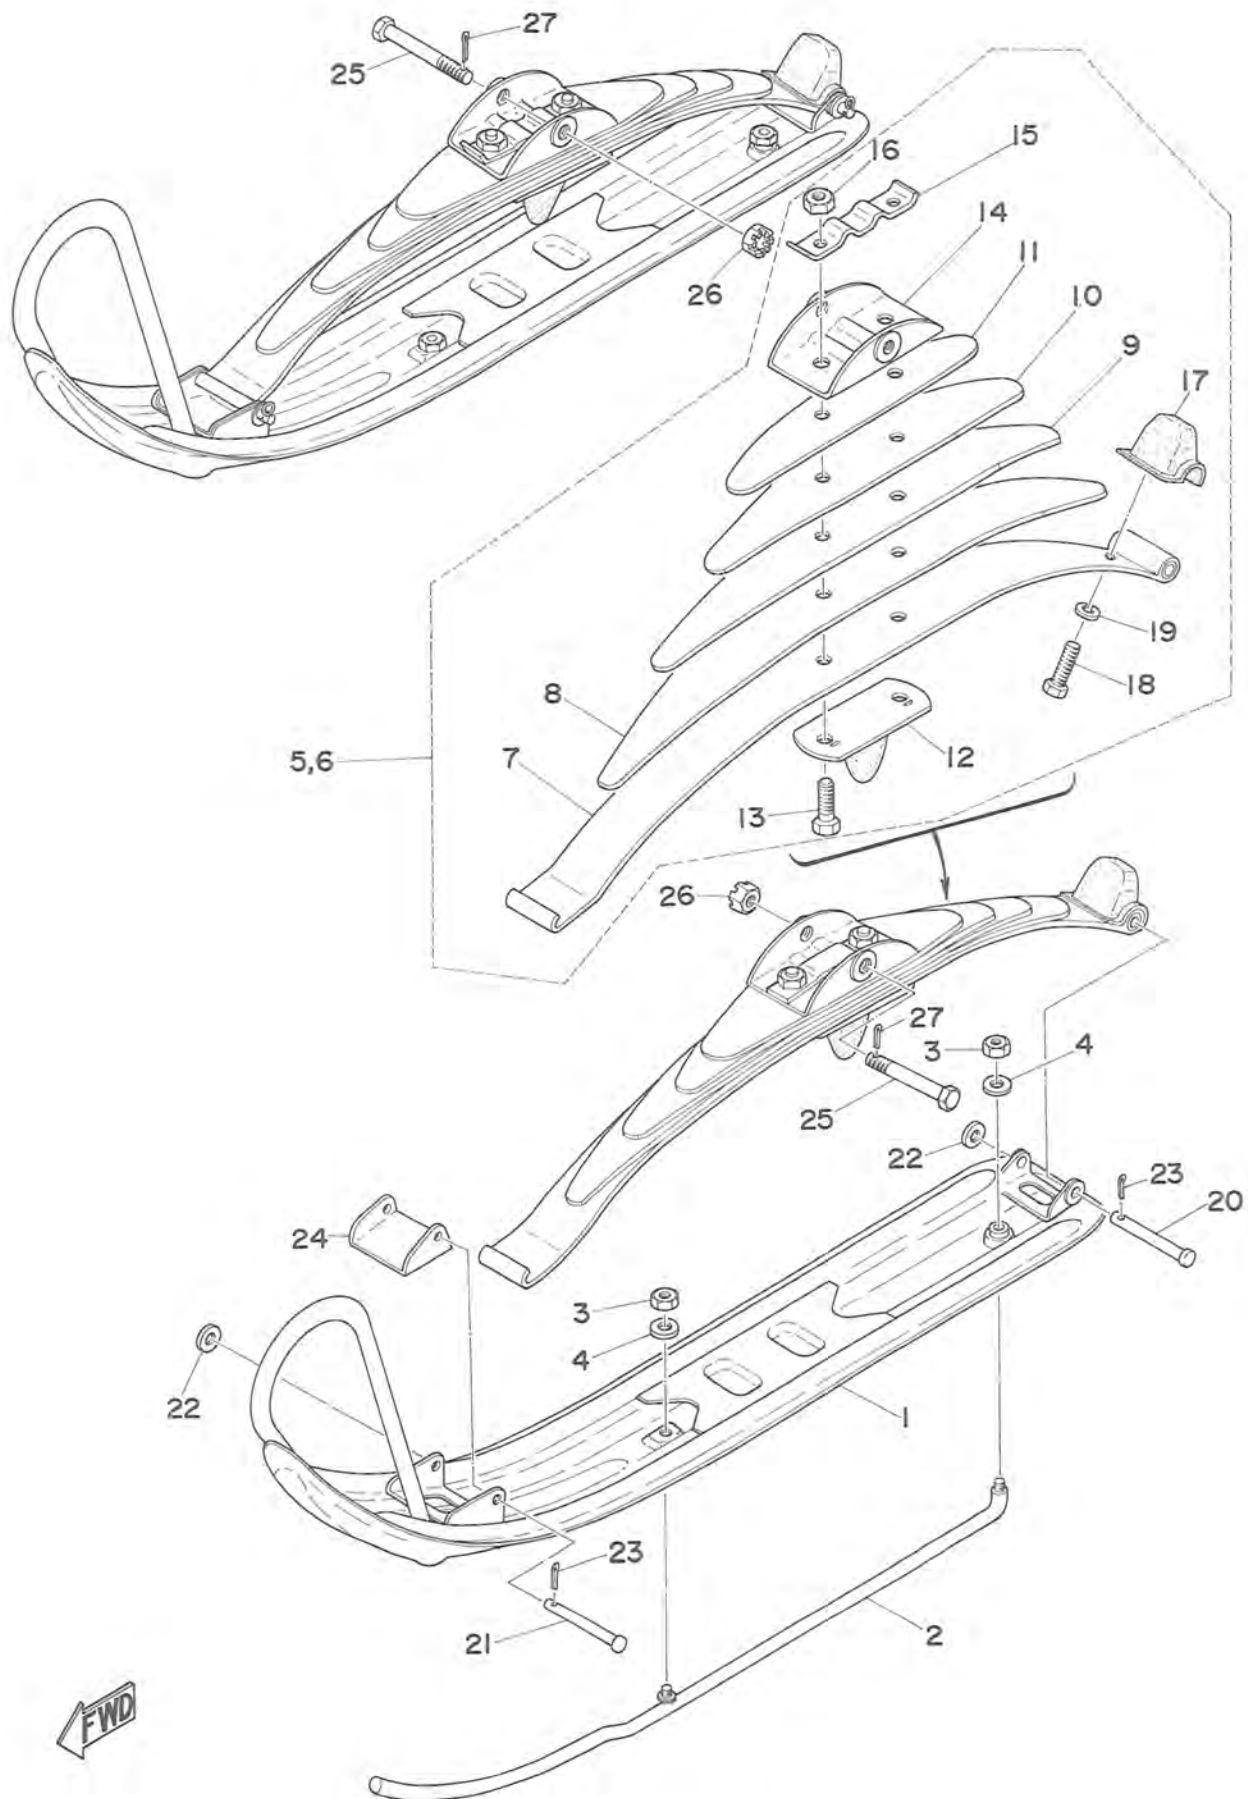

FWD

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
24- 1	898-23710-00	SKI COMP.	2		
2	853-23731-02	RUNNER	2		
3	95601-08100	NUT U	4		
4	92901-08600	WASHER, plain	4		
5	881-23760-01	SPRING ASS'Y 1	1		
6	881-23770-01	SPRING ASS'Y 2	1		
7	865-23761-00	. LEAF 1	2		
8	865-23762-00	. LEAF 2	2		
9	865-23763-00	. LEAF 3	2		
10	865-23764-00	. LEAF 4	2		
11	865-23771-00	. LEAF 5	2		
12	878-23768-00	. SEAT, spring lower	2		
13	90101-10060	. BOLT (805-23769-00)	4		
14	806-23766-00	. SADDLE	2		
15	90209-10121	. WASHER	2		
16	90170-10136	. NUT	4		
17	841-23743-02	. STOPPER	2		
18	90101-06002	. BOLT (841-23753-00)	2		
19	92901-06100	. WASHER, spring	2		
20	90240-08018	PIN (853-23733-01)	2		
21	90240-08019	PIN (853-23734-01)	2		
22	92906-08600	WASHER, plate	4		
23	91401-30020	PIN, cotter	4		
24	853-23735-00	PLATE, wear	2		
25	90102-10023	BOLT	2		
26	95306-10900	NUT, slotted	2		
27	91401-25018	PIN, cotter	2		

 
Fig. 25 GRIP • WIRING

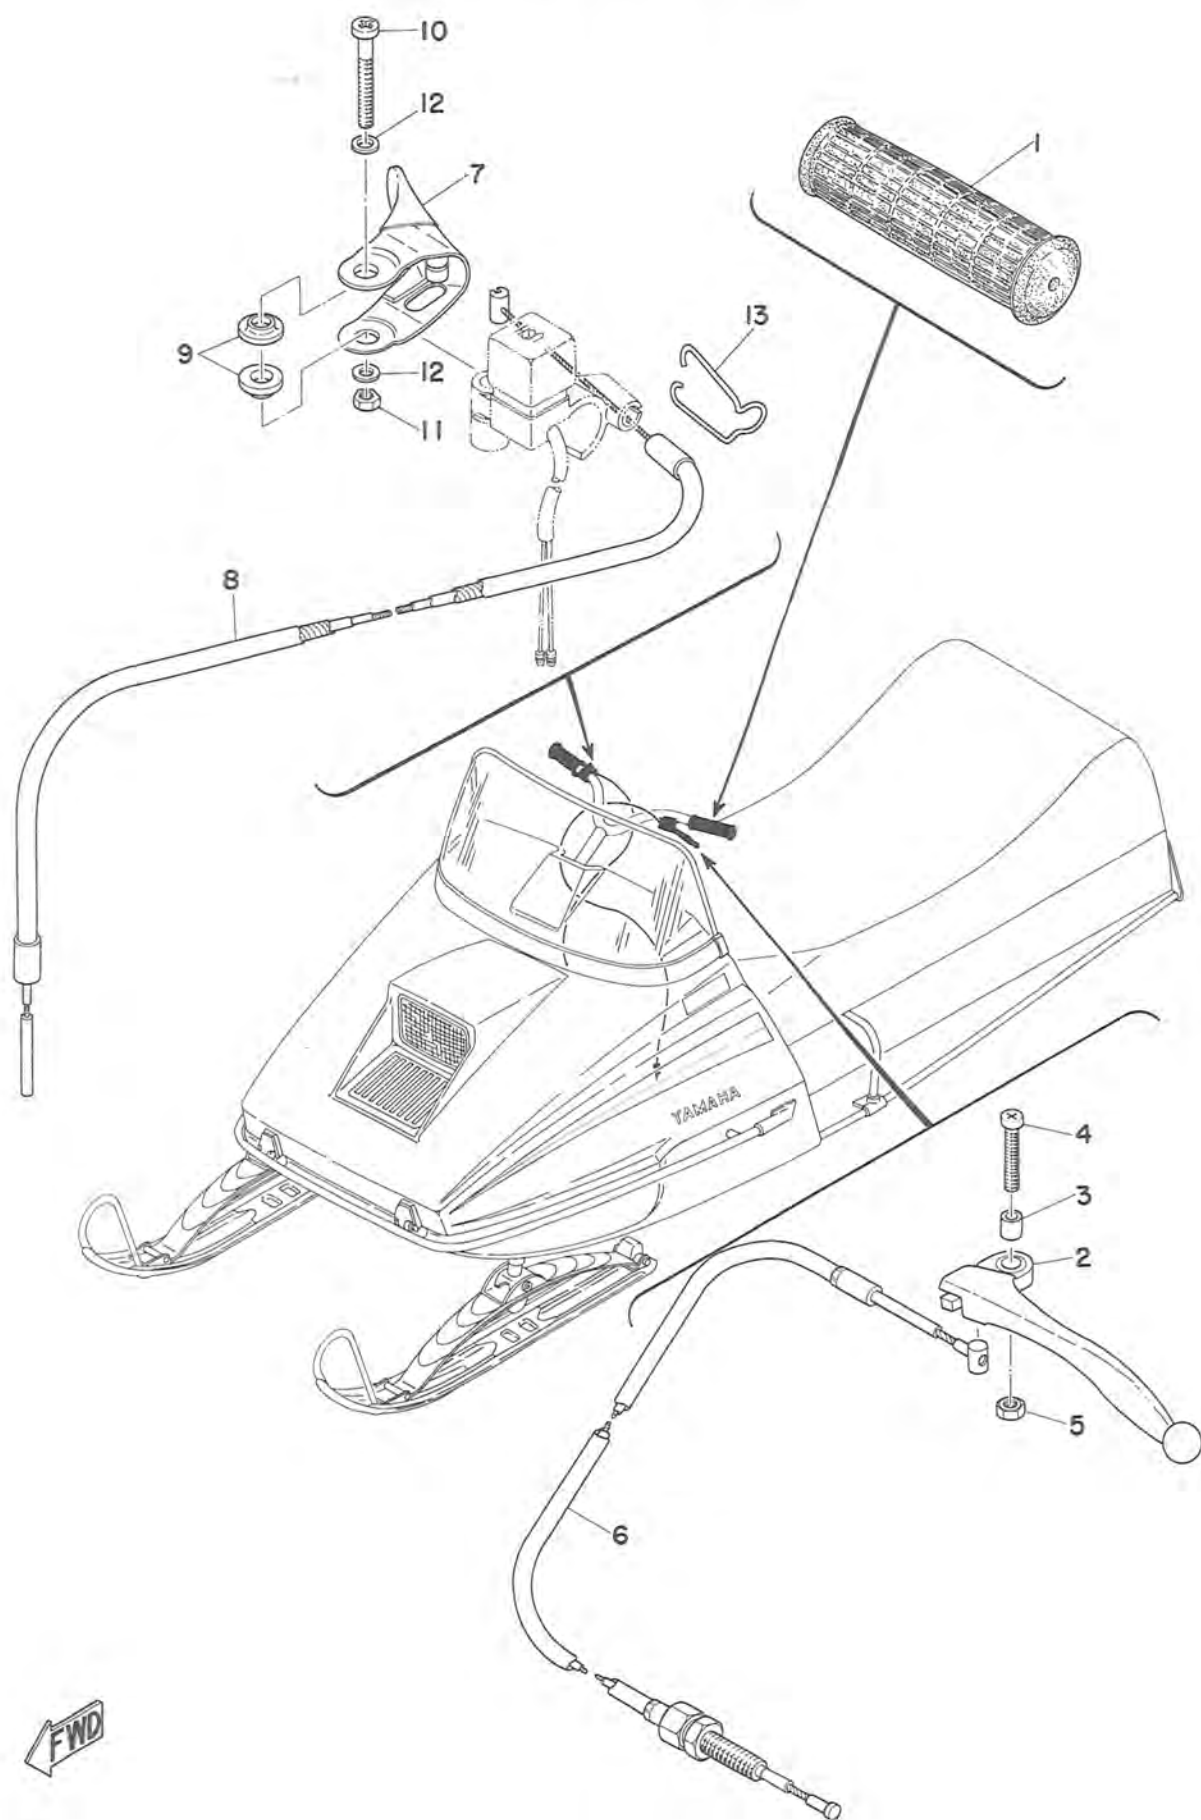

FWD


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
25- 1	801-26241-01	GRIP	2		
2	803-83912-00-38	LEVER, left	1		
3	802-83913-00	COLLAR, lever	1		
4	90157-05007	SCREW (849-83915-00)	1		
5	95601-05100	NUT U	1		
6	861-26340-02	BRAKE WIRE ASS'Y	1		
7	863-42138-01	LEVER, throttle	1		
8	861-26311-01	WIRE, throttle	1		
9	90387-06020	COLLAR (802-83923-00)	2		
10	90157-06004	SCREW (810-83925-00)	1		
11	95601-06100	NUT U	1		
12	92901-06600	WASHER, plate	2		
13	90468-10017	CLIP (821-26391-00)	1		

 Fig. 26 FUEL TANK

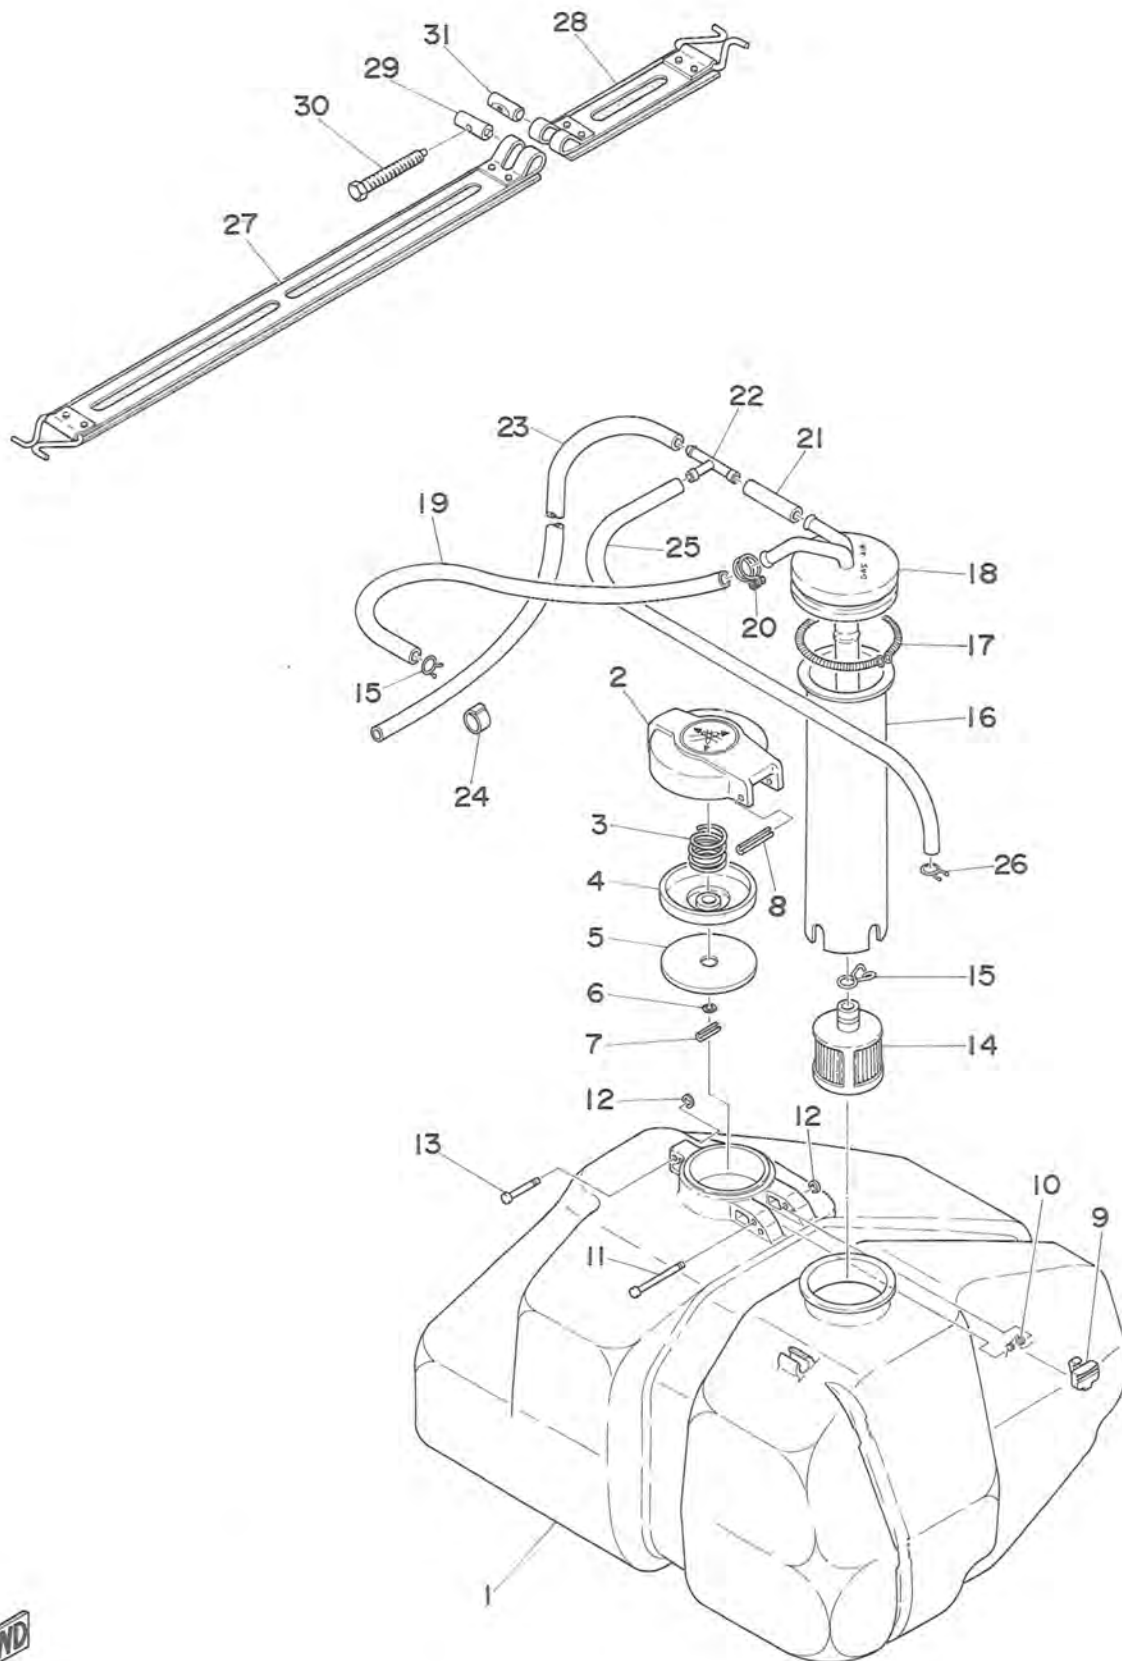


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
26- 1	897-24111-00	TANK, fuel	1		
2	813-24611-01	BODY, cap	1		
3	90501-20130	SPRING (256-24621-00)	1		
4	813-24613-01	DISK, cap	1		
5	90430-28093	GASKET (256-24612-00)	1		
6	93210-04122	O-RING (1.2-4.0)	1		
7	91609-30016	PIN, spring	1		
8	91609-25032	PIN, spring	1		
9	813-24628-00	HOOK	1		
10	90508-08003	SPRING (813-24637-00)	1		
11	90249-03017	PIN (813-24624-00)	1		
12	93430-02001	CIRCLIP (E-2)	2		
13	90249-03016	PIN (813-24623-00)	1		
14	823-24560-00	FILTER ASS'Y	1		
15	90467-11009	CLIP (810-24357-00)	2		
16	829-24336-00	PIPE, suction 2	1		
17	90506-06065	CLIP (813-24358-00)	1		
18	853-24335-00	PIPE, suction 1	1		
19	90446-11026	HOSE (7-200)	1		
20	90460-11002	CLIP, pipe	1		
21	90446-09052	HOSE	1		
22	90413-06001	WAY 3	1		
23	90446-09054	HOSE (5-1530)	1		
24	90468-15020	CLIP	2		
25	90446-09053	HOSE (5-325)	1		
26	90460-09001	CLAMP (806-24539-01)	1		
27	883-24173-00	BAND, tank fitting 1	1		
28	883-24199-00	BAND, tank fitting 2	1		
29	90464-06012	CLAMP (806-24135-00)	1		
30	90149-05006	SCREW (821-24176-00)	1		
31	90179-05030	NUT (806-24146-00)	1		

 Fig. 27 OIL TANK

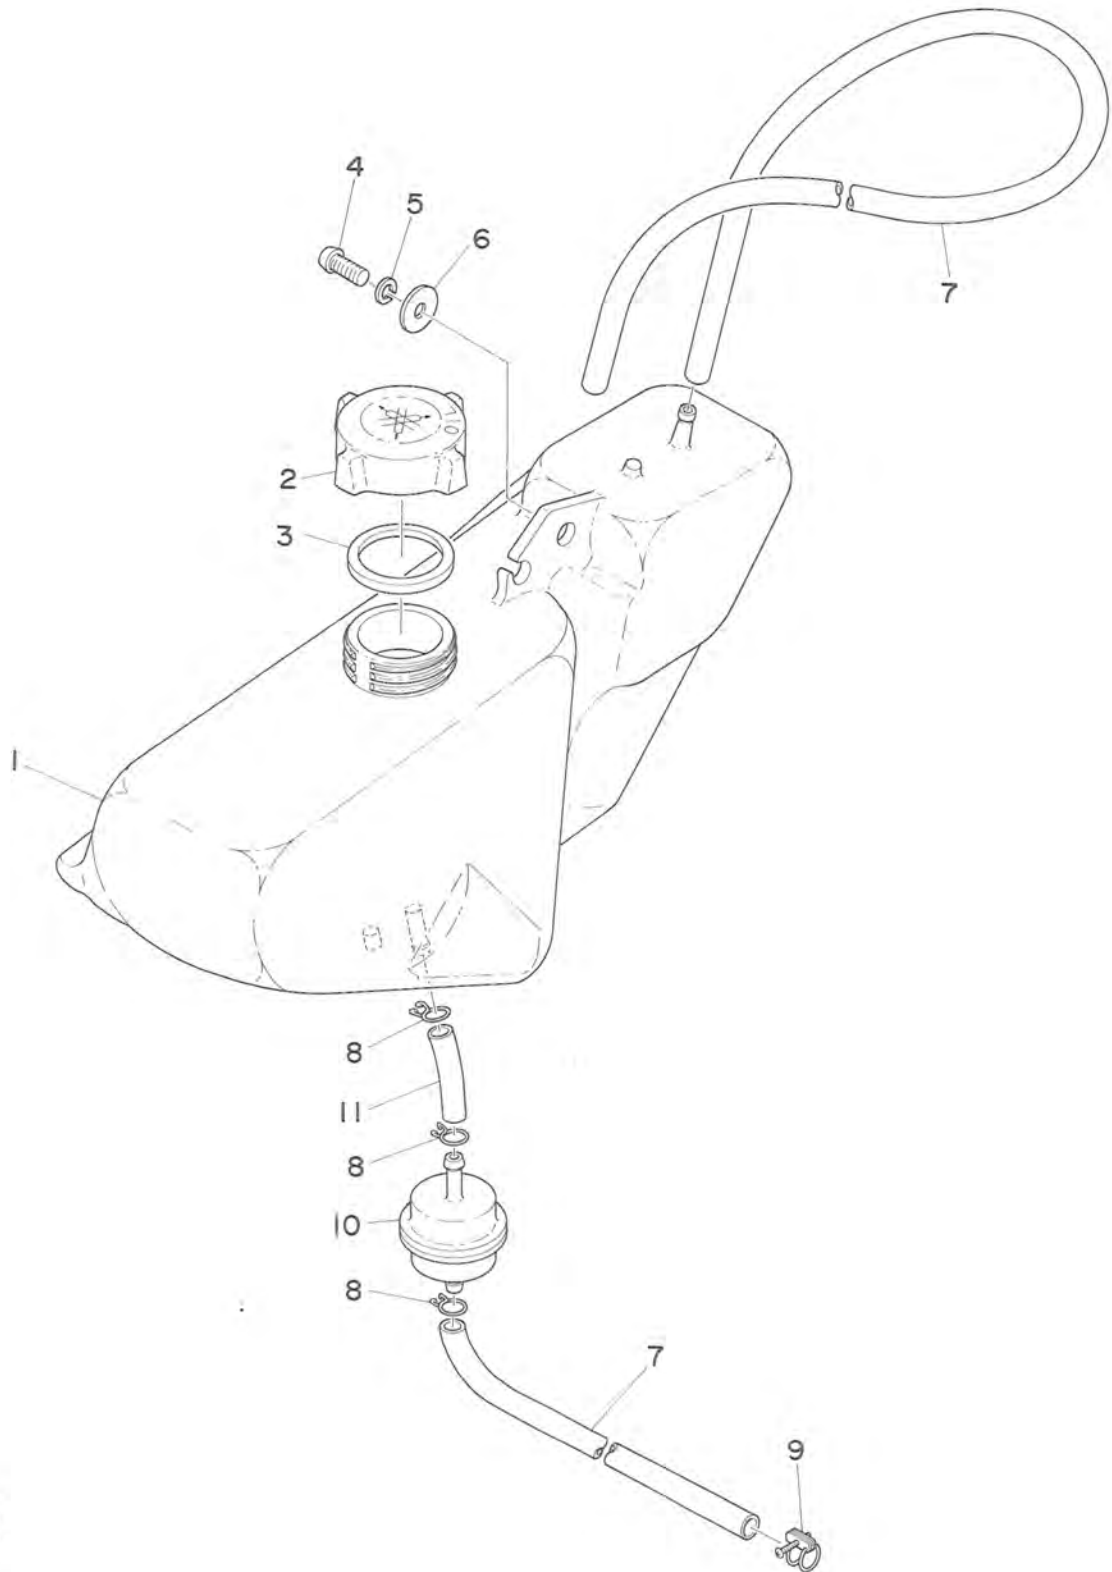


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
27- 1	867-21751-00	TANK, oil	1		
2	863-21771-00	BODY, cap	1		
3	90430-31003	GASKET	1		
4	98501-05015	SCREW, panhead	1		
5	92901-05100	WASHER, spring	1		
6	90201-05036	WASHER (838-77218-00)	1		
7	90446-09014	HOSE (806-24319-00 5-680)	2		
8	90467-09005	CLIP (810-24356-00)	3		
9	90460-09001	CLAMP (806-24359-01)	1		
10	859-13410-00	HOUSING STRAINER ASS'Y	1		
11	90446-09052	HOSE	1		

 Fig. 28 SEAT

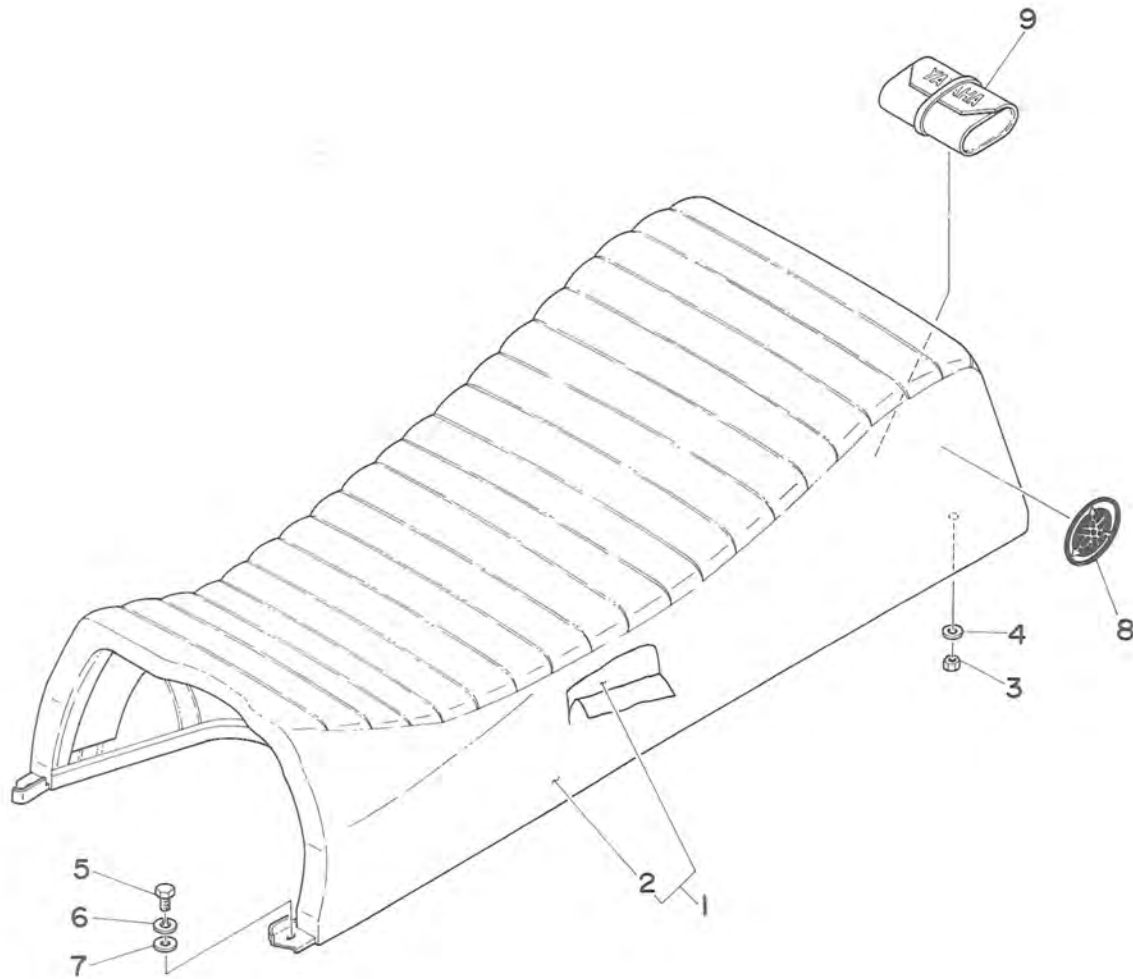


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
28- 1	898-24730-00	DOUBLE SEAT ASS'Y	1		
2	898-24731-00	. COVER, double seat	1		
3	95601-08100	NUT U	2		
4	92901-08600	WASHER, plain	2		
5	97306-06012	BOLT	2		
6	92906-06100	WASHER, spring	2		
7	90201-06059	WASHER (838-77728-00)	2		
8	821-77352-00	EMBLEM 2	2		
9	898-28100-10	TOOL ASS'Y	1		

 Fig. 29 BUMPER

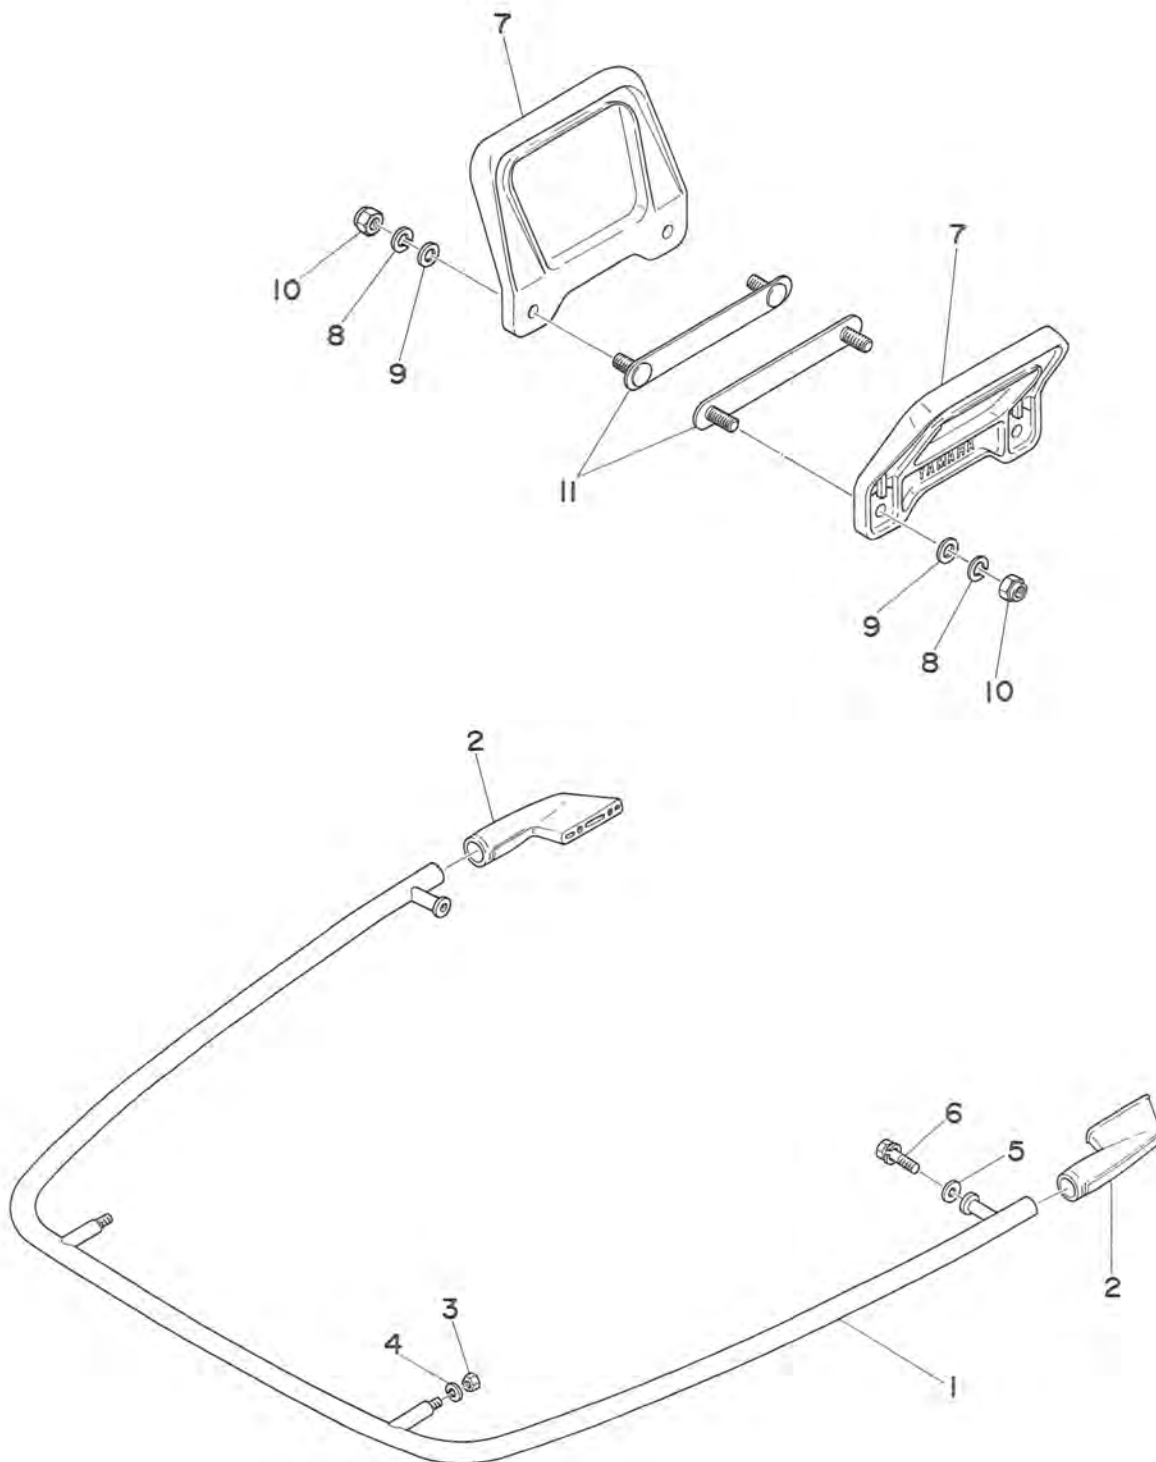


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
29- 1	853-77510-00	FRONT BUMPER COMP.	1		
2	838-77523-00	END, bumper	2		
3	95301-08600	NUT	2		
4	92901-08100	WASHER, spring	2		
5	90201-08456	WASHER (841-77527-00)	2		
6	97206-08040	BOLT	2		
7	898-77571-00	GRIP, passenger	2		
8	92901-08100	WASHER, spring	4		
9	90201-08107	WASHER, plate	4		
10	95301-08800	NUT, crown	4		
11	898-77576-00	BRACKET, passenger grip	2		

 Fig. 30 HEAD LAMP

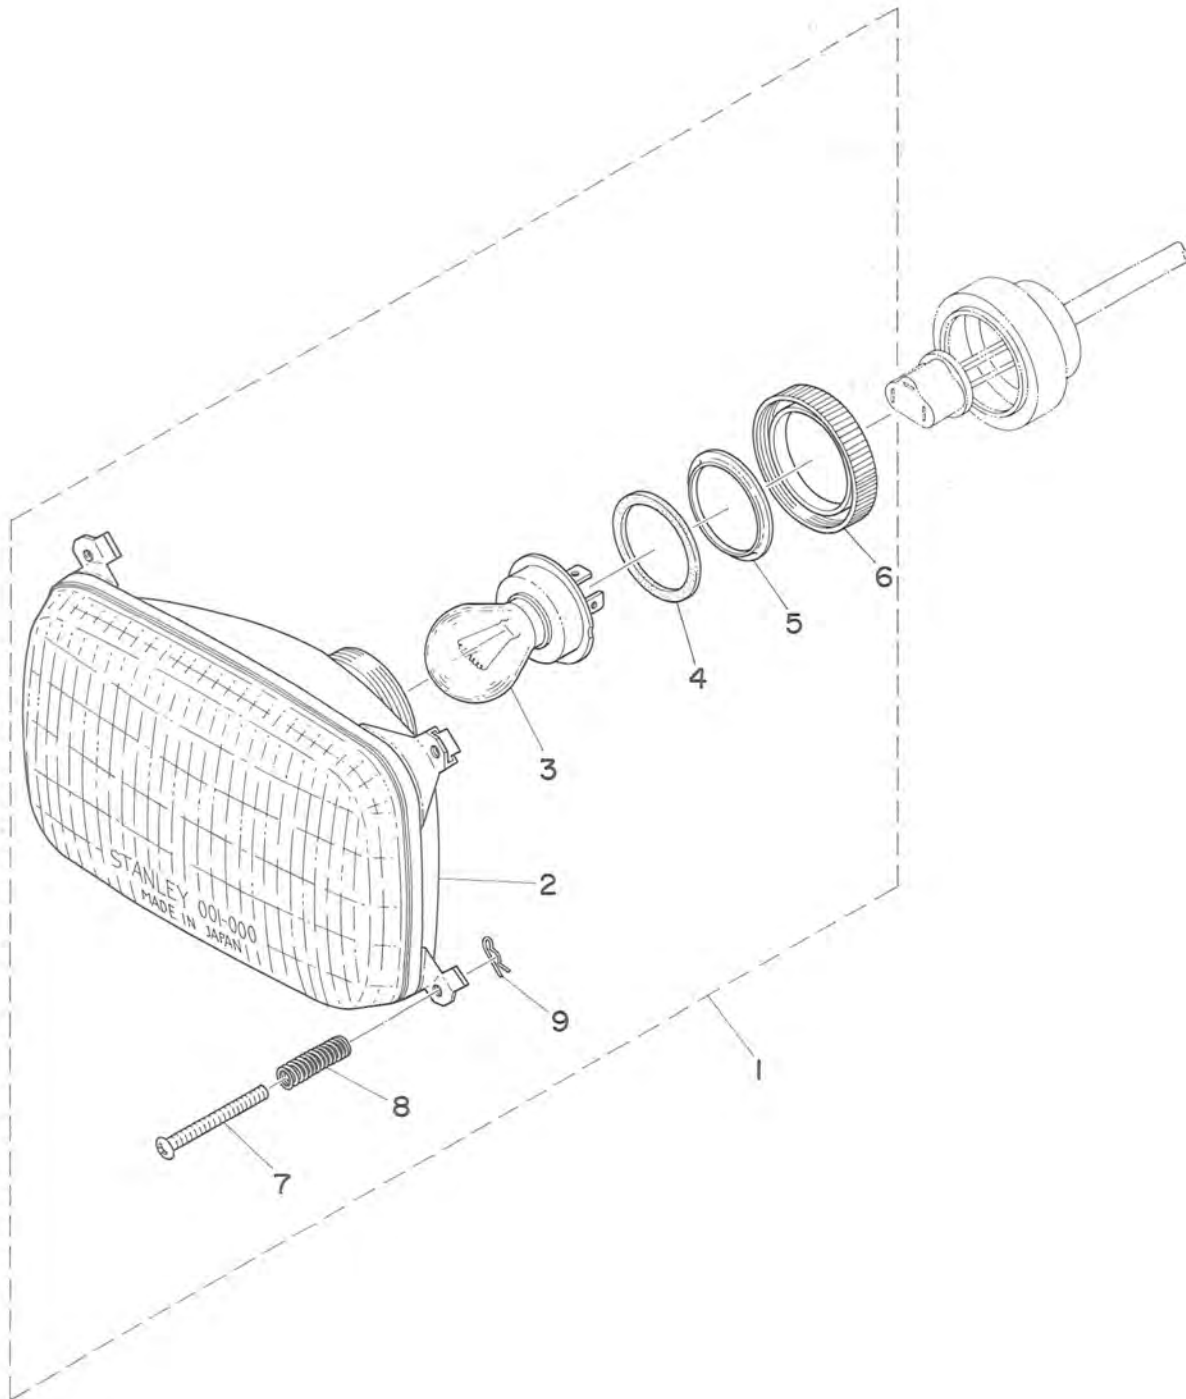


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
30- 1	853-84310-00	HEAD LAMP UNIT ASS'Y	1		
2	838-84320-01	. LENS ASS'Y	1		
3	838-84314-00	. BULB, head lamp (12V-60/60W)	1		
4	838-84327-00	. PACKING, bulb	1		
5	838-84328-00	. PLATE, bulb	1		
6	838-84317-00	. NUT, ring	1		
7	853-84331-00	. SCREW, adjusting	4		
8	853-84332-00	. SPRING, adjusting	4		
9	807-84351-00	. CLIP	4		

 Fig. 31 TAIL LAMP

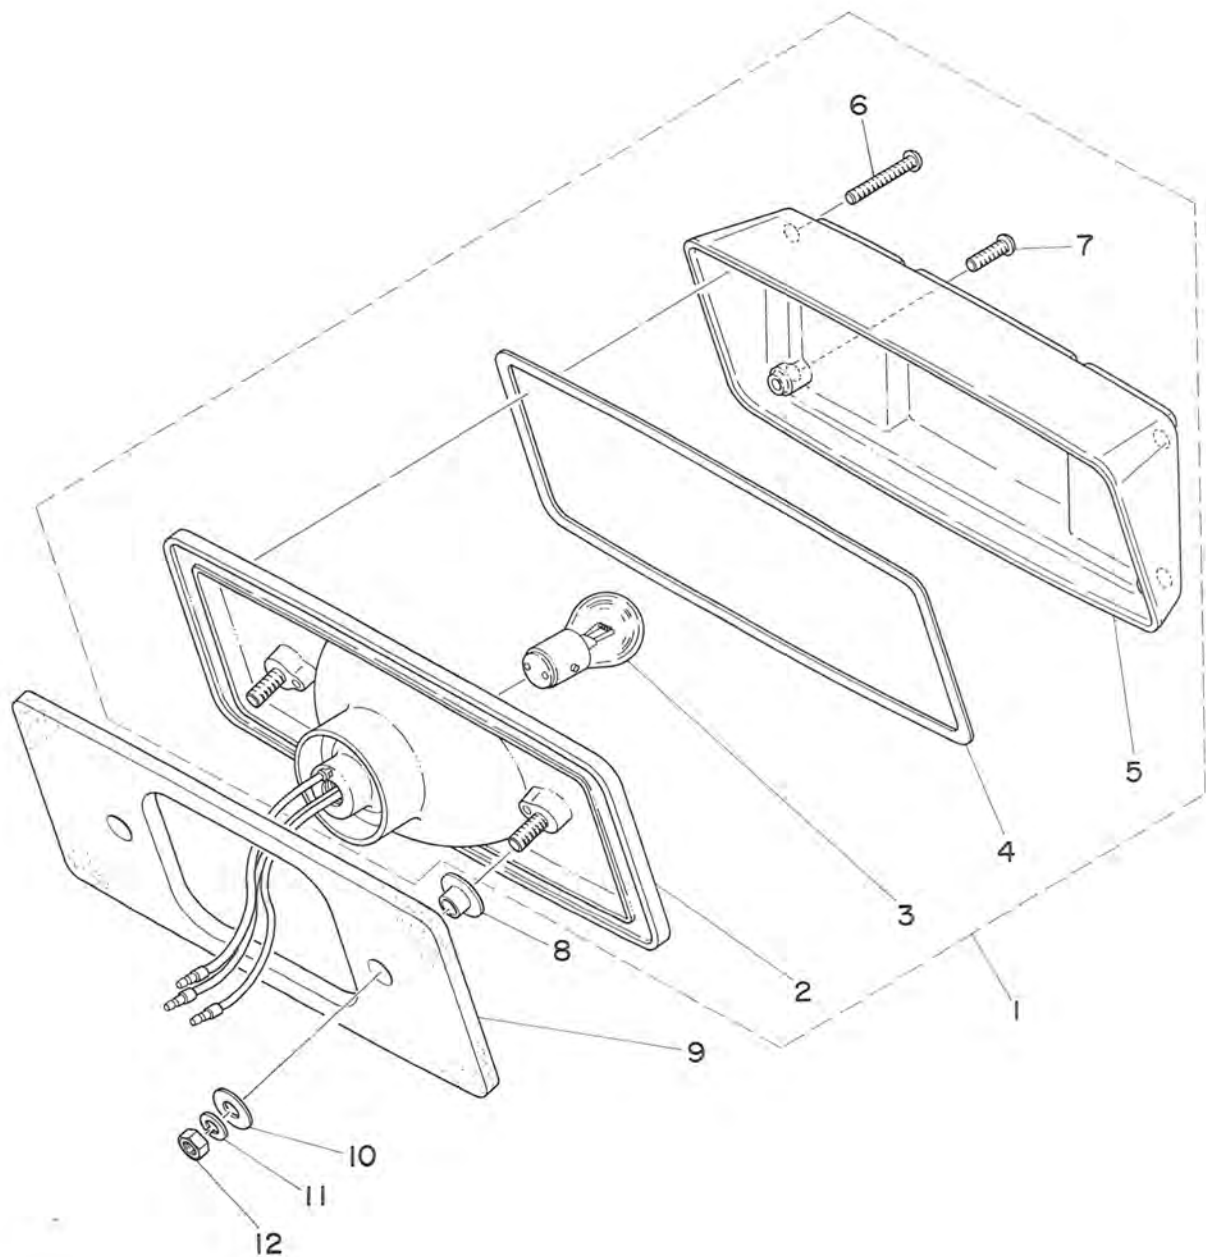

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
31- 1	838-84710-03	TAIL LAMP UNIT ASS'Y	1		
2	838-84711-00	. BASE, tail lamp	1		
3	838-84714-01	. BULB, tail lamp (12V-23/8W)	1	—	
4	821-84712-00	. SEAT, base	1	—	
5	821-84721-00	. LENS, tail lamp	1	—	
6	98501-04030	. SCREW, panhead	2	—	
7	98503-04015	. SCREW, panhead	2	—	
8	90387-06024	COLLAR (838-84757-00)	2		
9	878-84753-00	DAMPER	1		
10	90201-06057	WASHER (822-14475-00)	2		
11	92901-06100	WASHER, spring	2		
12	95301-06600	NUT, hexagon	2		

 Fig. 32 ELECTRICAL

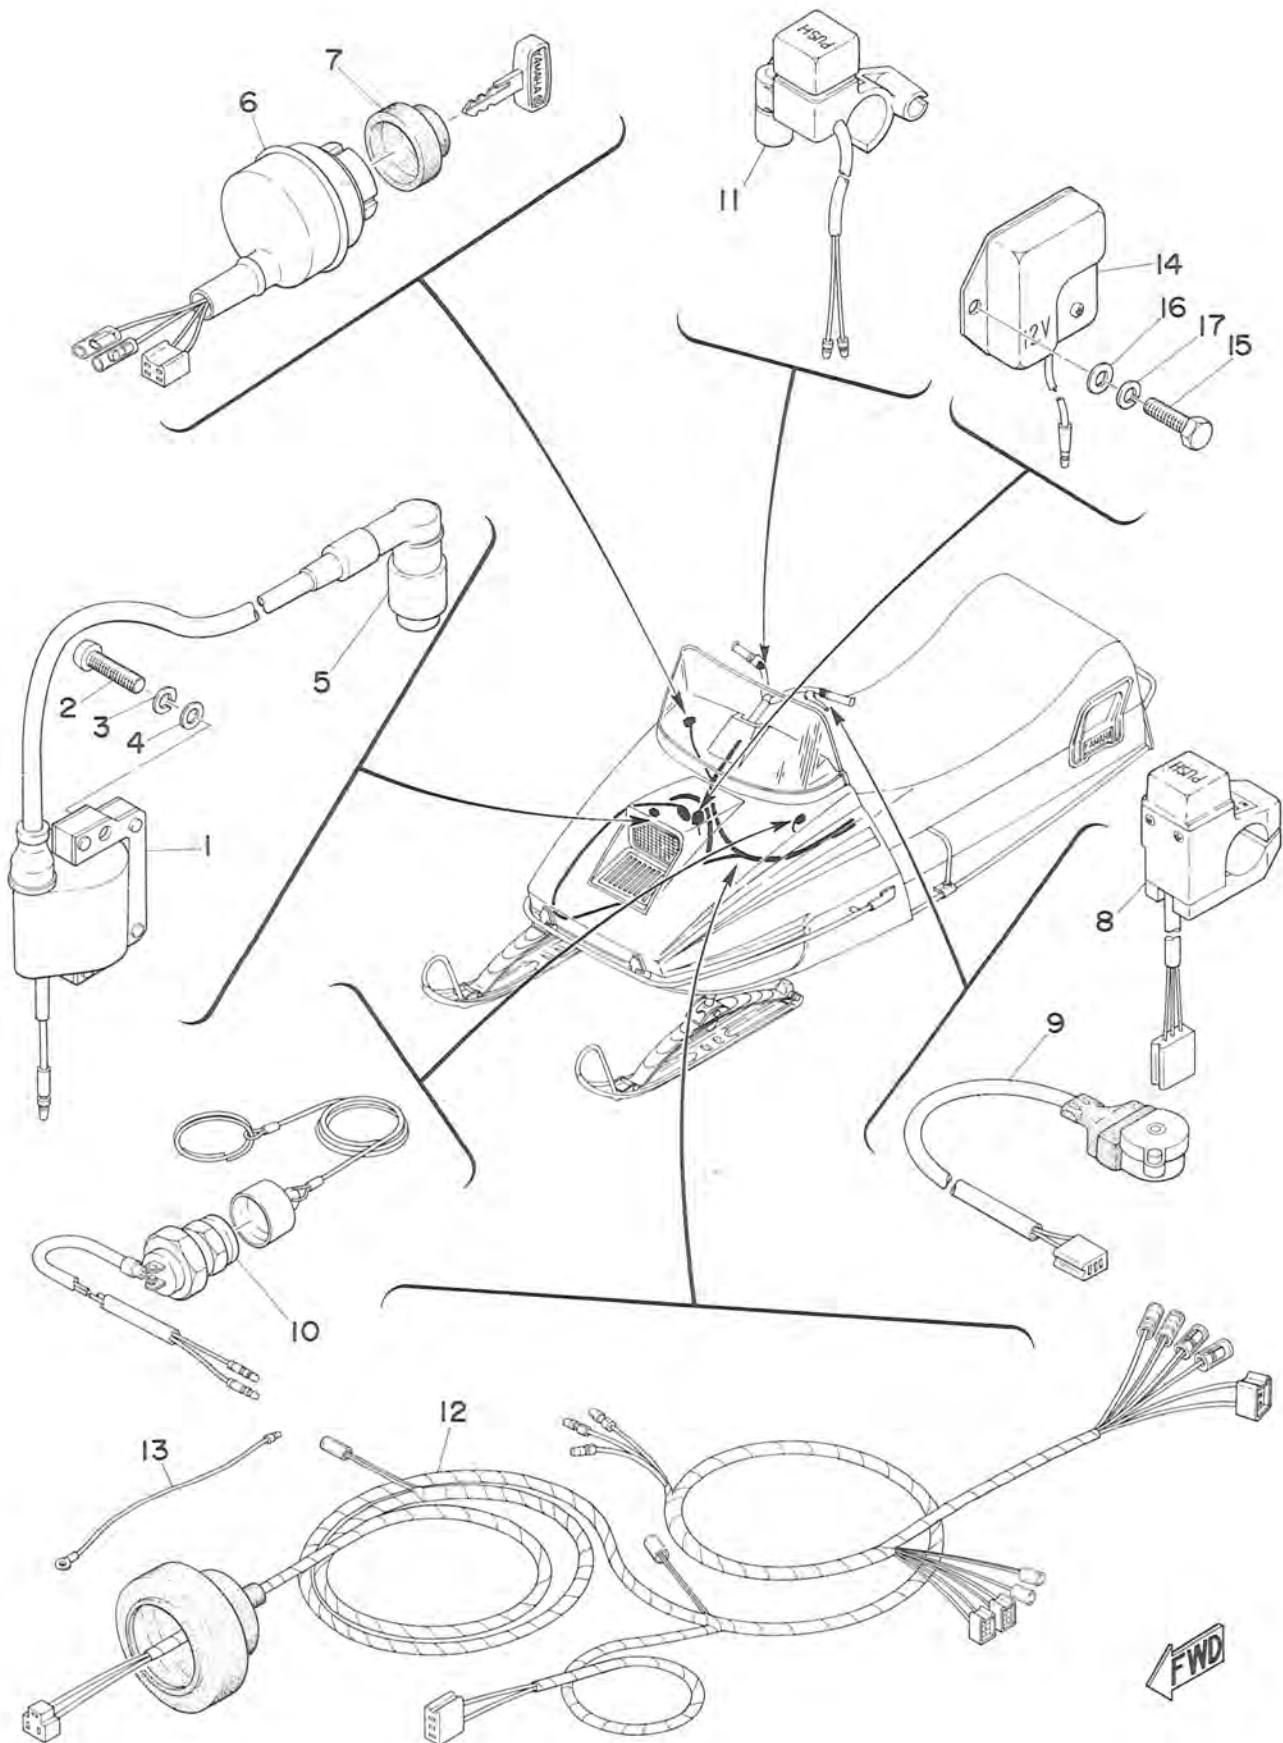

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
32- 1	860-82310-40	IGNITION COIL ASS'Y	1	—	
2	92506-06025	SCREW, panhead	2		
3	92906-06100	WASHER, spring	2		
4	92906-06600	WASHER, plate	1		
5	899-82370-20	PLUG CAP ASS'Y	1		
6	898-82508-20	MAIN SWITCH ASS'Y	1	—	
7	806-82516-00	CAP, main switch	1		
8	861-83950-01	BEAM SWITCH ASS'Y	1	—	
9	822-82530-00	STOP SWITCH ASS'Y	1	—	
10	898-82550-00	STOP SWITCH ASS'Y	1	—	
11	883-83976-01	SWITCH, handle 1	1		
12	898-82590-21	WIRE HARNESS ASS'Y	1		
13	838-82519-00	WIRE, earth lead	1		
14	898-81910-20	VOLTAGE REGULATOR	} U.R. 1		
	898-81910-10	VOLTAGE REGULATOR			
15	97301-06012	BOLT	2		
16	92901-06600	WASHER, plate	2		
17	92901-06100	WASHER, spring	2		

100-1000

1000


1000



ALTERNATE PARTS



 Fig. 33 SPEEDOMETER UNIT

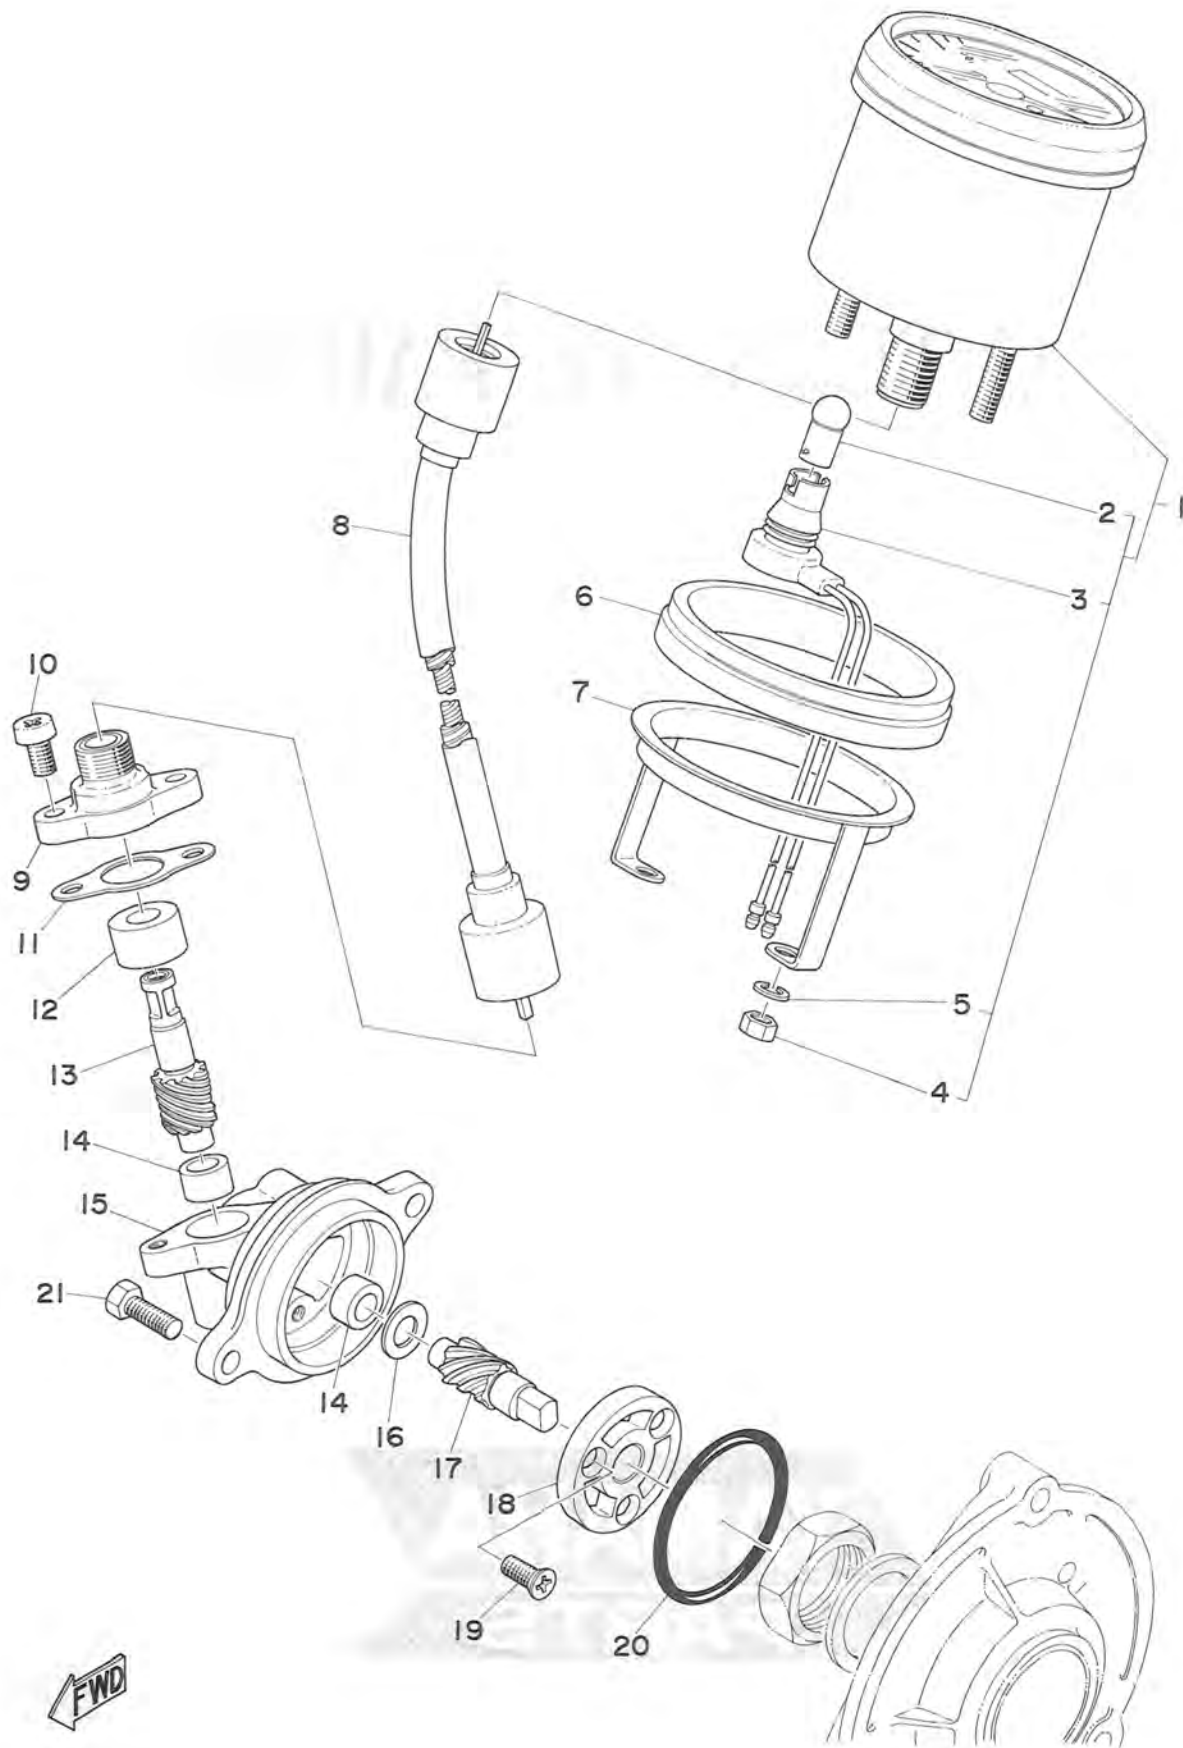

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
33-	1	863-83510-40	SPEEDOMETER ASS'Y	1	MPH
	2	123-83516-20	. BULB, meter (12V-3.4W)	1	
	3	861-83536-40	. SOCKET, meter	1	
	4	98801-05100	. NUT	2	
	5	92901-05100	. WASHER, spring	2	
	6	861-83523-40	DAMPER, meter	1	
	7	861-83514-40	PLATE, fitting	1	
	8	839-83550-00	SPEEDOMETER CABLE ASS'Y	1	
	9	810-47721-10	COVER, housing	1	
	10	98501-05012	SCREW, panhead	2	
	11	810-47727-10	GASKET	1	
	12	90380-08005	BUSHING (810-27723-10)	1	
	13	810-47741-10	GEAR, driven	1	
	14	90380-08002	BUSHING (810-47714-10)	2	
	15	810-47711-10	HOUSING	1	
	16	810-47717-10	SHIM (8.1-14-0.5)	1	
	17	810-47731-10	GEAR, drive	1	
	18	853-47712-10	JOURNAL	1	
	19	98701-04012	SCREW, flathead	3	
	20	93210-43141	O-RING (2.62-42.52)	1	
	21	97301-06015	BOLT	2	

9

9

9

9

9

9

9

NUMERICAL INDEX



1944



NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
9-13	104-81328-20	6-2	806-14562-00	33-11	810-47727-10
9-8	110-81346-21	6-16	806-14567-01	33-17	810-47731-10
9-10	110-81347-21	24-14	806-23766-00	33-13	810-47741-10
9-11	120-81331-20	18-2	806-47331-00	19-25	810-77716-00
33-2	123-83516-20	14-15	806-47558-00	8-9	811-15734-00
34-2	123-83516-20	19-2	806-77170-00	1-11	812-11181-00
10-1	126-13116-00	19-3	806-77172-00	4-3	812-11198-00
10-9	137-13128-00	19-4	806-77173-00	1-9	812-11351-00
10-4	137-13137-00-10	9-7	806-81321-20	3-14	812-11561-00-03
10-4	137-13137-00-30	32-7	806-82516-00	4-5	812-12273-00
10-5	137-13138-01	5-4	807-13556-00	9-20	812-12611-00
11-8	137-13148-00	8-11	807-15726-01	2-5	812-12624-00
15-15	150-17417-00-02	8-15	807-15755-00	2-6	812-12625-00
15-15	150-17417-00-03	30-9	807-84351-00	2-3	812-12633-00
15-15	150-17417-00-05	6-25	810-14136-00	2-20	812-12658-00
9-14	164-81246-21	6-10	810-14186-00	10-21	812-13146-00
3-12	214-11633-00	6-26	810-14544-00	10-22	812-13147-00
11-29	256-17837-00	6-23	810-14545-00	10-25	812-13156-00
4-6	275-12282-00	6-11	810-14547-00	7-5	812-14623-00
10-15	353-13552-01	6-24	810-14555-00	8-3	812-15714-00
23-30	447-82591-00	6-12	810-14556-00	8-10	812-15716-00
8-16	619-15756-00	6-35	810-14558-00	8-20	812-15723-00
13-7	801-17688-10	6-18	810-14592-00	8-5	812-15741-00
25-1	801-26241-01	6-27	810-14594-00	8-14	812-15751-00
8-4	802-15713-00	6-17	810-14597-00	8-17	812-15782-00
8-7	802-15715-00	13-3	810-17681-00	8-8	812-15784-00
8-6	802-15719-00	13-6	810-17684-00	13-9	812-17682-00
18-4	802-47337-00	15-1	810-25711-00	13-9	812-17682-10
19-27	802-77591-00	16-6	810-47522-00	13-9	812-17682-20
9-9	802-81325-20	16-7	810-47530-00	13-9	812-17682-30
9-5	802-81345-00	17-7	810-47530-00	13-9	812-17682-40
25-3	802-83913-00	16-2	810-47531-00	13-9	812-17682-50
25-2	803-83912-00-38	17-3	810-47532-00	1-17	812-24461-00
23-2	803-83965-00	16-18	810-47552-00	14-10	812-47548-40
6-39	806-14533-00	14-40	810-47562-00	14-10	812-47548-50
6-13	806-14548-00	33-15	810-47711-10	14-10	812-47548-60
6-7	806-14552-01	33-16	810-47717-10	9-16	812-81332-20
6-19	806-14559-00	33-9	810-47721-10	9-24	812-81362-00

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
34-12	813-17841-00	32- 9	822-82530-00	3-11	839-11610-30
26- 2	813-24611-01	26-14	823-24560-00	3-11	839-11610-40
26- 4	813-24613-01	6-21	824-14159-00	3-10	839-11631-00-96
26- 9	813-24628-00	6-32	824-14531-00	3-10	839-11631-00-98
17-26	818-47317-01	6-30	824-14563-00	3-10	839-11635-00
18-10	818-47317-01	6-28	824-14565-00	3-10	839-11636-00
14-33	818-47561-00	6-29	824-14567-00	3-10	839-11637-00
12-10	820-17641-00	11-26	824-17819-00	3-10	839-11630-00
11- 1	821-13175-00	23-11	826-23821-00	3- 4	839-11651-00
11- 3	821-13176-00	26-16	829-24336-00	4-10	839-12270-00
11-12	821-13179-00	21-14	829-77324-00	4-11	839-12292-00
11- 6	821-13188-00	21-19	829-77365-00	2- 1	839-12621-00
11-20	821-15436-00	21-20	829-77367-00	2-10	839-12651-00
11-27	821-17818-00	6- 4	834-14541-00	2-12	839-12653-00
34- 9	821-17819-00	6- 6	834-14553-00	10-29	839-13157-01
34-11	821-17843-00	7- 1	834-14613-00	5- 2	839-13556-00
23-15	821-23845-90	2-22	838-12629-00	1- 1	839-15100-00
15- 2	821-25730-00	11-16	838-13119-00	1- 2	839-15111-00
15- 3	821-25740-00	6- 3	838-14536-00	1- 3	839-15121-00
16- 1	821-47510-00	6- 5	838-14542-00	11- 4	839-15416-00
14-16	821-47543-00	6- 9	838-14546-00	11-10	839-15426-00
14-17	821-47544-00	6-31	838-14596-00	21- 1	839-21411-01
14-18	821-47591-00	20-12	838-77143-00	21- 4	839-21419-01
19-10	821-77188-01	20-24	838-77159-00	21- 5	839-21429-01
28- 8	821-77352-00	20- 5	838-77357-00	21- 7	839-21482-00
31- 4	821-84712-00	29- 2	838-77523-00	21- 6	839-21489-00
31- 5	821-84721-00	32-13	838-82519-00	9- 2	839-81312-20
19-22	821-85131-00	30- 3	838-84314-00	9- 4	839-81314-20
1-10	822-11311-00	30- 6	838-84317-00	33- 8	839-83550-00
3- 7	822-11681-00	30- 2	838-84320-01	34- 8	839-83560-00
3- 8	822-11682-00	30- 4	838-84327-00	7-17	841-14771-02
4- 1	822-12281-00	30- 5	838-84328-00	24-17	841-23743-02
4- 4	822-12283-00	31- 1	838-84710-03	23- 9	841-23812-01
2-11	822-12652-00	31- 2	838-84711-00	23-19	841-23851-01
2-18	822-12655-00	31- 3	838-84714-01	23-20	841-23852-01
2-24	822-24369-01	3-11	839-11610-00	22-12	841-27411-00
5-30	822-41222-00	3-11	839-11610-10	22-13	841-27421-00
2-23	822-82361-00	3-11	839-11610-20	16-13	841-47551-00

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
14-24	841-47565-00	12- 9	853-17610-00	33- 7	861-83514-40
14-25	841-47566-00	12- 5	853-17620-00	34- 7	861-83514-40
14- 3	841-47571-00	13- 1	853-17660-00	33- 6	861-83523-40
20- 6	841-77136-00	13- 2	853-17670-00	34- 6	861-83523-40
20- 7	841-77138-00	24- 2	853-23731-02	33- 3	861-83536-40
20-14	841-77145-00	24-24	853-23735-00	34- 3	861-83536-40
20-15	841-77147-00	23-21	853-23853-01	34- 1	861-83540-00
20-19	841-77153-00	23-22	853-23854-01	32- 8	861-83950-01
20-20	841-77154-00	23- 8	853-23875-00	27- 2	863-21771-00
20-18	841-77198-00	26-18	853-24335-00	23- 4	863-23815-01
20-17	841-77199-00	6-22	853-24462-00	25- 7	863-42138-01
19-26	841-82591-00	17- 1	853-47520-01	33- 1	863-83510-40
14- 1	844-47541-00	17- 2	853-47522-00	5-10	864-14435-00
21-13	844-77311-00	33-18	853-47712-10	5-28	864-14457-00
21-12	844-77315-00	17-10	853-47361-00	5-29	864-14467-00
21-17	844-77324-00	17-11	853-47362-00	5-13	864-14599-00
6-34	845-14516-15	17-15	853-47369-00	24- 7	865-23761-00
6-34	845-14516-20	20- 1	853-77111-00	24- 8	865-23762-00
6-34	845-14516-25	20-11	853-77131-00	24- 9	865-23763-00
6-34	845-14516-30	5-27	853-77452-00	24-10	865-23764-00
6-36	845-14567-00	29- 1	853-77510-00	24-11	865-23771-00
18- 1	846-47110-01	30- 1	853-84310-00	19-17	865-77595-00
5-31	847-77455-00	30- 7	853-84331-00	2- 2	867-12622-00
1-12	853-11111-00	30- 8	853-84332-00	5-15	867-14431-00
3- 1	853-11400-00	27-10	859-13410-00	5-16	867-14441-00
3- 2	853-11412-00	10-20	860-13119-00	5- 7	867-14477-00
3- 3	853-11422-00	10-19	860-13153-00	5-23	867-14493-00
5- 3	853-13555-00	11-11	860-15466-00	6- 1	867-14501-00
6-20	853-14197-00	8- 1	860-15710-00	6-37	867-14523-00
5- 8	853-14475-00	8- 2	860-15711-00	6-40	867-14571-00
6-14	853-14515-65	9-17	860-81350-20	6-38	867-14578-00
6-33	853-14522-00	32- 1	860-82310-40	12- 1	867-17630-00
6- 8	853-14543-00	23-14	861-23841-90	12- 7	867-17644-00
7- 7	853-14610-00	25- 8	861-26311-01	27- 1	867-21751-00
7- 2	853-14612-00	25- 6	861-26340-02	19-16	867-21969-00
7- 9	853-14710-02	14-29	861-47559-00	23- 1	867-23810-00
7-16	853-14718-00	20-23	861-77118-00	22- 1	867-23870-01
7-12	853-14773-02	22- 7	861-77715-00	24-12	878-23768-00

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
19-20	92901-06100	22-10	92906-05600	11-14	93410-10025
20-21	92901-06100	5-25	92906-06100	11-15	93420-26024
22-16	92901-06100	8-24	92906-06100	18- 9	93420-42007
24-19	92901-06100	19-12	92906-06100	16-12	93420-44029
31-11	92901-06100	28- 6	92906-06100	14- 5	93420-55028
32-17	92901-06100	32- 3	92906-06100	3-16	93420-72023
9-19	92901-06200	19-13	92906-06600	26-12	93430-02001
19-24	92901-06200	32- 4	92906-06600	10-23	93430-09019
10-28	92901-06600	24-22	92906-08600	3-13	93450-20026
11-23	92901-06600	7- 4	92990-08100	17-22	93450-42020
22-15	92901-06600	7-14	92990-08100	10-13	93505-32002
22-18	92901-06600	10- 8	93101-10001	11- 2	93603-22028
25-12	92901-06600	11- 5	93101-10001	2-21	93604-14012
32-16	92901-06600	14-31	93102-22087	14-41	93604-18058
5- 5	92901-08100	16-10	93102-25084	14-13	94510-40066
6-42	92901-08100	17-21	93102-25110	14-13	94510-40068
7-19	92901-08100	14-39	93102-30083	14-14	94610-40001
8-12	92901-08100	3-17	93102-30111	1-16	94701-00111
8-22	92901-08100	3-19	93102-30112	10- 7	95301-05600
11-18	92901-08100	14- 4	93102-40080	15-12	95301-05700
14-22	92901-08100	34-10	93104-06033	20- 9	95301-06600
14-37	92901-08100	4- 2	93210-04092	20-22	95301-06600
16-15	92901-08100	26- 6	93210-04122	22-17	95301-06600
29- 4	92901-08100	14- 2	93210-25070	31-12	95301-06600
29- 8	92901-08100	33-20	93210-43141	14-28	95301-08600
7-20	92901-08600	14-32	93211-13109	29- 3	95301-08600
11-19	92901-08600	11-13	93306-00002	5- 6	95301-08700
14-23	92901-08600	17-23	93306-00401	29-10	95301-08800
14-27	92901-08600	16-11	93306-00412	23-17	95301-10900
15- 8	92901-08600	18- 8	93306-00416	15-14	95301-12700
19-29	92901-08600	14-30	93306-20302	8-13	95302-08700
24- 4	92901-08600	12- 8	93306-20509	23-26	95302-12600
28- 4	92901-08600	14-38	93306-30407	24-26	95306-10900
15-13	92901-12100	3-15	93306-30602	20-28	95601-05100
9-26	92901-16100	14- 6	93306-90701	25- 5	95601-05100
2-16	92906-05100	3- 9	93310-21874	25-11	95601-06100
22-11	92906-05100	3- 5	93310-42497	17-17	95601-08100
2-17	92906-05600	11- 9	93410-10025	24- 3	95601-08100

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
28- 3	95601-08100	2- 4	98501-05010		
1-14	95701-08100	11-28	98501-05010		
29- 6	97206-08040	33-10	98501-05012		
19- 7	97301-05015	10- 2	98501-05015		
15-11	97301-05020	27- 4	98501-05015		
10-26	97301-06012	23- 6	98501-05035		
32-15	97301-06012	31- 7	98503-04015		
5- 9	97301-06015	6-15	98601-03008		
22-14	97301-06015	33-19	98701-04012		
33-21	97301-06015	33- 4	98801-05100		
19-19	97301-06015	34- 4	98801-05100		
5-14	97301-06018	2-13	98906-05012		
14-36	97301-08010	2-15	98906-05012		
7-18	97301-08015	2-19	98906-05012		
14-34	97301-08060	2-14	98906-05030		
22- 9	97306-05012				
28- 5	97306-06012				
5-24	97306-06015				
8-23	97306-06015				
19-11	97306-06045				
22- 2	97306-08018				
23-27	97321-06020				
11-24	97321-06025				
11-21	97321-06035				
17- 5	97321-06035				
16- 4	97321-06035				
6-41	97321-08012				
8-21	97321-08015				
7- 3	97321-08025				
16-14	97321-08025				
18- 5	97321-08025				
11-17	97321-08030				
14-26	97321-08035				
14-21	97321-08070				
8-18	98402-05006				
6-43	98501-04006				
10-24	98501-04030				
31- 6	98501-04030				

NUMERICAL INDEX

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000

1000000