


Boa-Ski Alsport Ltd.

LA GUADELOUPE, CTE FRONTENAC, P.Q.


DESCRIPTION
AND
PARTS LIST.

1973

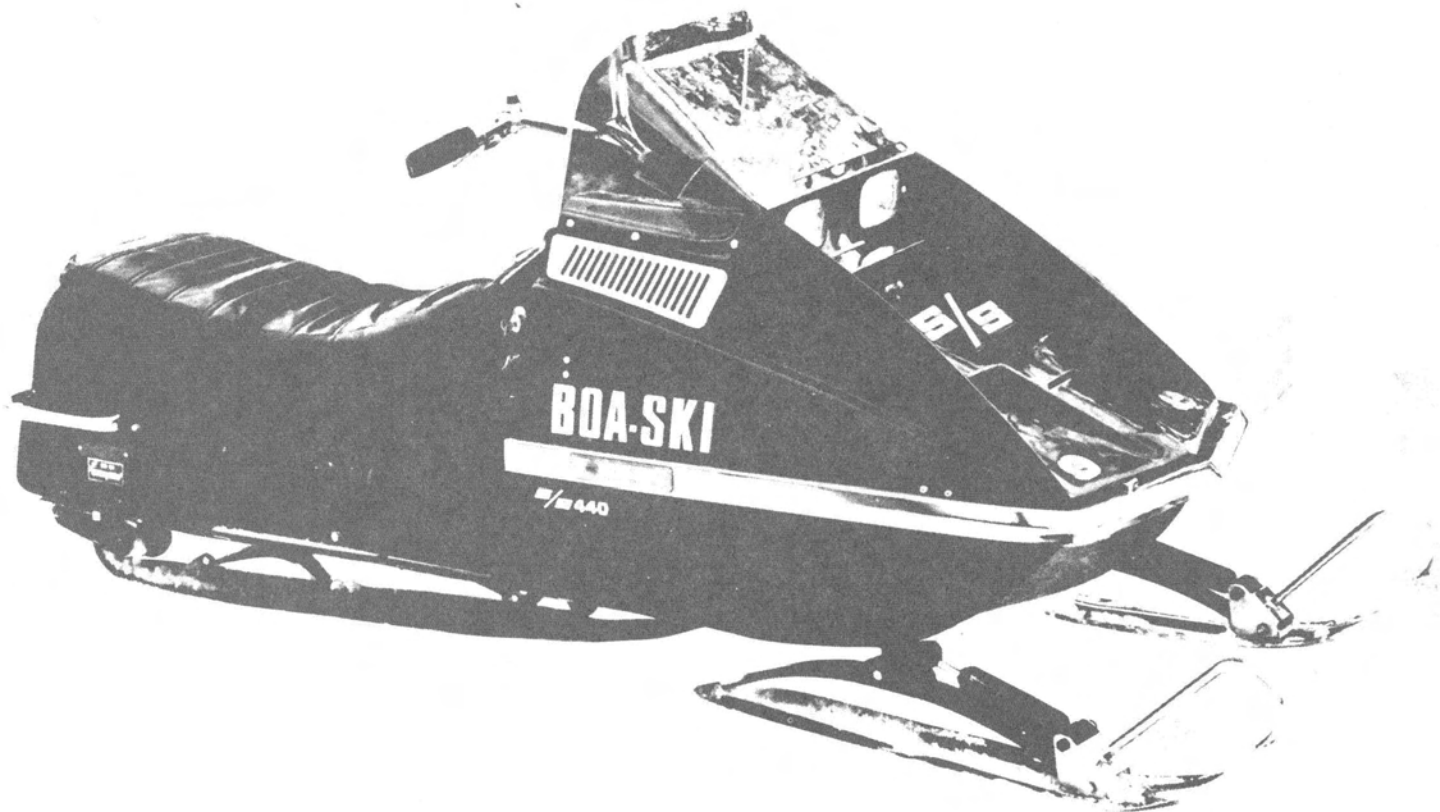


NO ILLUSTR.	# BOA SKI	CAB	DESCRIPTION	MODEL		MK 1	295	MK 1	292 T	MK 1	399 T	MK 11 R/T 338 T	MK 11 R/T 438 T	MK 11 W/T 440 T	S/S	399 T	S/S	438 T
				MK 0	230													
1	S-13-03-067		Windshield trimming	1														
-	S-13-03-065		" "					1	1	1								
2	S-13-03-063		Windshield.....	1				1	1	1								
-	S-13-03-062		"					1	1	1								
3	S-00-12-011		Washer	8				9	9	9								
4	S-00-07-006		Screw.....	8				9	9	9								
5	S-13-03-091		Cab	1														
-	S-13-03-059		Cab					1	1	1								
6	S-00-03-011		Molly jack nut	4				4	4	4								
7	S-00-13-048		Holder socket	1				1	1	1								
8	S-00-12-019		Washer & rubber seal.	1				1	1	1								
9	S-00-13-080		Bulb 45 W.....	1				1										
-	S-00-13-081		Bulb 60 W.					1	1	1								
10	S-00-13-084		Headlamp	1				1	1	1								
11	S-00-13-085		Screw Pan.....	1				1	1	1								
12	S-00-07-001		Bolt	4				4	4	4								
13	S-00-13-086		Rim headlamp	1				1	1	1								
14	S-00-13-087		Screw adjust.....	1				1	1	1								
15	S-00-13-088		Spring adjust	1				1	1	1								
16	S-00-13-089		Nut adjust	1				1	1	1								
17	S-00-13-090		Nut.....	1				1	1	1								
18	S-00-06-006		Pin	1				1	1	1								
19	S-13-03-112		Support strap-hinge	2				2	2	2								
20	S-00-03-029		Nut.....	2				2	2	2								
21	S-13-03-114		Strap-hinge guide	2				2	2	2								
22	S-13-03-110		Superior strap-hinge R.H.	1				1	1	1								
-	S-13-03-111		Superior strap-hinge L.H.....	1				1	1	1								
23	S-00-01-059		Bolt	2				2	2	2								
24	S-00-12-016		Washer	2				2	2	2								
25	S-00-03-002		Nut.....	2				2	2	2								
26	S-13-03-068		Sticker Boa Ski	2				2	2	2								
27	S-13-03-078		Cab rear trimming	1														
-	S-13-03-082		Cab rear trimming.....					1	1	1								
28	S-13-03-092		Hook hood clamp	2				2	2	2								
29	S-13-03-093		Hood clamp	2				2	2	2								
30	S-00-02-004		Rivet.....	4				4	4	4								
31	S-13-03-116		Cab. ass'y	1														
-	S-13-03-090		Cab ass'y					1	1	1								
	S-13-03-099		Strap-hinge ass'y R.H.....	1				1	1	1								
	S-13-03-100		Strap-hinge ass'y L.H.	1				1	1	1								

C A B.

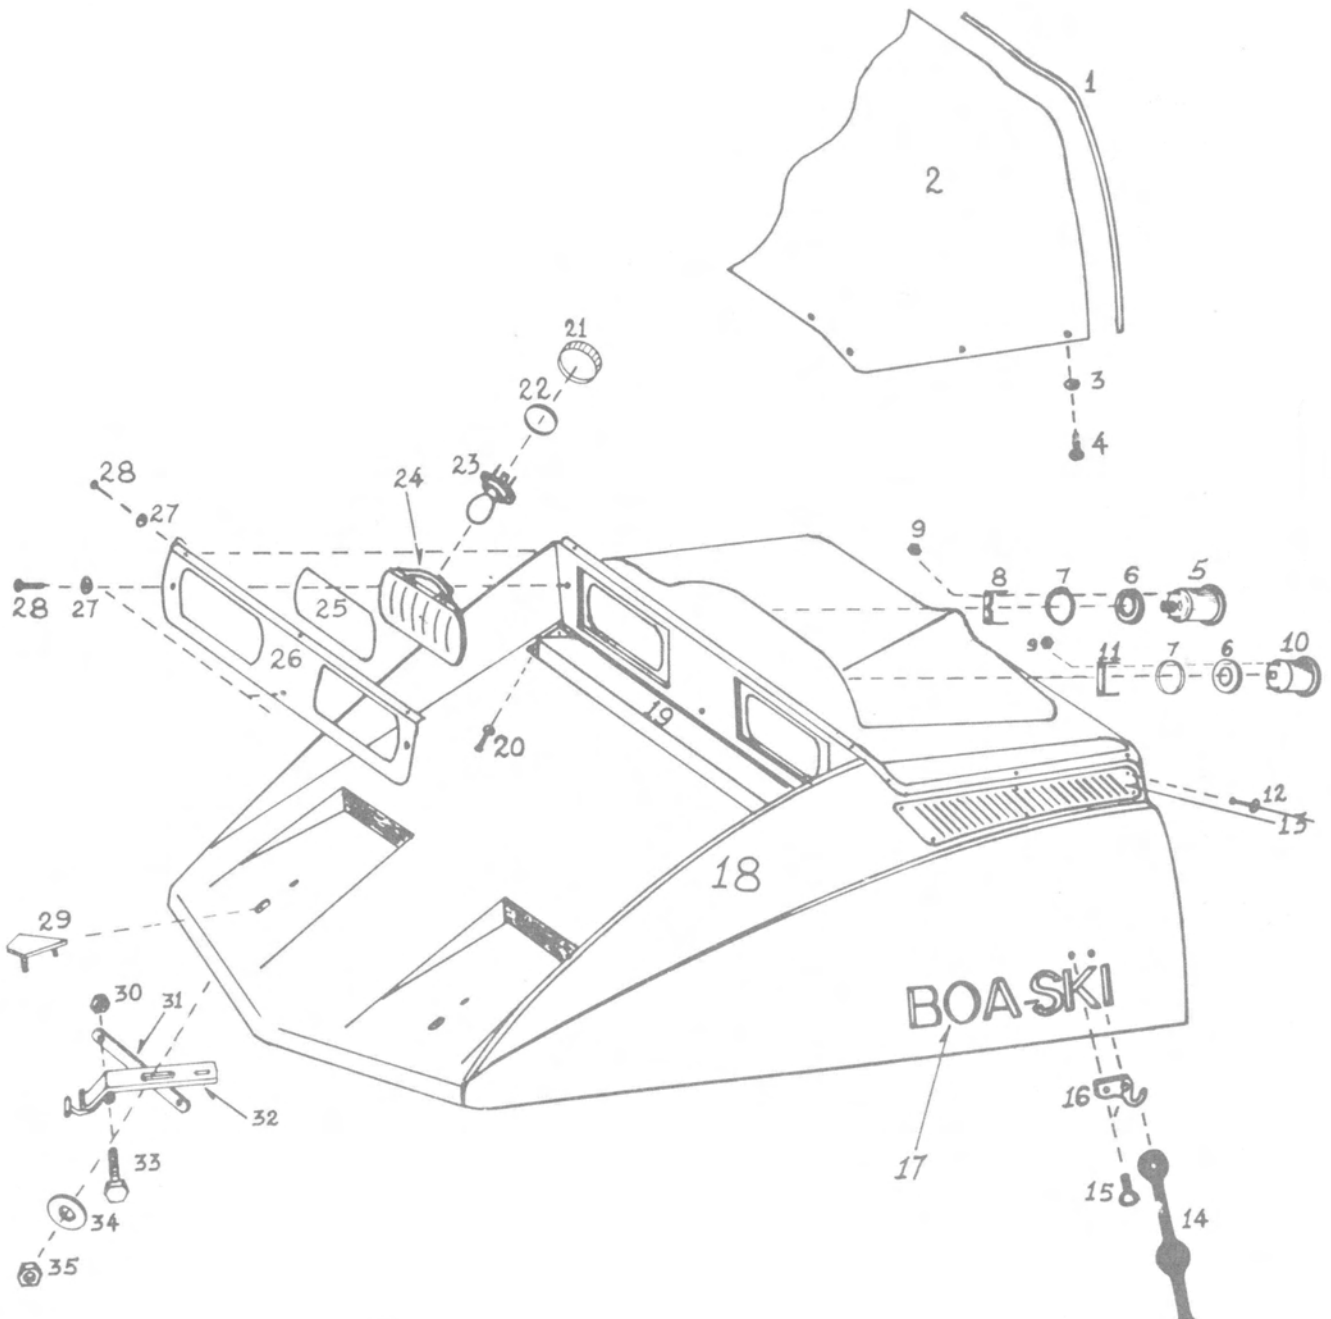


NO ILLUST.	# BOA SKI	CAB	DESCRIPTION	MODEL			MK 1	MK 1	MK 1	MK 1	MK 11 R/T 338 T	MK 11 R/T 438 T	MK 11 W/T 440 T	S/S 399 T	S/S 438 T
				MK 0	230										
1	S-13-03-066		Windshield trimming								1	1	1	1	1
2	S-13-03-064		Windshield								1	1	1	1	1
3	S-00-12-011		Washer.....								6	6	6	6	6
4	S-00-07-006		Screw.....								6	6	6	6	6
5	S-00-14-016		Speedometer ass'y								1	1	1	1	1
-	S-00-14-008		Speedometer.....								1	1	1	1	1
6	S-00-14-009		Speedo. chock absorber								1	1	1	1	1
-	S-00-14-010		Tacho. " "								1	1	1	1	1
7	S-00-14-011		Speedo. ring.....								1	1	1	1	1
-	S-00-14-012		Tacho. Ring								1	1	1	1	1
8	S-00-14-013		Support speedo.								1	1	1	1	1
9	S-00-14-014		Nut speedo & tacho.....								4	4	4	4	4
-	S-00-14-015		Tacho & speedo bulb								2	2	2	2	2
-	S-00-14-017		Tachometer ass'y								1	1	1	1	1
10	S-00-14-018		Tachometer.....								1	1	1	1	1
11	S-00-14-019		Support tacho								1	1	1	1	1
12	S-00-02-017		Grill Rivet								12	12	12	12	12
13	S-13-03-079		Black side cab grill.....								2	2	2	2	2
-	S-13-03-076		Chrome " " "												
14	S-13-03-093		Hood clamp								2	2	2	2	2
15	S-00-02-004		Rivet.....								4	4	4	4	4
16	S-13-03-092		Hook hood clamp								2	2	2	2	2
17	S-13-03-068		Sticker Boa Ski								2	2	2	2	2
18	S-13-03-060		Cab (Red).....								1	1	1	1	1
-	S-13-03-061		Cab (Black)												
19	S-13-03-081		Front air scoop								1	1	1	1	1
20	S-00-02-004		Rivet air scoop.....								4	4	4	4	4
21	S-00-13-048		Holder socket								2	2	2	2	2
22	S-00-12-019		Washer & rubber steel								2	2	2	2	2
23	S-00-13-082		Bulb (12 V 45/45 W).....								2	2	2	2	2
24	S-00-13-083		Head lamps								2	2	2	2	2
-	S-00-13-085		Screw pan								2	2	2	2	2
-	S-00-13-087		Screw ajust.....								2	2	2	2	2
-	S-00-13-088		Spring ajust								2	2	2	2	2
-	S-00-13-089		Nut adjust								2	2	2	2	2
-	S-00-13-090		Nut.....								2	2	2	2	2
-	S-00-06-006		Pin								2	2	2	2	2
25	S-13-02-003		Gasket head lamp								2	2	2	2	2
26	S-13-03-070		Rim headlamp.....								1	1	1	1	1
-	S-13-03-071		Rim headlamp												
27	S-00-12-011		Washer								6	6	6	6	6
28	S-00-07-001		Screw.....								6	6	6	6	6
29	S-13-03-112		Support strap hinge								2	2	2	2	2
30	S-00-03-029		Nut								2	2	2	2	2
31	S-13-03-114		Strap hinge guide.....								2	2	2	2	2
32	S-13-03-110		Superior strap hinge R.H.								1	1	1	1	1
-	S-13-03-111		Superior strap hinge L.H.								1	1	1	1	1
33	S-00-01-059		Bolt.....								2	2	2	2	2
34	S-00-12-002		Washer								2	2	2	2	2
35	S-00-03-002		Nut								2	2	2	2	2
36	S-13-03-057		Cab ass'y.....								1	1	1	1	1
-	S-13-03-115		Cab ass'y												
-	S-13-03-099		Hinge ass'y R.H.								1	1	1	1	1
-	S-13-03-100		Hinge ass'y L.H.....								1	1	1	1	1

ENGINE.

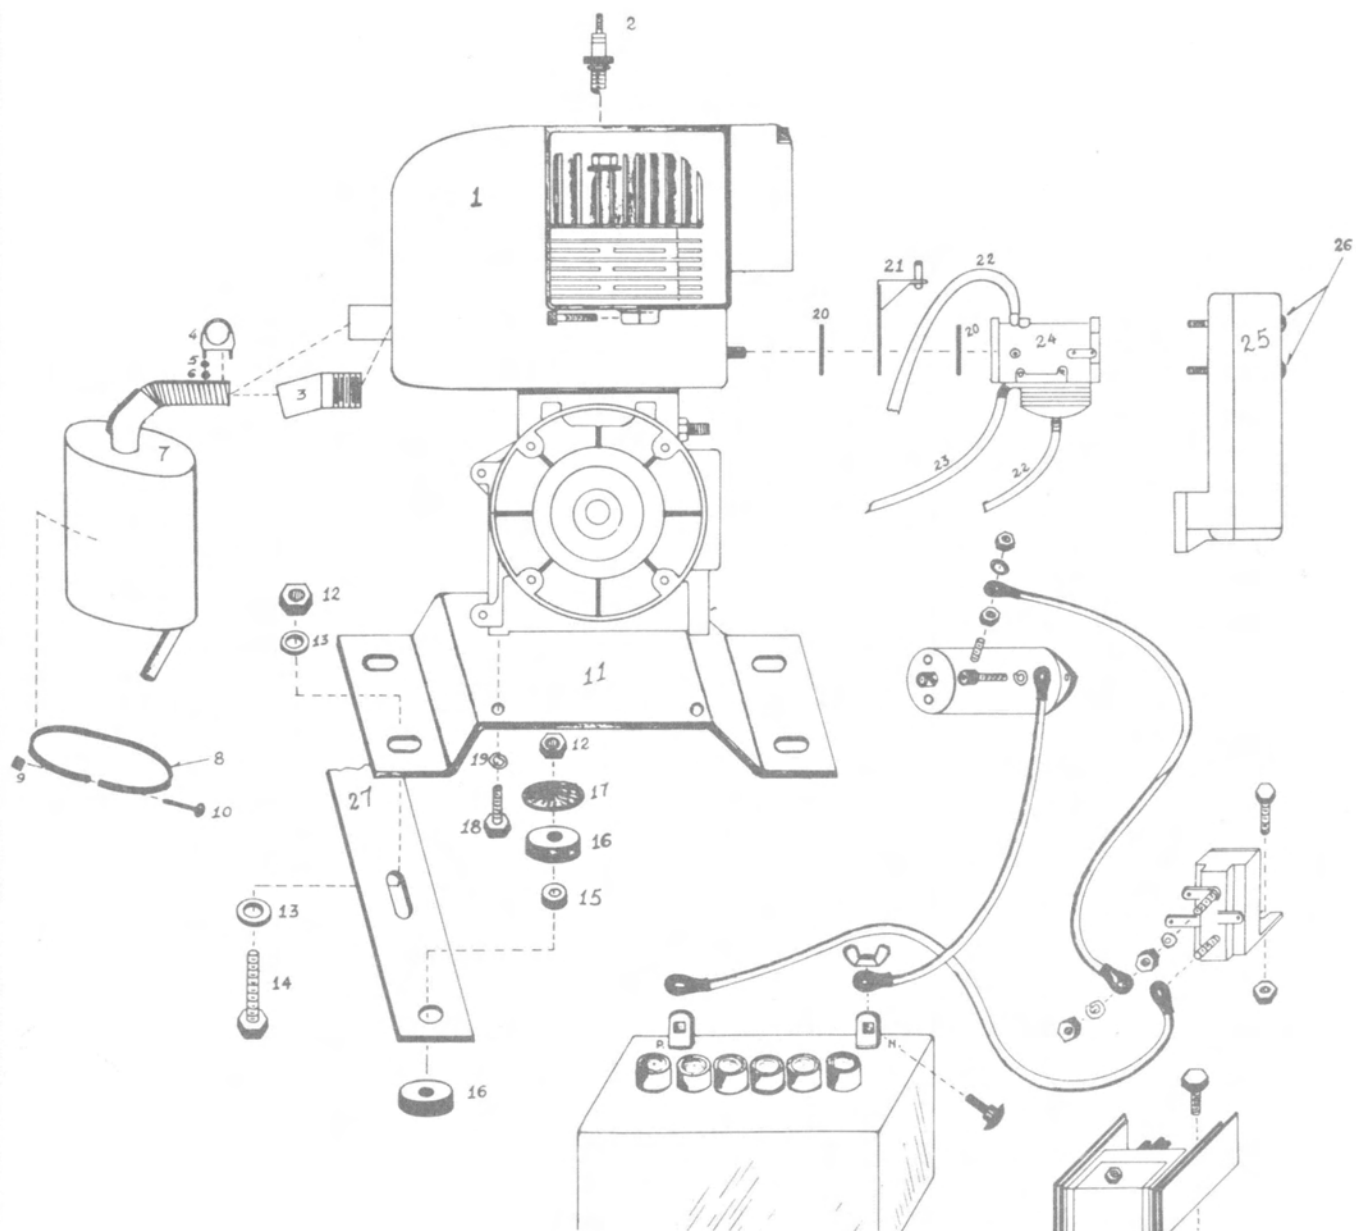


NO ILLUSTR	# BOA SKI	ENGINE	MODELE												
				MO 0	230			MO 1 295	MO 1 292 T	MO 1 399 T	MO 11 R/T 338 T	MO 11 R/T 438 T	MO 11 W/T 440 T	S/S 399 T	S/S 438 T
		DESCRIPTION													
1	S-08-03-058	Engine	1												
-	S-08-03-059	Engine						1							
-	S-08-03-060	Engine.....						1							
-	S-08-03-061	"							1					1	
-	S-08-03-062	"								1					
-	S-08-03-063	"									1	1			
2	S-00-13-019	Spark plug												1	
-	S-00-13-020	" "													
-	S-00-13-021	" "													
-	S-00-13-022	" "													
-	S-00-13-064	" "													
3	S-08-03-070	Flange.....	1												
-	S-08-01-038	"						1							
-	S-08-03-071	Y manifold						1	1		1	1		1	1
4	S-00-19-021	Muffler clamp.....	1					1	2	2	2	2		2	2
5	S-00-12-010	Lockwasher	1					1	2	2	2	2		2	2
6	S-00-03-026	Nut	1					1	2	2	2	2		2	2
7	S-12-03-001	Muffler.....	1					1							
-	S-12-03-002	Muffler						1	1	1	1	1		1	1
8	S-12-01-018	Strapping	1					1	1	1	1	1		1	1
9	S-00-03-007	Nut.....	1					1	1	1	1	1		1	1
10	S-00-01-017	Bolt	1					1	1	1	1	1		1	1
11	S-08-01-025	Engine base	1												
-	S-08-03-064	Engine base.....						1							
-	S-08-03-065	Engine base						1	1					1	
-	S-08-03-066	Engine base									1	1	1	1	
12	S-00-03-005	Nut.....	8					8	8	8	8	8		8	8
13	S-00-12-003	Flat washer	8					8	8	8	8	8		8	8
14	S-00-01-012	Bolt	4					4	4	4	4	4		4	4
15	S-00-10-002	Nylon bushing.....	4					4	4	4	4	4		4	4
16	S-08-01-001	Rubber bushing	6					6	6	6	6	6		6	6
17	S-04-01-011	Washer	4					4	4	4	4	4		4	4
18	S-00-01-040	Bolt.....	4					4	4	4	4	4		4	4
19	S-00-12-008	Lockwasher	4					4	4	4	4	4		4	4
20	S-08-03-067	Gasket	2					2							
-	S-08-03-068	Gasket.....						2	2		2	2		2	2
21	S-08-03-069	Throttle cable support	1					1	1	1	1	1		1	1
22	S-10-03-041	Gas inlet	2					2	2	2	2	2		2	2
23	S-10-03-040	Vacuum line.....	1					1	1	1	1	1		1	1
24		Carburetor HR. Til.	1					1							
-		" HD. Til.									1				
-		" Walbro.....						1		1		1	1	1	1
25	S-08-03-056	Intake silencer ass'y	1					1							
-	S-08-03-057	" "						1	1		1	1		1	1
26	S-00-01-076	Bolt.....	3					3	3	3	3	3		3	3
27	S-08-01-077	Engine mount leaf	2												
-	S-08-03-064	" " "						2							
-	S-08-03-054	" " "								2					
-	S-08-03-055	" " "								2	2	2		2	2
-	S-00-14-020	Kit electric ass'y						1	1		1	1	1	1	1



BRAKE.

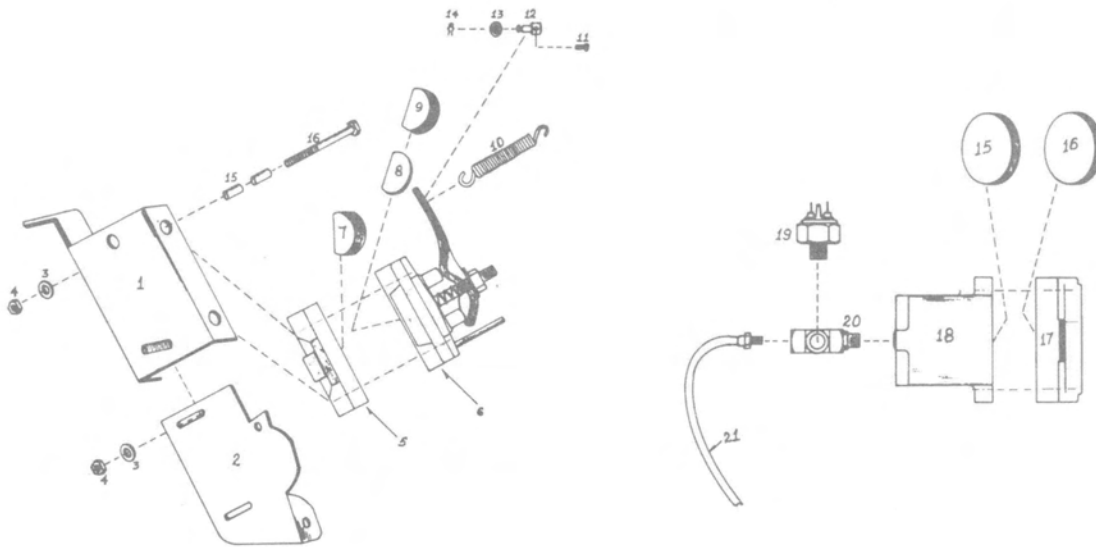

-DRIVE CLUTCH.

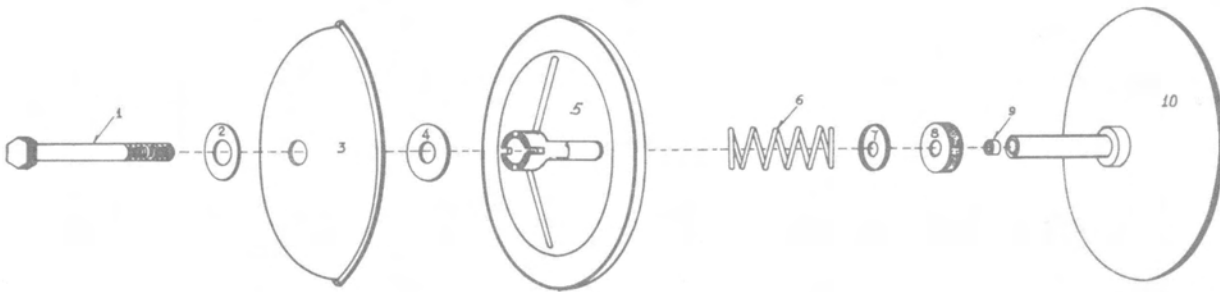


CONVERTER.

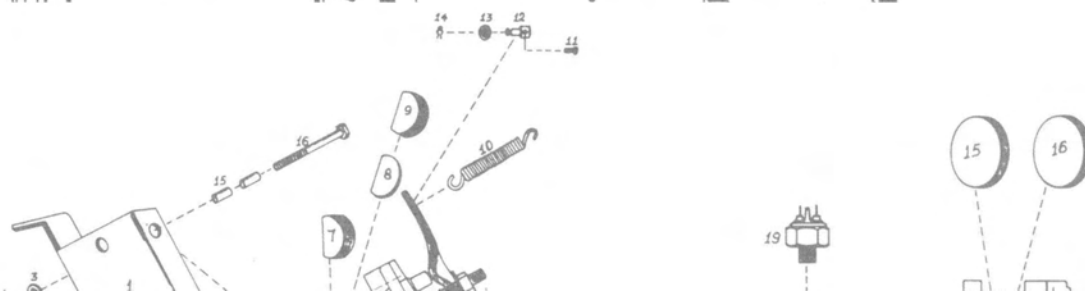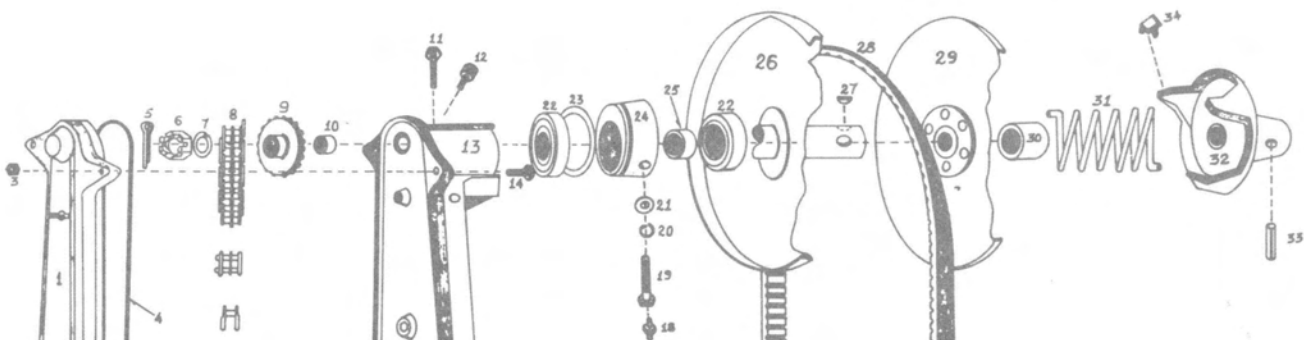


NO. ILLUSTR.	# BOA SKI	DESCRIPTION	MODEL				MK 11 R/T			S/S	
			MK 0	230	MK 1	295	MK 1	292 T	MK 1	399 T	S/S
BRAKE DRIVE CLUTCH CONVERTER											
1	S-06-02-006	Brake support welded	1		1	1	1			1	1
2	S-06-02-003	Brake holder	1		1	1	1			1	1
3	S-00-12-002	Washer.....	2		2	2	2			2	2
4	S-00-03-002	Nut	2		2	2	2			2	2
5	S-66-02-004	Interior support	1		1	1	1			1	1
6	S-66-02-005	Exterior support.....	1		1	1	1			1	1
7	S-66-02-003	Brake lining	1		1	1	1			1	1
8	S-66-02-006	Washer brake lining	1		1	1	1			1	1
9	S-66-02-002	Brake lining.....	1		1	1	1			1	1
10	S-00-05-002	Spring	1		1	1	1			1	1
11	S-00-07-005	Screw	1		1	1	1			1	1
12	S-06-01-001	Cable attachment.....	1		1	1	1			1	1
13	S-00-12-005	Washer	1		1	1	1			1	1
14	S-00-19-013	Retainer clip	1		1	1	1			1	1
15	S-06-03-020	Brake lining.....								1	1
16	S-06-03-021	Brake lining								1	1
17	S-06-03-015	Ext. support								1	1
18	S-06-03-016	Int. support.....								1	1
19	S-06-03-017	Brake switch light								1	1
20	S-06-03-018	Fitting								1	1
21	S-06-03-019	Cable brake hyd.....								1	1
-	S-66-02-001	Brake ass'y	1		1	1	1			1	1
-	S-06-03-022	Brake ass'y								1	1
DRIVE CLUTCH											
1	S-00-01-038	Bolt	1								
2	S-08-01-035	Washer	1								
3	S-09-01-030	Centrifugal regulator ass'y.....	1								
4	S-08-01-035	Washer	1								
5	S-09-01-053	Sliding plate ass'y	1								
6	S-69-01-001	Spring.....	1								
7	S-08-01-036	Spring holder	1								
8	S-00-10-003	Oilite bushing	1								
9	S-09-01-003	Sleeve.....	1								
10	S-09-02-001	Main shaft ass'y	1								
11	S-09-02-004	Clutch ass'y	1								
CONVERTER											
1	S-69-01-018	Chain case cover	1		1	1	1			1	1
2	S-00-04-002	Zut	1		1	1	1			1	1
3	S-00-03-002	Nut.....	8		8	8	8			8	8
4	S-69-01-019	Chain case seal	1		1	1	1			1	1
5	S-00-06-004	Cotter pin	1		1	1	1			1	1
6	S-00-03-013	Castelated nut.....	1		1	1	1			1	1
7	S-00-12-012	Lockwasher	1		1	1	1			1	1
8	S-69-01-032	Chain RC 35-2, 86 Pitch	1		1						
-	S-09-03-035	Chain RC 35-2, 84 pitch				1					
-	S-69-01-009	Chain RC 35-2, 88 pitch					1			1	1
9	S-09-03-036	Sproket 14 th double									
-	S-69-01-014	.. " 17 " " ..									
-	S-69-01-012	.. " 18 " " ..									
-	S-69-01-016	.. " 19 " " ..									
-	S-69-01-025	.. " 20 " " ..									
10	S-09-01-039	Spacer	1		1	1	1			1	1
11	S-09-02-009	)Bolt	2		2	2	2			2	2
12	S-64-01-001	Adjusting bolt.....	1		1	1	1			1	1
13	S-69-01-017	Chain case	1		1	1	1			1	1
14	S-00-01-028	Bolt	2		2	2	2			2	2
15	S-00-01-027	Bolt.....	2		2	2	2			2	2
16	S-00-01-029	Bolt									
17	S-09-03-034	Chain case spacer				1	1			1	1
18	S-00-04-002	Zut.....	1		1	1	1			1	1
19	S-09-01-059	Bolt	1		1	1	1			1	1
20	S-00-12-001	Lock washer	1		1	1	1			1	1
21	S-09-01-020	Washer.....	1		1	1	1			1	1
22	S-00-08-003	Bearing	2		2	2	2			2	2
23	S-69-01-022	"O" Ring	1		1	1	1			1	1
24	S-69-01-021	Bearing Hub.....	1		1	1	1			1	1
25	S-09-01-018	Spacer	1		1	1	1			1	1
26	S-09-01-017	Converter	1		1	1	1			1	1
27	S-00-19-011	Woodruff key.....	1		1	1	1			1	1
28	S-09-01-040	Drive belt	1		1	1	1			1	1
29	S-09-01-038	Sliding plate ass'y.	1		1	1	1			1	1
30	S-69-01-006	Oilite bushing.....	1		1	1	1			1	1
31	S-69-01-002	Torsion spring	1		1					1	1
-	S-69-01-003	Torsion spring				1	1			1	1
32	S-09-01-042	Converter cam.....	1		1	1	1			1	1
33	S-00-06-001	Roll pin	1		1	1	1			1	1
34	S-69-01-005	Nylon spacer	3		3	3	3			3	3

STEERING.

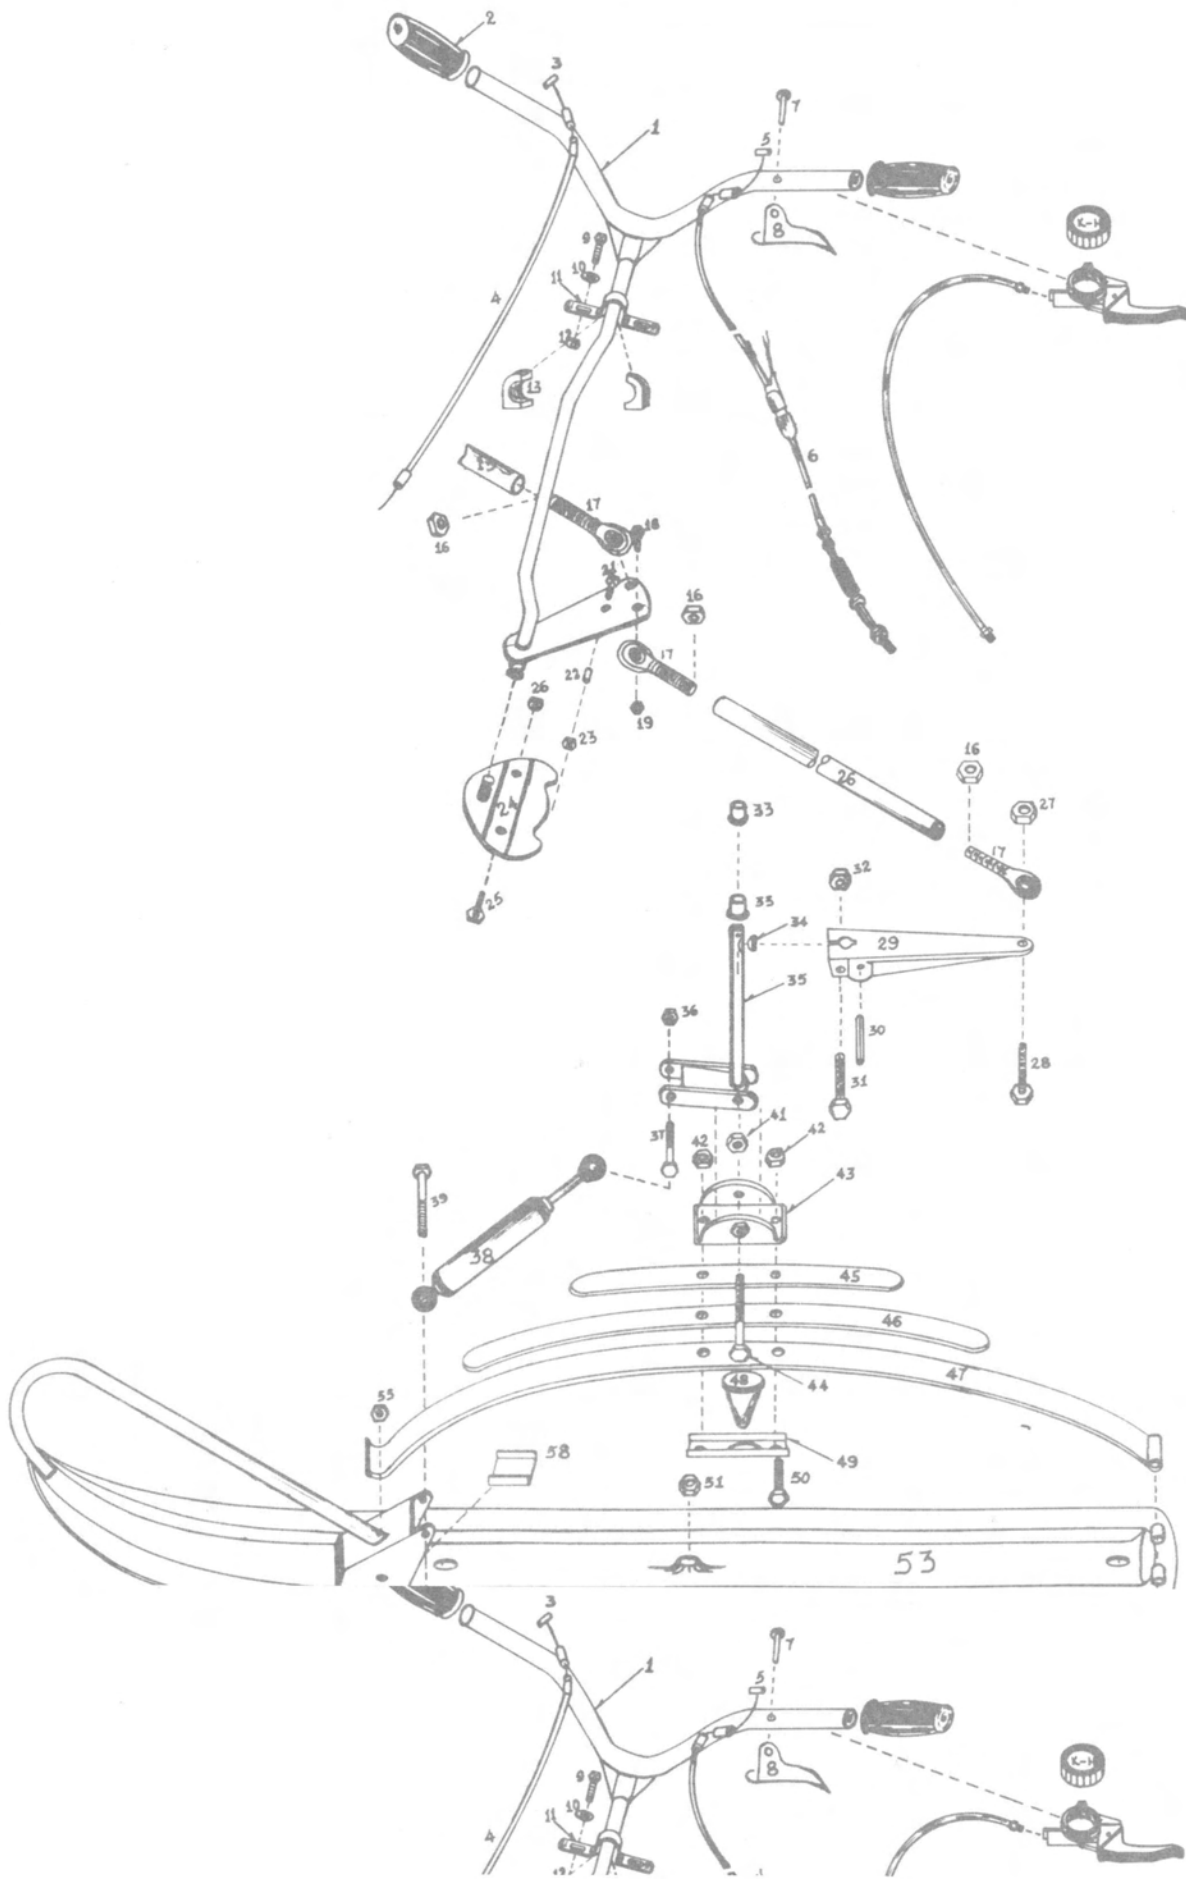


STEERING.

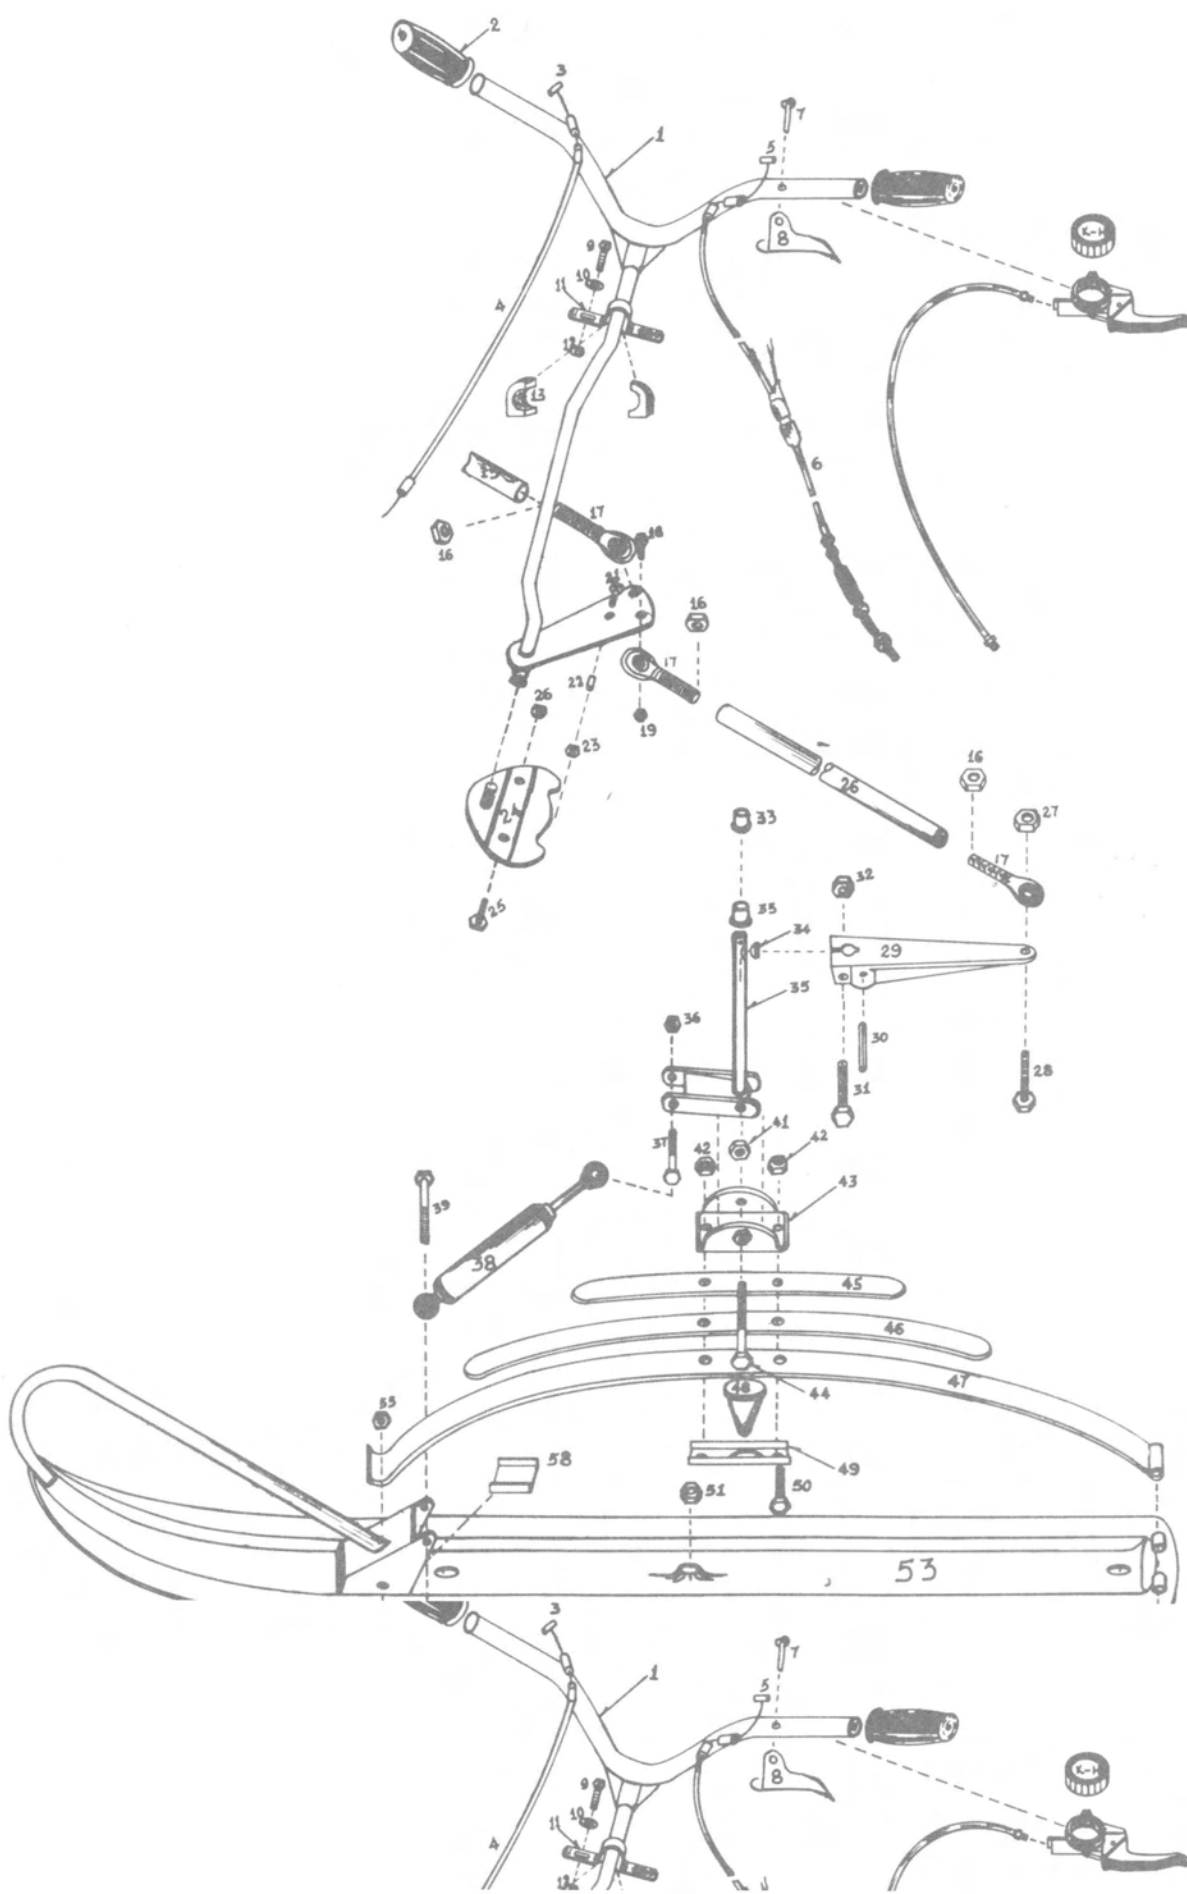

NO ILLUSTR.	# BOA SKI	STEERING		MODELS	MK 0 230	MK 1 295	MK 1 292 T	MK 1 399 T	MK 11 R/T 338T	MK 11 R/T 438T	MK 11 W/T 440T	S/S 399 T	S/S 438 T
		DESCRIPTION											
54	S-00-01-008	Bolt											
55	S-00-03-002	Nut											
56	S-62-01-004	Hinge pin.....											
57	S-00-06-002	Cotter pin											
58	S-02-03-030	Nylon slide											
-	S-02-03-031	Ski ass'y R.H.....											
-	S-02-03-032	" " L.H.											
-	S-00-03-033	Ski ass'y R.H.											
-	S-00-03-034	" " L.H.....											
-	S-00-03-035	Ski ass'y R.H.											
-	S-00-03-036	" " L.H.											
-	S-00-03-037	Ski ass'y R.H.....											
-	S-00-03-038	" " L.H.											
-	S-00-03-039	Ski ass'y R.H. (chrome)											
-	S-00-03-040	Ski ass'y L.H. (chrome).....											

FRONT AXLE.

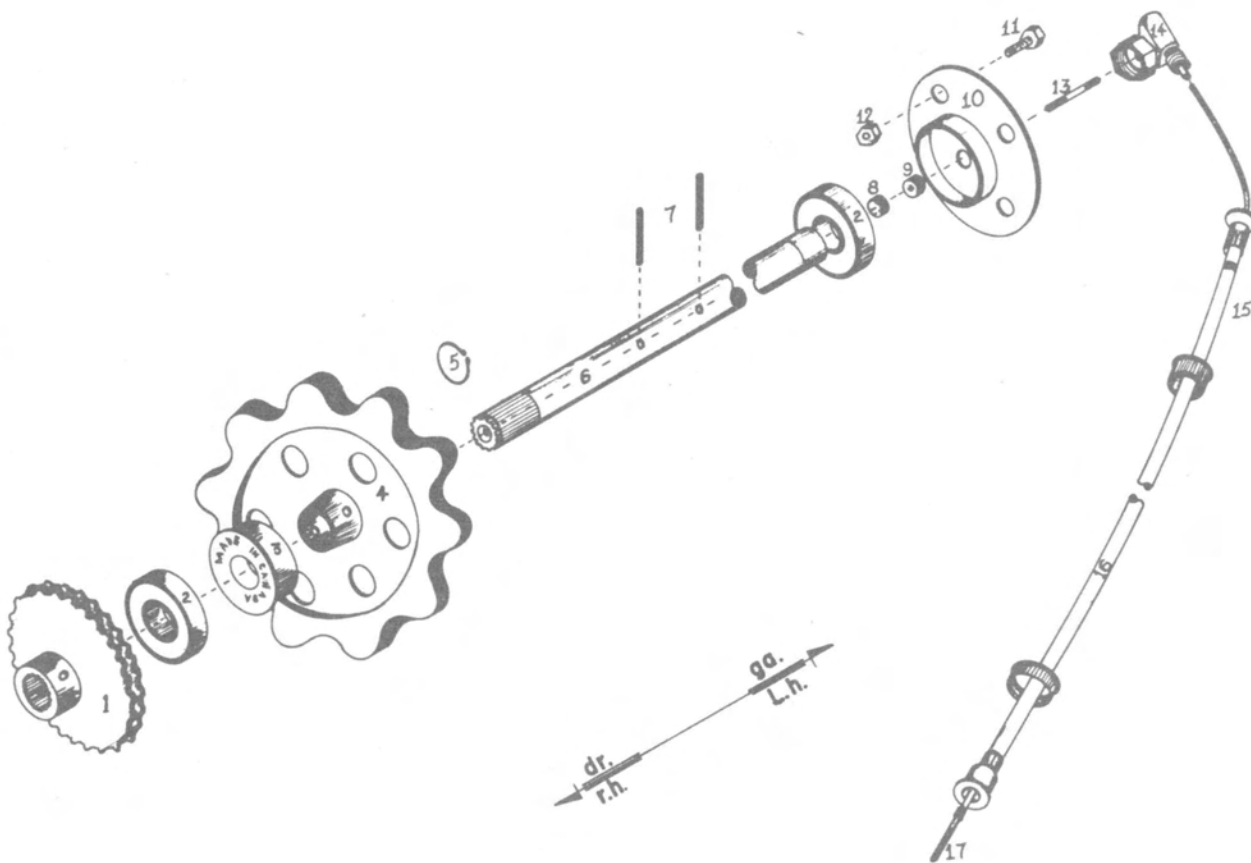

NO	ILLUST.	# BOA-SKI	FRONT AXLE		MODELE	MK 0	230	MK 1	295	MK 1	292 T	MK 1	399 T	MK 11 R/T	338 T	MK 11 R/T	438 T	MK 11 W/T	440 T	S/S	399 T	S/S	438 T
			DESCRIPTION																				
1	-	S-69-01-026	Driven sproket	35 dt double																			
-		S-69-01-015	"	" 36 " "																			
-		S-69-01-027	"	" 37 " "																			
-		S-69-01-013	"	" 38 " "																			
2	-	S-00-08-003	Bearing			1		1	1	1				1	1	1					1	1	
-		S-00-08-002	Bearing			1		1	1	1				1	1	1					1	1	
3	-	S-04-01-019	Grease seal.....			1		1	1	1				1	1	1					1	1	
4	-	S-04-01-026	Plastic drive sproket			2		2	2	2				2	2	2					2	2	
5	-	S-00-09-002	Snap ring			1		1	1	1				1	1	1					1	1	
6	-	S-04-01-033	Shaft.....			1																	
-		S-04-03-029	Shaft					1															
-		S-04-03-027	Shaft							1	1			1	1						1	1	
-		S-04-03-046	Shaft.....													1							
7	-	S-00-06-001	Roll Pin			4		4	4	4				4	4	4					4	4	
8	-	S-00-19-002	Plug			2																	
-		S-00-19-051	Plug.....					1	1	1				1	1	1					1	1	
9	-	S-04-03-047	Speedo joint					1	1	1				1	1	1					1	1	
10	-	S-04-01-010	Bearing housing			1																	
-		S-04-01-008	Bearing housing.....					1	1	1				1	1	1					1	1	
11	-	S-00-01-010	Bolt			4		4	4	4				4	4	4					4	4	
12	-	S-00-03-004	Nut			4		4	4	4				4	4	4					4	4	
13	-	S-00-15-002	Adaptor cable.....					1	1	1				1	1	1					1	1	
14	-	S-73-01-002	Angle drive					1	1	1				1	1	1					1	1	
15	-	S-73-01-001	Speedo cable ass'y					1	1	1													
-		S-13-03-121	Speedo cable ass'y.....											1	1	1					1	1	
16	-	S-73-01-033	Housing cable					1	1	1													
-		S-13-03-120	Housing cable											1	1	1					1	1	
17	-	S-73-01-034	Speedo cable.....					1	1	1													
-		S-13-03-119	Speedo cable											1	1	1					1	1	
-		S-04-03-028	Shaft ass'y			1																	
-		S-04-03-029	Shaft ass'y.....					1															
-		S-04-03-030	Shaft ass'y							1	1			1	1						1	1	
-		S-04-03-031	Shaft ass'y													1							

Exploded view diagram of a mechanical assembly. The diagram shows the following components and their assembly sequence:

- Bracket (1):** The base component with mounting holes.
- Fasteners (2-8, 10-12, 14-16):** Various screws, bolts, and washers used to secure the assembly.
- Lever (9):** A long, angled component that pivots on the bracket.
- Gear (12):** A spur gear mounted on a shaft.
- Shaft (17):** A long shaft passing through the lever and gear.
- Coupling (19):** A component that connects the shaft (17) to another shaft.
- Gear (18):** A larger spur gear mounted on the end of the shaft.
- Rod (20):** A long rod passing through the lever and gear assembly.


Directional arrows indicate the orientation of the assembly:

- dr. r.h.:** Drive Right Hand.
- ga. L.h.:** Gear Left Hand.





NO	ILLUSTR.		REAR AXLE	DESCRIPTION	MODEL																		
					MK	0	230	MK	1	295	MK	1	292	T	MK	1	399	T	S/S	399	T	S/S	438
1	S-00-01-008			Bolt	2																		
2	S-00-03-002			Nut	4																		
3	S-00-12-002			Flat washer.....	6																		
4	S-64-01-001			Adjusting bolt	2																		
5	S-04-01-014			Adjusting angle Lh	1																		
-	S-04-02-001			" " L.H.....																			
-	S-04-01-013			Adjusting angle R.H.	1																		
-	S-04-02-002			Adjusting angle R.H.																			
6	S-00-01-009			Bolt.....	2																		
7	S-00-01-007			Bolt	2																		
8	S-00-04-001			Grease fitting	2																		
9	S-04-01-015			Link plate R.H.....	1																		
-	S-04-01-016			Link plate L.H.	1																		
-	S-04-03-038			Link plate R.H.																			
-	S-04-03-039			Link plate L.H.....																			
-	S-00-07-002			Stopper screw	2																		
10	S-00-08-003			Bearing	2																		
11	S-04-01-019			Grease seal.....	2																		
12	S-04-01-022			Rubber Sproket	2																		
13	S-64-01-002			Link spring R.H.	1																		
-	S-64-01-003			Link spring L.H.....	1																		
14	S-04-01-012			Rubber Bushing	2																		
15	S-04-01-011			Forming washer	2																		
16	S-00-03-003			Nut.....	2																		
17	S-04-01-034			Shaft	1																		
-	S-04-01-004			Shaft																			
-	S-04-01-005			Shaft.....																			
18	S-00-06-001			Roll pin	4																		
19	S-00-19-002			Plug	2																		
20	S-04-03-045			Reinforcement link plate.....																			
-	S-04-03-048			" " "																			
21	S-04-01-037			Shaft ass'y	1																		
-	S-04-03-035			Shaft ass'y																			
-	S-04-03-036			Shaft ass'y																			

BODY.

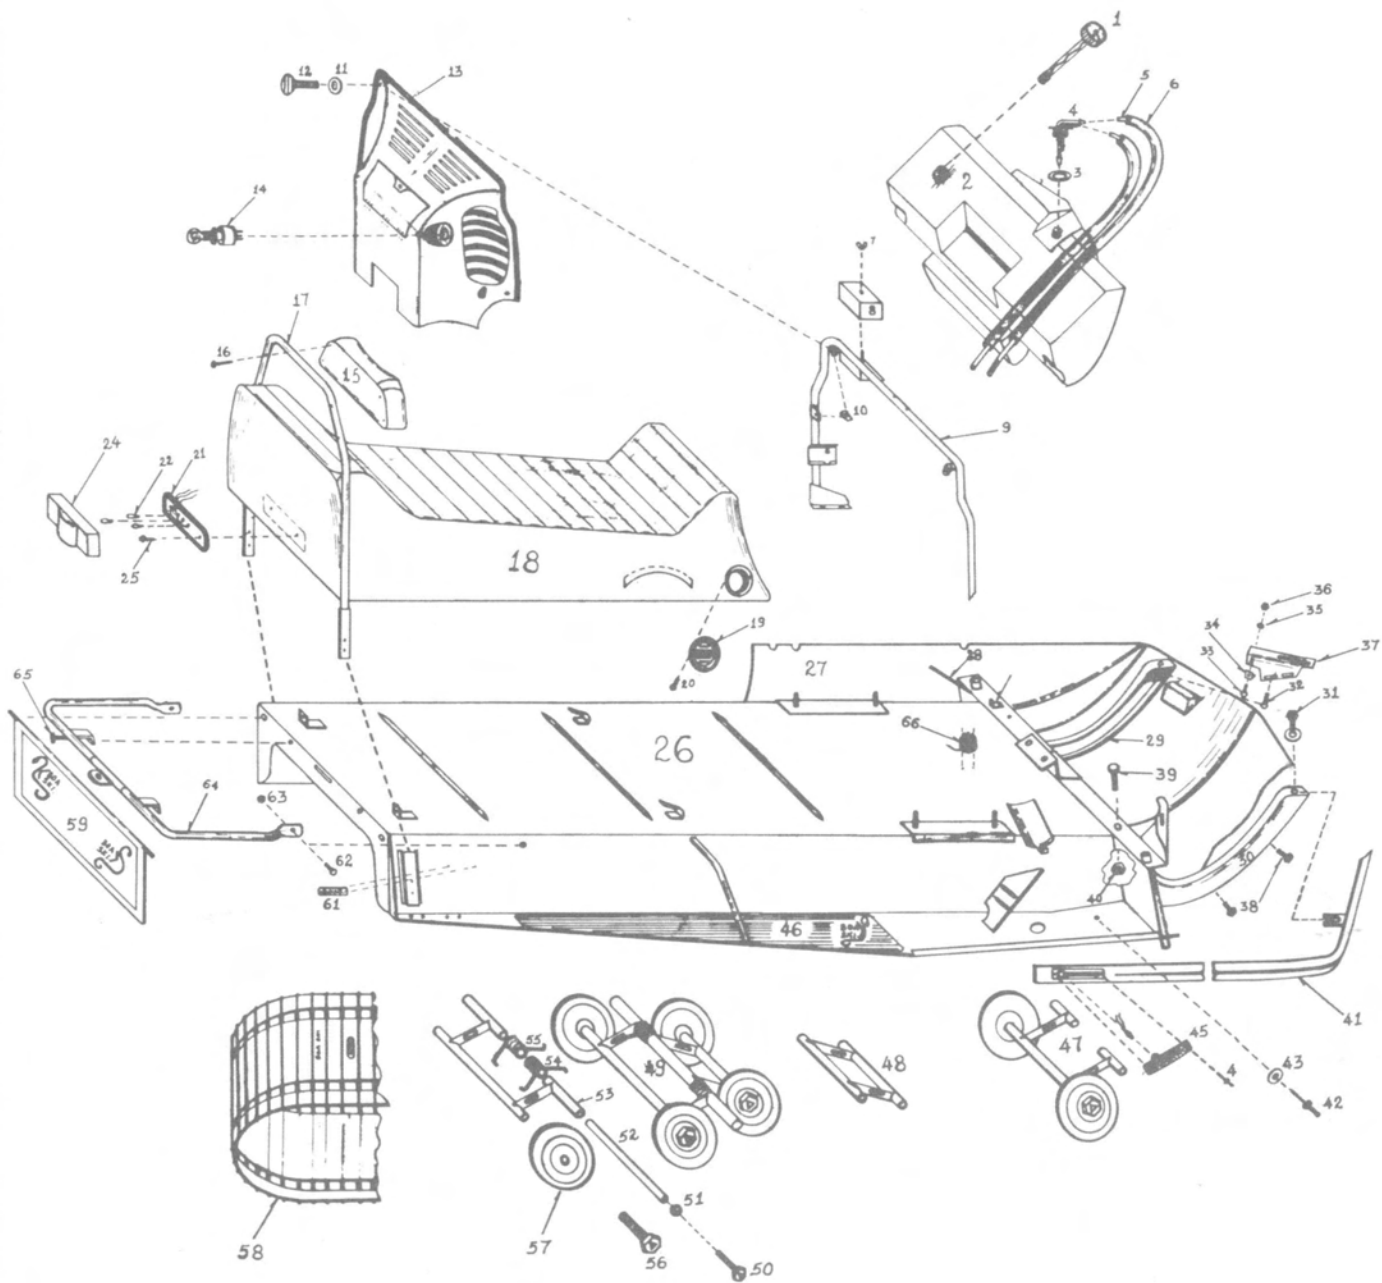


NO ILLUSTR.	# BOA SKI	BODY	DESCRIPTION	MODEL E				MK 1	MK 1	MK 1	MK 1	MK 11 R/T 338 T	MK 11 R/T 438 T	MK 11 W/T 440 T	S/S 399 T	S/S 438 T
				0	230	295	292 T									
1	S-00-19-055		Fuel tank cap	1		1	1					1	1	1	1	1
2	S-10-03-031		Fuel tank	1												
3	S-10-03-032		" "			1	1	1				1	1	1	1	1
4	S-10-03-043		Rubber washer	1		1	1	1				1	1	1	1	1
5	S-10-03-034		Adaptor	1		1										
6	S-10-03-035		" "			1	1	1				1	1	1	1	1
7	S-10-03-040		Line fuel	1		1	2	2				2	2	2	2	2
8	S-10-03-044		Insulation	1		1	2	2				2	2	2	2	2
9	S-00-03-027		Wing nut			1	1	1				1	1	1	1	1
10	S-07-03-070		Distributor box			1	1	1				1	1	1	1	1
11	S-07-03-059		Steering support	1												
12	S-07-03-060		" "			1	1	1								
13	S-07-03-061		" "									1	1	1	1	1
14	S-00-03-008		Speed clip			2	2	2				4	4	4	4	4
15	S-00-12-004		Washer.....			2	2	2				4	4	4	4	4
16	S-00-01-042		Thumbscrew			2	2	2				4	4	4	4	4
17	S-13-03-086		Engine cover			1						4	4	4	4	4
18	S-13-03-087		Engine cover.....				1	1								
19	S-13-03-088		Engine cover									1	1	1	1	1
20	S-00-13-004		Ignition switch	1		1	1	1				1	1	1	1	1
21	S-00-14-001		Speedometer.....			1	1	1								
22	S-73-01-001		Speedo cable ass'y			1	1	1								
23	S-11-03-043		Back rest	1												
24	S-11-03-044		Back rest.....			1	1	1								
25	S-11-03-045		Back rest									1	1		1	1
26	S-11-03-046		Back rest													
27	S-00-01-064		Screw.....	4		4	4	4				4	4	4	4	4
28	S-11-03-039		Back rest support	1												
29	S-11-03-040		" "			1	1	1								
30	S-11-03-041		" "									1	1		1	1
31	S-11-03-042		" "													
32	S-11-03-035		Back rest ass'y	1												
33	S-11-03-036		" "			1	1	1								
34	S-11-03-037		" "									1	1		1	1
35	S-11-03-038		" "													
36	S-11-03-030		Seat.....	1												
37	S-11-03-031		Seat			1	1	1				1	1		1	1
38	S-11-03-032		Seat													
39	S-11-03-033		Seat.....									1				
40	S-11-03-034		Seat grill									2	2	2	2	2
41	S-00-07-004		Grill screw									6	6	6	6	6
42	S-00-13-051		Tail light.....	1		1	1	1				1	1	1	1	1
43	S-00-13-014		Bulb	3		3	3	3				3	3	3	3	3
44	S-00-13-092		Tail light housing	1		1	1	1				1	1	1	1	1
45	S-00-07-007		Screw.....	2		2	2	2				2	2	2	2	2
46	S-01-03-119		Body welded	1												
47	S-01-03-106		Body welded			1	1	1								
48	S-01-03-107		" "									1	1			
49	S-01-03-120		" "													
50	S-01-03-108		" "													
51	S-01-03-121		Bottom plate.....	1												
52	S-01-03-112		" "			1	1	1				1	1		1	1
53	S-01-03-113		" "													
54	S-01-03-122		" "													
55	S-06-02-001		Rod			1	1	1				1	1	1	1	1
56	S-01-03-114		Bottom plate support R.H.	1												
57	S-01-03-115		" " " L.H.....	1												
58	S-01-03-123		" " " R.H.			1	1	1				1	1	1	1	1
59	S-01-03-124		" " " L.H.			1	1	1				1	1	1	1	1
60	S-00-01-035		Bolt.....	2		2	2	2				2	2	2	2	2
61	S-00-12-002		Washer	2		2	2	2				2	2	2	2	2
62	S-00-01-075		Bolt	4		4	4	4				4	4	4	4	4
63	S-00-03-007		Nut.....	4		4	4	4				4	4	4	4	4
64	S-00-12-004		Washer	4		4	4	4				4	4	4	4	4
65	S-00-01-010		Bolt	2		2	2	2				2	2	2	2	2
66	S-10-03-033		Holder tank.....	2		2	2	2				2	2	2	2	2
67	S-00-12-004		Washer	2		2	2	2				2	2	2	2	2
68	S-00-03-004		Nut	2		2	2	2				2	2	2	2	2
69	S-13-03-124		Inferior hinge R.H.....	1		1	1	1				1	1	1	1	1
70	S-13-03-125		Inf. hinge L.H.	1		1	1	1				1	1	1	1	1
71	S-00-01-058		Bolt	4		4	4	4				4	4	4	4	4
72	S-00-01-004		Bolt.....	2		2	2	2				2	2	2	2	2
73	S-00-03-002		Nut	2		2	2	2				2	2	2	2	2
74	S-14-03-035		Front bumper	1												
75	S-14-03-036		" "			1	1	1								
76	S-14-03-037		" "									1	1	1	1	1
77	S-00-02-002		Pop rivet	2		2	2	2				2	2	2	2	2
78	S-00-12-016		Washer.....	2		2	2	2				2	2	2	2	2
79	S-00-02-010		Pop rivet	4		4	4	4				4	4	4	4	4
80	S-00-13-060		Reflector	2		2	2	2				2	2	2	2	2
81	S-01-03-125		Foot pad R.H.....	1												
82	S-01-03-126		" " L.H.	1												
83	S-61-01-001		" " R.H.			1	1	1				1	1		1	1
84	S-61-01-002		" " L.H.....			1	1	1				1	1		1	1

BODY.

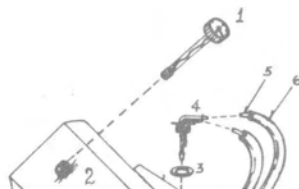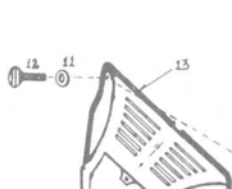

NO ILLUSTR.	# BOA SKI	BODY	MODEL E		MK 1	295	MK 1	292 T	MK 1	399 T	MK 11 R/T 338 T	MK 11 R/T 438 T	MK 11 W/T 440 T	S/S	399 T	S/S	438 T
		DESCRIPTION	0	230													
-	S-01-03-127	Foot pad R.H.															
-	S-01-03-128	Foot pad L.H.															
47	S-05-01-013	Suspension ass'y.....															
-	S-05-01-020	Suspension ass'y															
48	S-05-01-005	Interior support															
-	S-05-01-018	" "															
49	S-05-01-011	Suspension ass															
-	S-05-01-012	" "															
-	S-05-01-021	" "															
50	S-00-01-005	Bolt															
51	S-00-12-001	Lockwasher															
52	S-05-01-009	Shaft aluminium.....															
-	S-05-01-010	" "															
-	S-05-01-023	" "															
53	S-05-01-024	External support.....															
-	S-05-01-008	" "															
-	S-05-01-015	" "															
54	S-65-01-001	Spring R.H.....															
55	S-65-01-002	Spring L.H.															
56	S-00-01-006	Bolt															
57	S-00-19-041	Nylon wheel.....															
58	S-03-01-045	Track															
-	S-03-01-003	Track															
-	S-03-02-001	Track.....															
-	S-03-01-004	Track															
-	S-03-02-020	Track															
59	S-01-01-099	Snow flap.....															
-	S-01-01-100	" "															
61	S-00-13-028	Reflector															
62	S-00-01-018	Bolt.....															
63	S-00-03-007	Nut															
64	S-14-03-040	Rear bumper ass'y															
-	S-14-03-041	" " " "															
65	S-00-01-010	Bolt															
-	S-00-03-004	Nut															
66	S-00-13-093	Zener diode.....															
-	S-00-13-094	Zener diode															
-	S-05-03-001	Suspension ass'y															
-	S-05-03-002	Nylon slide (suspension).....															

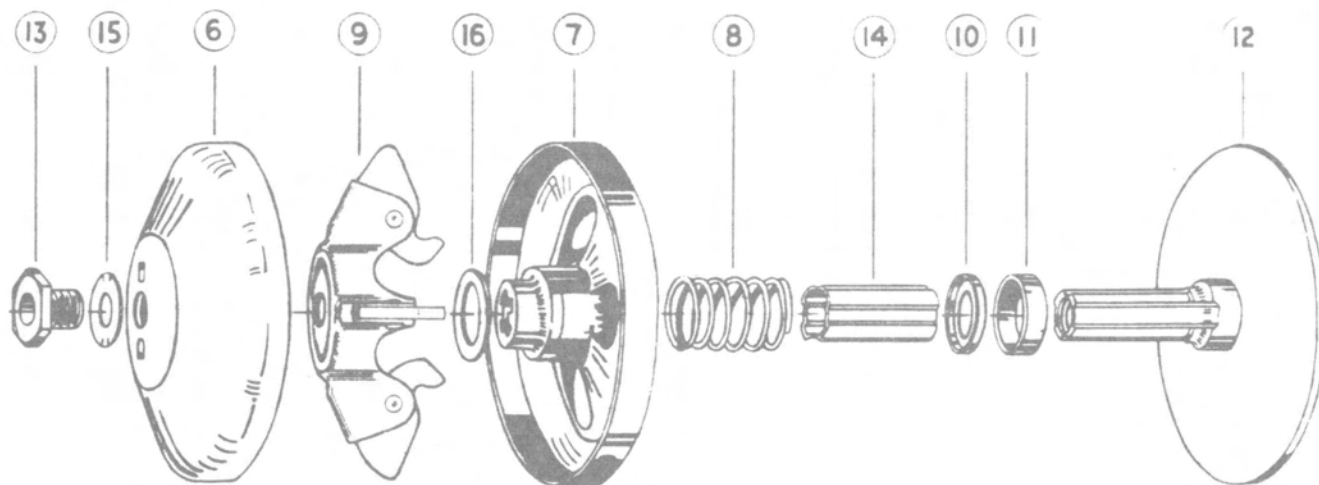



ILLUSTRATED PARTS LIST FOR SLM DRIVE PULLEY SERIES 200

CUSTOMER: ALSPORT (BOA-SKI)

CLUTCH MODEL NO. 4753832 FOR ENGINE MODEL HIRTH 270 R03 - 438cc
271 R03 - 399cc

ITEM NO.	DESCRIPTION	QTY REQ.	SLM PT.NO. FOR BELT SIZE 1-3/16	ALSPORT PT. NO.
	Drive pulley complete		4753832	
6	Safety Cover	1	0006	
7	Synchroniser	1	2407	
8	Coil Spring	1	4508	
9	Spider Assy.	1	01009	
10	Spring Collar	1	0210	
11	Idler Bearing	1	0211	
12	Drive plate	1	2412	
13	Captive Bolt	1	0213	
14	Nylon bushing	1	0214A	
15	Lock Washer	1	0215	

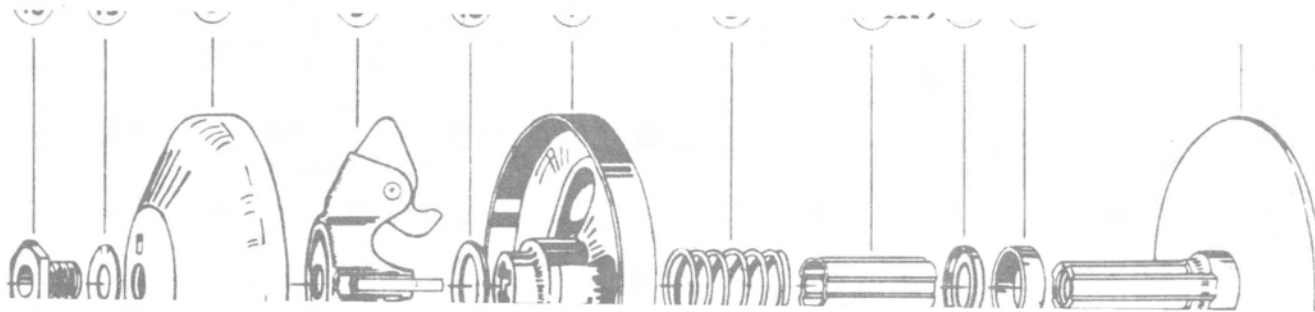

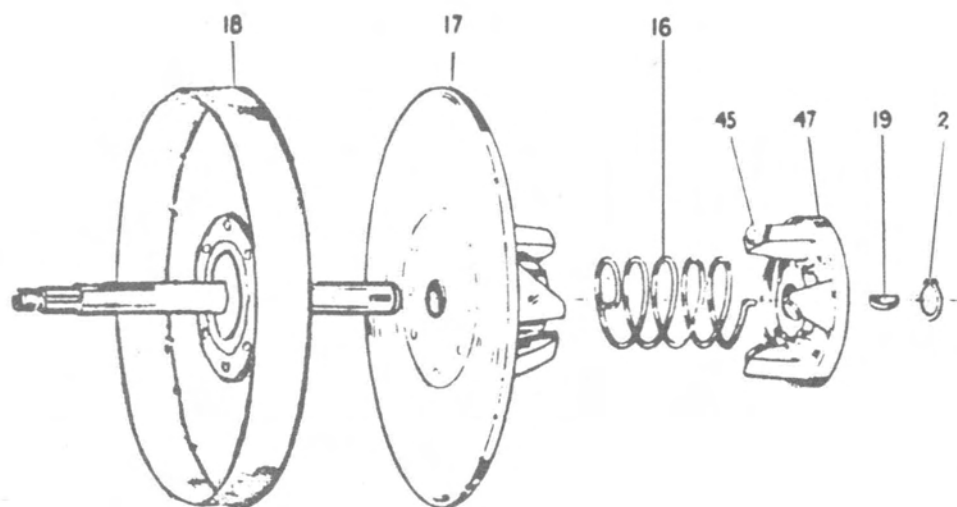


ILLUSTRATED PARTS LIST FOR DRIVEN INTEGRAL SERIES 250-F

CUSTOMER: ALSPORT (BOA-SKI)

INTEGRAL CONVERTER MODEL NUMBER A2-3168
N.B. TO FIT ENGINE MODELS 292 - 338 - 399 - 438cc

<u>ITEM NO.</u>	<u>DESCRIPTION</u>	<u>QTY REQ.</u>	<u>SLM PT. NO.</u> <u>FOR BELT SIZE</u> <u>1-3/16</u>	<u>ALSPORT PT. NO.</u>
	Converter Complete		A2-3168	
2	Circlip	1	1002	
16	Spring	1	1636	
17	Driven Sheave (Cam)	1	23168A	
18	Driven Sheave (Shaft)	1	23168B-F	
19	Key	1	1019	
45	Slides (Nylon)	3	1045	
47	Cam	1	2A47	

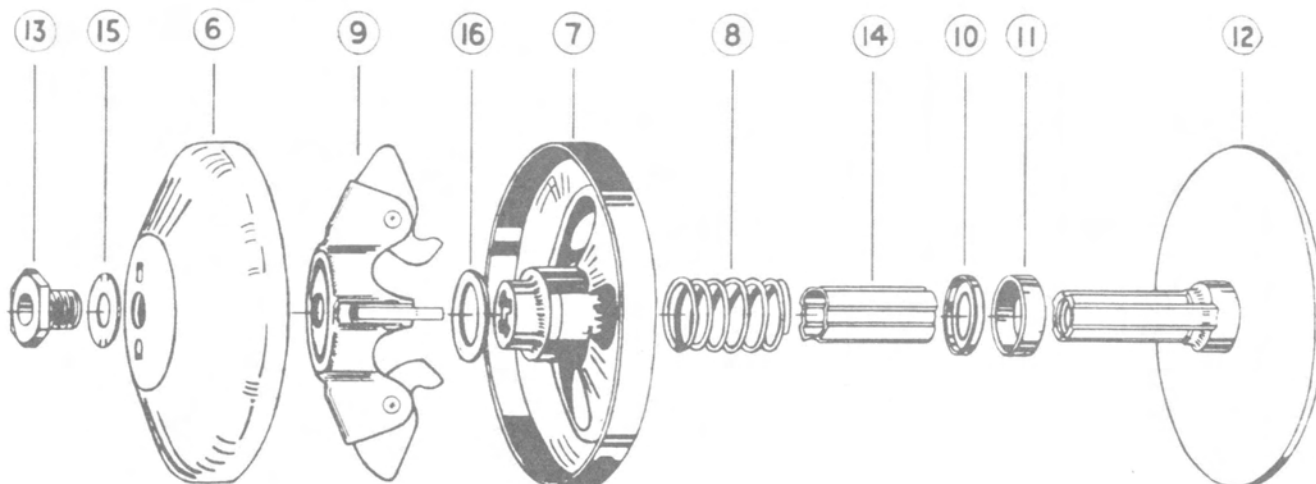

ILLUSTRATED PARTS LIST FOR SLM DRIVE PULLEY SERIES 200

CUSTOMER: ALSPORT (BOA-SKI)

CLUTCH MODEL NO. 4752838 FOR ENGINE MODEL HIRTH 260 R03 - 338cc
261 R03 - 292cc

<u>ITEM NO.</u>	<u>DESCRIPTION</u>	<u>QTY REQ.</u>	<u>SLM PT.NO. FOR BELT SIZE 1-3/16</u>	<u>ALSPORT PT. NO.</u>
	Drive pulley Complete		4752838	
6	Safety Cover	1	0006	
7	Synchroniser	1	2407	
8	Coil Spring	1	4508	
9	Spider Assy.	1	6009	
10	Spring Collar	1	0210	
11	Idler Bearing	1	0211	
12	Drive Plate	1	2412	
13	Captive Bolt	1	0213	
14	Nylon Bushing	1	0214A	
15	Lock Washer	1	0215	

