


E *EVINRUDE* **SKEETER**

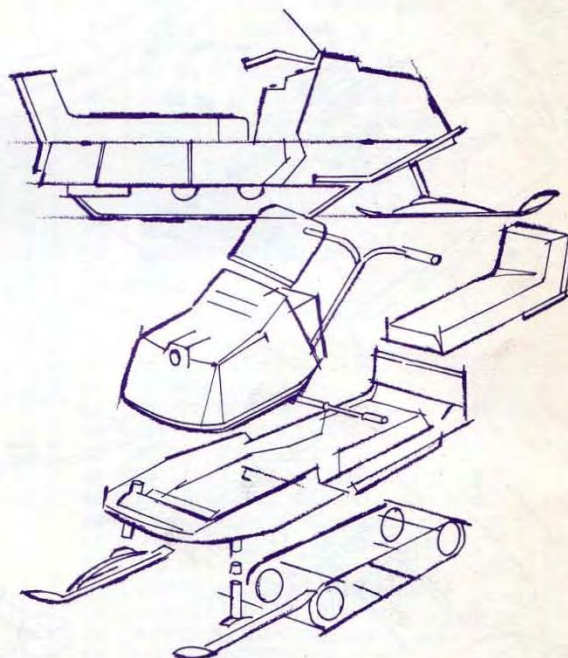

PARTS CATALOG


MODELS

E2010 • E2010-A • E2015 • E2015-A

25 CENTS PER COPY

PART NO. 261891 ITEM NO. 4758 FINAL EDITION 2/71 LITHO U.S.A. © OUTBOARD MARINE CORPORATION 1971 ALL RIGHTS RESERVED

HOOD & WINDSHIELD GROUP

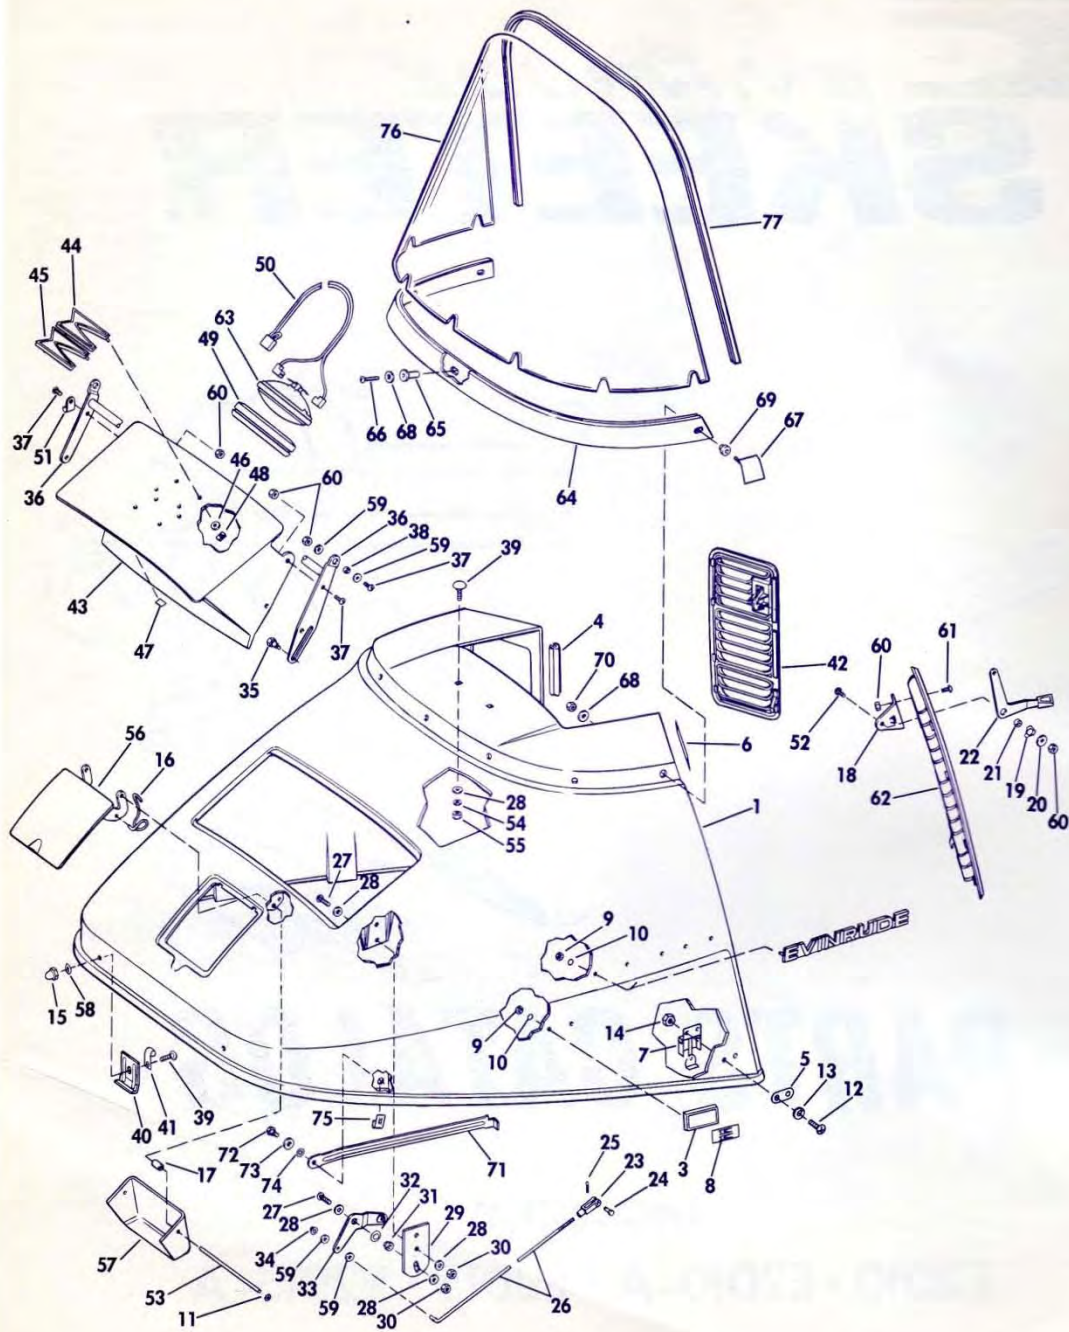

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

HOOD & WINDSHIELD GROUP


REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	290634	HOOD ASSY	1	41	310620	CLAMP, Cable, headlight	1
2	206596	. APPLIQUE "EVINRUDE"	2	42	261532	LOUVER, R.H.	1
3	206646	. APPLIQUE, Side	2	43	290616	HEADLIGHT HSG ASSY	1
4	261544	. SEAL, Shroud	1	44	261785	. EMBLEM, Red	1
5	262053	. PLATE, Latch	2	45	261786	. EMBLEM, Blue	1
6	261773	. METAL CAL, Headlight	1	46	901681	. WASHER, Emblem	8
7	262056	. LATCH	2	47	261585	. BUMPER, Hsg	4
8	261778	. PLATE, Applique, side	2	48	901702	. SPEEDNUT, Emblem	8
9	313973	. FASTENER, Applique	14	49	260389	RETAINING RING, Headlight	1
10	314303	. O-RING, Fastener	14	50	290468	HARNESS ASSY, Headlight	1
11	261869	. PUSHNUT, Hinge	2	51	112191	CLAMP, Cable	1
12	315426	. SCREW, Latch mtg	4	52	800215	SCREW, Lever mtg	1
13	306990	. LOCKWASHER	4	53	261870	HINGE PIN	1
14	302437	. NUT, Latch mtg	4	54	306396	LOCKWASHER	2
15	262087	ACORN NUT, Hinge	2	55	130728	NUT	2
16	261867	SPRING, Gas tank door	2	56	261871	DOOR, Gas tank	1
17	261868	SPACER, Hinge	2	57	261864	COVER, Hinge	1
18	261691	BRACKET, Headlight lever	1	58	262086	WASHER, Hinge	2
19	261462	SPRING WASHER, Lever	1	59	308089	WASHER	6
20	261459	WASHER, Lever to brkt	1	60	260385	LOCKNUT	9
21	261472	SPACER, Lever pivot	1	61	306514	SCREW, Brkt mtg	2
22	290524	LEVER ASSY, Headlight	1	62	261533	LOUVER, L.H.	1
23	261692	CLEVIS, Headlight	1	63	261740	HEADLIGHT	1
24	261695	CLEVIS PIN	1	64	261628	TRIM, Windshield	1
25	306370	COTTER PIN	1	65	261622	RAWL NUT	5
26	261687	ROD, Headlight actuator	1	66	314053	SCREW, Windshield	5
27	130600	SCREW, Headlight brkt	3	67	290498	CLIP, Windshield, L.H.	1
28	302471	WASHER, Brkt	8	67	290497	CLIP, Windshield, R.H.	1
29	261686	BRACKET, Headlight mtg	1	68	308279	WASHER, Windshield	7
30	800059	LOCKNUT	3	69	261642	SPACER, Clip mtg	2
31	261693	SPACER, Lever	1	70	800053	LOCKNUT, Clip	2
32	261738	SPRING WASHER, Lever	1	71	261358	RESTRAINT, Hood	1
33	290525	LEVER ASSY, Hsg	1	72	261749	SCREW, Restraint	1
34	261460	PUSHNUT, Rod to lever	1	73	308279	WASHER, Restraint	1
35	261739	SHOULDER SCREW, Arm to lvr	1	74	800303	SPRING WASHER, Restraint	1
36	290628	PIVOT ARM ASSY	1	75	261576	NUT, Restraint	1
37	306286	SCREW, Arm to hsg	6	76	290483	WINDSHIELD ASSY	1
38	261696	SPACER, Pivot arm	2	77	261590	. TRIM	1
39	261988	STEP BOLT	4	*	290617	DECAL SET	1
40	261452	PLATE, Hinge	2				

*Not Shown

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

SKI & STEERING GROUP

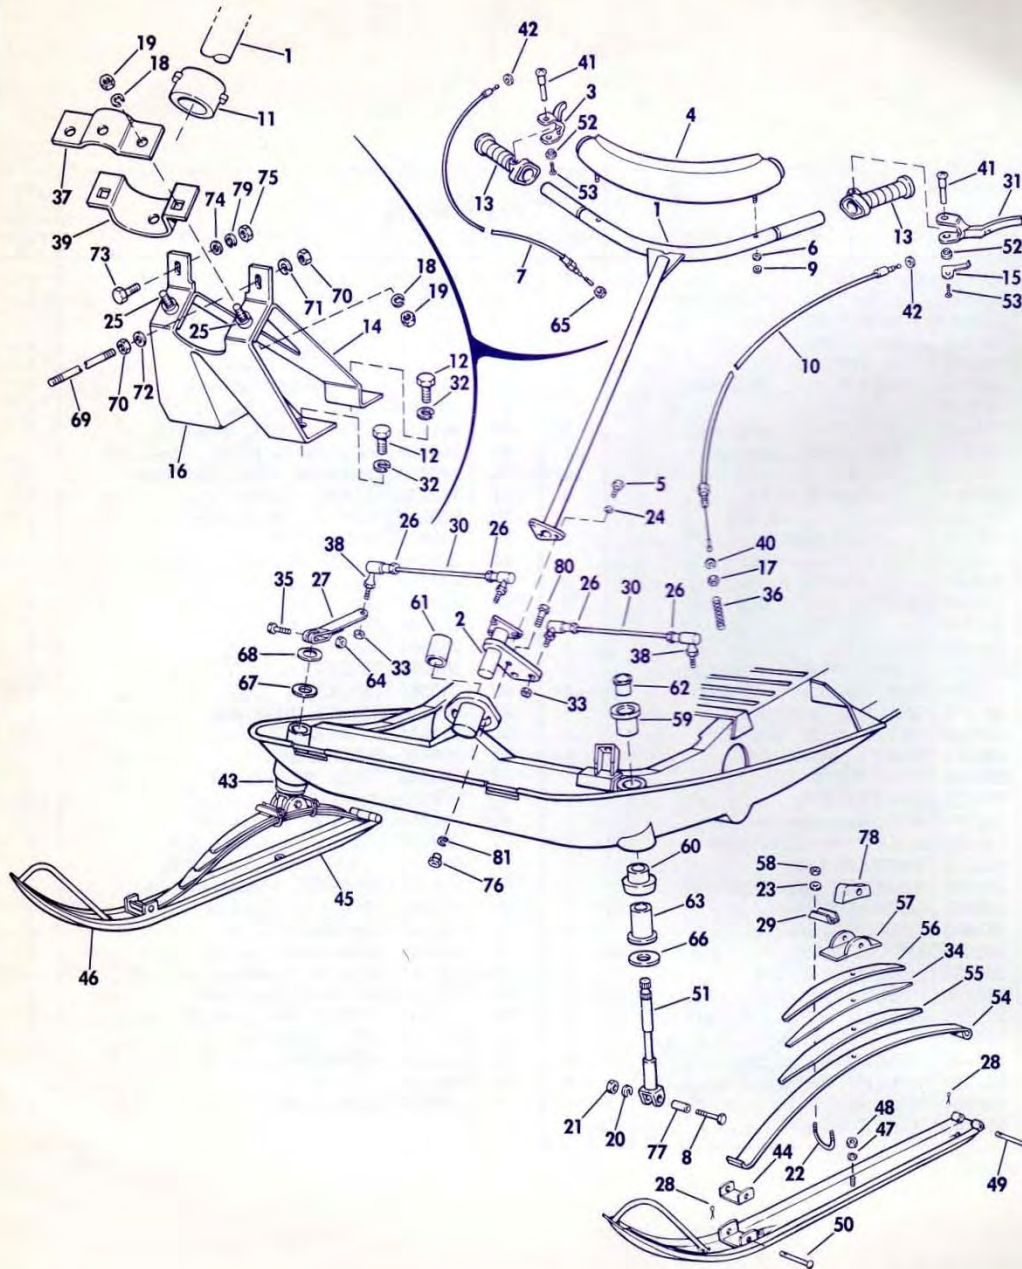

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY


SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

SKI FRAME & STEERING GROUP

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	290450	STRG COL ASSY., Upper	1	42	203470	RETAINING RING, Cable	2
2	290526	STRG COL ASSY., Lower	1	43	261393	SKI COLUMN, R.H.	1
3	290473	THROTTLE LEVER ASSY.	1	44	404261	PLATE, Wear	2
4	290478	CUSHION ASSY., Handlebar	1	45	290427	SKI ASSEMBLY	2
5	306487	SCREW, Steering column	3	46	290426	RUNNER, Ski	2
6	315076	WASHER, Cushion mtg	2	47	120196	WASHER, Ski to runner	4
7	290466	CABLE ASSY., Throttle	1	48	800290	NUT, Ski to runner	4
8	306870	SCREW, Saddle to column	2	49	261904	RETAINING PIN, Rear	2
9	800059	LOCKNUT, Cushion mtg	2	50	404263	RETAINING PIN, Front	2
10	290484	CABLE ASSY., Brake	1	51	261394	SKI COLUMN, L.H.	1
11	403932	BUSHING, Column	1	52	261741	SPACER, Lever mtg	2
12	306414	SCREW, Support to engine	3	53	261569	SCREW, Grip mtg	2
13	261546	GRIP, Handle	2	54	261381	MAIN LEAF	2
14	261362	SUPPORT, Steering column	1	55	261376	CENTER LEAF	2
15	261563	LOCK, Brake lever	1	56	261377	TOP LEAF	2
16	261364	SUPPORT, Strg col, upper	1	57	290425	SADDLE & PIN ASSY.	2
17	306390	NUT, Brake cable	1	58	800290	LOCKNUT	8
18	306325	LOCKWASHER, Yoke	4	59	290434	UPPER MOUNT, Column	2
19	302103	JAM NUT, Yoke	4	60	261396	LOWER MOUNT, Column	2
20	120177	LOCKWASHER, Saddle to col	2	61	290423	BUSHING ASSY., Strg column	1
21	403864	NUT, Saddle to column	2	62	261397	BUSHING, Upper	2
22	261379	U-BOLT, Saddle	4	63	261466	BUSHING, Lower	2
23	306371	WASHER, U-bolt	8	64	112615	LOCKNUT, Arm to column	2
24	306396	WASHER, Strg col, upr to lwr	3	65	302103	NUT, Throttle cable	1
25	379061	RUBBER MOUNT ASSY.	2	66	261399	WASHER, Ski column	2
26	306388	NUT, Tie rod to ball joint	4	67	404443	WASHER, Ski column	2
27	261395	ARM, Steering	2	68	261879	SPRING WASHER, Column	2
28	306956	COTTER PIN	4	69	261539	STUD, Striker latch	1
29	261375	RETAINING BAR	4	70	302861	NUT, Latch stud	2
30	261359	ROD, Column to arm	2	71	306325	LOCKWASHER, Stud	1
31	290474	BRAKE LEVER ASSY.	1	72	120196	WASHER, Stud	1
32	120177	LOCKWASHER, Sprt to engine	3	73	306487	SCREW, Brkt to support	1
33	112615	LOCKNUT	4	74	302471	WASHER, Brkt to support	1
34	261863	INTERMEDIATE LEAF	2	75	301472	NUT, Brkt to support	1
35	405355	SCREW, Arm to column	2	76	261664	RETAINER, Strg column	1
36	261880	SPRING, Brake return	1	77	261433	BUSHING, Spring mtg	2
37	261877	YOKE, Bushing, upper	1	78	261432	STOP, Ski	2
38	821208	BALL JOINT	4	79	306396	LOCKWASHER, Brkt to support	1
39	261878	YOKE, Bushing, lower	1	80	314515	SCREW, Rtnr to strg column	1
40	303269	LOCKWASHER, Brake cable	1	81	306325	LOCKWASHER, Retainer	1
41	261564	PIN, Grip mtg	2				

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

INSTRUMENT PANEL GROUP

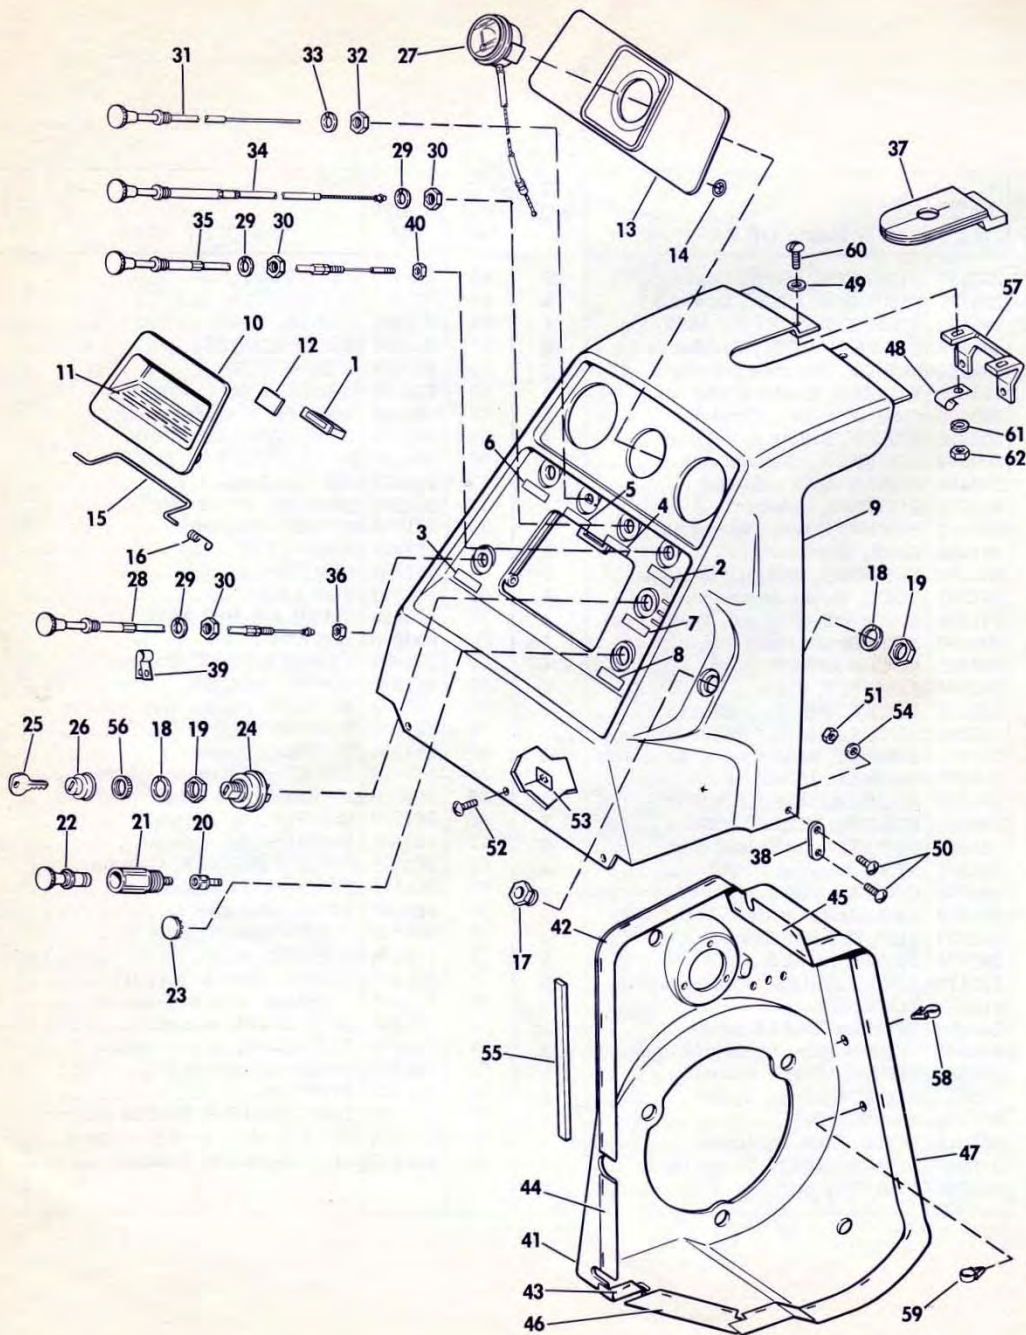

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
 SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

17503

INSTRUMENT PANEL GROUP

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	261502	MAGNETIC CATCH	1	31	290464	CHOKE CABLE ASSY	1
2	261511	METAL CAL, Primer pump . . .	1	32	306388	NUT, Choke cable	1
3	261512	METAL CAL, Neutral lockout . .	1	33	306993	LOCKWASHER, Choke cable . .	1
4	261513	METAL CAL, Comp relief	1	34	261508	COMPR RLSE CABLE ASSY . . .	1
5	261514	METAL CAL, Choke	1	35	290465	PRIMER CABLE ASSY	1
6	261515	METAL CAL, Reverse	1	36	302103	NUT, Neutral lockout cable . . .	2
7	261517	METAL CAL, Ign & lights	1	37	261630	SEAL, Column to panel	1
††8	261518	METAL CAL, Lighter	1	38	261567	BRACKET	1
†8	261424	METAL CAL, Blank	1	39	112191	CLAMP, Neutral cable	1
†9	290615	INSTR PANEL & DECAL ASSY . .	1	40	302103	JAM NUT, Primer cable	1
††9	290614	INSTR PANEL & DECAL ASSY . .	1	41	290480	AIR DUCT ASSY	1
10	261503	DOOR, Instrument panel	1	42	261579	. SEAL	1
11	261525	METAL CAL, Start instr	1	43	261580	. SEAL	1
12	261506	STRIKER, Door	1	44	261581	. SEAL	1
13	261509	APPLIQUE, Panel	1	45	261582	. SEAL	1
14	261635	PUSHNUT, Applique	4	46	261583	. SEAL	1
15	261900	HINGE PIN, Door	1	47	261584	. SEAL	1
16	261899	SPRING, Door	1	48	309322	CLAMP, Brake cable	1
17	261524	BUSHING, Starter rope	1	49	302471	WASHER, Panel to sprt	2
18	261521	LOCKWASHER	2	50	800215	SCREW, Panel to frame	4
19	261520	NUT	2	51	260385	LOCKNUT, Panel to frame	4
††20	261519	CIRCUIT BREAKER, Lighter . . .	1	52	800270	SCREW, Instr panel to frame . .	3
††21	261507	LIGHTER SOCKET ASSY	1	53	800210	SPEED NUT, Panel to frame . . .	3
††22	290485	LIGHTER ASSY	1	54	306547	WASHER, Screw, panel	2
†23	261531	PLUG, Lighter hole	1	55	261933	GASKET, Air duct	3
24	290463	IGNITION SWITCH	1	56	261522	NUT, Switch	1
25	*	. KEY	1	57	261540	BRACKET, Instr panel	1
26	261523	COVER, Switch	1	58	261600	CLAMP, Wire harness	3
27	290462	FUEL GAUGE ASSY	1	59	261599	CLAMP, Fuel hose to duct	2
28	261505	NEUTRAL LOCKOUT CABLE	1	60	602320	SCREW, Panel to sprt	2
29	308270	LOCKWASHER	3	61	306396	LOCKWASHER, Panel to sprt . . .	2
30	302944	NUT	3	62	301472	NUT, Panel to sprt	2

‡Manual start only


††Electric start only

*For each replacement key, send vehicle model number and \$.50 to: Stevens Experimental Co., 111 Greenwood Ave., P.O. Box 193, Waukegan, Ill. 60085

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

TRACK GROUP

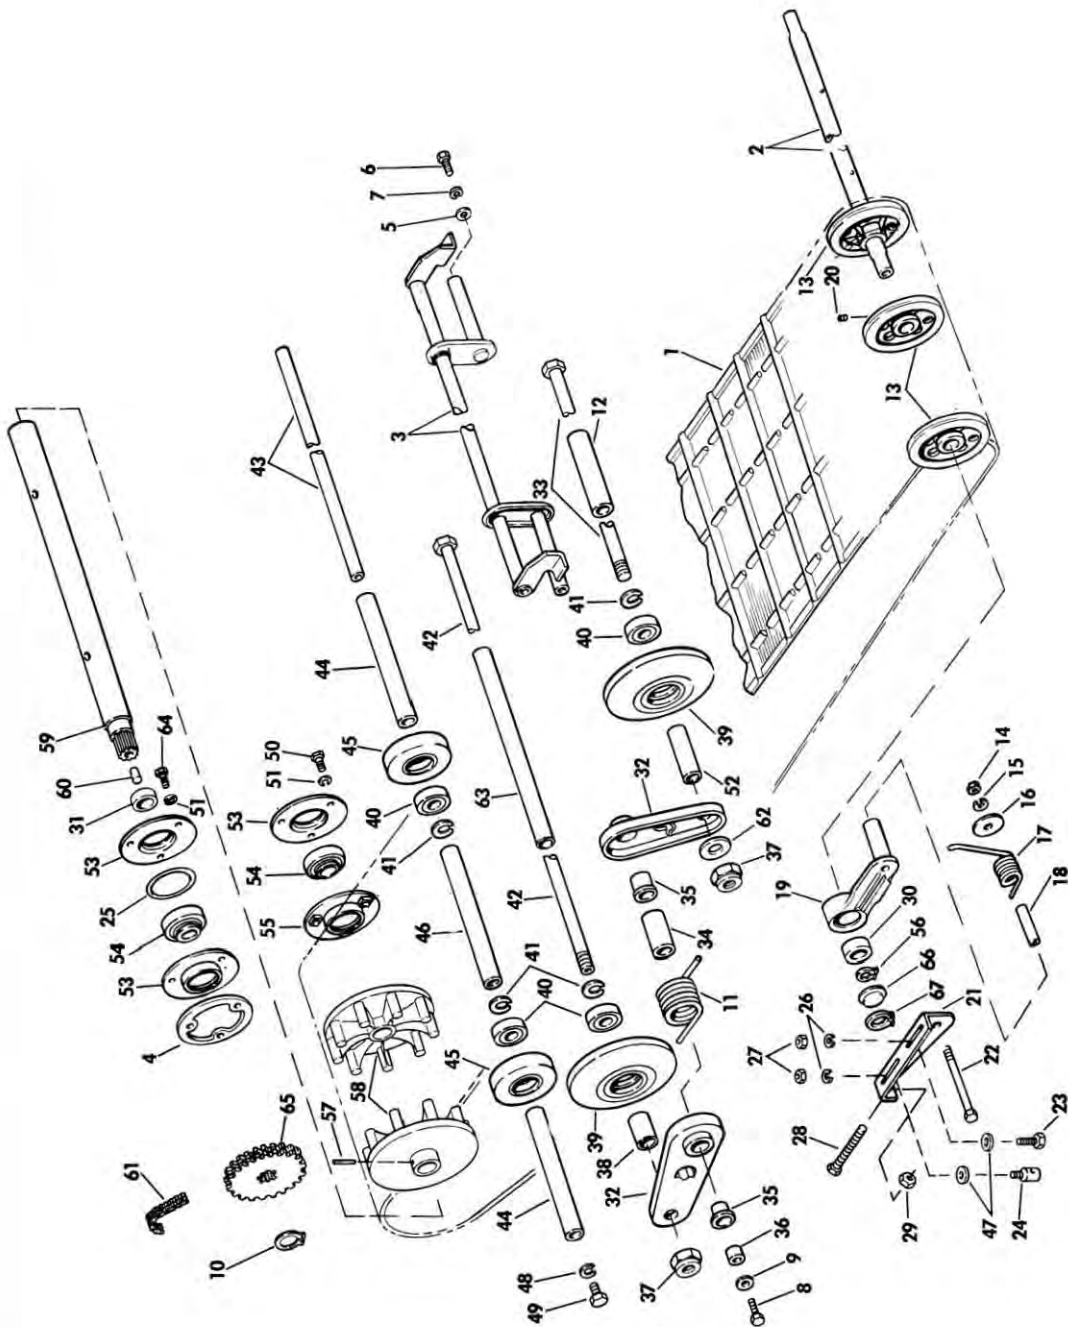

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

TRACK GROUP


REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	261451	TRACK, Molded	1	33	290643	AXLE, Truck, rear	3
2	261621	AXLE, Rear	1	34	260009	SPACER, Pivot axle	6
3	290431	CROSS SHAFT ASSEMBLY	3	35	260010	BUSHING, Short	12
4	113861	GASKET, C/case to flange . . .	1	36	260008	SPACER, Pivot axle, outer	6
5	304671	WASHER, Truck support	6	37	262212	NUT, Truck axle	6
6	261384	SCREW, Truck to frame	6	38	260013	SPACER, Front axle, outer	6
7	303269	LOCKWASHER, Trk to frame . . .	6	39	487240	HUB & TIRE ASSEMBLY	15
8	306539	SCREW, Truck to frame	6	40	112859	BEARING, Wheel	18
9	120177	LOCKWASHER, Trk to frame . . .	6	41	403807	RETAINING RING, Wheel	18
10	261353	RETAINING RING, Front axle . .	1	42	290642	AXLE, Truck, front	3
11	261286	SPRING, Pivot axle, L.H.	3	43	261363	AXLE, Track idler	1
11	261285	SPRING, Pivot axle, R.H.	3	44	261351	SPACER, Idler wheel, outer	2
12	260259	SPACER, Rear axle, center	3	45	161654	IDLER WHEEL	3
13	290036	SPROCKET WHEEL, Rear	3	46	261046	SPACER, Idler wheel, inner	2
14	403864	NUT, Rear axle pivot	2	47	404892	WASHER, Bracket	4
15	120177	LOCKWASHER, Rear axle pivot . .	2	48	120177	LOCKWASHER, Axle to frame . . .	2
16	112361	WASHER, Rear axle pivot	2	49	261385	SCREW, Idler axle to frame	2
17	261357	SPRING, Rear axle, L.H.	1	50	312316	SCREW, Flange to frame	3
17	261356	SPRING, Rear axle, R.H.	1	51	120177	L'WASHER, Flange to frame	6
18	261618	BUSHING, Rear axle pivot	2	52	260016	SPACER, Rear axle, outer	6
19	290492	PIVOT ARM, L.H.	1	53	261369	FLANGETTE, Front axle	3
19	290491	PIVOT ARM, R.H.	1	54	261391	BEARING, Front axle	2
20	112610	SET SCREW, Rear sprocket	3	55	290433	FLANGETTE ASSEMBLY	1
21	112762	BRACKET, Track adj, L.H.	1	56	261619	RETAINING RING, Rear axle	2
21	112761	BRACKET, Track adj, R.H.	1	*	290482	FRONT AXLE ASSEMBLY	1
22	314176	SCREW, Rear axle pivot	2	57	312298	. ROLL PIN	2
23	306862	SCREW, Bracket to frame	2	58	290048	. SPROCKET WHEEL	2
24	113620	ANCHOR, Track adjusting	2	59	261589	. AXLE, Front	1
25	261352	O-RING, Front axle	1	60	261587	. PLUG, Axle	1
26	306325	L'WASHER, Brkt to frame	4	61	112249	CHAIN, 94 pitch, std	1
27	306422	NUT, Bracket to frame	4	62	405725	WASHER, Pivot arm	3
28	112945	SCREW, Track adjusting	2	63	260257	SPACER, Front axle, center	6
29	306390	NUT, Adjusting screw	2	64	306539	SCREW, Flange to c/case	3
30	404832	BEARING, Rear axle	2	65	161603	DRIVE SPROCKET, 42 tooth	1
31	261354	SPACER, Front axle	1	66	261616	BEARING RETAINER	2
32	260011	ARM, Truck pivot	12	67	405351	RETAINING RING	2

*Not Shown

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

MISCELLANEOUS GROUP

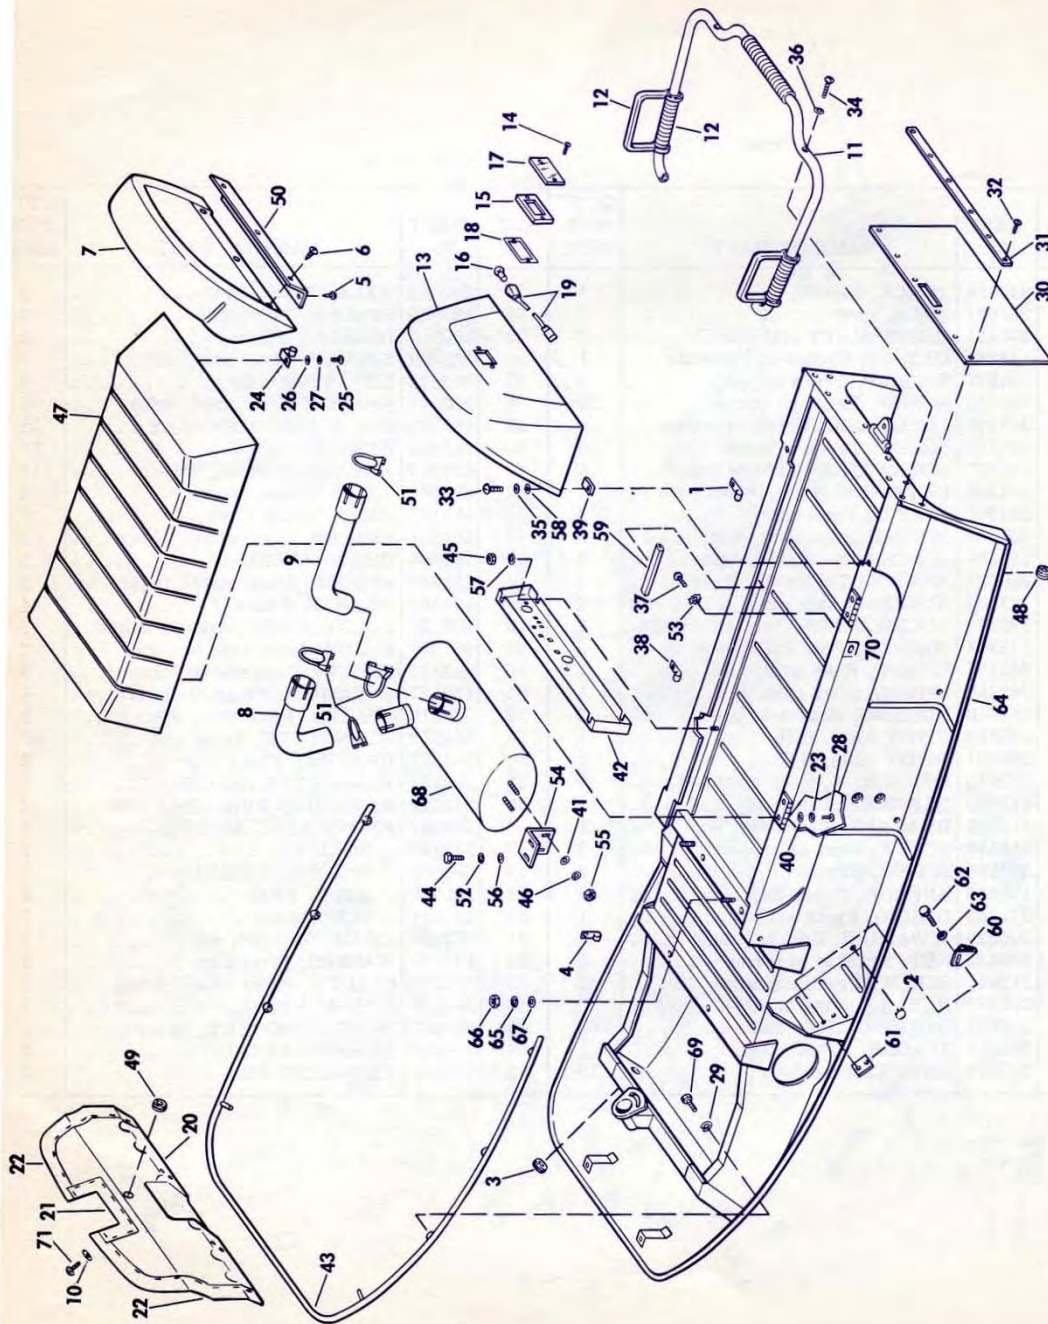

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS


17505

MISCELLANEOUS GROUP

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	261600	CLAMP, Taillight lead	3	37	261423	BOLT, Rear bumper	2
2	261570	PLUG, Axle holes	6	38	261883	CLIP, Taillight wire	3
3	260558	GROMMET, Crossmember	1	39	403818	SPEEDNUT, Back rest	5
4	261598	CLAMP, Fuel hose to frame	2	40	260070	WASHER, Seat to hinge	4
5	306401	SCREW, Brkt to cushion	3	41	404892	WASHER, Muffler brkt	4
6	302812	SCREW, Brkt to seat back	3	42	261331	FRONT COVER, Compartment	1
7	290501	SEAT BACK ASSY	1	43	290424	BUMPER ASSY	1
8	113919	EXH PIPE, Cyl #2	1	44	306487	SCREW, Brkt to frame	4
9	113917	EXH PIPE, Cyl #1	1	45	260385	NUT, Front cover	4
10	302471	WASHER, Heat shield to frame	4	46	306325	LOCKWASHER, Muffler brkt	4
11	290467	BUMPER ASSY, Rear	1	47	290506	SEAT ASSEMBLY	1
12	290751	. STRAP & GRIP KIT	2	48	261414	GROMMET, Taillight	1-3
13	290475	BACK REST ASSY	1	49	111510	GROMMET, Wire	1
14	261561	. SCREW	2	50	261638	BRACKET, Seat cushion	1
15	261562	. HOUSING, Taillight	1	51	113925	CLAMP, Exh pipe	4
16	260143	. BULB, Taillight	1	52	306396	LOCKWASHER, Brkt to frame	4
17	261559	. LENS, Taillight	1	53	306396	LOCKWASHER, Bumper	2
18	261560	. GASKET	1	54	113918	BRACKET, Muffler	2
19	290476	. SOCKET ASSY	1	55	302861	NUT, Muffler brkt	4
20	290569	HEAT SHIELD ASSY	1	56	262279	WASHER, Brkt to frame	4
21	261861	. SEAL	1	57	306413	LOCKWASHER, Front cover	4
22	261862	. SEAL	2	58	303916	L'WASHER, Back rest mtg	5
23	120052	L'WASHER, Cover & seat mtg	4	59	262244	TRIM STRIP	3
24	290118	ROLLER LATCH ASSY	2	60	262062	HOOD STRIKE, R.H.	1
25	300646	SCREW, Latch	2	60	262063	HOOD STRIKE, L.H.	1
26	302471	WASHER, Latch	2	61	262061	NUT PLATE	2
27	306396	LOCKWASHER, Roller latch	2	62	306419	SCREW, Strike mtg	4
28	306474	SCREW, Seat to hinge	4	63	306396	LOCKWASHER	4
29	306325	LOCKWASHER, Bumper mtg	6	64	290624	MAIN FRAME ASSY	1
30	261360	SNOW DEFLECTOR	1	65	306396	. LOCKWASHER, Frame	2
31	112884	RETAINER	1	66	800059	. LOCKNUT, Engine frame	2
32	800270	SCREW, Deflector	6	67	302471	. WASHER, Frame	2
33	131265	SCREW, Back rest	5	68	162002	MUFFLER ASSY	1
34	261708	LOCKSCREW, Bumper	2	69	261709	SCREW, Bumper to brkt	6
35	303952	WASHER, Back rest	5	70	260065	HINGE, Seat	2
36	203622	WASHER, Bumper	2	71	551706	SCREW, Heat shield to frame	4

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

FUEL TANK GROUP

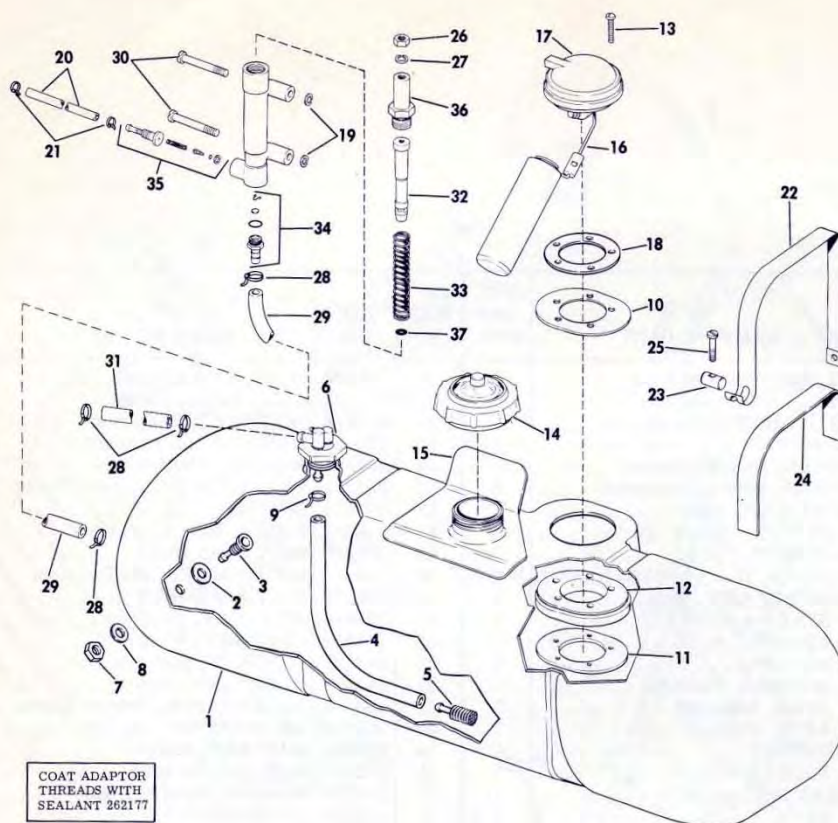

17506


REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
*	290486	FUEL TANK ASSY., Complete .	1	20	262016	HOSE, Primer to man.	1
1	290636	. FUEL TANK ASSY.	1	21	262081	CLAMP, Hose to man.	2
2	261611	. . WASHER, Fitting	1	22	261615	STRAP, Fuel tank	2
3	261612	. . FITTING, Primer	1	23	261614	BAR, Strap	2
4	262017	. . HOSE, Pickup	1	24	261613	PAD, Strap	2
5	290446	. . FUEL PICKUP	1	25	130618	SCREW, Strap to frame	2
6	290493	. . ADAPTOR ASSY.	1	26	309485	NUT, Primer cable to piston . .	1
7	303320	. . NUT, Fitting	1	27	303916	LOCKWASHER, Cable to piston .	1
8	306405	. . WASHER	1	28	262081	CLAMP, Fuel hose	4
9	262081	. . CLAMP	1	29	262012	FUEL HOSE, Tank to primer . .	1
10	261606	. . WASHER PLATE	1	30	302431	SCREW, Primer to frame	2
11	261607	. . NUT PLATE	1	31	262013	FUEL HOSE, Tank to pump . . .	1
12	261608	. . GROMMET	1	*	290623	PRIMER ASSY.	1
13	133451	. . SCREW, Sender	5	32	261577	. PISTON, Primer	1
14	290588	. . CAP ASSY.	1	33	403963	. SPRING, Primer	1
15	261902	. . INSTRUCTION PLATE	1	34	487297	. INLET VALVE ASSY.	1
16	290488	. . SENDER ASSY.	1	35	290622	. EXHAUST VALVE ASSY.	1
17	262285	. . COVER, Sender	1	36	261578	. END CAP, Primer	1
18	262286	. . GASKET, Sender	1	37	427444	. O-RING, Piston	1
19	306396	LOCKWASHER, Primer	2				

*Not Shown

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

TRANSMISSION GROUP

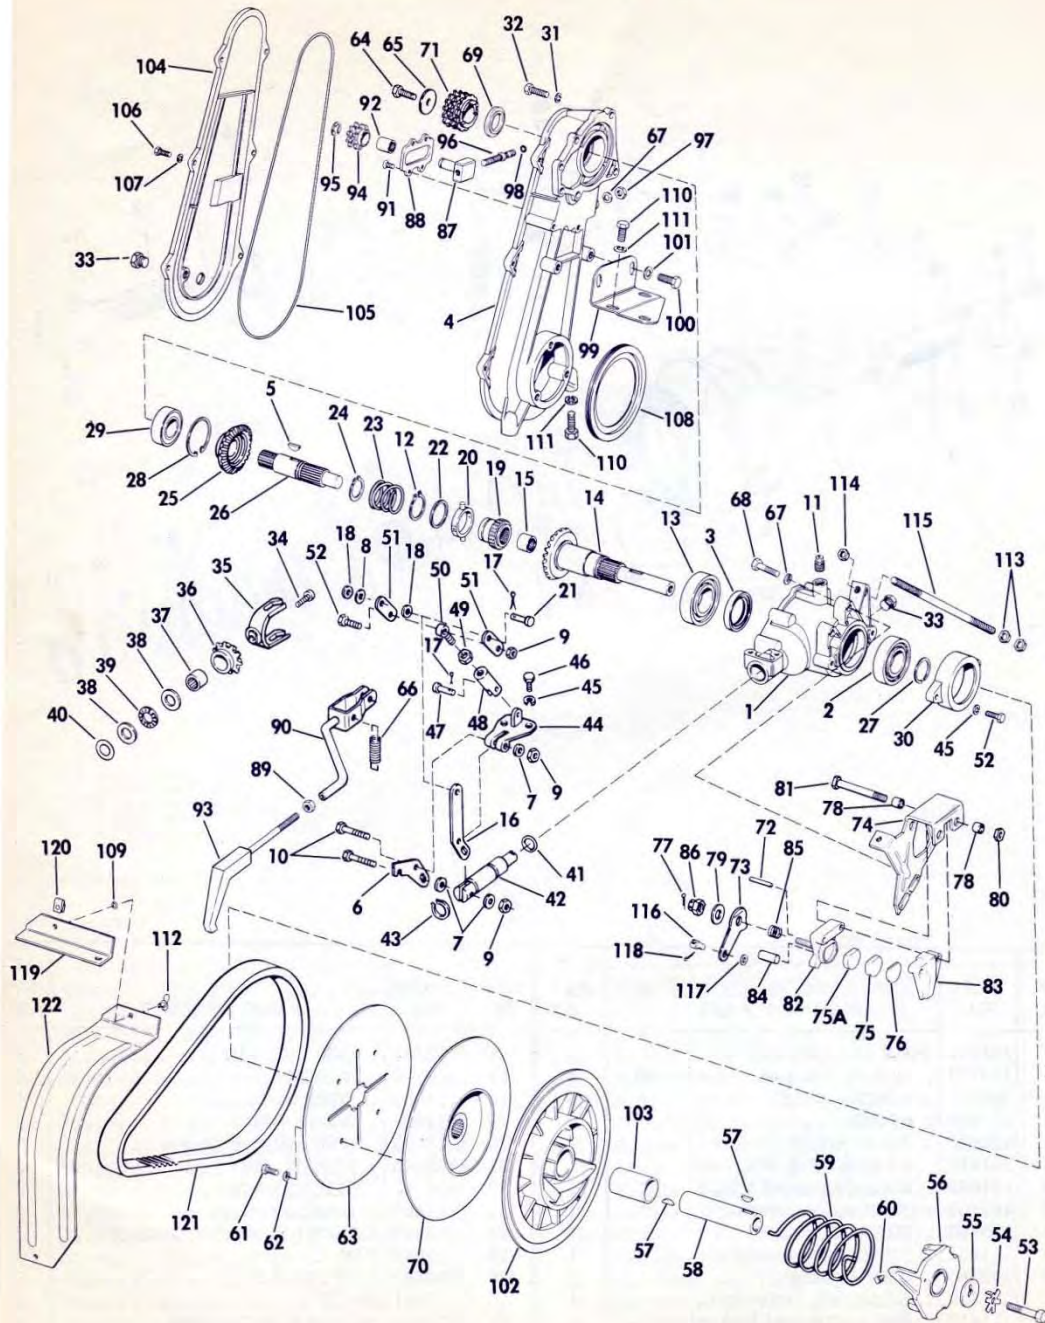

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

TRANSMISSION GROUP


REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
*	161974	TRANSMISSION & C/CASE ASSY., Complete	1	62	306396	LOCKWASHER, Brake to sheave	4
1	113899	. HOUSING, Transmission	1	63	113879	DISC, Brake	1
2	113753	. BEARING, Inner	1	64	111472	SCREW, Sprocket to shaft	1
3	113897	. SEAL, Hsg to shaft	1	65	112142	WASHER, Sprocket to shaft	1
4	161973	. CHAIN CASE ASSY	1	66	113793	SPRING, Linkage	1
5	112836	. KEY, Output gear	1	67	306325	LOCKWASHER, Brake to pedestal	3
6	113403	. BRACKET, Spring retainer	1	68	306435	SCREW, Brake to housing	2
7	306407	. WASHER, Link	3	69	113673	WASHER, Sprocket	1
8	510412	. WAVE WASHER	1	70	161982	FIXED SHEAVE ASSY	1
9	800059	. NUT, Link	3	71	113759	SPROCKET, 16 tooth, std	1
10	303459	. SCREW, Link	2	*	290494	CALIPER BRAKE ASSY	1
11	112855	. PIPE PLUG, Breather vent	1	72	112482	. PIN, Cam limit	1
12	813283	. RETAINING RING	1	73	112921	. CAM, Caliper brake	1
13	112830	. BEARING, Outer	1	74	261627	. BRACKET, Caliper brake	1
14	162033	. GEAR AND SHAFT, Input	1	75	261167	. PUCK, Caliper brake	1
15	112834	. NEEDLE BEARING, Shaft, outer	1	75A	261168	. PUCK, Brake, 1/2"	1
16	113047	. LINK, Shift lever	1	76	261166	. WASHER, Puck back-up	1
17	306463	. COTTER PIN	2	77	113481	. COTTER PIN, Cam to body	1
18	552499	. WASHER, Link	2	78	113482	. SPACER, Caliper brake bracket	4
19	113767	. SHIFTER DOG	1	79	113486	. THRUST WASHER	1
20	113837	. CRADLE, Shifter dog	1	80	113487	. LOCKNUT	2
21	113905	. PIN, Link	1	81	315148	. SCREW, Hex head cap	2
22	112868	. WASHER, Shifter dog	1	82	114063	. BODY, Cam side	1
23	112849	. SPRING, Shifter dog	1	83	261170	. BODY, Carrier side	1
24	308805	. RETAINING RING, Output shaft	1	84	112424	. PIN, Caliper brake	2
25	112844	. GEAR, Output	1	85	112425	. SPRING, Brake cam	1
26	113766	. SHAFT, Output	1	86	112428	. NUT, Cam to body	1
27	112829	. RETAINING RING, Input shaft	1	87	113864	BASE & SHAFT, Idler	1
28	113775	. RETAINING RING	1	88	113863	PLATE, Chain idler	1
29	113752	. BALL BEARING, Output shaft	1	89	309602	NUT, Handle to rod	1
30	161978	. END CAP ASSY	1	90	290436	SHIFT ROD ASSY	1
31	306325	. LOCKWASHER	6	91	302104	SCREW, Plate to c/case	4
32	306416	. SCREW	6	92	113825	BEARING, Idler sprocket	1
33	112875	. PIPE PLUG, Fill and drain	3	93	290435	SHIFT HANDLE ASSY	1
34	113831	. SCREW, Clevis to start	1	94	113826	SPROCKET, Idler	1
35	113779	. SHIFTER CLEVIS	1	95	510487	RETAINING RING	1
36	112848	. PINION, Reverse idler	1	96	113865	SCREW, Idler adjustment	1
37	112838	. BEARING, Reverse idler	1	97	302103	NUT, Idler adjustment	1
38	112839	. THRUST WASHER, Reverse idler	2	98	113900	O-RING, Idler screw	1
39	112840	. THRUST WASHER, Reverse idler	1	99	261572	SUPPORT BRACKET	1
40	112869	. SHIM, .002"	AR	100	306539	SCREW, Support bracket	2
40	112870	. SHIM, .003"	AR	101	120177	LOCKWASHER	2
40	112871	. SHIM, .004"	AR	102	161981	MOVABLE SHEAVE ASSY	1
40	112872	. SHIM, .005"	AR	103	113870	. BUSHING	1
41	112873	. O-RING, Shaft to hsg	1	104	113860	COVER, Chain case	1
42	113792	. SHAFT, Pinion gear	1	105	404931	SEAL, Cover to c/case	1
43	112837	. RETAINING RING, Shaft	1	106	300646	SCREW, Cover to c/case	6
44	161741	. PIVOT PLATE	1	107	306396	LOCKWASHER, Cover to c/case	6
45	306396	. LOCKWASHER, Plate to hsg	4	108	261418	SEAL, C/case to frame	1
46	300646	. SCREW, Plate to hsg	2	109	261780	RETAINER, Wing stud	2
47	113906	. PIN, Clevis to plate	1	110	306834	SCREW, C/case to frame	5
48	113336	. CLEVIS, Reverse lock	1	111	120177	LOCKWASHER, C/case to frame	5
49	133175	. NUT, Eye bolt	1	112	261782	WING STUD, Guard to frame	2
50	113338	. EYE BOLT	1	113	800292	LOCKNUT, Rod to frame	2
51	113335	. LOCKPLATE	2	114	303889	NUT, Rod to trans	1
52	306409	. SCREW	3	115	113901	SUPPORT ROD	1
53	131794	SCREW, Sleeve	1	116	261601	PIVOT PIN, Brake control	1
54	113973	LOCKWASHER, Tab	1	117	300269	WASHER, Pivot pin	1
55	113868	WASHER, Secondary	1	118	316927	COTTER PIN, Pivot pin	1
56	113862	CAP, Spring, secondary	1	119	261779	SUPPORT BAR, Belt guard	1
57	307980	WOODRUFF KEY	2	120	261781	RECEPTACLE, Wing stud	2
58	113872	SLEEVE, Secondary	1	121	113896	BELT, Drive	1
59	113912	SPRING, Secondary	1	122	261784	BELT GUARD	1
60	112143	SHOE, Drive ramp	3				
61	306487	SCREW, Brake to sheave	4				

*Not Shown

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

ELECTRICAL GROUP

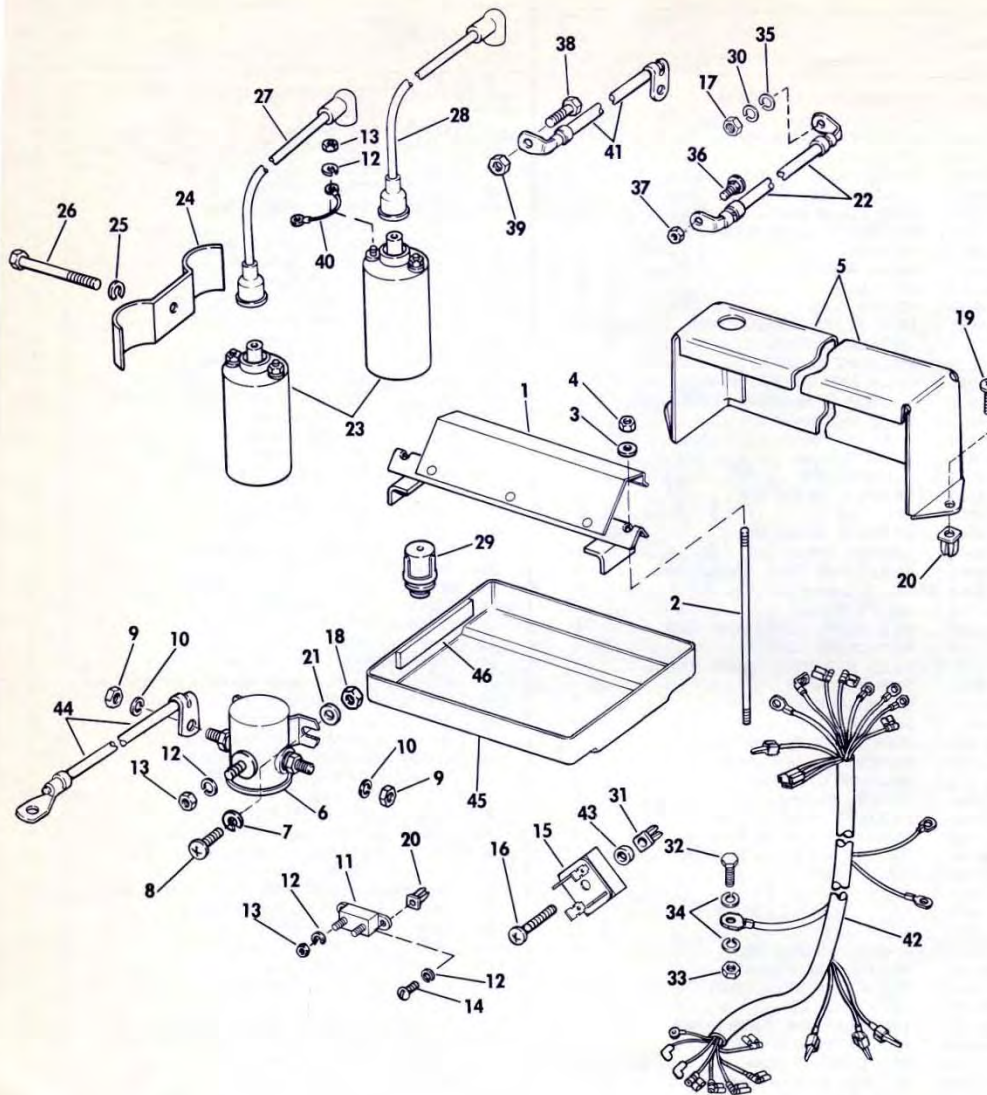

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

ELECTRICAL GROUP

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	290606	HOLD DOWN, Battery	1	†25	306325	LOCKWASHER, Clamp	1
2	261566	BOLT, Hold down	2	†26	306464	SCREW, Clamp	1
3	203622	WASHER, Hold down	2	†27	161991	H.T. LEAD ASSY, Short	1
4	800059	NUT, Hold down	2	†28	161990	H.T. LEAD ASSY, Long	1
5	261663	COVER, Electrical components .	1	29	112329	CAP, Spill proof	6
6	113924	SOLENOID	1	30	306799	LOCKWASHER, Grnd stud	1
7	306396	LOCKWASHER, Sol mtg	2	31	261698	GROMMET, Retaining	2
8	800019	SCREW, Solenoid mounting	2	*32	800019	SCREW, Ground wire	1
9	306422	NUT, Terminal	2	*33	301472	NUT, Ground wire	1
10	306325	LOCKWASHER, Terminal	2	*34	306488	LOCKWASHER, Ground wire . . .	1
11	113838	CIRCUIT BREAKER	1	35	306325	LOCKWASHER, Ground stud . . .	1
†12	120052	LOCKWASHER	6	36	113219	BOLT, Negative terminal	1
†13	309485	NUT	7	37	301472	NUT, Negative terminal	1
14	261700	SCREW, Mounting	2	38	113218	BOLT, Positive terminal	1
15	112930	RECTIFIER ASSEMBLY	1	39	302861	NUT, Positive terminal	1
16	261701	SCREW, Rectifier mounting	1	†40	112987	WIRE, Ignition coil	1
17	302861	NUT, Ground stud	1	41	290470	CABLE ASSY, Bat. to solenoid .	1
18	261282	NUT, Solenoid to frame	2	42	290471	WIRING HARN ASSY., Eng, M.S.	1
19	261700	SCREW, Cover to frame	2	42	290472	WIRING HARN ASSY., Eng, E.S.	1
20	261699	GROMMET, Retaining	4	43	261905	INSULATOR, Rectifier	1
21	306407	WASHER, Solenoid mtg	2	44	290469	CABLE ASSY., Starter to sol . .	1
22	290541	BATTERY CABLE, Negative	1	45	261938	SPLASH PAN, Battery	1
†23	112931	COIL, Ignition	2	46	261996	SPLASH PAD	2
†24	112940	BRACKET, Ignition coil	1				


*Manual models only

†Used on all models

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

ELECTRIC STARTER GROUP

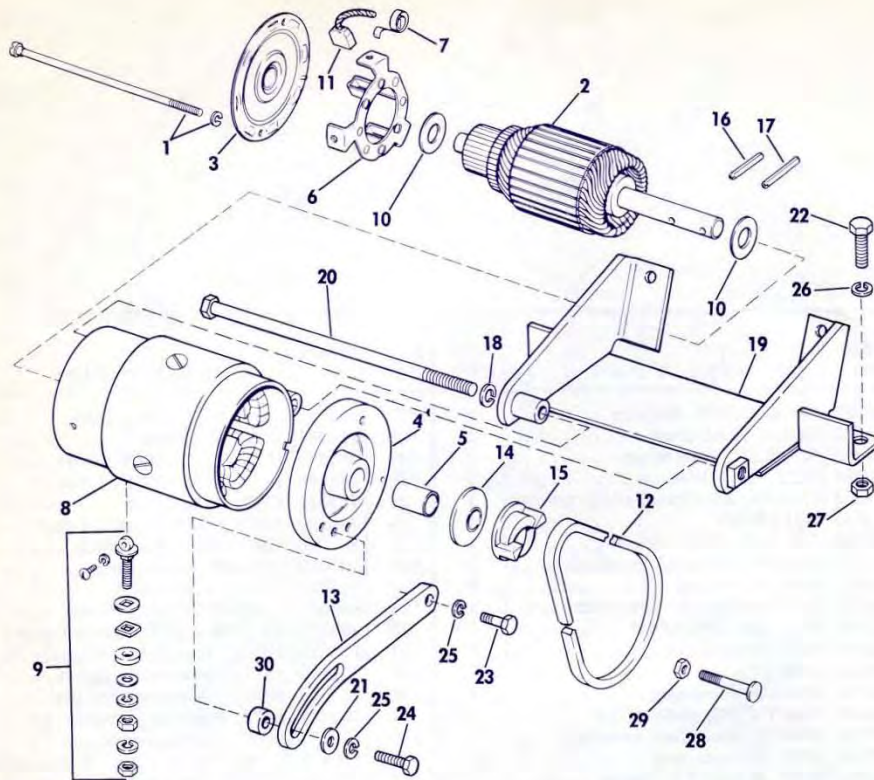

17509


REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
*	162036	STARTER MOTOR ASSY	1	15	112259	PULLEY, Movable, elec starter	1
1	112440	. THRU BOLT PACKAGE	1	16	112263	SPIROL PIN, Pulley to starter .	1
2	112441	. ARMATURE	1	17	112264	SPIROL PIN, Pulley to starter .	1
3	112442	. HEAD, Commutator end	1	18	120177	LOCKWASHER	1
4	113972	. HEAD, Drive end	1	19	161983	BRACKET ASSY, Starter mtg . .	1
5	112444	. BEARING, Drive end	1	20	113928	SCREW, Starter to brkt	1
6	112445	. BRUSH PLATE	1	21	305486	WASHER, Adj brkt to starter . .	1
7	112446	. SPRING SET, Brush	1	22	306450	SCREW, Bracket mtg	2
8	113329	. FIELD COIL ASSY	1	23	306322	SCREW, Adj brkt to rear fanhsg .	1
9	112448	. TERMINAL STUD PKG	1	24	306435	SCREW, Adj brkt to starter . . .	1
10	112449	. THRUST WASHER PKG	1	25	306325	LOCKWASHER, Adj brkt	2
11	112450	. BRUSH SET	1	26	306986	LOCKWASHER, Brkt mtg	2
12	113874	BELT, Starter drive	1	27	306927	NUT, Bracket mtg	2
13	113878	ADJ BRKT, Elec starter	1	28	112271	STUD, Belt guide	1
14	112258	PULLEY, Fixed, elec starter . .	1	29	306932	NUT, Belt guide stud	1
				30	113927	SPACER, Bracket	1

*Not Shown

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

REWIND STARTER GROUP

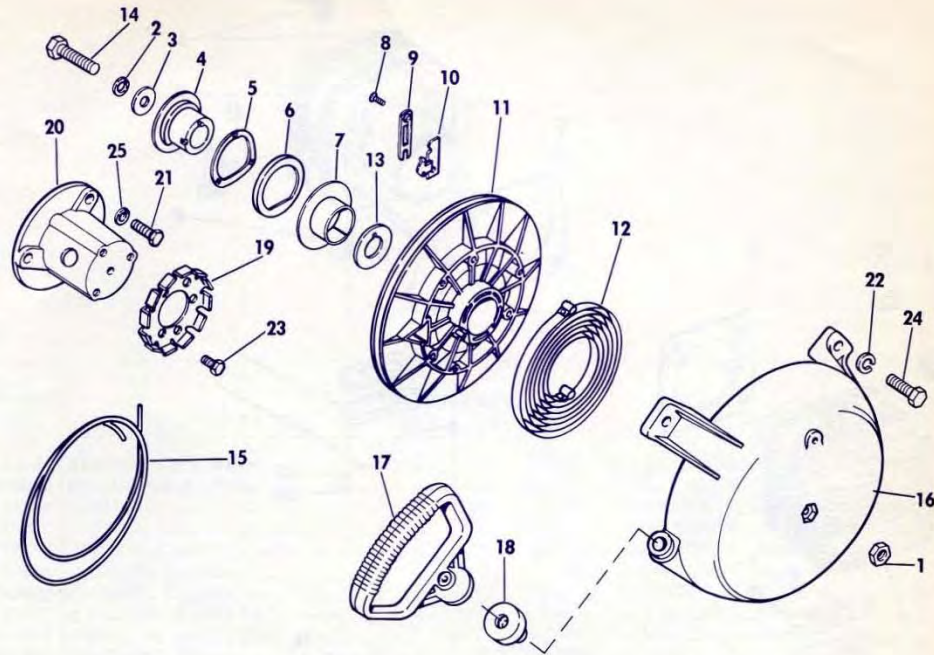

17510

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
*	161970	REWIND STARTER ASSY	1	13	113783	SPACER	1
1	306422	NUT, Housing to pulley	1	14	133128	SCREW, Hsg to pulley	1
2	306325	LOCKWASHER	1	15	†	ROPE, Starter	1
3	306283	WASHER	1	16	161969	STARTER HSG ASSY	1
4	379067	SPINDLE & PIN ASSY	1	17	261771	HANDLE	1
5	309515	SPRING WASHER	1	18	261772	BUMPER, Handle	1
6	309516	FRICTION RING	1	19	202111	RATCHET	1
7	309513	BUSHING, Spindle	1	20	113880	MOUNT, Ratchet	1
8	307163	SCREW, Retainer to pulley	3	21	306435	SCREW, Mount	3
9	202317	RETAINER	3	22	306396	LOCKWASHER	3
10	202470	PAWL	3	23	112789	SCREW	3
11	160464	STARTER PULLEY ASSY	1	24	306409	SCREW, Starter hsg	3
12	375836	STARTER SPRING ASSY	1	25	306325	LOCKWASHER, Mount	3


*Not Shown

†Cut from 100' roll 316705, cutting length 73-3/4"

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

CYLINDER AND CRANKSHAFT GROUP

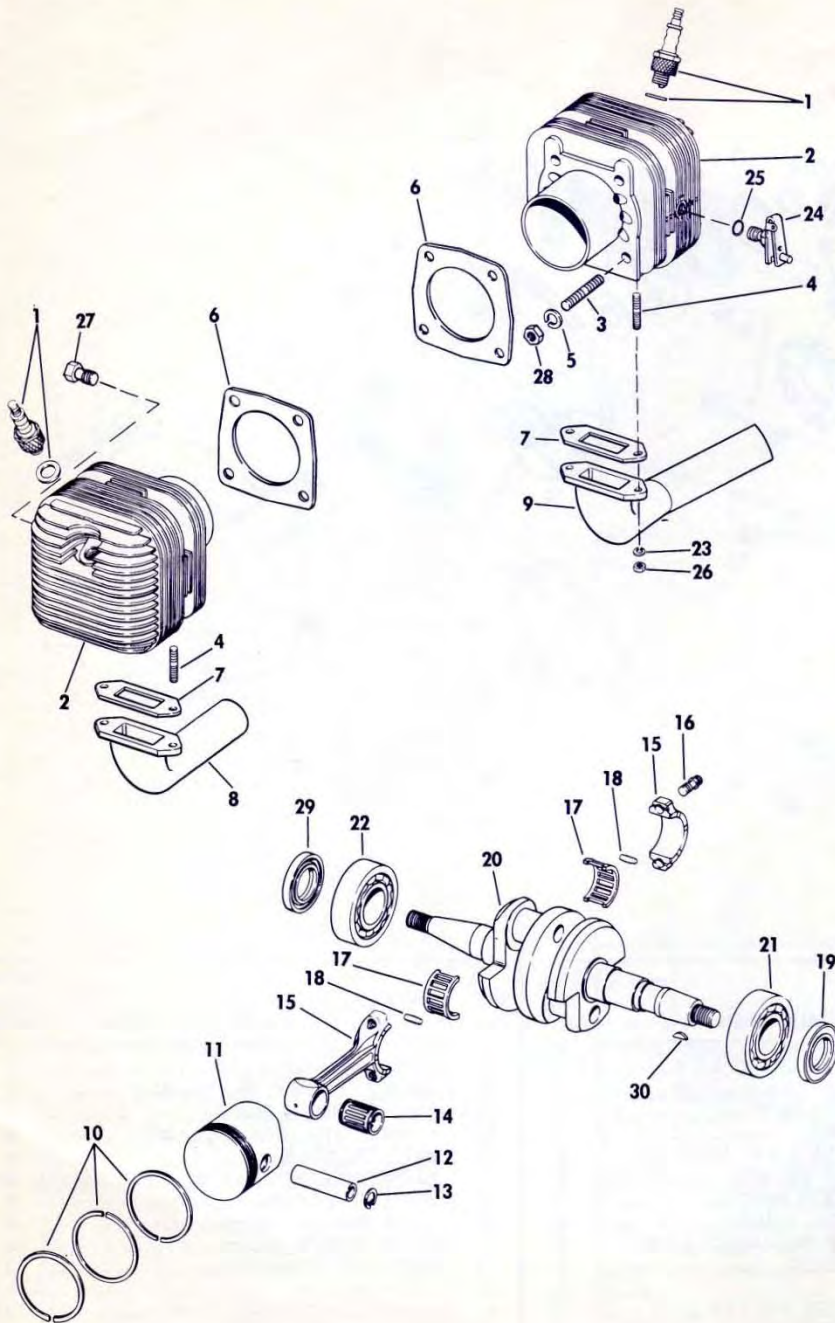

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

17511

CYLINDER AND CRANKSHAFT GROUP

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	113842	SPARK PLUG, Champion J7J ..	2	18	378515	BEARING ASSY, Connecting rod	2
2	162018	CYLINDER & STUD.....	2	19	113517	SEAL, Crankshaft	1
3	113530	. STUD.....	4	20	161785	CRANKSHAFT, Brg & shim ...	1
4	113531	. STUD, Exhaust manifold	2	• 20	162020	CRANKSHAFT, Brg & shim ...	1
5	120177	LOCKWASHER, Cylinder	8	21	111413	. BEARING, Crankshaft.....	1
6	113545	GASKET, Cylinder	2	22	111413	. BEARING, Crankshaft.....	1
7	113916	GASKET, Exhaust manifold....	2	• 22	113950	. BEARING, Crankshaft.....	1
8	162000	EXHAUST MANIFOLD, Rear ...	1	23	306325	LOCKWASHER, Manifold	4
9	162001	EXHAUST MANIFOLD, Front ..	1	24	161886	VALVE, Compression relief ...	1
10	161810	RING SET, Piston	2	25	113078	. O-RING	1
11	161999	PISTON & PIN ASSY	2	26	306422	NUT, Manifold	4
12	113835	WRIST PIN	2	27	113675	PLUG, Compression hole	1
13	302577	RETAINING RING, Pin.....	4	28	552938	NUT, Cylinder	8
14	378251	NEEDLE BRG ASSY, Wrist pin .	2	29	113517	SEAL, Crankshaft	1
15	378275	CONNECTING ROD ASSY.	2	• 29	113951	SEAL, Crankshaft	1
16	308186	. SCREW, Connecting rod	2	30	112494	KEY, Cam and flywheel	1
17	378528	RETAINER ASSY, Rod brg	2	*	162035	GASKET SET	1


*Not Shown

• Models with "A" Suffix Only

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

CRANKCASE & FAN HOUSING GROUP

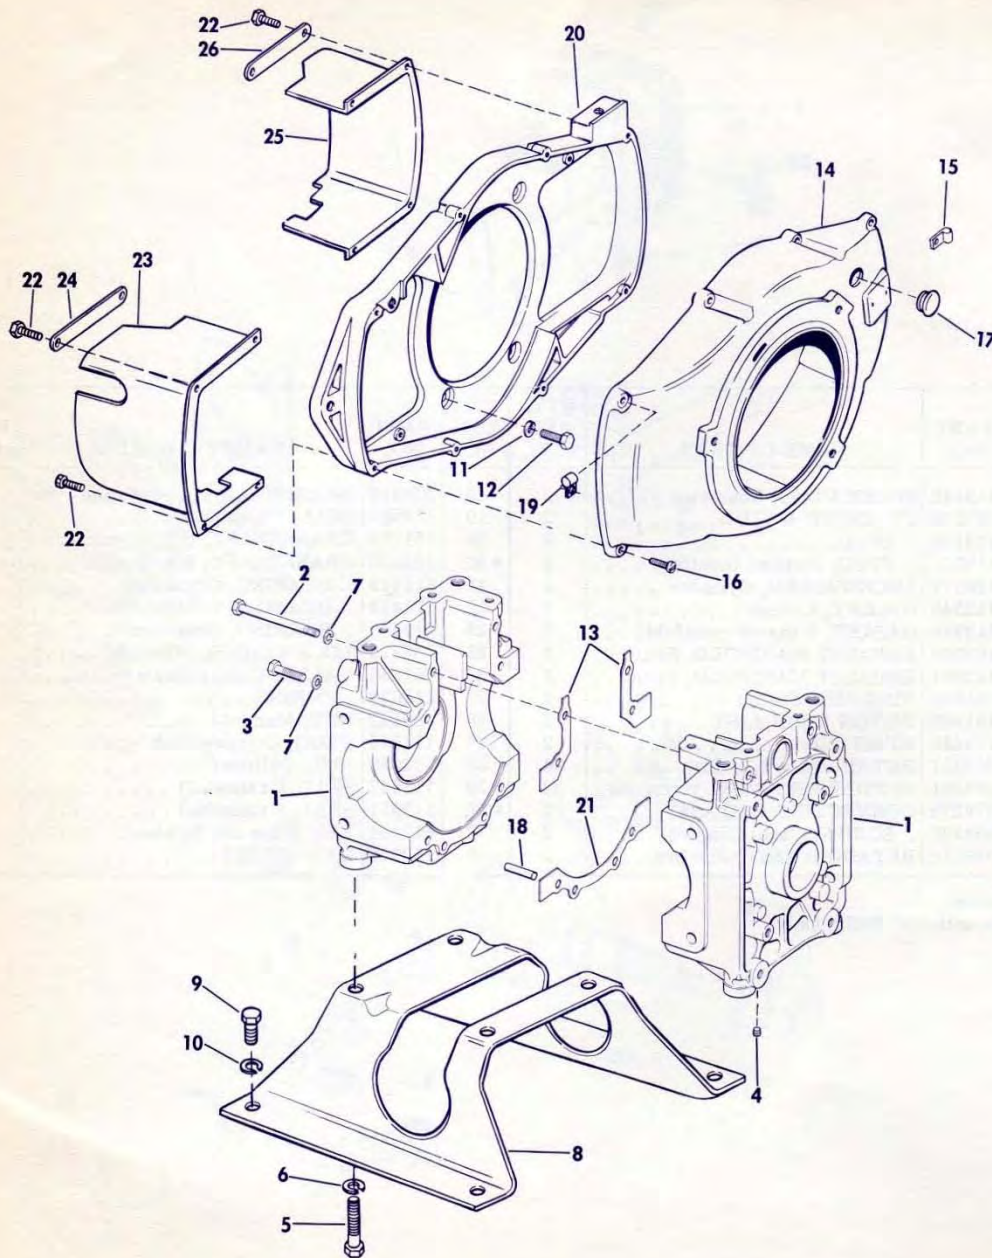

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

CRANKCASE & FAN HOUSING GROUP

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	162022	CRANKCASE ASSY	1	*14	113884	FAN HOUSING, Front	1
1	161995	CRANKCASE ASSY	1	15	112191	CLIP, Magneto lead	1
2	308751	. SCREW, Crankcase	6	16	302948	SCREW, Front to rear hsg	10
3	314610	. SCREW, Crankcase	2	17	112002	PLUG, Fan hsg, front	1
4	113271	PLUG, Oiler hole	1	18	314469	ROLL PIN	2
5	306835	SCREW, Engine mounting	4	19	113087	CLIP, H.T. lead	1
6	120177	LOCKWASHER, Engine mtg . . .	4	20	113943	FAN HOUSING, Rear	1
7	306396	LOCKWASHER, C/case halves .	8	21	113503	GASKET, Bottom	1
8	261448	FRAME, Eng mtg	1	22	307019	SCREW, Shroud	6
9	306539	SCREW, Frame mounting	4	23	162103	SHROUD & PLATE, R.H.	1
10	120177	WASHER, Frame mounting	4	24	113941	. PLATE, Reinforcement	2
11	306396	LOCKWASHER, Hsg screw	4	25	162104	SHROUD & PLATE, L.H.	1
12	300646	SCREW, Hsg to crankcase	4	26	113941	. PLATE, Reinforcement	2
13	113904	GASKET, Crankcase	2	†	162035	ENG. GASKET SET	1
**14	113857	FAN HOUSING, Front	1				

*Electric Start

**Manual Start


†Not Shown

Models with "A" Suffix Only

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

CARBURETOR ASSEMBLY GROUP

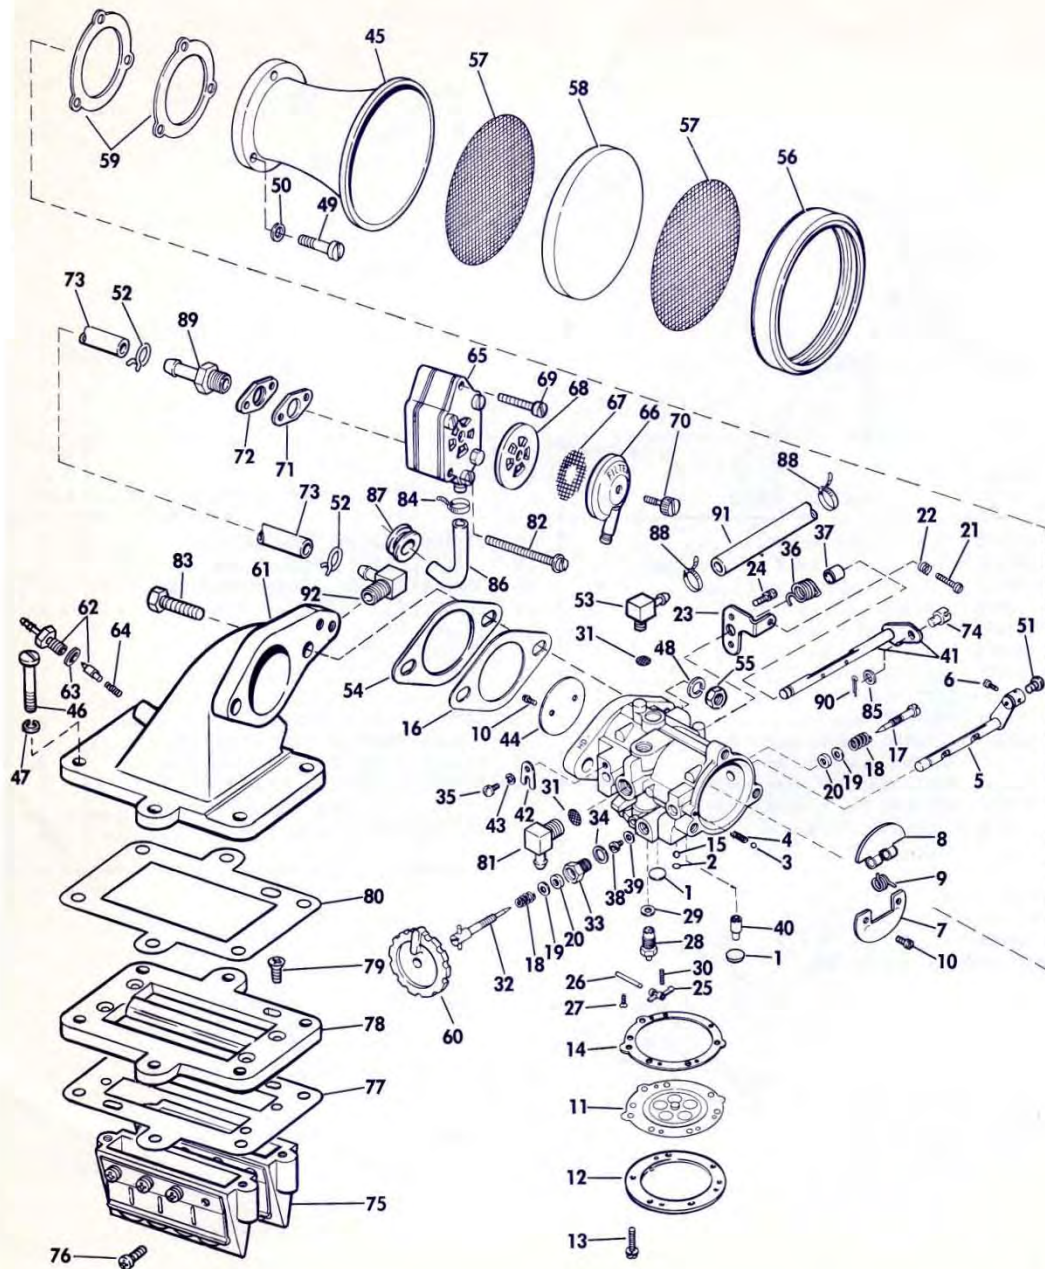

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
 SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

CARBURETOR ASSEMBLY GROUP

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
*	113525	CARBURETOR ASSY, Complete	1	48	306025	LOCKWASHER, Carb. to manf. .	2
†1	260677	WELCH PLUG	2	49	405335	SCREW, Housing to carb	3
†2	260715	WELCH PLUG	1	50	405265	WASHER, Housing mtg	3
3	260655	BALL, Choke friction	1	51	306552	SCREW, Cable to carb	1
4	260656	SPRING, Choke friction	1	52	308782	HOSE CLAMP	2
5	261022	LEVER & CHOKE SHAFT	1	53	261591	ELBOW, Hose to tank	1
6	314474	SCREW, Choke wire rtnr	1	††53	113791	ELBOW, Hose to tank	1
†7	261023	SHUTTER, Choke	1	54	113526	GASKET, Carb	1
8	261024	VALVE, Choke	1	55	306388	NUT, Carb	2
9	261025	SPRING, Choke valve	1	56	405331	CAP, Air cleaner	2
10	260675	SCREW, Throt & choke shutter	4	57	405328	SCREEN, Air cleaner	2
†11	261026	DIAPHRAGM	1	58	405329	FILTER, Air cleaner	1
12	261027	COVER, Diaphragm	1	59	113935	GASKET, Air cleaner	2
13	260694	SCREW, Diaphragm cover	6	60	261463	KNOB, Carb adjusting	1
14	260681	GASKET, Diaphragm	1	61	113818	MANIFOLD, Intake	1
15	260722	CHECK BALL	1	62	162034	CHECK VALVE ASSEMBLY	1
16	260684	FLANGE GASKET	1	63	301996	WASHER, Check valve	1
†17	260688	SCREW, Idle mixture	1	64	261464	SPRING, Check valve	1
†18	260670	SPRING, Screw, idle mixture	2	65	382354	FUEL PUMP ASSEMBLY	1
19	260690	WASHER, Scr, idle mixture	2	66	312678	CAP	1
20	260691	PACKING, Mixture screw	2	67	312675	SCREEN	1
†21	261028	SCREW, Idle speed	1	68	312679	GASKET	1
†22	260666	SPRING, Screw, idle speed	1	69	310302	SCREW	4
23	261029	BRACKET, Scr, idle speed	1	70	312677	SCREW	1
24	261030	SCREW, Idle speed brkt	2	71	303615	GASKET, Fuel pump	2
†25	260667	LEVER, Inlet control	1	72	260465	NUT PLATE, Fuel pump mtg	1
†26	260668	LEVER PIN, Inlet control	1	73	405299	HOSE, Pulse line	1
†27	260669	SCREW, Inlet control lever	1	74	113821	PIVOT PIN, Lever	1
†28	261032	SEAT & GSKT, Inlet needle	1	*	161815	LEAF PL & BASE ASSY	1
29	260696	SEAT GASKET, Inlet	1	75	161814	LEAF PLATE ASSEMBLY	2
†30	260736	SPRING, Inlet tension	1	76	307129	SCREW, Leaf stop	8
†31	261031	SCREEN, Inlet	2	77	113542	GASKET, Leaf plate to base	1
†32	260702	SCREW, High speed mixture	1	78	113543	BASE, Leaf plate	1
33	260703	GLAND SCREW	1	79	307609	SCREW, Base to leaf plate	4
34	260704	GASKET, Gland screw	1	80	113544	GASKET, Intake manifold	1
35	260674	SCREW, Throt shaft clip rtnr	1	81	261610	ELBOW, Fuel hose	1
†36	113844	SPRING, Throt shaft return	1	82	307878	SCREW, Fuel pump mtg	2
37	261036	SLEEVE, Throttle shaft	1	83	312855	SCREW, Carb mtg	2
†38	261033	MAIN FUEL JET (.096)	1	84	262081	HOSE CLAMP, Fuel pump	2
39	260706	GASKET, Main fuel jet	1	85	551953	WASHER, Pin	1
40	260707	NOZZLE, Check valve	1	86	262015	HOSE, Pump to carb	1
41	261034	SHAFT & LEVER, Throttle	1	87	262109	GROMMET	2
42	260709	CLIP, Throttle shaft	1	††87	260558	GROMMET	2
43	260673	LOCKWASHER, Clip	1	88	262081	CLAMP, Fuel return hose	2
44	260711	THROTTLE VALVE	1	89	112979	ELBOW, Pulse line	1
45	405330	HOUSING, Air cleaner	1	90	303049	COTTER PIN, Lever	1
46	316418	SCREW, Intake manifold	6	91	262014	HOSE, Carb to tank	1
47	306396	LOCKWASHER, Intake manifold	6	92	111560	ELBOW, Pulse line	1

*Not Shown


†Also available in Carburetor Repair Kit 290295

††Use only with fabric-reinforced hose

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER

ARMATURE GROUP

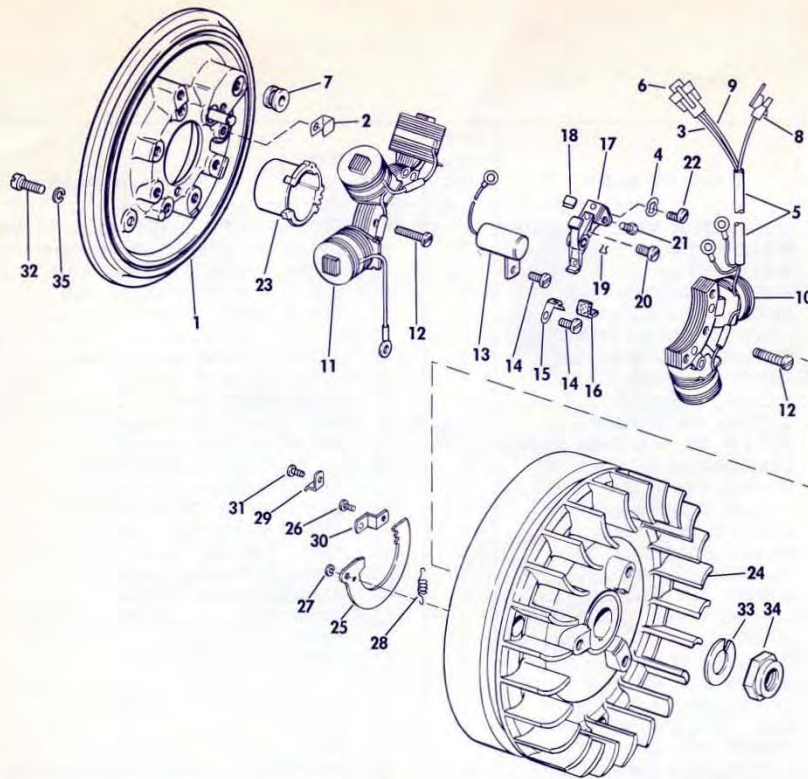

17514


17514

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
*†	161997	ARMATURE PLATE ASSY	1	17	580148	BREAKER POINT SET	1
**†	161998	ARMATURE PLATE ASSY	1	18	510204	CLIP, Spring	1
1	161798	ARMATURE PLATE	1	19	307594	RETAINER	1
2	113824	CLAMP, Armature plt wires .	1	20	302812	SCREW, Points	1
3	113784	WIRE, Armature to ground . .	1	21	510194	SCREW, Condenser	1
4	510391	BOW WASHER, Ecc screw . .	1	22	510185	SCREW, Eccentric	1
*5	510803	TUBING, Coil	1	23	510644	CAM	1
6	510684	HOUSING	1	24	162105	FLYWHEEL & WEIGHT ASSY .	1
7	111510	GROMMET	1	25	113762	WEIGHT, Timer	1
8	310572	HOUSING, Coil leads	1	26	307193	SCREW, Support	1
**8	510684	HOUSING, Coil leads	1	27	425114	RETAINING RING	1
9	113763	WIRE, Points to conn	1	28	510646	SPRING, Flywheel	1
*10	161925	COIL ASSEMBLY, Alternator .	1	29	114081	STOP, Cam	1
**10	161924	COIL ASSEMBLY, Alternator .	1	30	510650	SUPPORT, Flywheel	1
11	580749	COIL ASSEMBLY, Ignition . .	1	31	307613	SCREW, Cam stop	1
12	510397	SCREW, Coil mtg	6	32	308742	SCREW, Armature plate	2
13	580573	CONDENSER	1	33	310856	LOCKWASHER, Flywheel	1
14	307019	SCREW	2	34	304104	NUT, Flywheel	1
15	510480	CLIP, Oiler	1	35	306396	LOCKWASHER, Armature plate .	2
16	112699	WICK, Oiler	1				

†Not Shown *Manual Start Only **Electric Start Only

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS

ACCESSORY SLEIGH GROUP

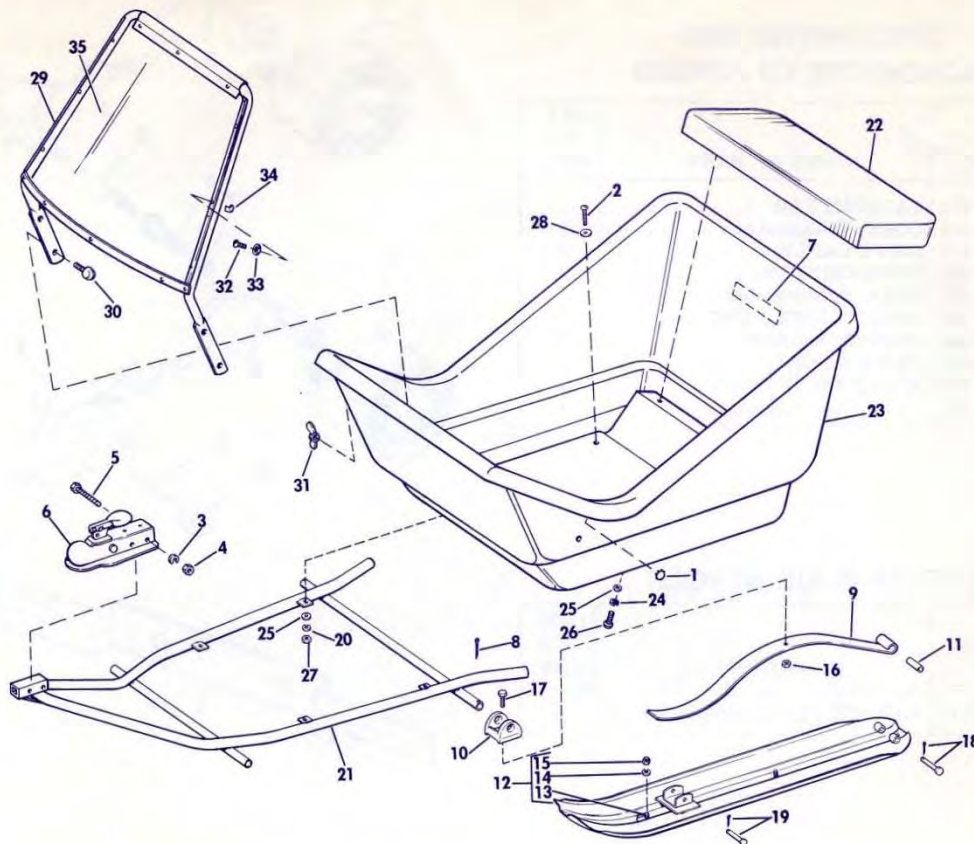

17520

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
*	161635	SLEIGH ASSY., Complete . . .	1	18	161561	RETAINING PIN ASSEMBLY	2
1	902001	PLUG BUTTON, Windshield frame	6	19	161562	RETAINING PIN ASSEMBLY	2
2	313042	SCREW, Body to frame . . .	4	20	306396	LOCKWASHER, Body to frame frame	4
3	120177	LOCKWASHER, Hitch	2	21	161637	FRAME ASSEMBLY	1
4	306562	NUT, Hitch	2	22	112948	SEAT ASSEMBLY	1
5	307776	SCREW, Hitch	2	23	161660	BODY ASSEMBLY	1
6	113302	HITCH, Sleigh	1	24	306396	LOCKWASHER, Seat to body .	3
7	112662	TRANSFER, Sleigh-mate . .	1	25	306407	WASHER, Body to frame . .	7
8	120310	COTTER PIN, Ski to frame .	2	26	300646	SCREW, Seat to body	3
9	112693	SPRING, Ski	2	27	306397	NUT, Body to frame	4
10	112694	SADDLE, Spring	2	28	302407	WASHER, Body to frame . .	4
11	112671	BUSHING, Ski spring	2	29	161764	WINDSHIELD ACCESSORY KIT	1
12	161577	SKI & RUNNER ASSEMBLY .	2	30	113463	THUMB SCREW	4
13	161591	RUNNER	1	31	800315	WING NUT	4
14	120196	WASHER, Runner to ski . .	2	32	314479	SCREW, Windshield to frame	8
15	800290	NUT, Runner to ski	2	33	306561	WASHER	8
16	903186	NUT, Saddle to spring . . .	2	34	113471	WELL NUT	8
17	306416	SCREW, Saddle to spring . .	2	35	113459	WINDSHIELD	1


* Not Shown

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY

ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DEALER


SPEEDOMETER AND TACHOMETER KIT - 290550

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	261752	TACHOMETER	1
2	261755	CORE, Tachometer	1
3	261757	DRIVE CABLE	2
4	261760	SPEEDOMETER	1
5	261761	CORE, Speedometer	1
6	261753	ANGLE DRIVE JOINT	1
7	261754	CLUTCH BUSHING	1
8	290637	DRIVE MOUNT	1
9	261765	ANGLE DRIVE JOINT	1
10	261764	PLUG, Axle coupling	1

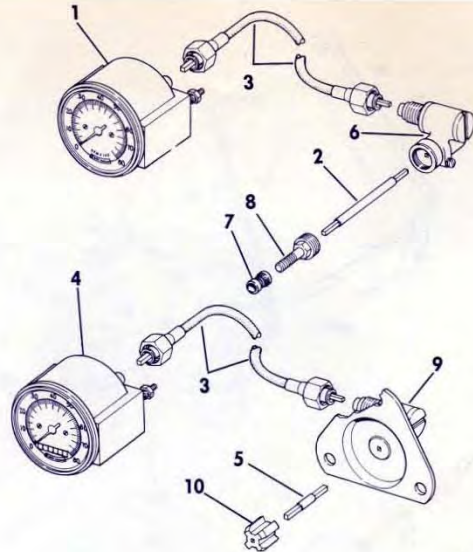


LICENSE PLATE BRACKET

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	260379	LICENSE PLATE BRACKET . . .	1

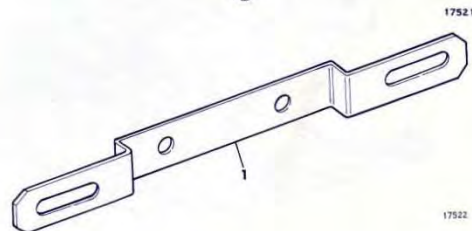

SKI TREAD EXTENSION KIT - 290772

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
1	262268	BRACKET, Hood restraint . . .	1
2	262269	SPACER, Ski column	4
3	262270	BOLT, Extension	2
4	262272	ROD, Steering arm	2
5	290774	HOOD RESTRAINT ASSY	1
6	300646	SCREW, Bracket mtg	1
7	304636	COTTER PIN	2
8	301472	NUT, Bracket mtg	1
9	306396	LOCKWASHER, Bracket mtg . .	1
10	306941	NUT, Extension bolt	2

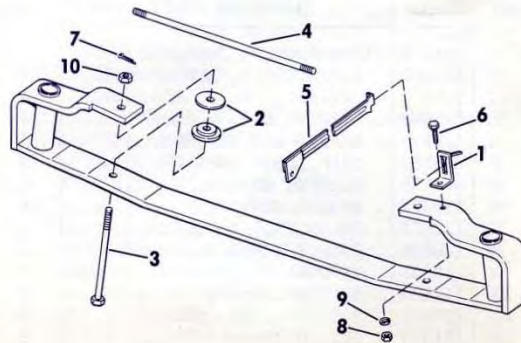

INDENTED PART NAMES INDICATE THAT THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY
SPECIFY MODEL AND SERIAL NUMBER OF VEHICLE WHEN ORDERING PARTS