

SnoJet


DIVISION OF CONROY OF CANADA INC.

1973

ENGINES

CRANK & PISTON

Y 292 - S 292

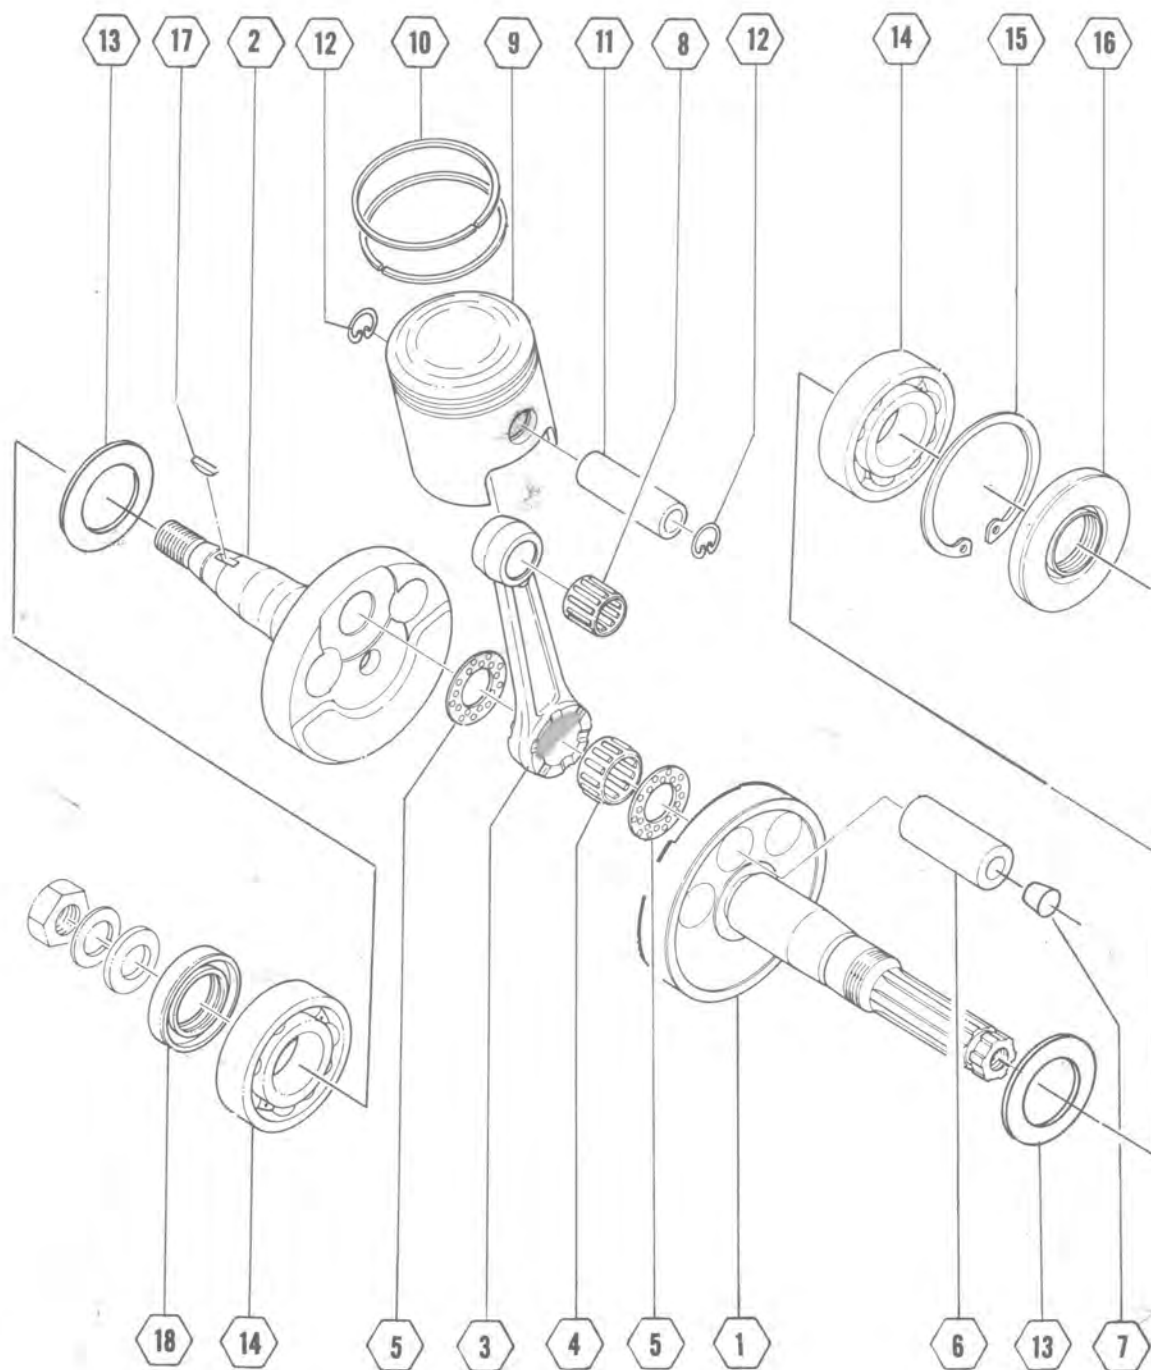


CRANK & PISTON

[illegible]

CRANK & PISTON

Y 338 - S 338 - Y 433 - S 433

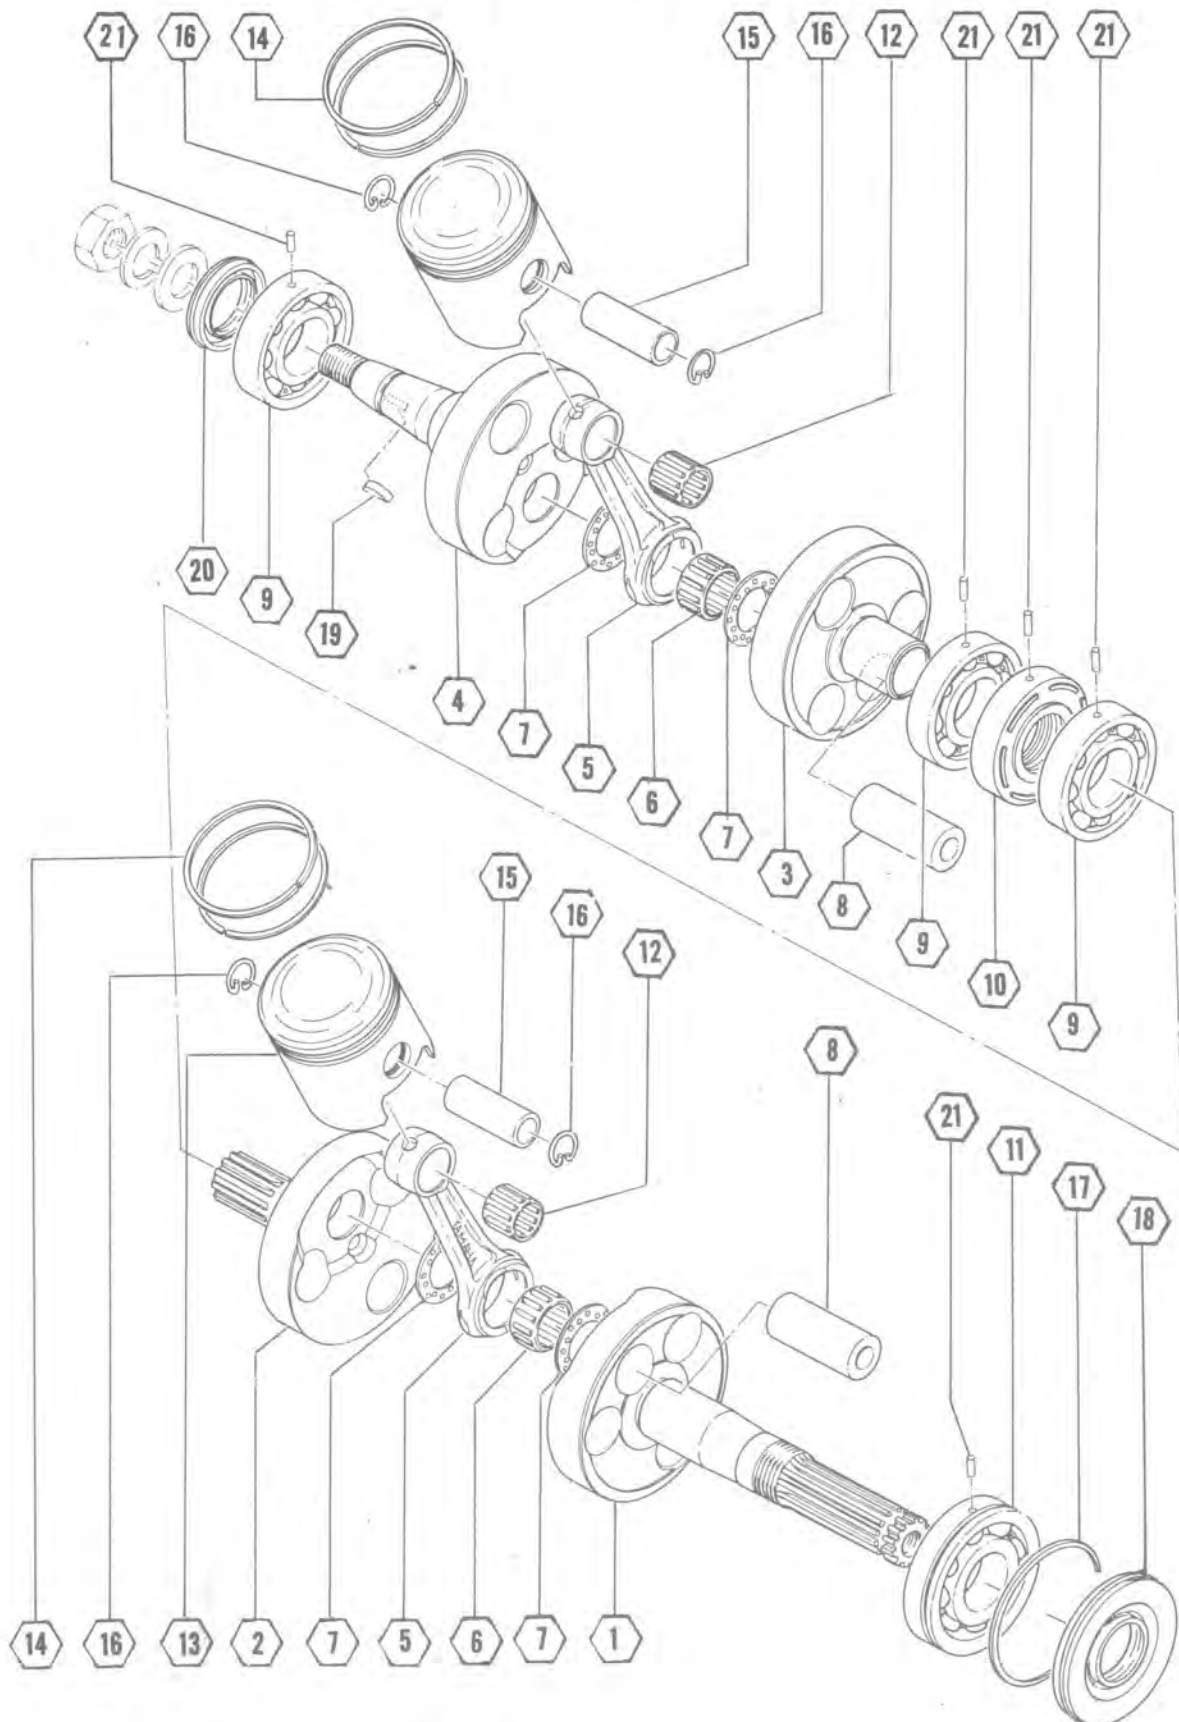


CRANK & PISTON

5338B

[illegible]

CRANK & PISTON

Y 338 - S 338 - Y 433 - S 433

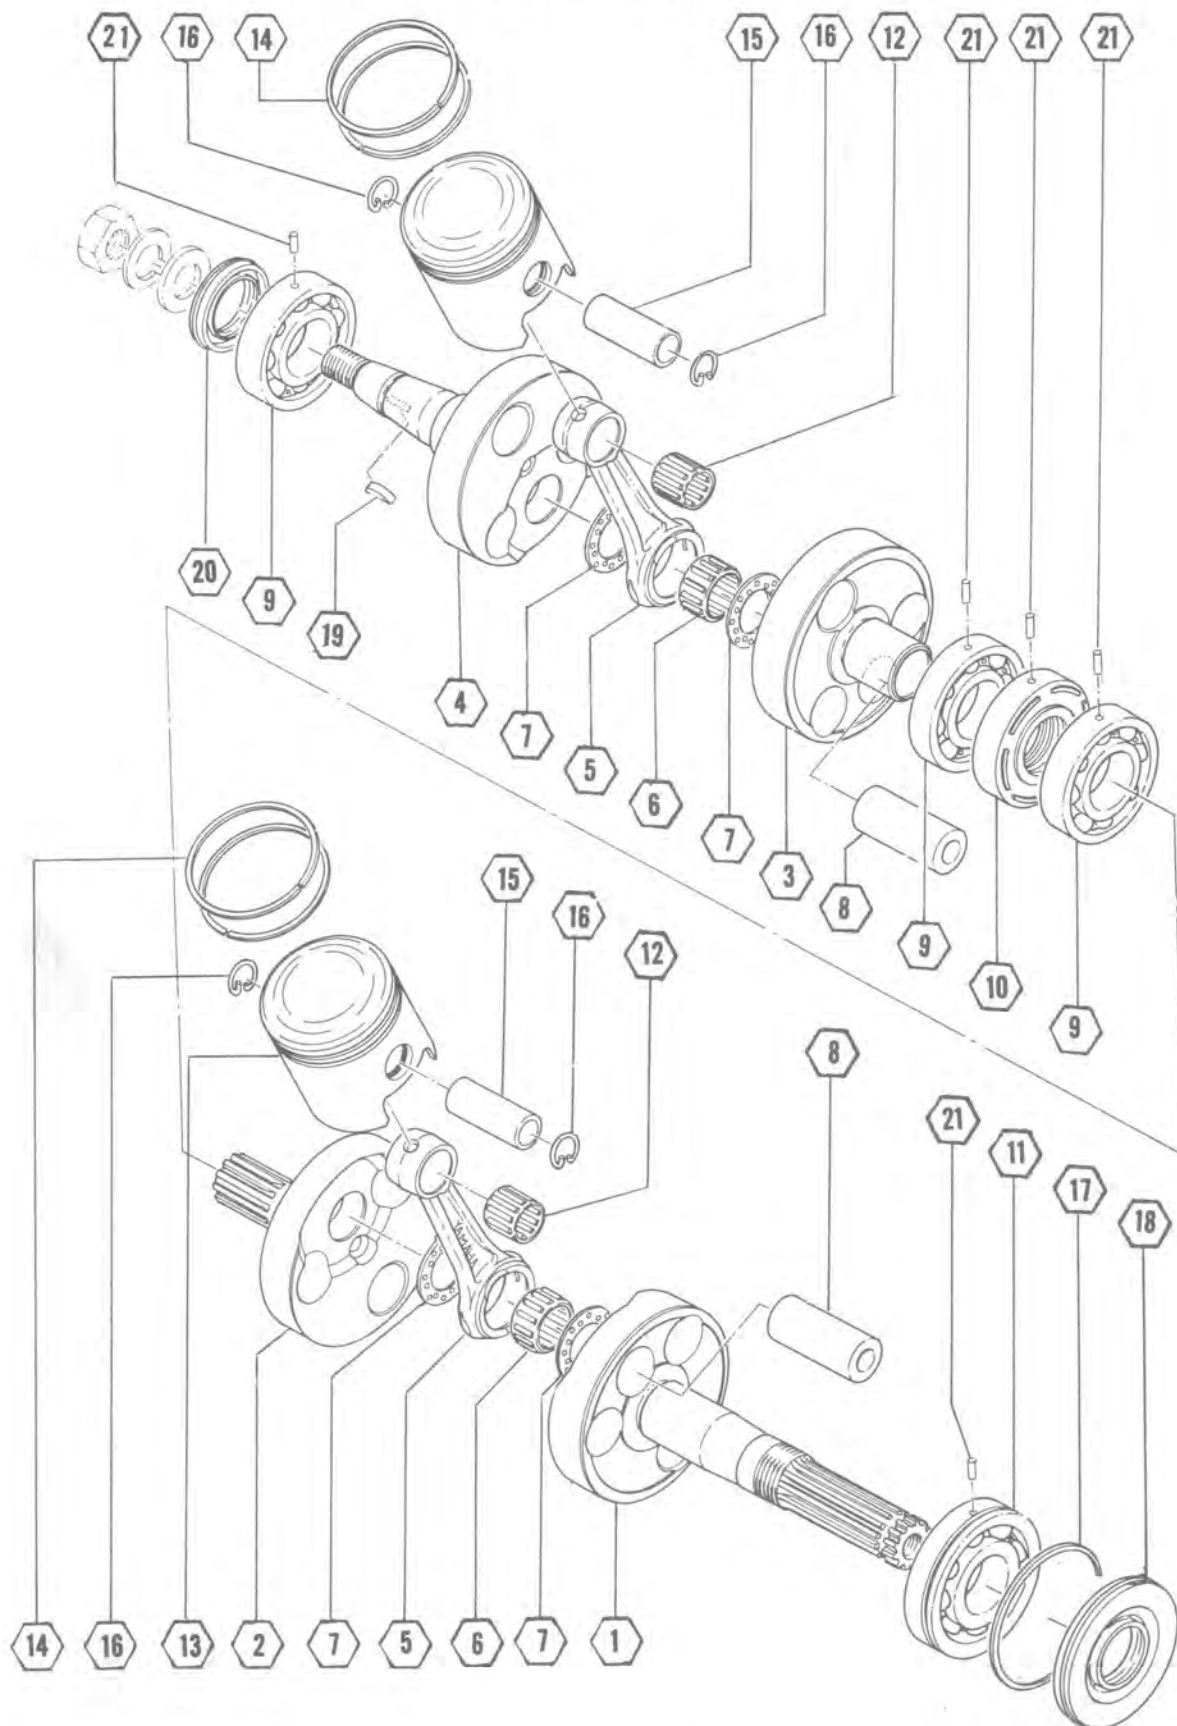


CRANK & PISTON

S4338

[illegible]

CRANKCASE

Y 292 - S 292

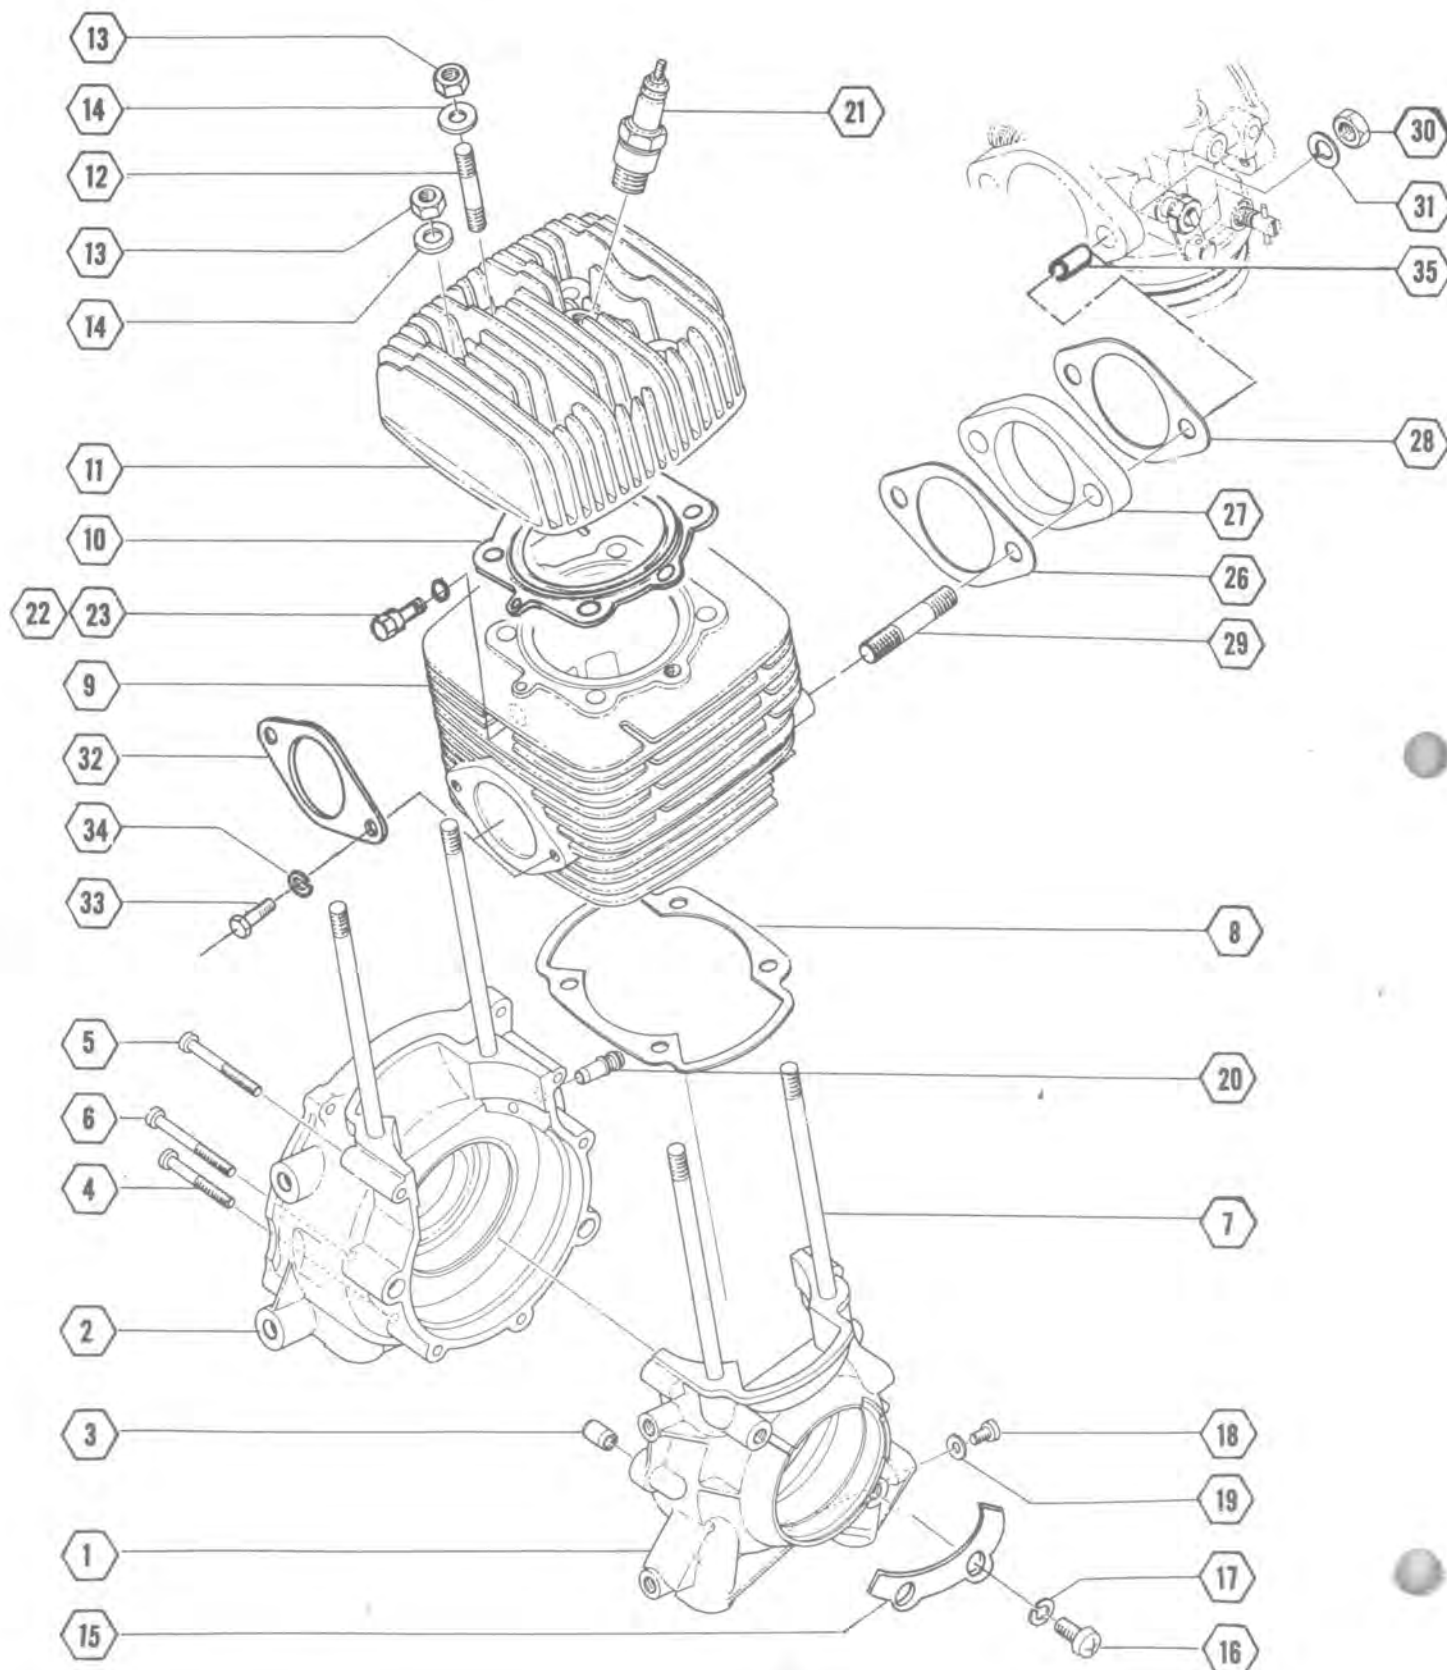


CRANKCASE

No	SnoJet	YAMAHA	DESCRIPTION	Y292B	S292B
1	810185	839-15111-00	Crank case left	1	1
2	810186	839-15121-00	Crank case right	1	1
3	810602	91810-02015	Dowel pin	2	2
4	810603	92501-06045	Screw	3	3
5	810604	92501-06050	Screw	2	2
6	810605	92501-06055	Screw	2	2
7	810606	812-11361-00	Bolt, cylinder holding	4	4
8	810607	812-11351-00	Gasket, cylinder	1	1
9	810134	822-11311-00	Cylinder	1	
—	811199	845-11311-00	Cylinder		1
10	810609	812-11181-00	Gasket, cylinder head	1	1
11	810133	839-11111-00	Cylinder head	1	
—	811200	845-11111-00	Cylinder head		1
12	810611	812-11179-00	Bolt, stud	2	2
13	810612	812-11171-00	Nut	6	6
14	810613	812-11175-00	Washer	6	6
15	811011	822-15118-09	Holder, oil seal	1	1
16	810069	91201-06020	Bolt	2	2
17	810187	91901106100	Washer, spring	2	
—	810454	92901-06100	Washer, spring		2
18	810439	92501-06010	Screw	1	1
19	811201	838-15384-00	Gasket, screw	1	1
20	810620	812-24461-00	Pipe joint	1	1
21	810188	94701-00044	Spark plug (B-7ES)	1	
—	811193	94701-00052	Spark plug (N-3G)		1
22	810189	822-12283-09	Bracket, decompression	1	
23	810190	812-11198-00	Gasket	1	
26	810523	810-13556-00	Gasket	1	
—	811194	845-13556-00	Gasket		2
27	810078	812-13555-09	Joint	1	
—	811195	823-13555-00	Joint		1
28	811072	839-13556-00	Gasket	1	
—	810079	812-13556-70*	Gasket		1
29	810089	812-13558-00	Stud	2	2
30	810508	98801-08300	Nut	2	2
31	810456	92901-08100	Washer, spring	2	2
32	810084	812-14613-01	Gasket, exhaust	1	1
33	810085	97101-08020	Bolt	2	2
34	811196	92991-08100	Washer, spring	2	2
35	810045	810-13576-00	Spacer		2

CRANKCASE

Y 338 - S 338 - Y 433 - S 433

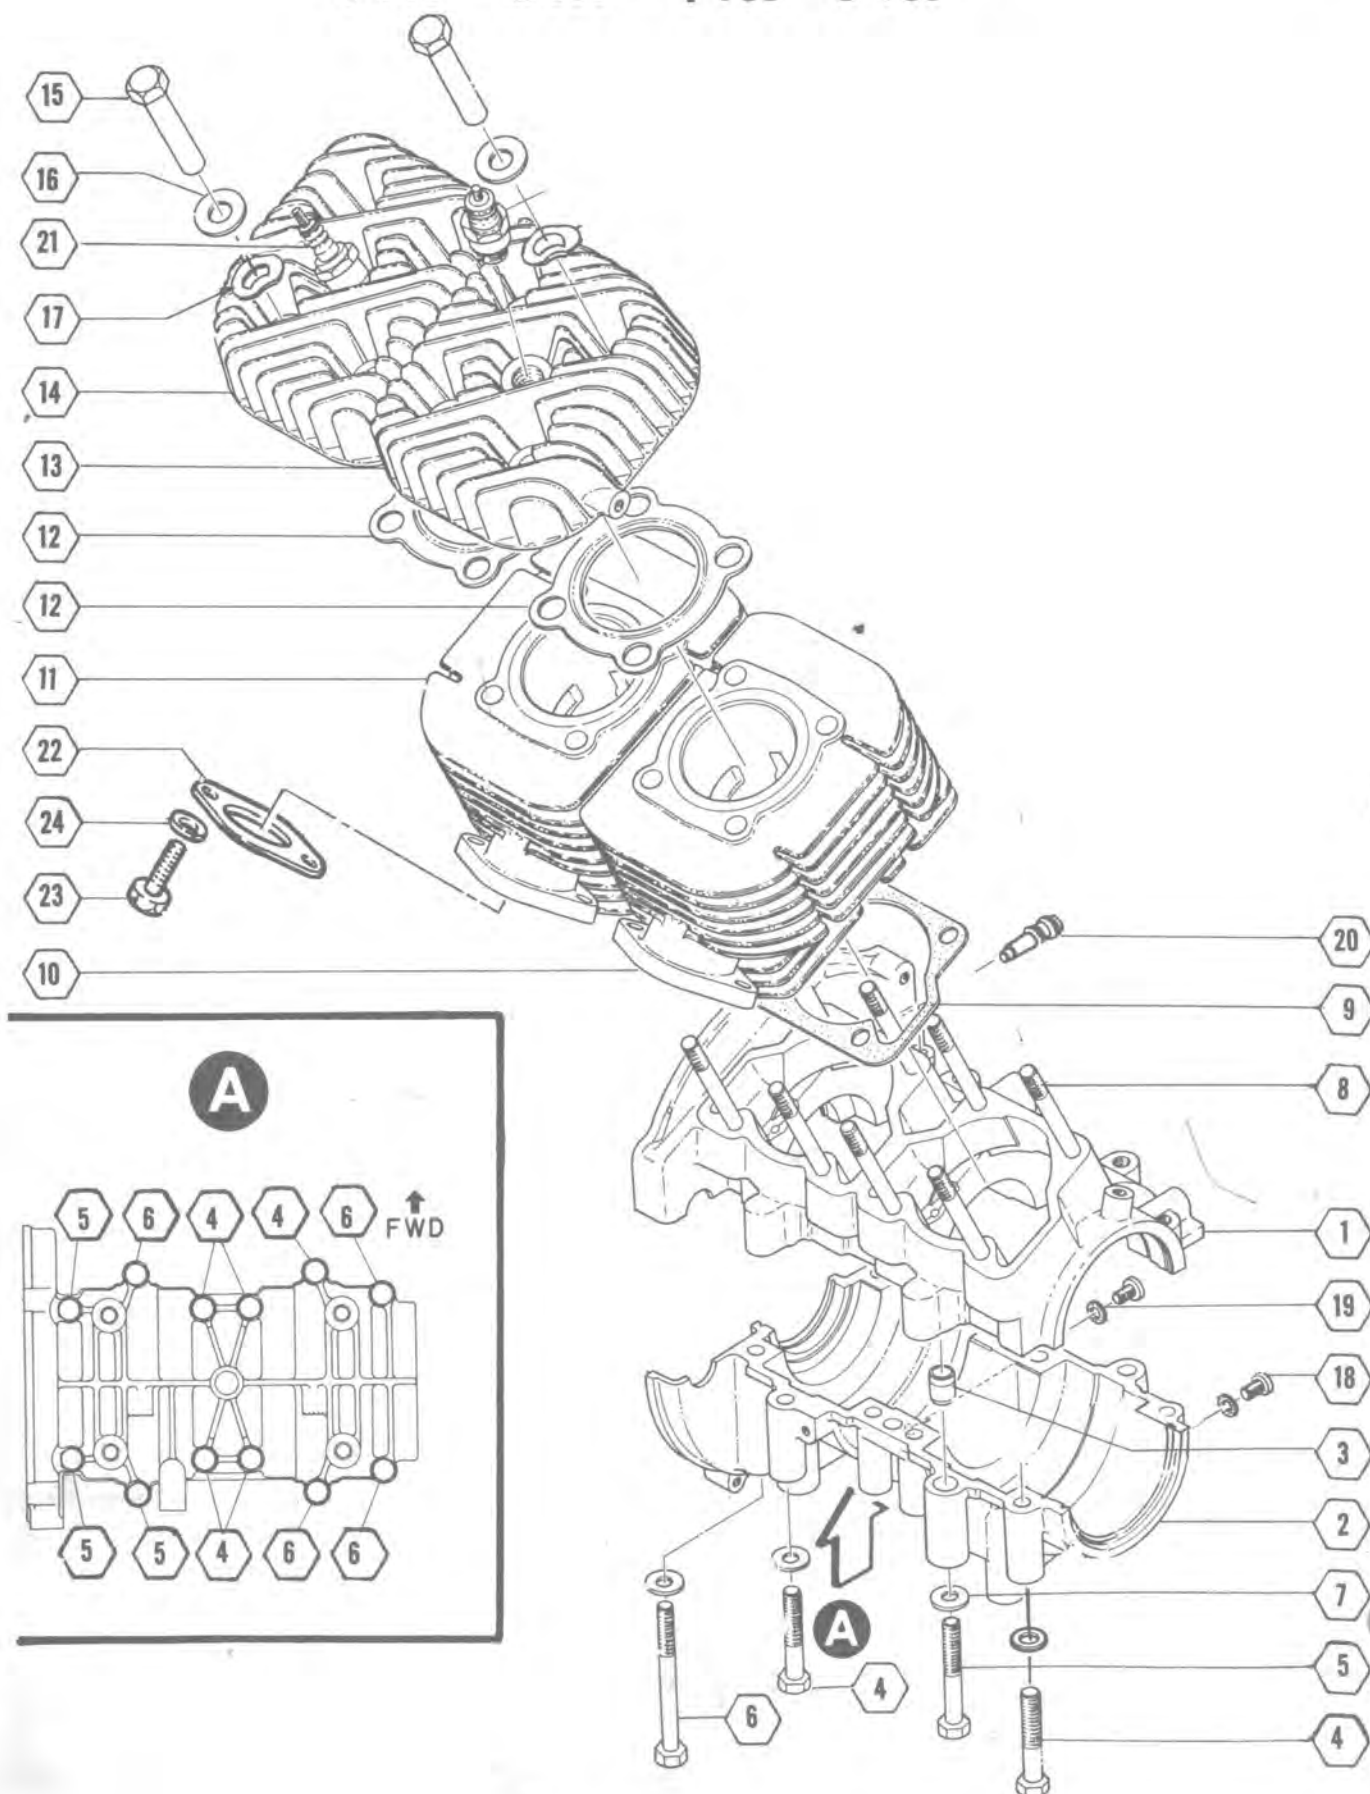


CRANKCASE

No	Sno-Jet	YAMAHA	DESCRIPTION				
				Y338B	S338B	Y433B	S433B
—	811091	840-15100-00	Crankcase assy	1			
—	811210	846-15100-00	Crankcase assy		1		
—	811128	838-15100-00	Crankcase assy			1	1
1	811092	840-15111-00	•Crankcase 1	1			
—	811210	846-15111-00	•Crankcase 1		1		
—	811129	838-15111-00	•Crankcase 1			1	1
2	811093	840-15121-00	•Crankcase 2	1	1		
—	811130	838-15121-00	•Crankcase 2			1	1
3	810437	91810-08016	Dowel pin	2	2	2	2
4	810879	97101-08050	Bolt	4	4	4	4
5	810490	97101-08060	Bolt	5	5	5	5
6	810491	97101-08070	Bolt	3	3	3	3
7	810457	92901-08200	Washer	12	12	12	12
8	810243	248-11361-00	Bolt	8	8	8	8
9	810376	807-11351-00	Gasket, cylinder	2			
—	811211	846-11351-00	Gasket, cylinder		2		
—	810880	811-11351-00	Gasket, cylinder			2	2
10	811016	824-11311-00	Cylinder, left	1			
—	811212	846-11311-00	Cylinder, left		1		
—	811131	838-11311-00	Cylinder, left			1	
—	810983	828-11311-00	Cylinder, left				1
11	810984	824-11321-00	Cylinder, right	1			
—	811213	846-11321-00	Cylinder, right		1		
—	811132	838-11321-00	Cylinder, right			1	
—	810984	828-11321-00	Cylinder, right				1
12	810328	806-11181-00	Gasket, cylinder head	2	2		
—	810589	818-11181-00	Gasket, cylinder head			2	2
13	810805	810-11111-01	Head, cylinder left	1			
—	811214	846-11111-00	Head, cylinder left		1		
—	810594	838-11111-00	Head, cylinder left			1	
—	810590	818-11111-00	Head, cylinder left				1
14	811094	824-11121-00	Head, cylinder right	1			
—	811215	846-11121-00	Head, cylinder right		1		
—	810595	838-11121-00	Head, cylinder right			1	
—	810591	818-11121-00	Head, cylinder right				1
15	811018	824-11171-00	Nut	8	8	8	8
16	810460	92901-1200	Washer	8	8	8	8
17	810592	164-16119-00	Spring Belleville			8	8
18	810439	92501-06010	Screw	2	2	2	2
19	811201	838-15384-00	Gasket	2	2	2	2
20	810620	812-24461-00	Pipe joint	1	1	1	1
21	811095	94701-00040	Spark plug	2		2	
—	811197	94701-00051	Spark plug		2		2
22	811111	807-14613-00	Gasket, exhaust	2	2	2	2
23	810345	806-14651-00	Bolt, exhaust hold	4	4	4	4

FAN CASE-AIR SHROUD

Y 292 - S 292

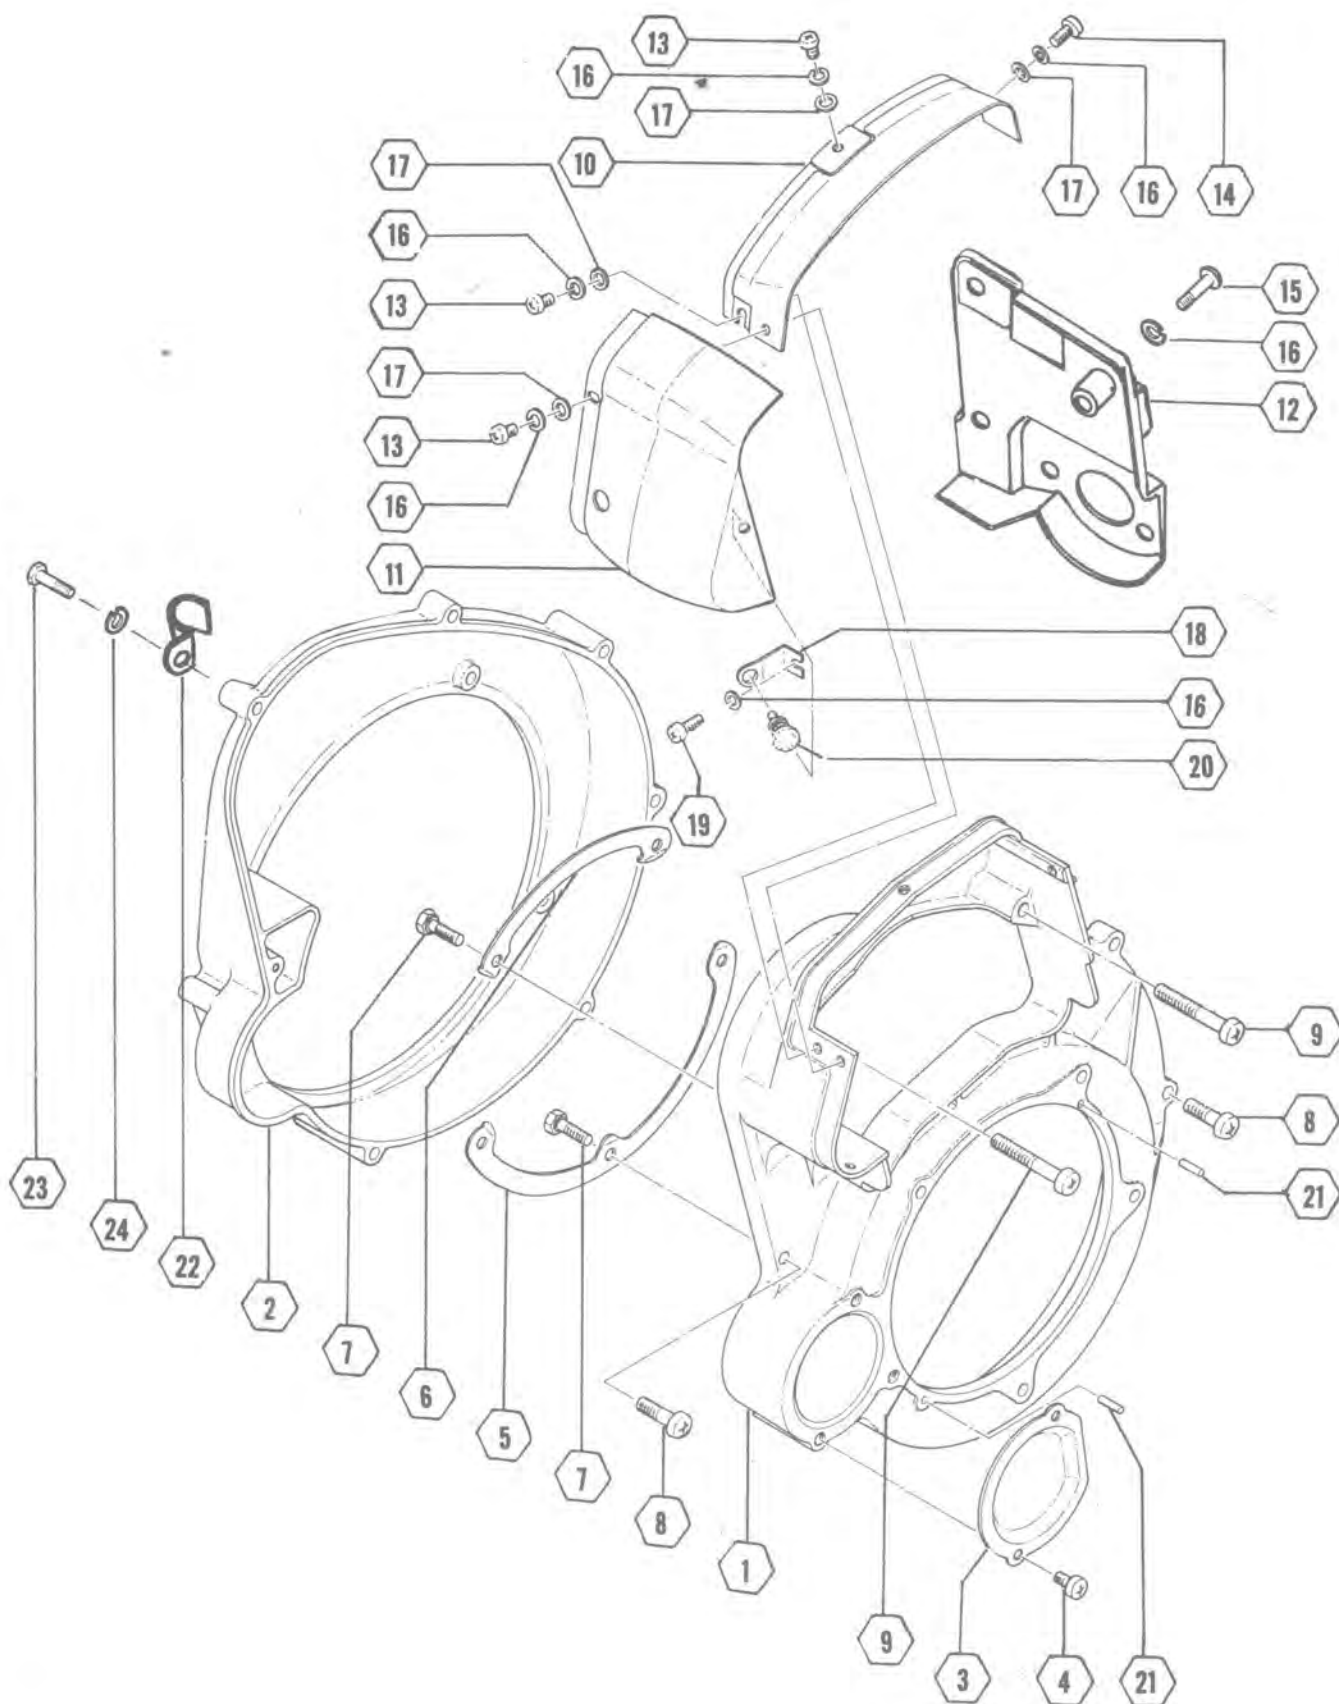


Y292B

S292B

[illegible]

FAN CASE - AIR SHROUD

Y 338 - S 338 - Y 433 - S 433

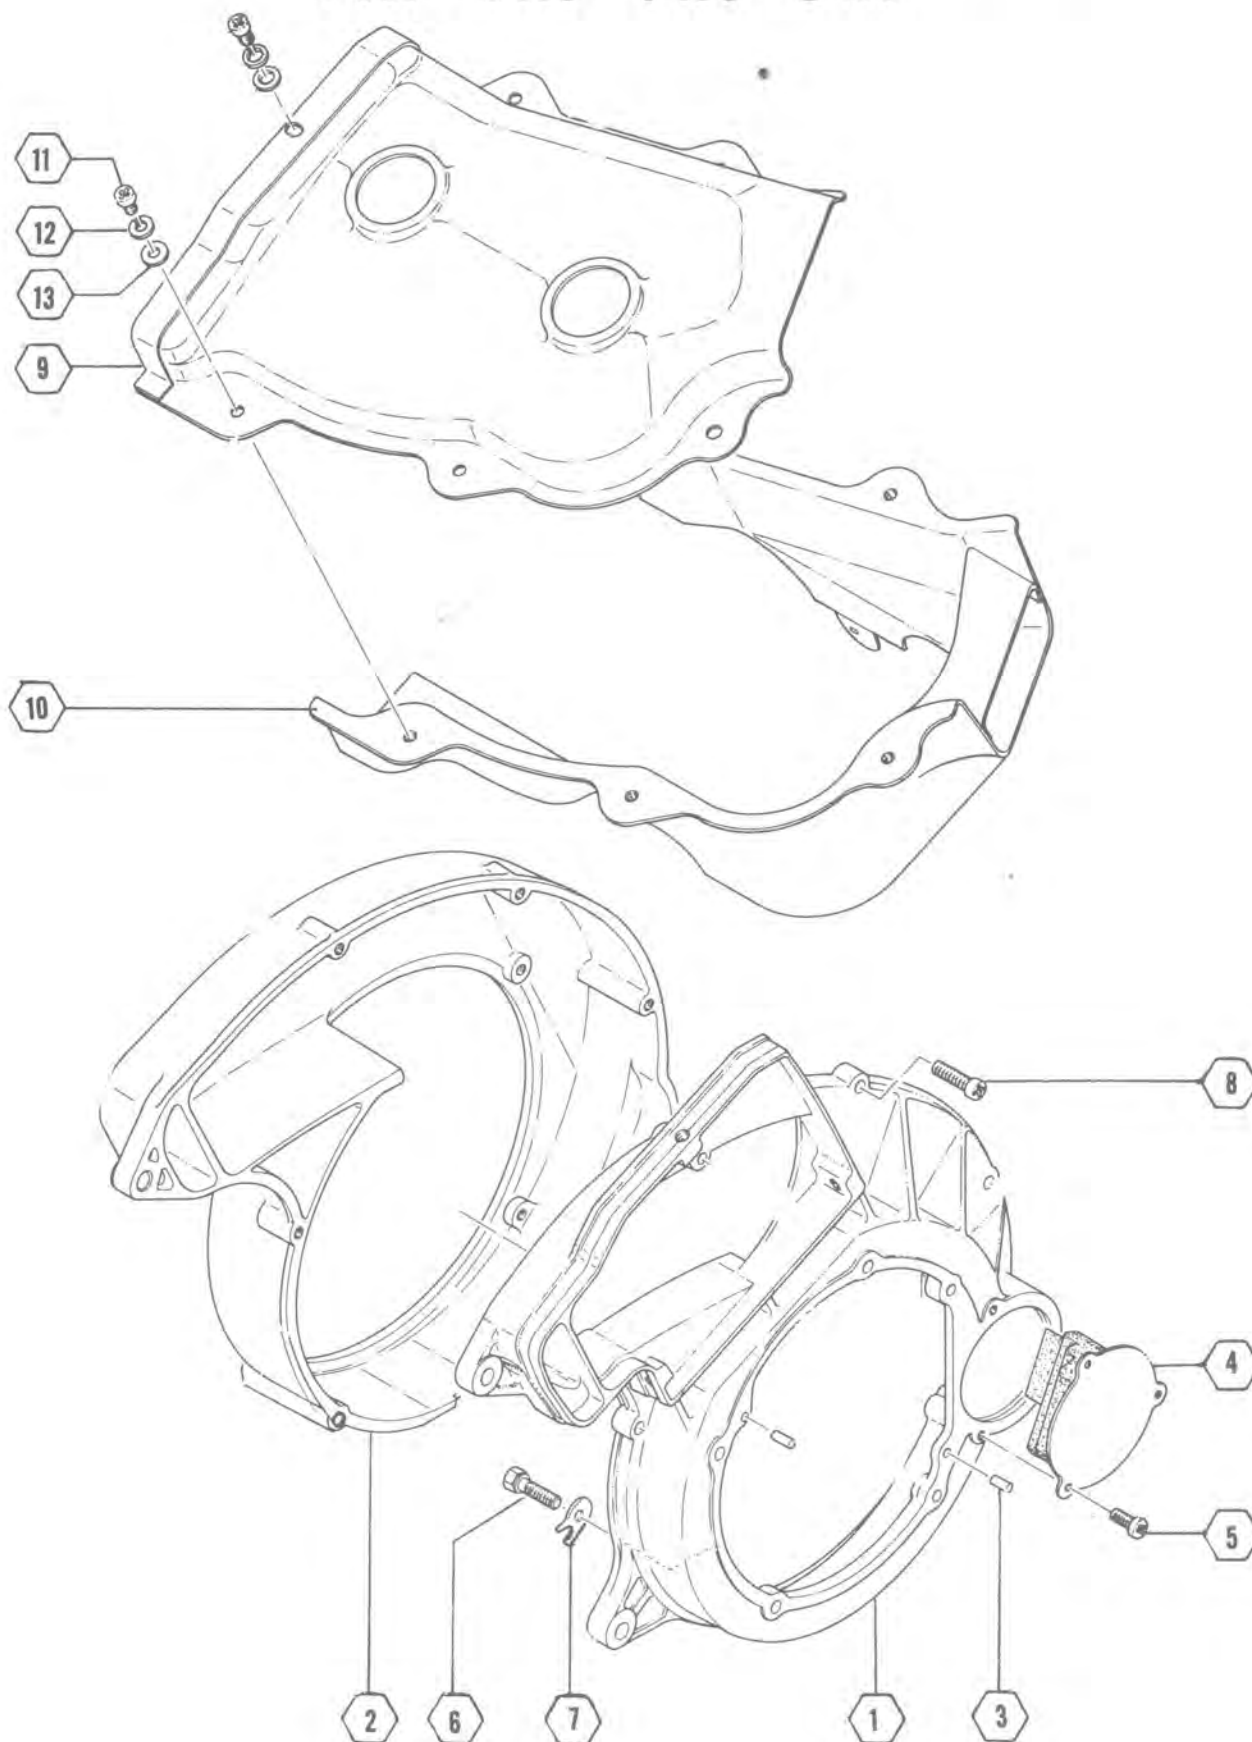

Y338B

5338B


Y433B

S433B

[illegible]

FLYWHEEL MAGNETO

Y 292 - S 292

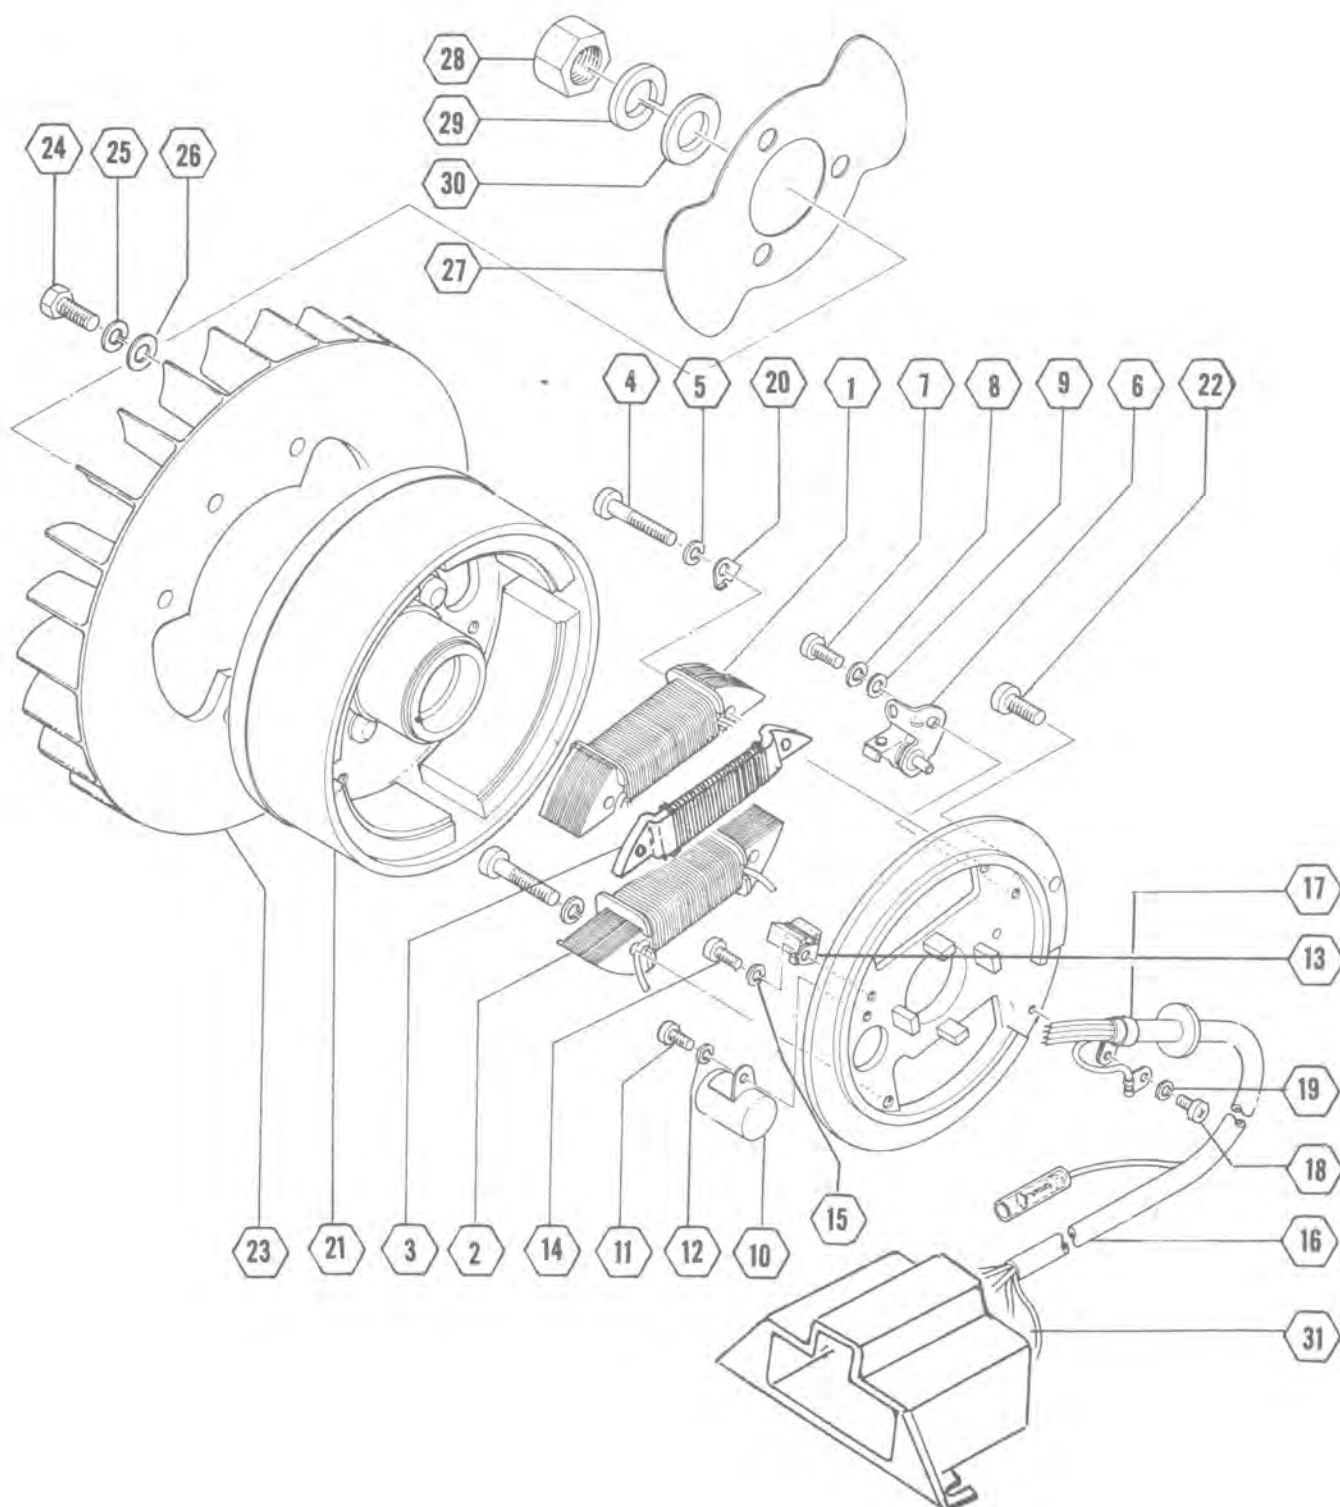


Y292B
S292B

Y292B
S292B

FLYWHEEL MAGNETO


Y 338 - S 338 - Y 433 - S 433

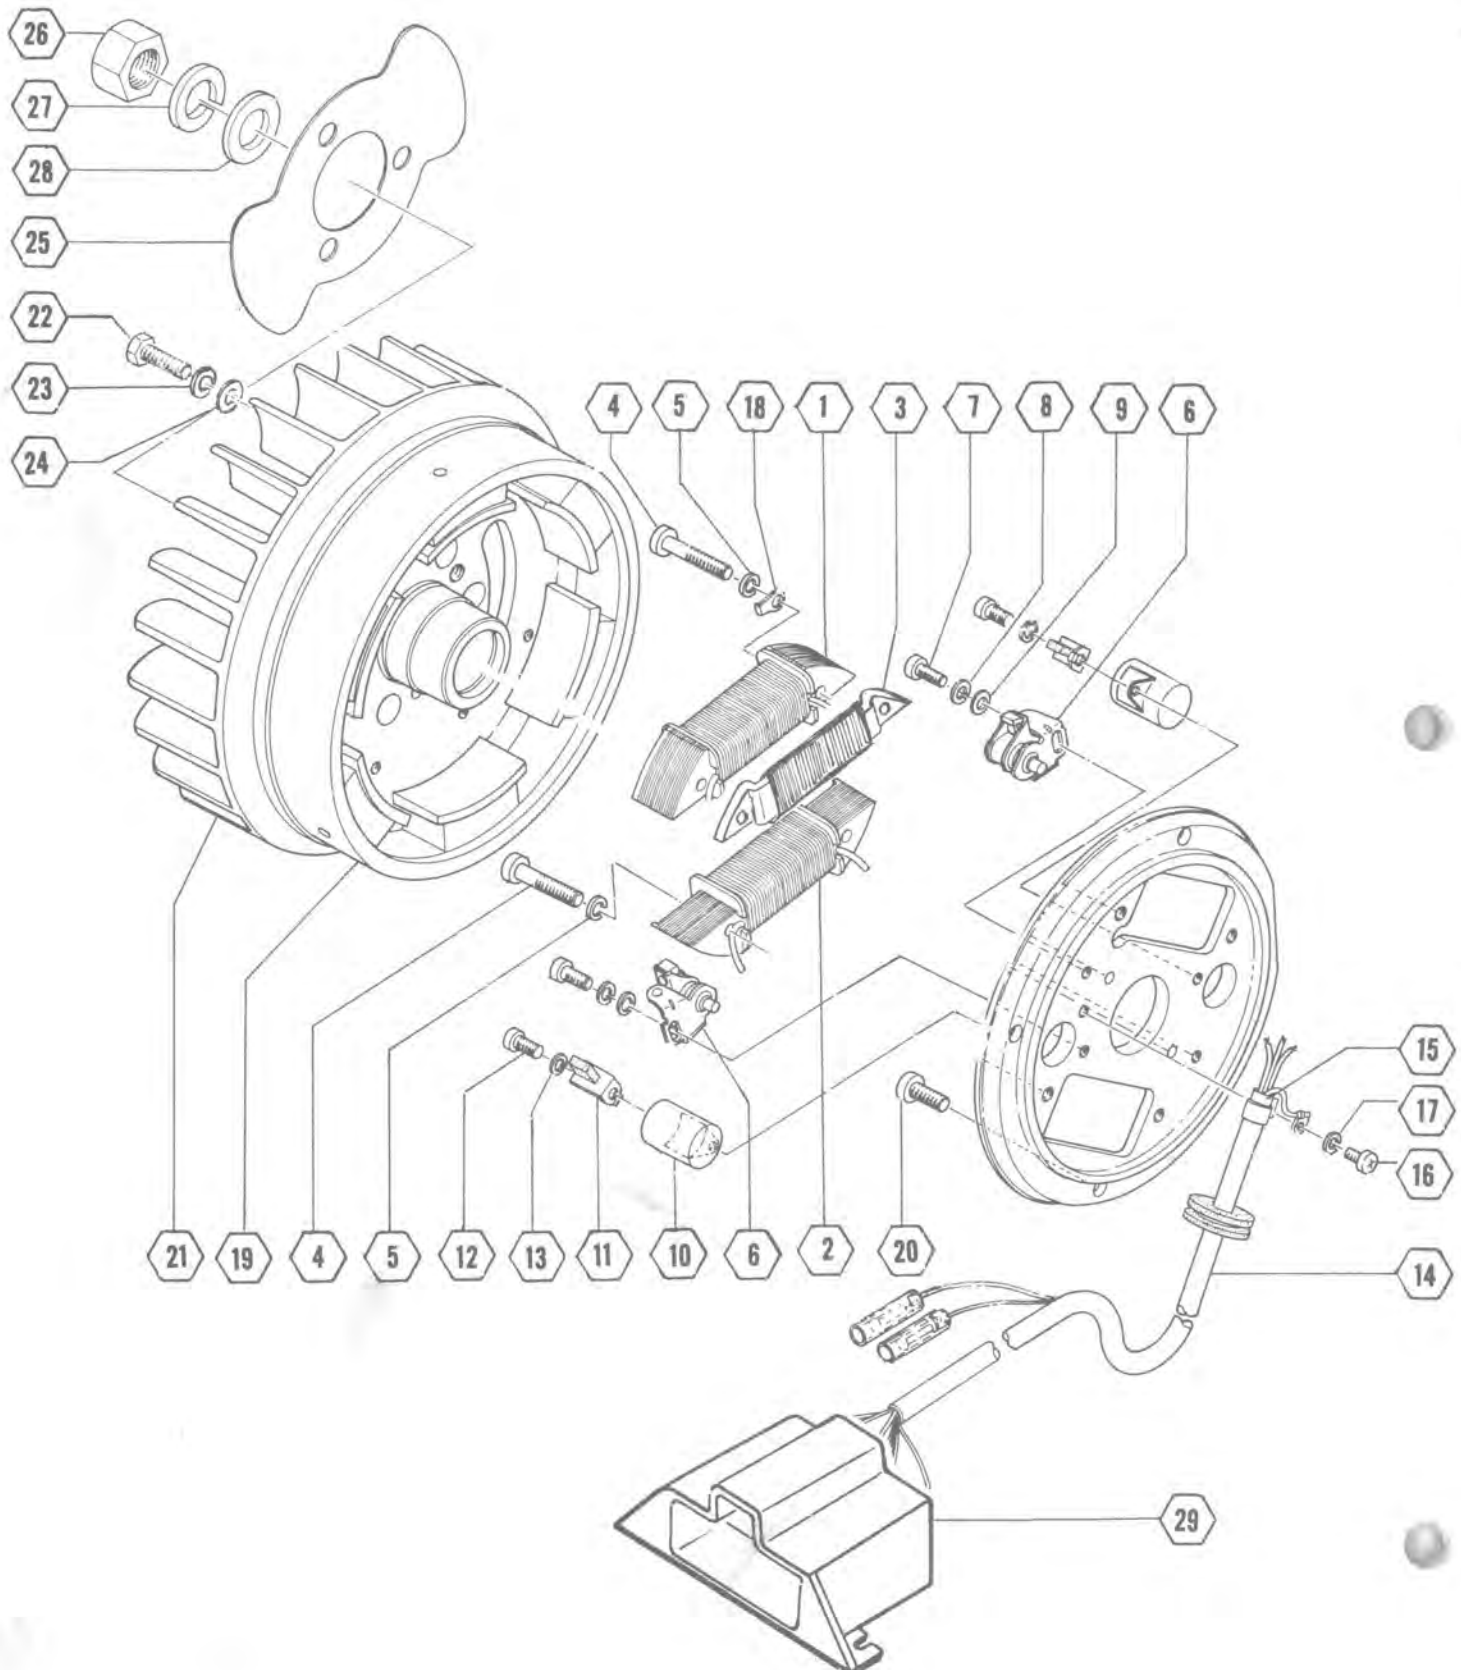

[illegible]

STARTER

Y 292 - S 292 - Y 338 - S 338 - Y 433 - S 433

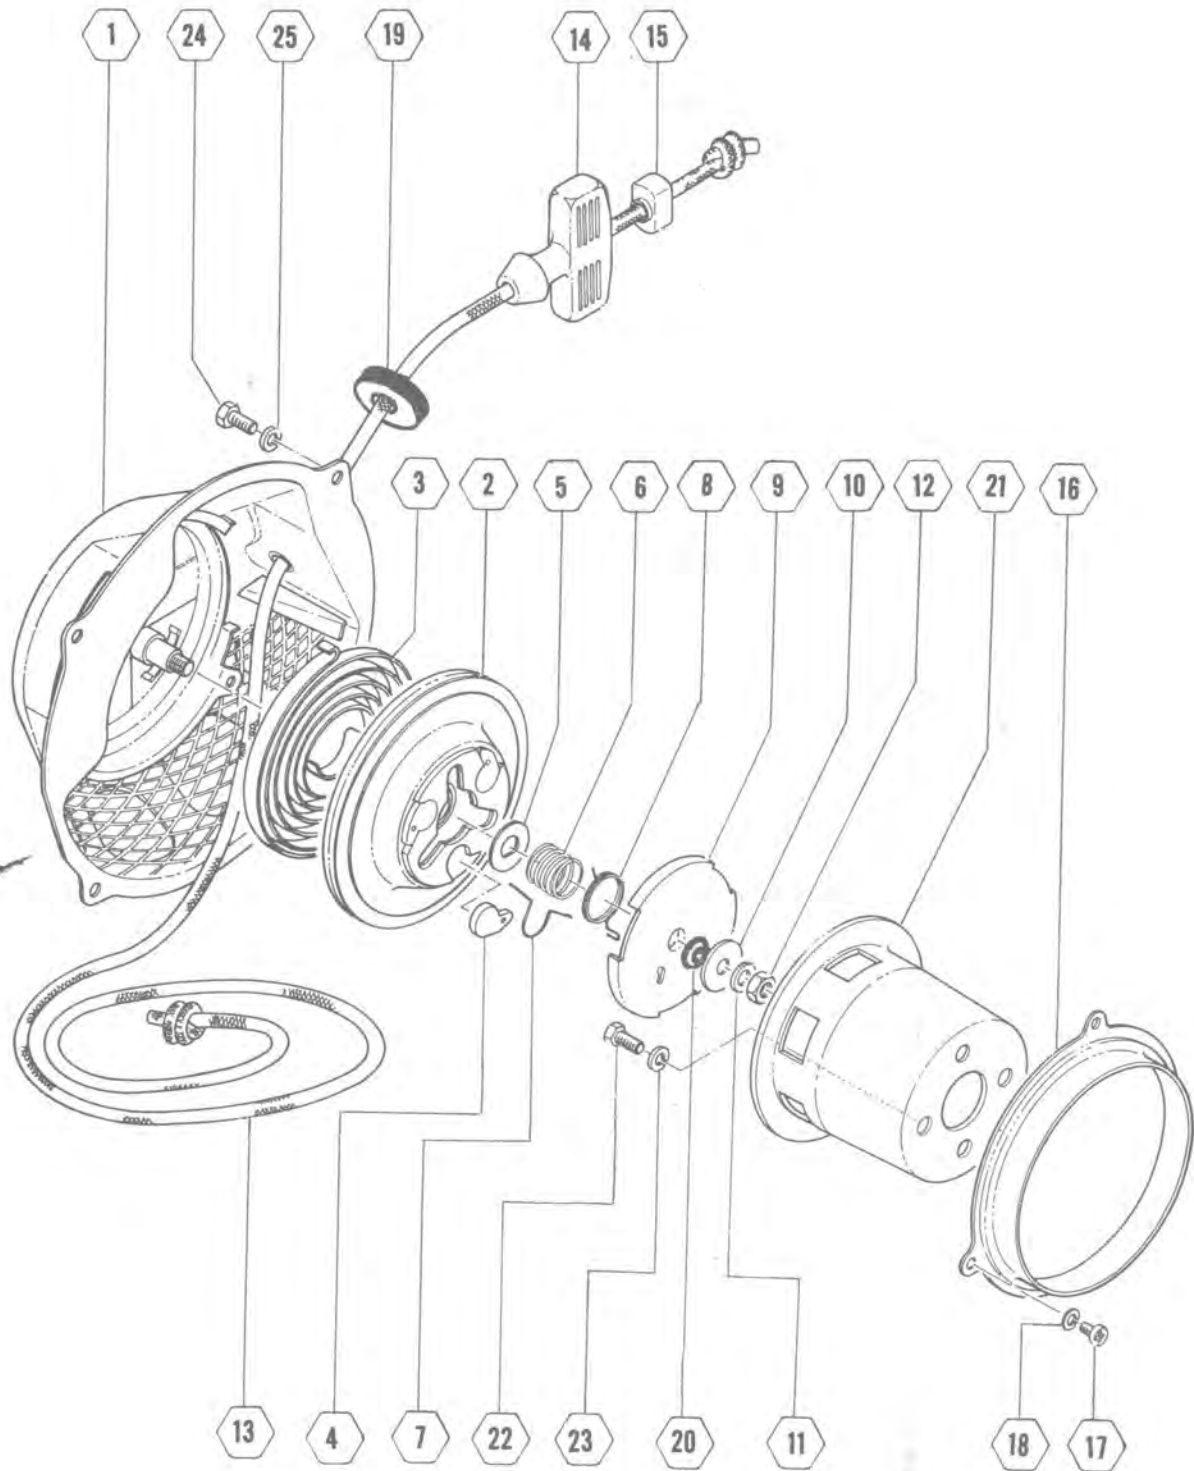


Y292B
S292B

[illegible]

STARTER


Y 292 - S 292 - Y 338 - S 338 - Y 433 - S 433

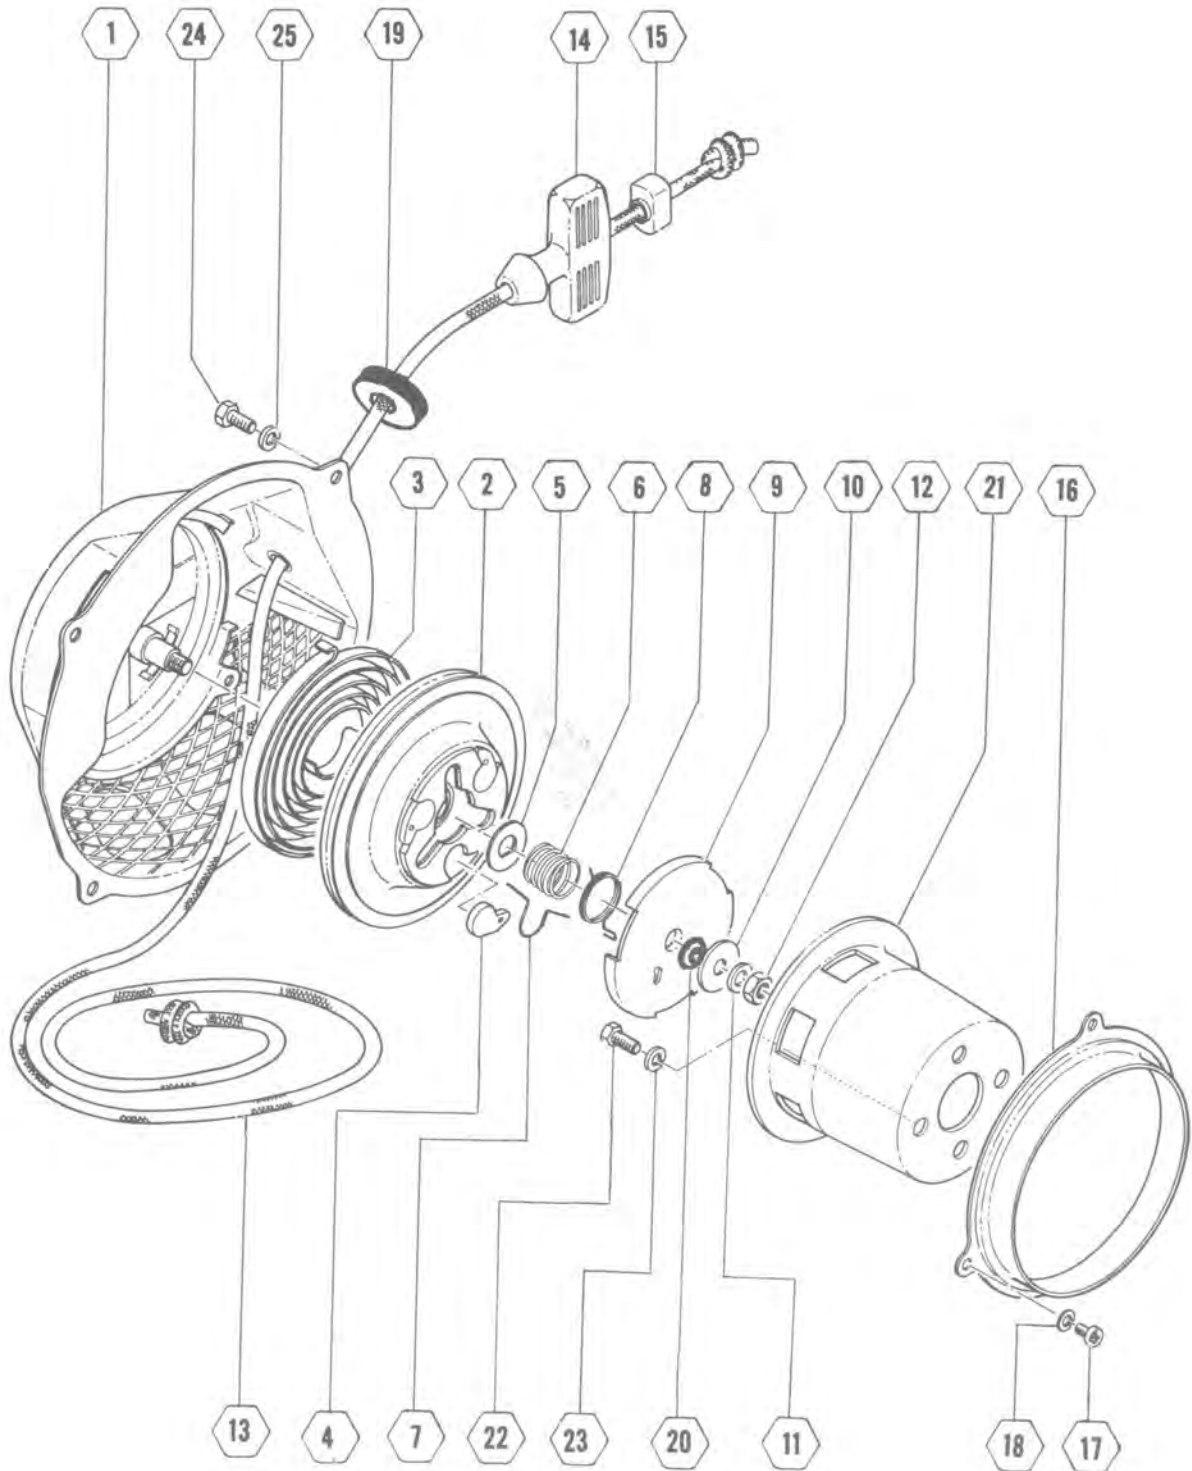

[illegible]

PRIMARY SHEAVE

Y 292 - S 292 - Y 338 - S 338 - Y 433 - S 433

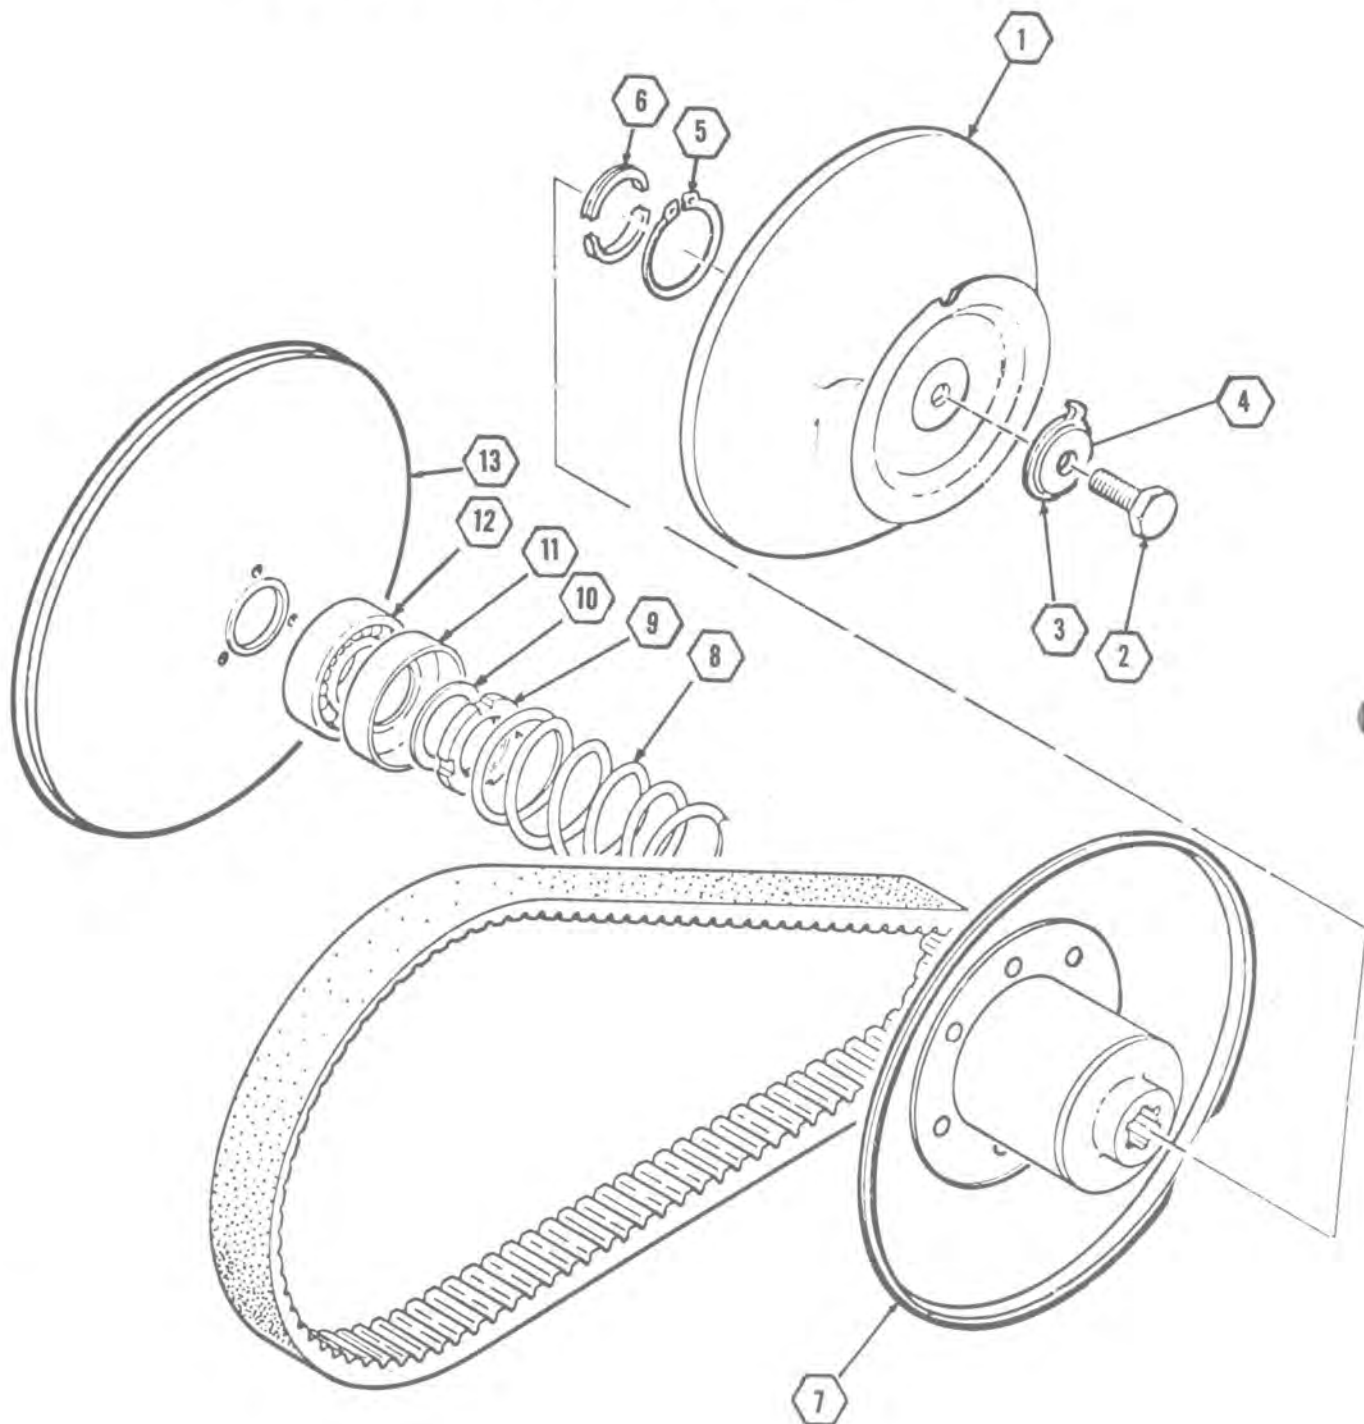


Y292B

S292B

[illegible]

PRIMARY SHEAVE

Y 292 - S 292 - Y 338 - S 338 - Y 433 - S 433

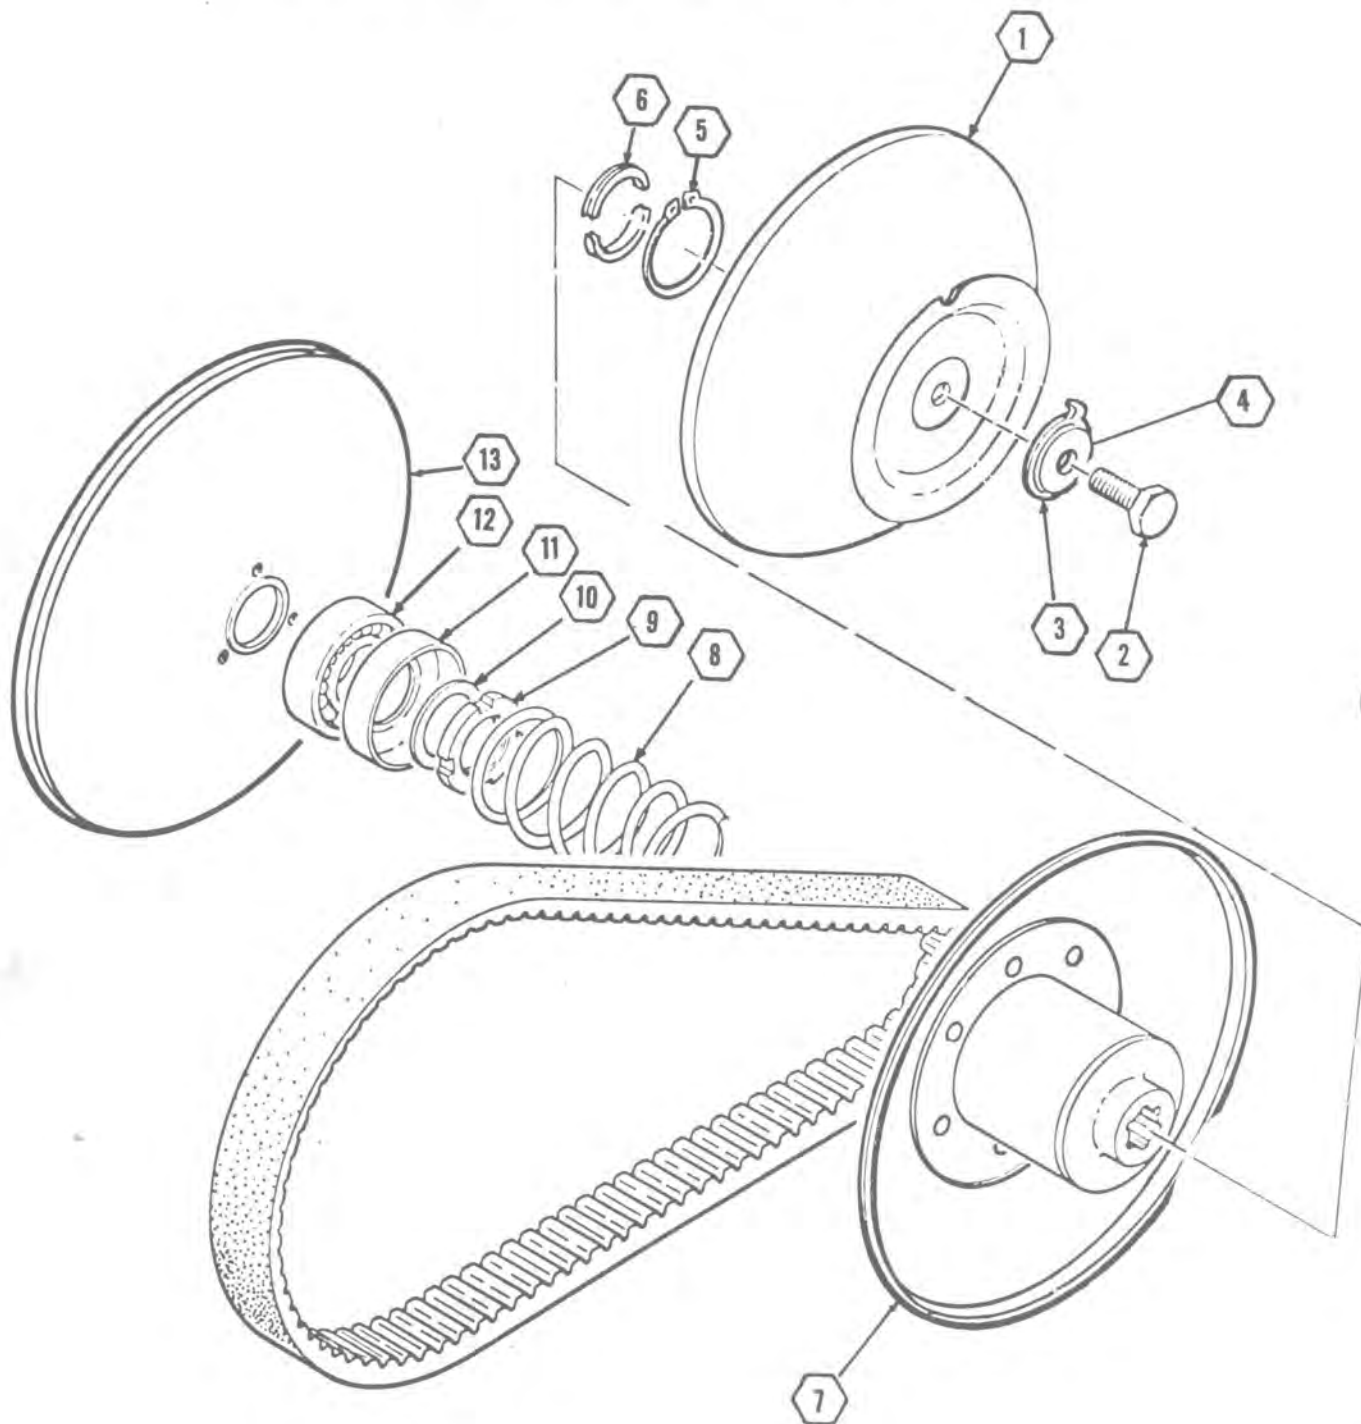


PRIMARY SHEAVE

[illegible]

DECOMPRESSION

Y 292

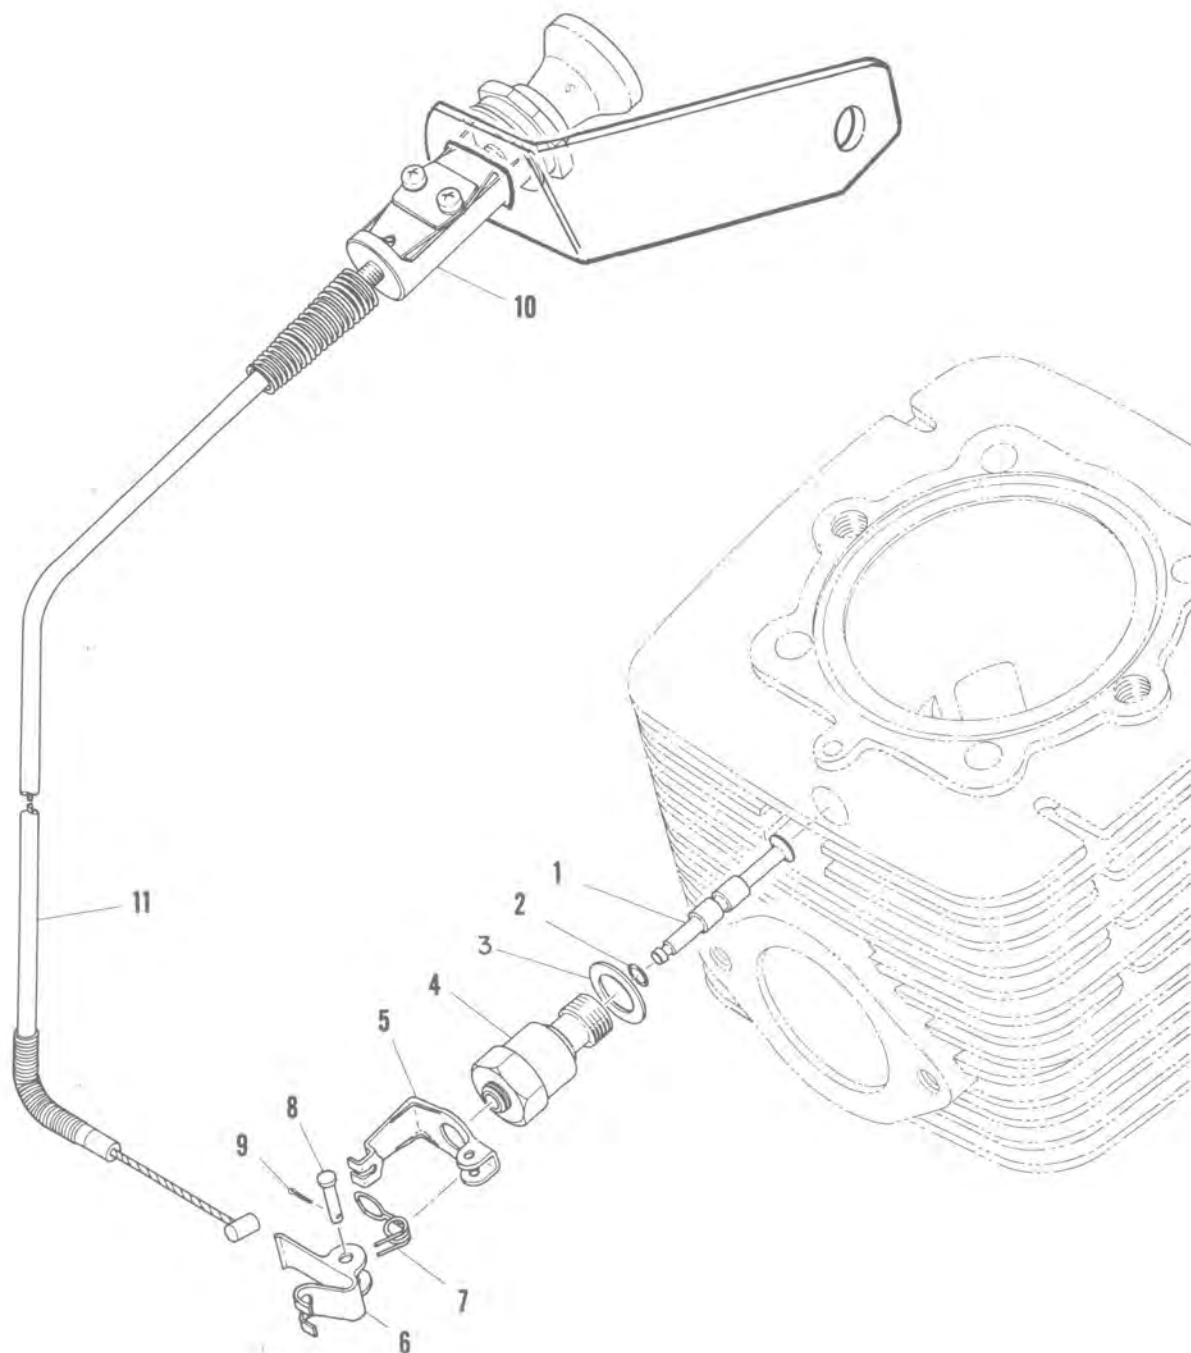


Y292B

[illegible]

ELECTRICAL


Y 292 - S 292

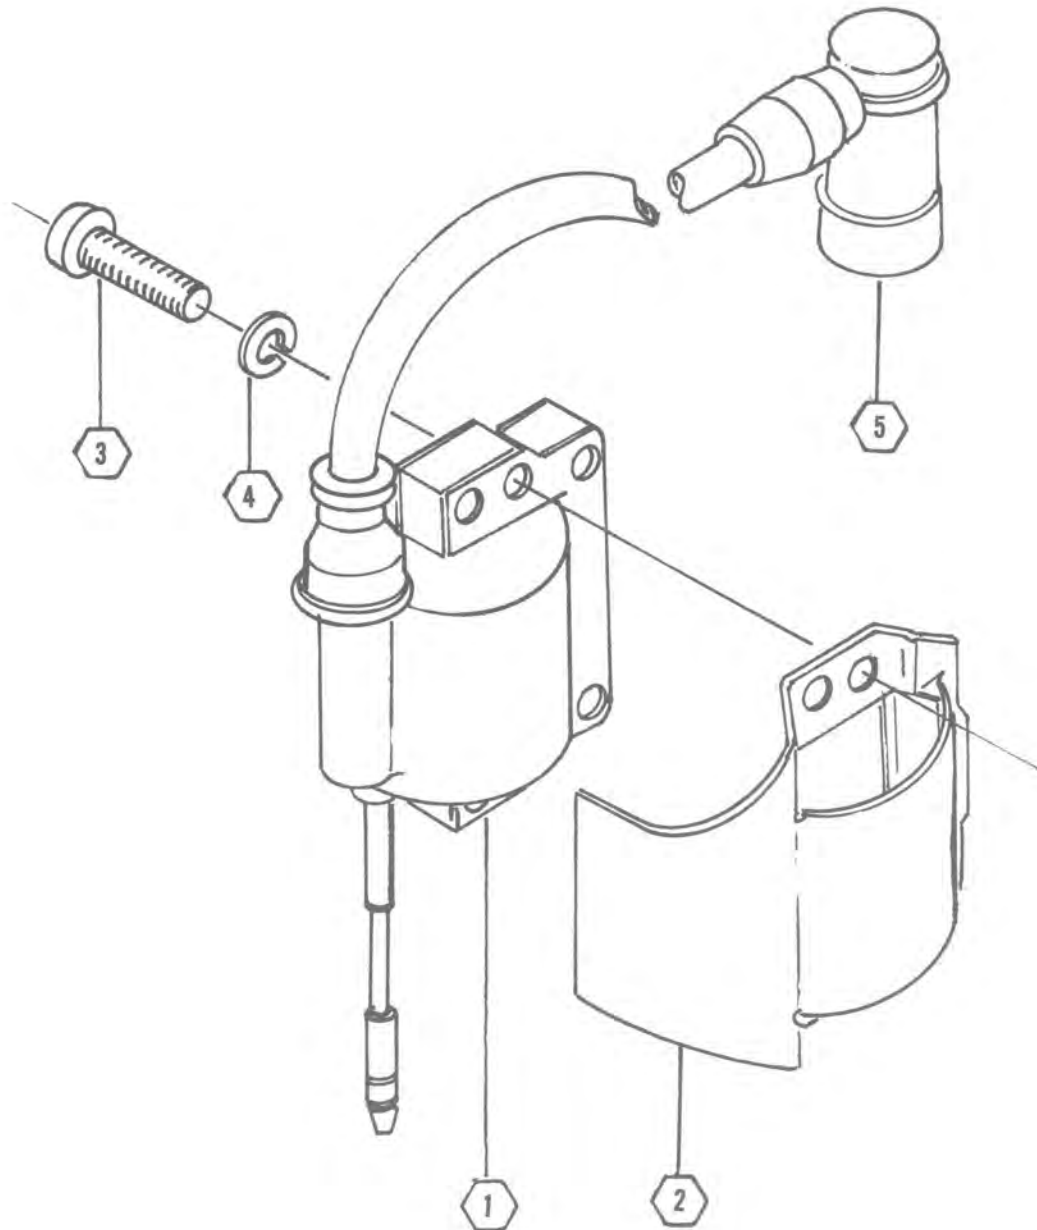

[illegible]

ELECTRICAL




Y 338 - S 338 - Y433 - S433

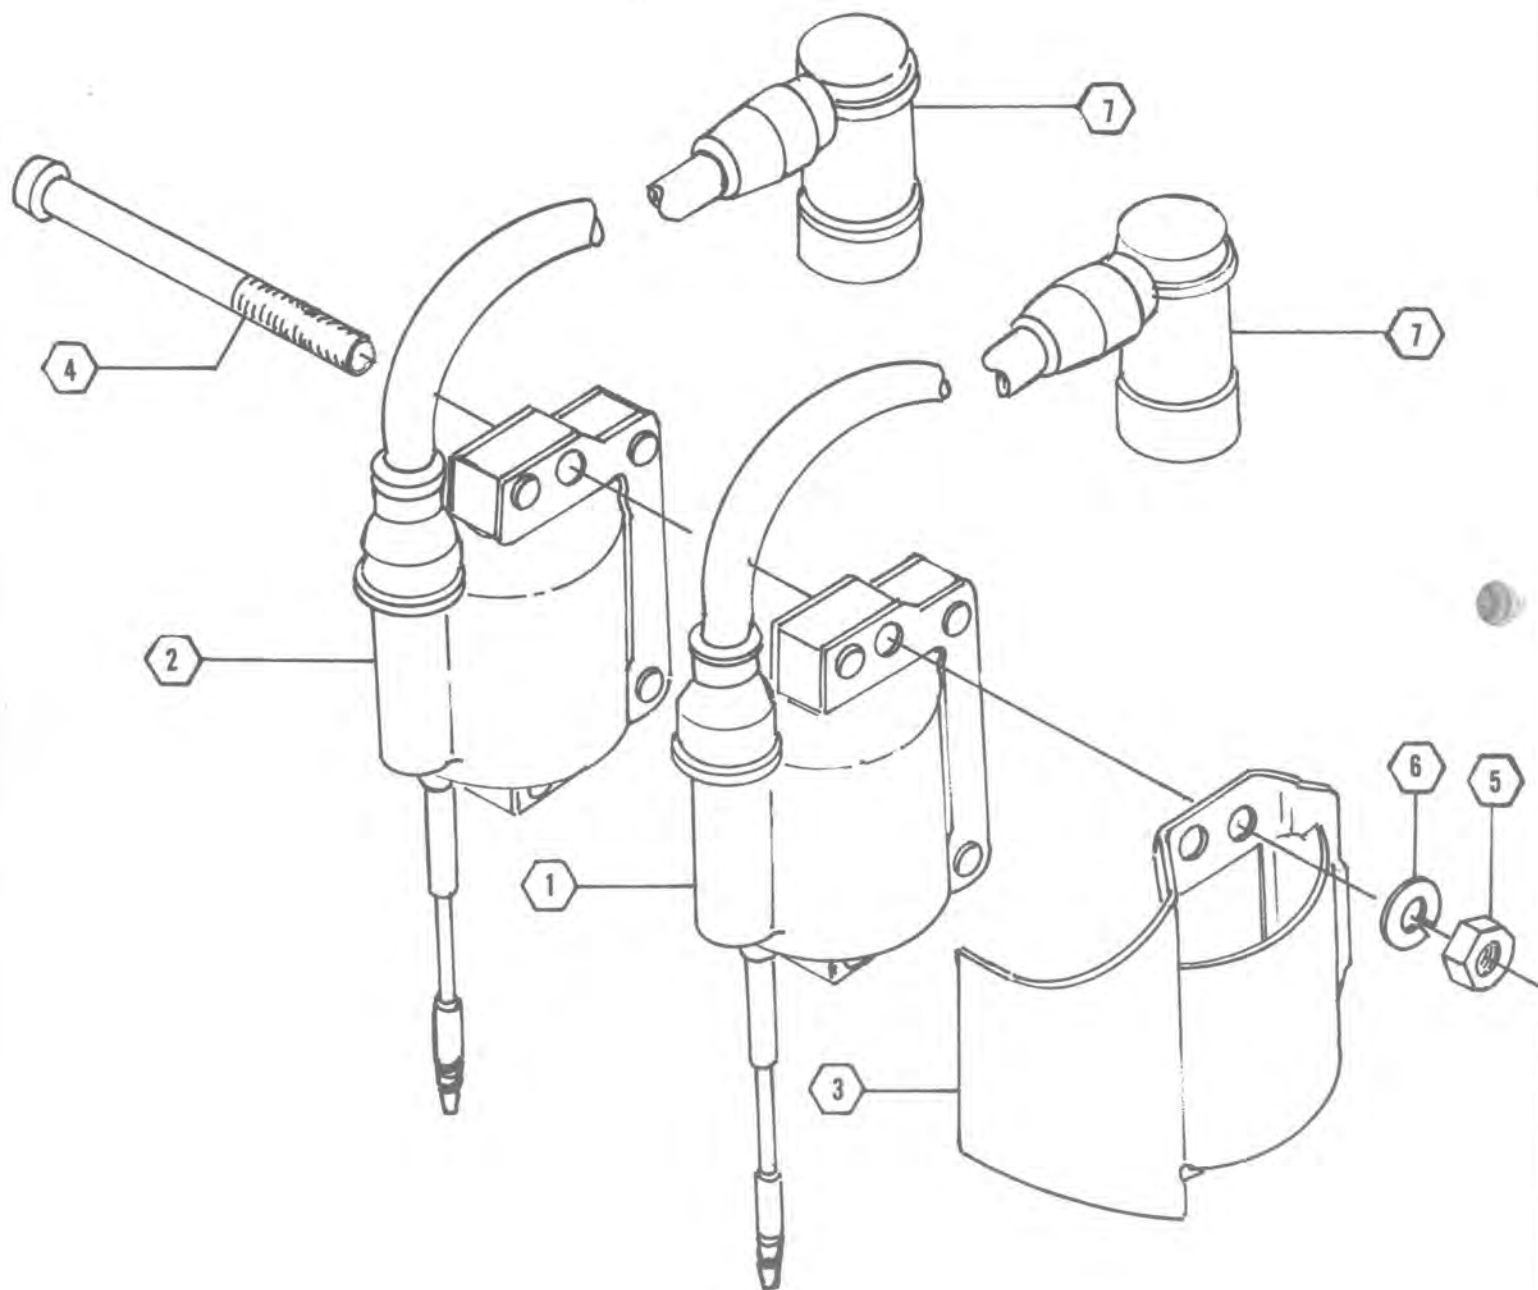

[illegible]

ELECTRICAL STARTER

292 - 338 - 433

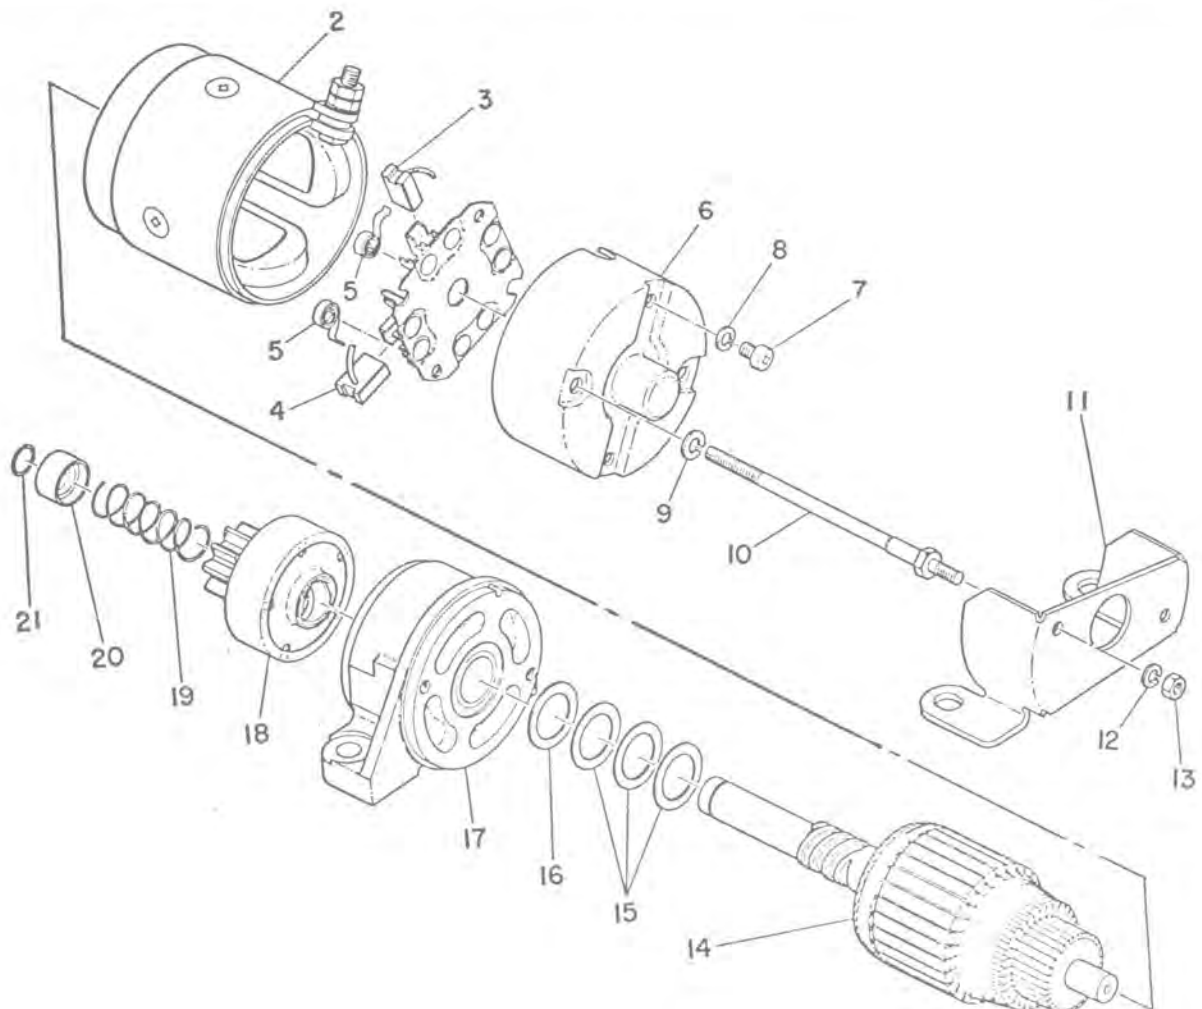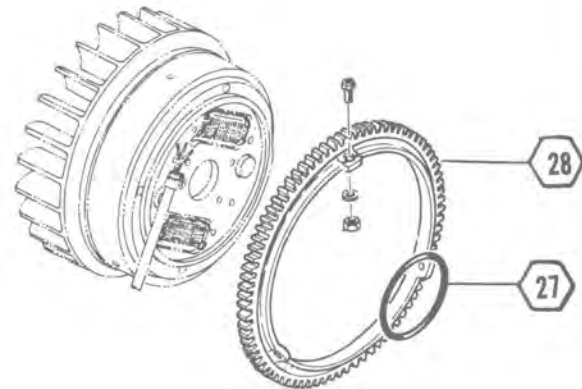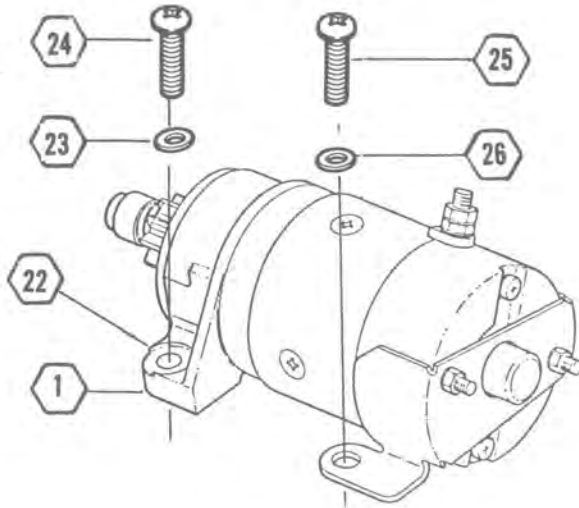




Y292B

S292R

[illegible]

ELECTRICAL STARTER

292 - 338 - 433

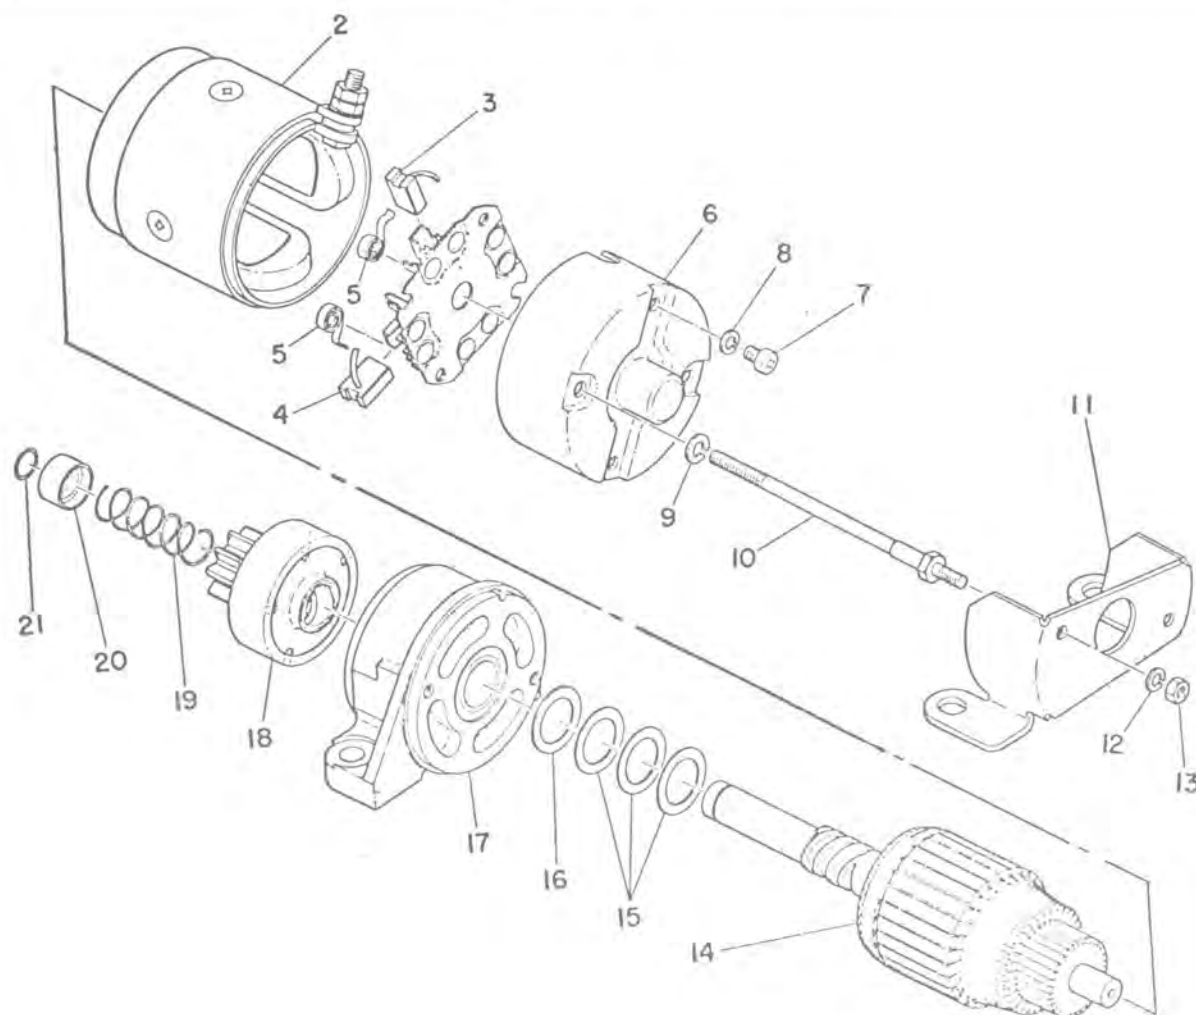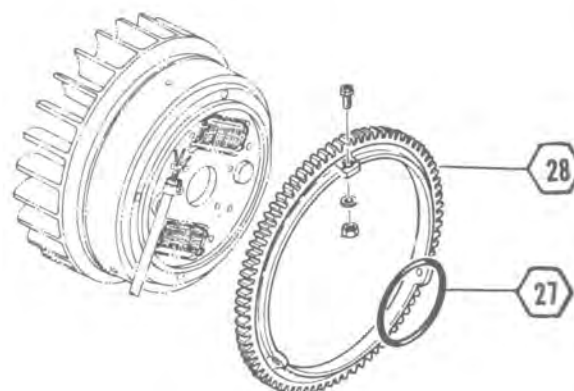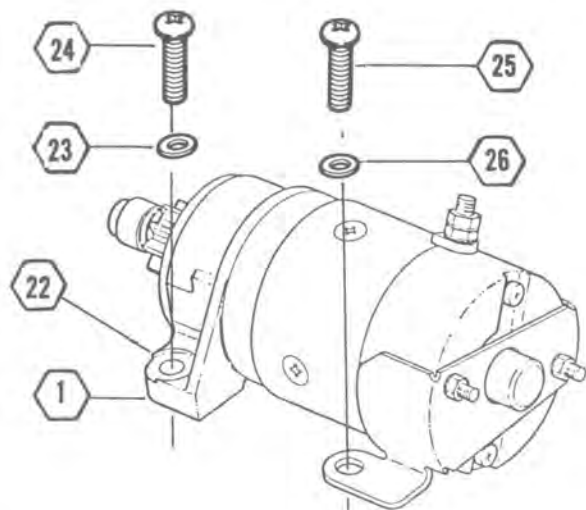

338P

S338B


Y433B

S433B

[illegible]

INTAKE - EXHAUST

Y 338 S 338 Y 433 S 433

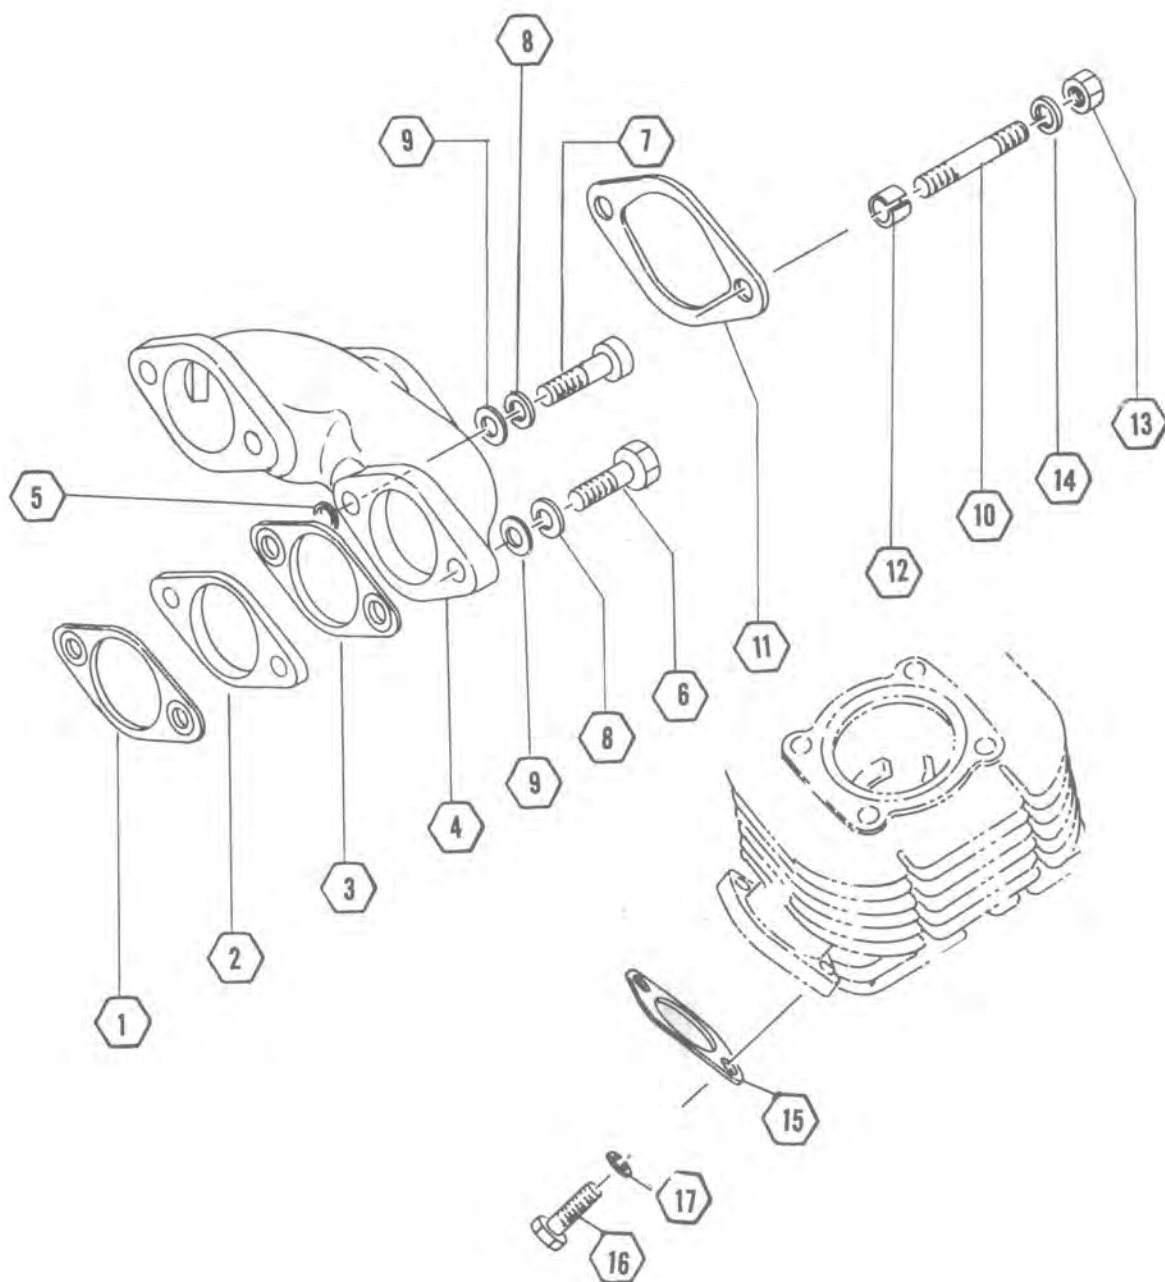

INTAKE / EXHAUST

[illegible]